



USB-C to USB micro B

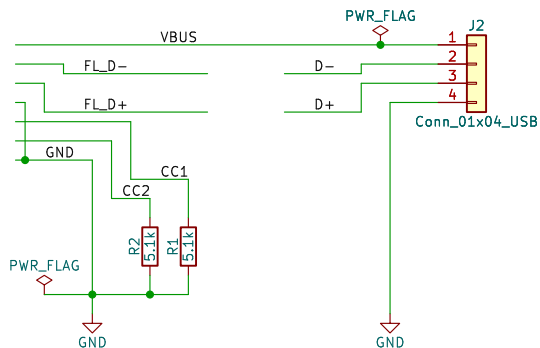


MCU board side and Pin assigns

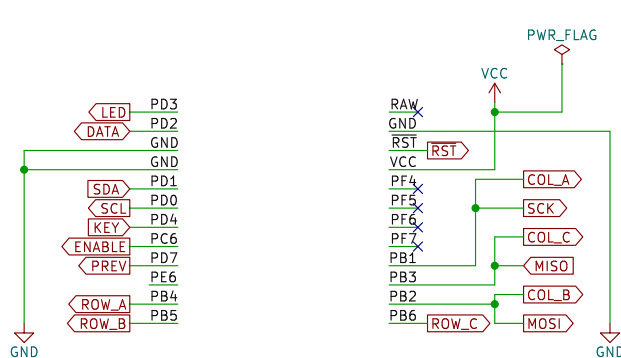


self-made board side


RESET button




ICSP socket

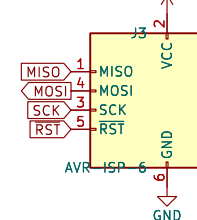


make AVCC from VCC

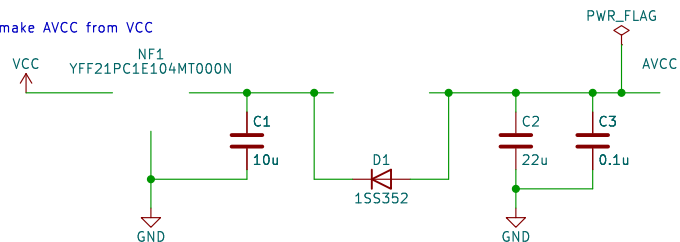


COL_A,B,C to COL_0-7

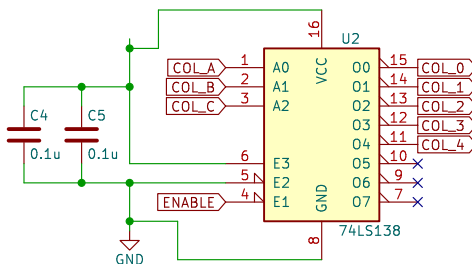

RGB LED tape pad




Master and Slave connection

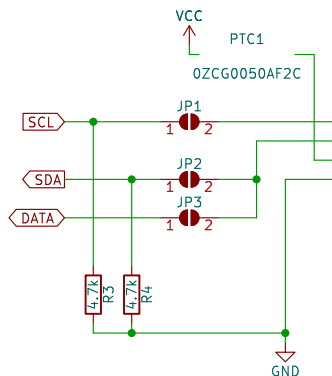


*C4 and C5 are need either, not both. These are definition for reversible PCB usage.

PCB to PCB Connector

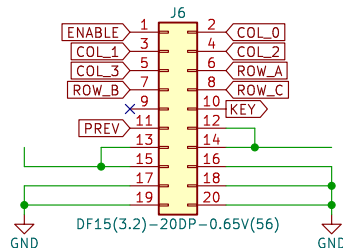

*This connector is connected to PCB (switch side) of REALFORCE 23U.

For thumb extension key (optional)

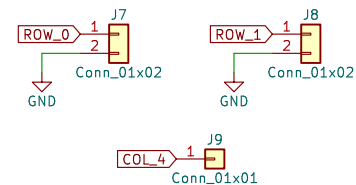

*1: ROW_0,1 comes from PCB (switch side).
*2: J7 and J8 should be connected with Co-axial cable.

Sheet: /
File: working.kicad_sch

Title:

Size: A4

Date:

KiCad E.D.A. eeschema 7.0.6

Rev:

Id: 1/1