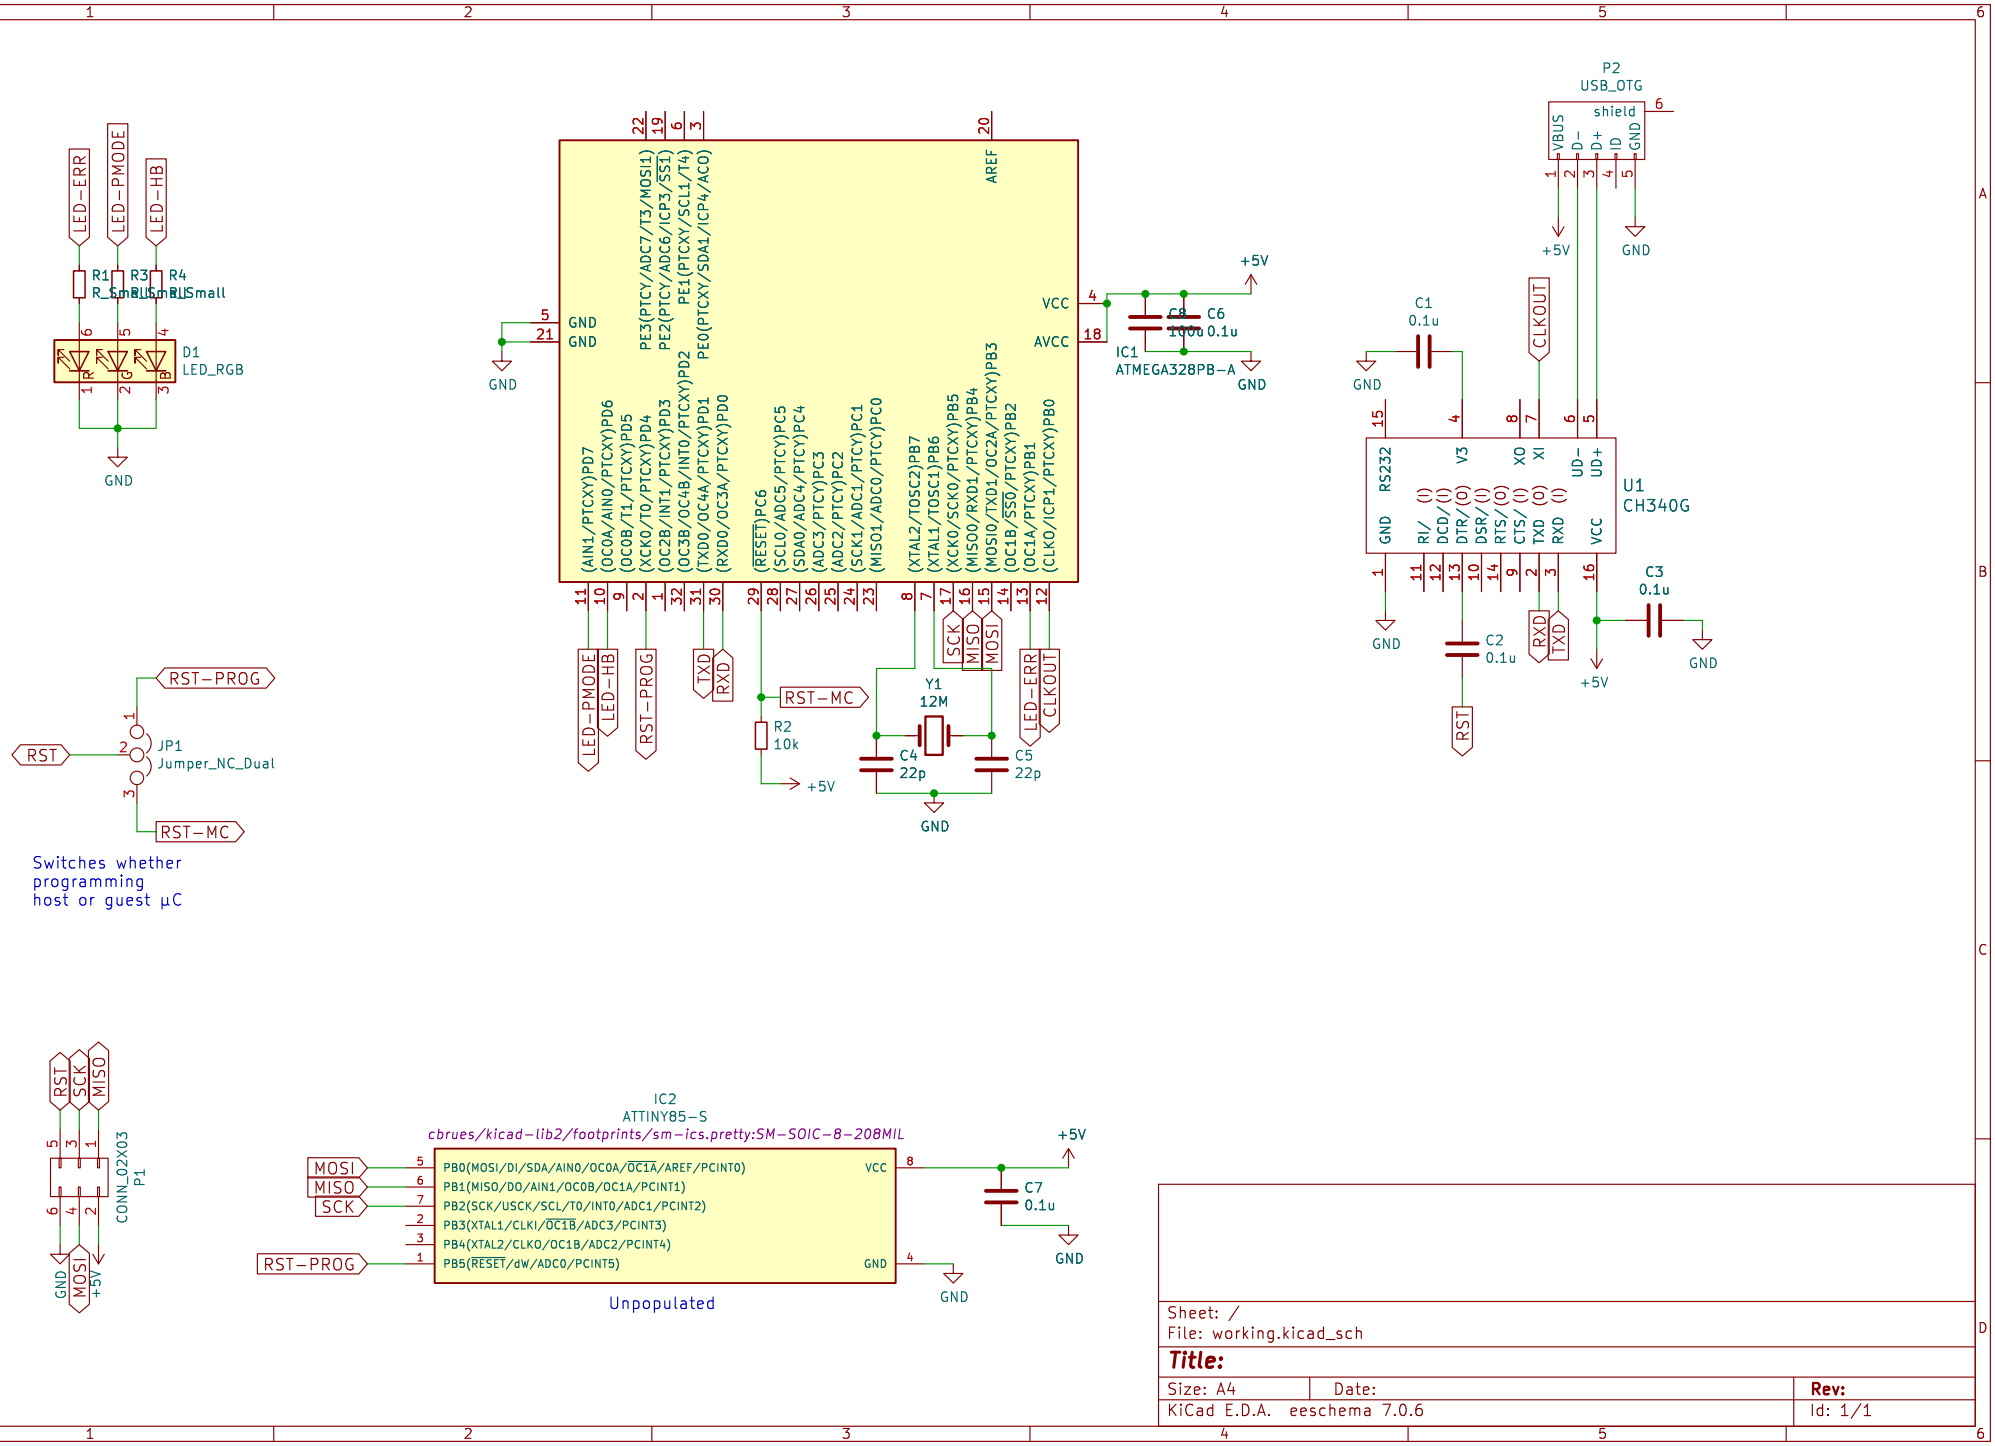
LED-ERR
LED-PMODE
LED-HB
R1
R3
R4
R_Small
D1
LED_RGB
GND
IC1
ATMEGA328PB-A
GND
GND
+5V
VCC
AVCC
AREF
C8
100u
C6
0.1u
(AIN1/PTCXY)PD7
(OC0A/AIN0/PTCXY)PD6
(OC0B/T1/PTCXY)PD5
(XCK0/T0/PTCXY)PD4
(OC2B/INT1/PTCXY)PD3
(OC3B/OC4B/INT0/PTCXY)PD2
(TXD0/OC4A/PTCXY)PD1
(RXD0/OC3A/PTCXY)PD0
PE3(PTCY/ADC7/T3/MOSI1)
PE2(PTCY/ADC6/ICP3/SS1)
PE1(PTCXY/SCL1/T4)
PE0(PTCXY/SDA1/ICP4/ACO)
(RESET)PC6
(SCL0/ADC5/PTCY)PC5
(SDA0/ADC4/PTCY)PC4
(ADC3/PTCY)PC3
(ADC2/PTCY)PC2
(SCK1/ADC1/PTCY)PC1
(MISO1/ADC0/PTCY)PC0
(XTAL2/TOSC2)PB7
(XTAL1/TOSC1)PB6
(XCK0/SCK0/PTCXY)PB5
(MISO0/RXD1/PTCXY)PB4
(MOSI0/TXD1/OC2A/PTCXY)PB3
(OC1B/SS0/PTCXY)PB2
(OC1A/PTCXY)PB1
(CLKO/ICP1/PTCXY)PB0
LED-PMODE
LED-HB
RST-PROG
TXD
RXD
RST-MC
R2
10k
Y1
12M
C4
22p
C5
22p
SCK
MISO
MOSI
LED-ERR
CLKOUT
P2
USB_OTG
VBUS
D-
D+
ID
GND
shield
C1
0.1u
CLKOUT
U1
CH340G
RS232
V3
XO
XI
UD-
UD+
GND
RI/ (I)
DCD/ (I)
DTR/ (O)
DSR/ (I)
RTS/ (O)
CTS/ (I)
TXD (O)
RXD (I)
VCC
C2
0.1u
C3
0.1u
RXD
TXD
RST
JP1
Jumper_NC_Dual
RST-PROG
RST
RST-MC
Switches whether
programming
host or guest µC
RST
SCK
MISO
MOSI
GND
+5V
CONN_02X03
P1
IC2
ATTINY85-S
cbrues/kicad-lib2/footprints/sm-ics.pretty:SM-SOIC-8-208MIL
PB0(MOSI/DI/SDA/AIN0/OC0A/OC1A/AREF/PCINT0)
PB1(MISO/DO/AIN1/OC0B/OC1A/PCINT1)
PB2(SCK/USCK/SCL/T0/INT0/ADC1/PCINT2)
PB3(XTAL1/CLKI/OC1B/ADC3/PCINT3)
PB4(XTAL2/CLKO/OC1B/ADC2/PCINT4)
PB5(RESET/dW/ADC0/PCINT5)
VCC
GND
C7
0.1u
Unpopulated
Sheet: /
File: working.kicad_sch
Title:
Size: A4
Date:
Rev:
KiCad E.D.A. eeschema 7.0.6
Id: 1/1