


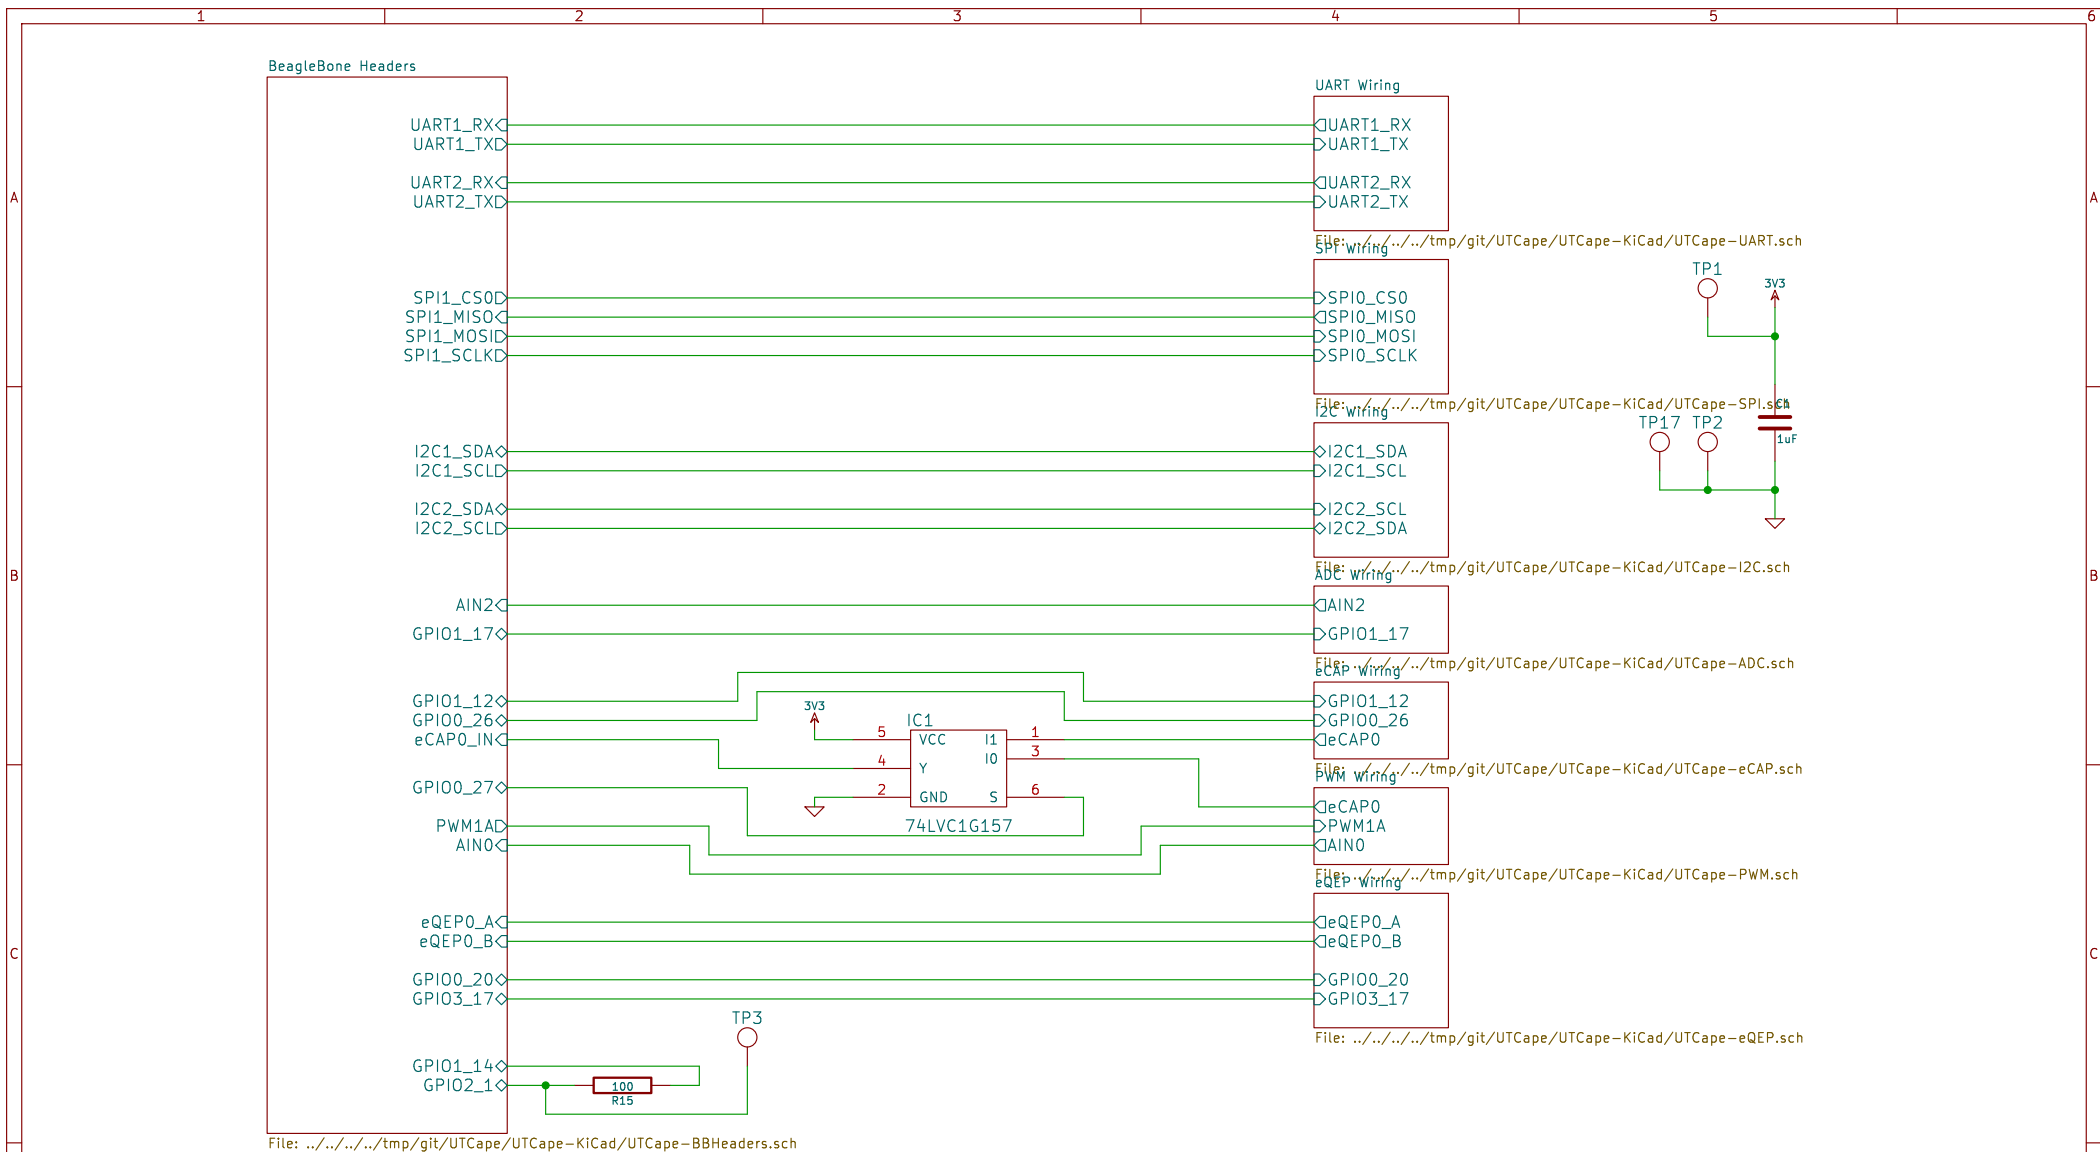

Notes:

1. Is IC1 really needed, or am I just not seeing a second eCAP input?



Gray Cat Labs
<http://graycat.io>

<https://github.com/graycatlabs/UTCape>

Sheet: /
 File: working.kicad_sch

Title: UTCape

Size: A4 Date: 24 mar 2015

KiCad E.D.A. eeschema 7.0.6

Rev: 1

Id: 1/9

123456						
A						A
B						B
C						C
D						D
123456						

Sheet: /BeagleBone Headers/ File: UTCape-BBHeaders.sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. eeschema 7.0.6	Id: 2/9	

	1	2	3	4	5	6
A						
B						
C						
D						
	1	2	3	4	5	6

Sheet: /UART Wiring/ File: UTCape-UART.sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. eeschema 7.0.6	Id: 3/9	

[illegible]

[illegible]

1		2		3		4		5		6	
A											
B											
C											
D											
Sheet: /ADC Wiring/ File: UTCape-ADC.sch											
Title:											
Size: A4						Date:			Rev:		
KiCad E.D.A.						eeschema 7.0.6			Id: 6/9		

1	2	3	4	5	6
A					A
B					B
C					C
D					D
1	2	3	4	5	6

Sheet: /PWM Wiring/ File: UTCape-PWM.sch		
Title:		
Size: A4	Date:	Rev:
KiCad E.D.A. eeschema 7.0.6	Id: 8/9	

Sheet: /eQEP Wiring/ File: UTCape-eQEP.sch	
Title:	
Size: A4	Date:
KiCad E.D.A. eeschema 7.0.6	Id: 9/9