

Sparkfun Beefcake Relay Control


Flyback Arrestor --
Place D1 with a normal diode such as the 1N4148 for all cases.
Use a zener (such as the 1N4739) at D2 to allow a certain flyback voltage.
Keep Vcc + Vzener under 30 volts
(Breakdown voltage of the NPN with a 10v margin)
The zener is not critical for protection of the circuit, but helps allow the contacts to open faster. It can be bypassed by shorting JP1.

VCC requirements:
4-6V
150mA
CTRL requirements:
Relay on above 2.6V
Relay off below 0.9V
5mA

CAUTION

To maintain 250VAC/VDC galvanic isolation, use non-conductive standoffs and 4-40 HW with a head diameter no greater than 0.21 inch.

If metal standoffs are required, or mounting to a conductive chassis, standoff diameter must be less than 0.21 inch.

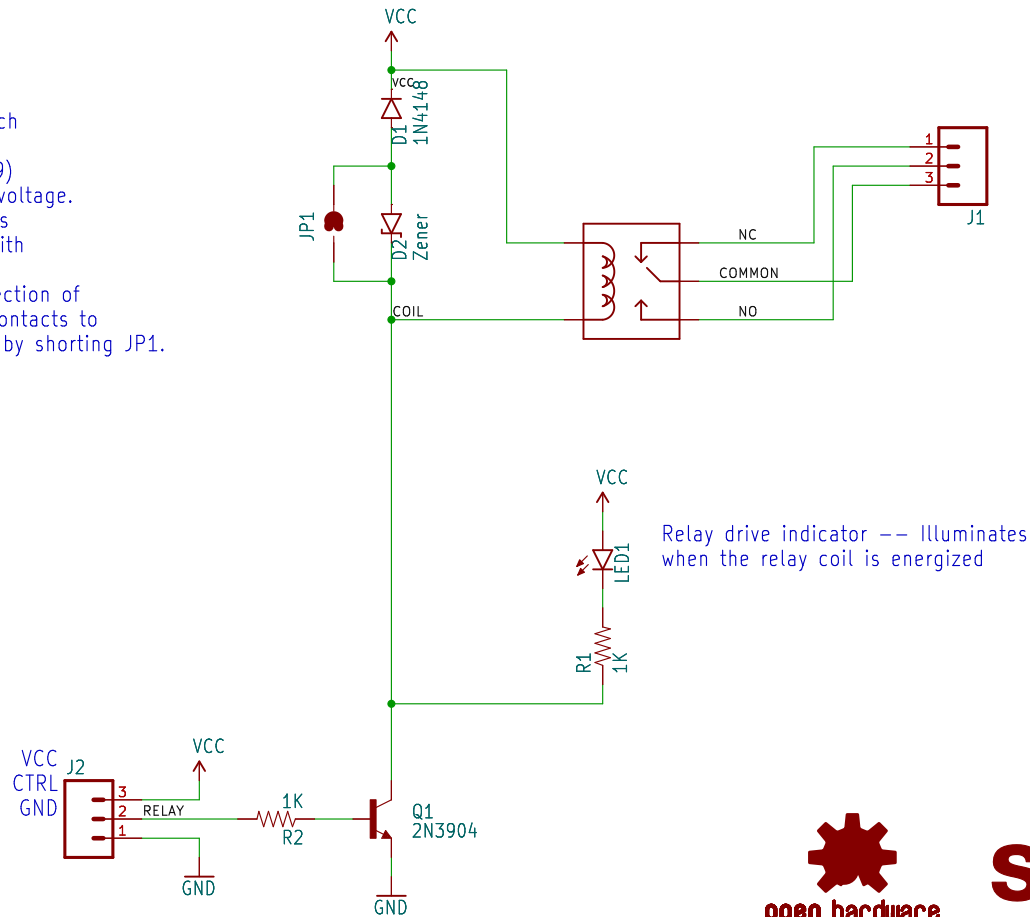

Released under the Creative Commons Attribution Share-Alike 4.0 License https://creativecommons.org/licenses/by-sa/4.0/			
TITLE: \${PROJECTNAME}			
Design by: N. Seidle, M Taylor, SparkFun Electronics			REV: v20
Date: \${CURRENT_DATE}			Sheet: \${#}/\${##}
Size: User Date: KiCad E.D.A. eeschema 7.0.6			
Rev: Id: 1/1			