




Voltage Regulation

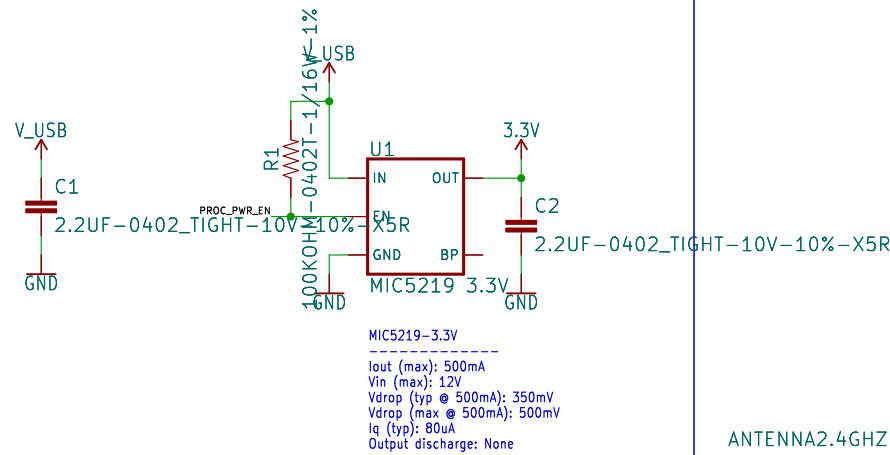


32.768kHz RTC Crystal

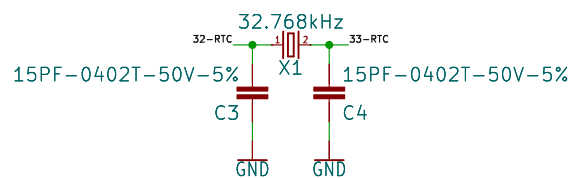


RGB LED

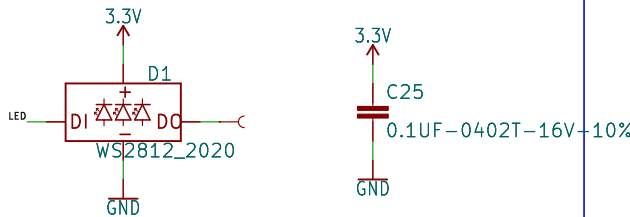


128Mb Flash

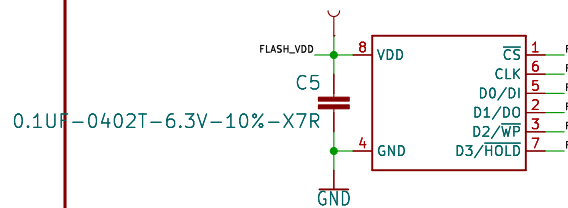


smôl Connectors

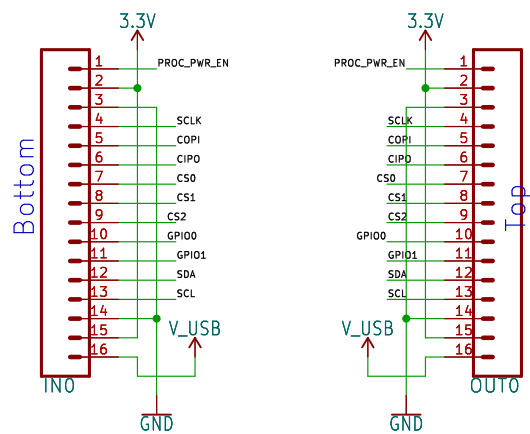

Espressif ESP32

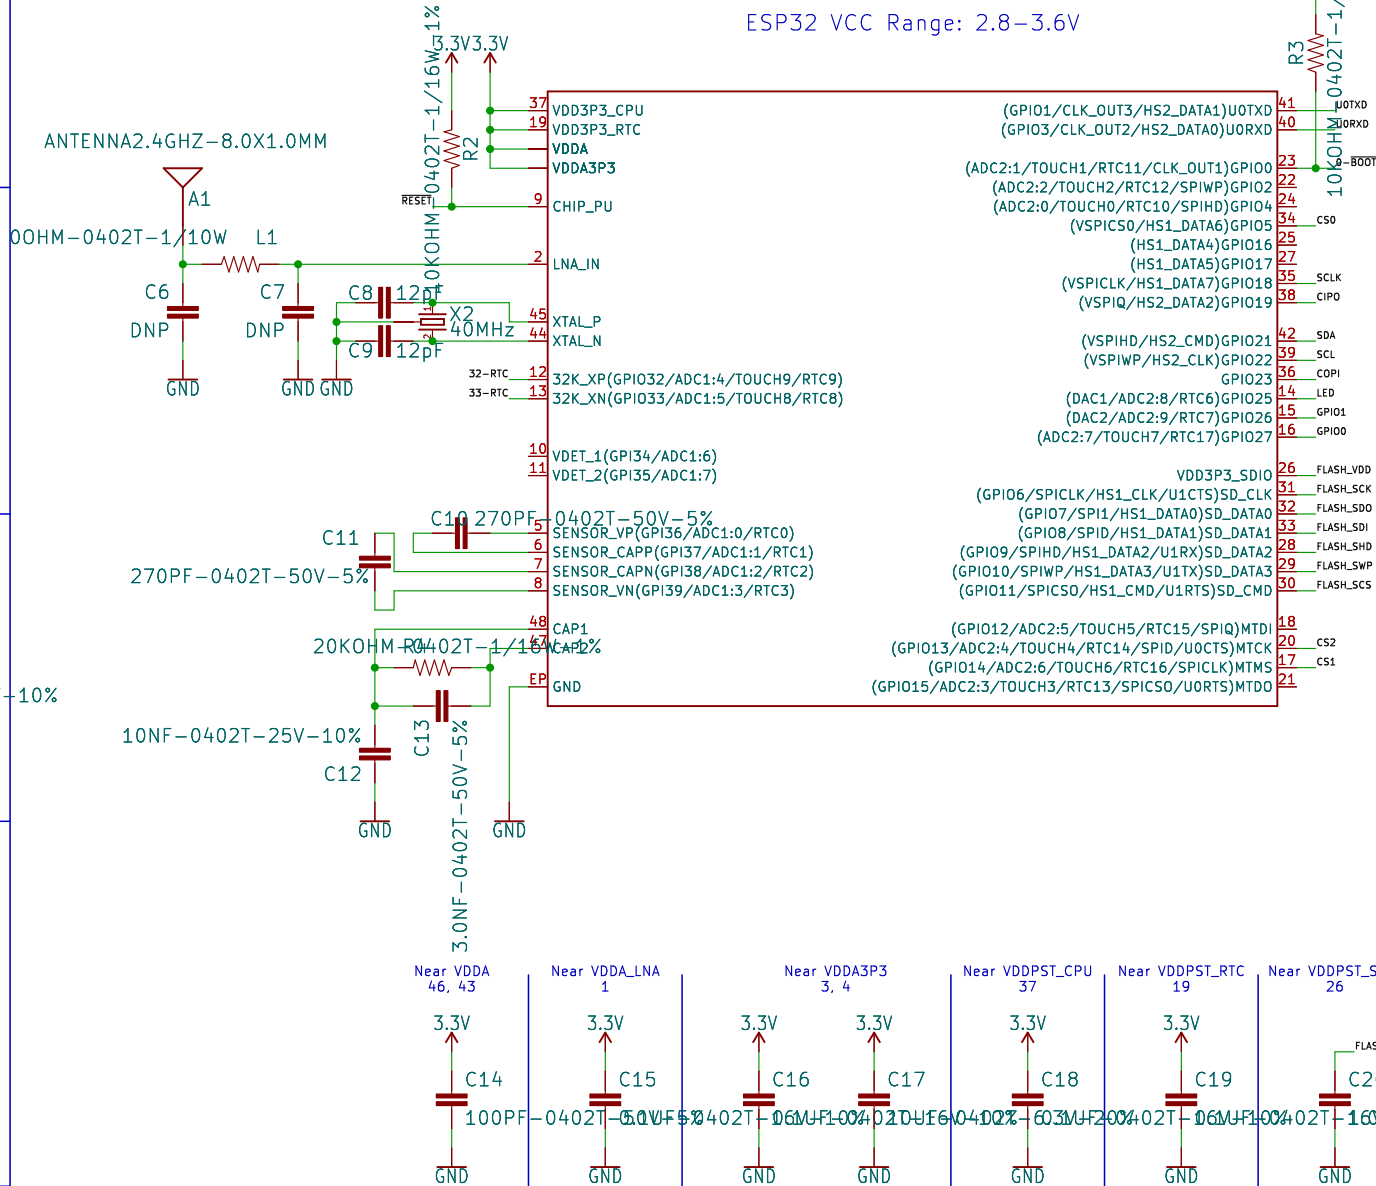


CP2102N (USB-to-Serial Converter)

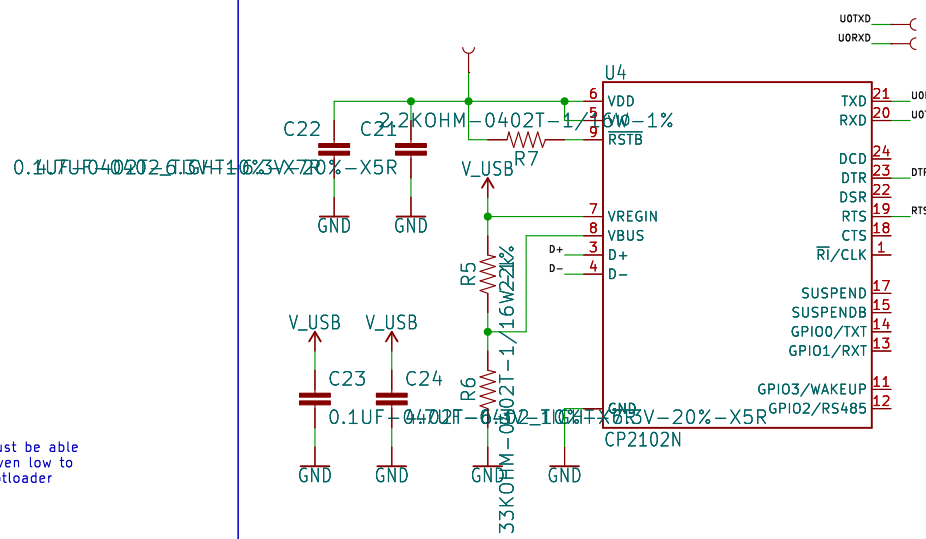

Auto-Reset


Boot Mode Configuration			
Pin	Default	Boot	Download
GPIO0	1	1	0
U0TXD	1	1	x
GPIO2	0	x	0
GPIO4	0	x	x
MTDO	1	x	x
GPIO5	1	1	x

If U0TXD, GPIO2, GPIO5 are floating, GPIO0 determines boot mode

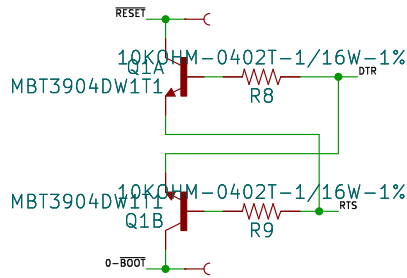

If DTR is LOW, toggling RTS from HIGH to LOW resets to run mode.
If RTS is HIGH, toggling DTR from LOW to HIGH resets to bootloader.

USB

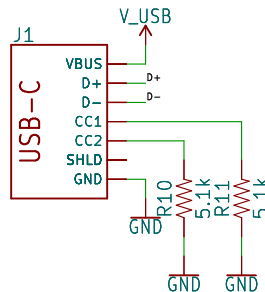

smôl



open hardware

SPARK X

Released under the Creative Commons Attribution Share-Alike 4.0 License
<https://creativecommons.org/licenses/by-sa/4.0/>

TITLE: \${PROJECTNAME}

Design by: >DESIGNER

REV: >REV

Date: \$CURRENT_DATE

Sheet: \${#}/\${##}

Size: User Date: KiCad E.D.A. kicad-cli 7.0.6-7.0.6-ubuntu22.04.1 Rev: Id: 1/1