


HARD RESET



GRAPHICS

- GR1 Anubis huge logo
- GR2 Anubis plated letters
- GR3 Anubis label

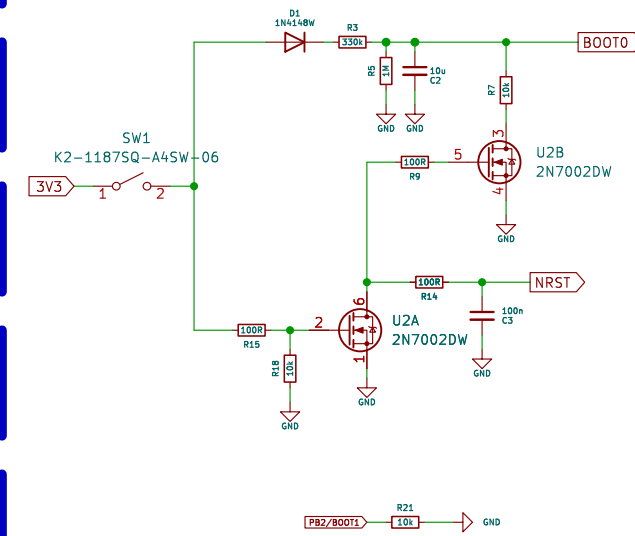

DB CONNS

WARNING: be sure to select the JST needed with the isolating resistors!



WTBO

J1
AL001WR-S-04P

ANDROMEDA

J2
AL001WR-S-04P

WARNING: be sure to select the JST needed with the isolating resistors!

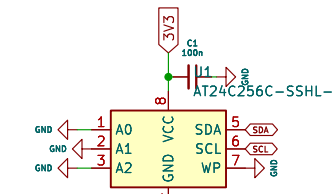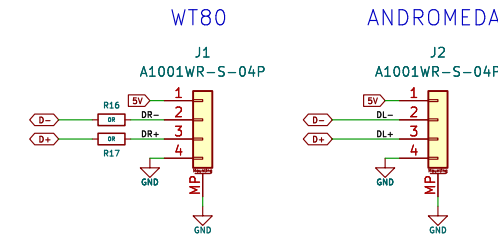

3V3

U3
SG6200T-3.3VMS/TR

5V

100k R1

10µF C1



10µF C2

100k R2

3V3

5V 10µF 0.10 0.100 0.001 0.01

3V3

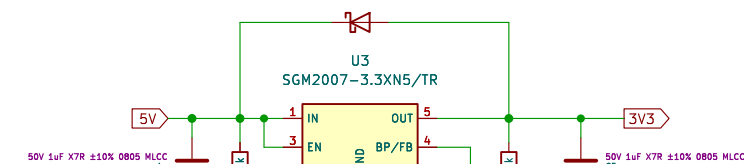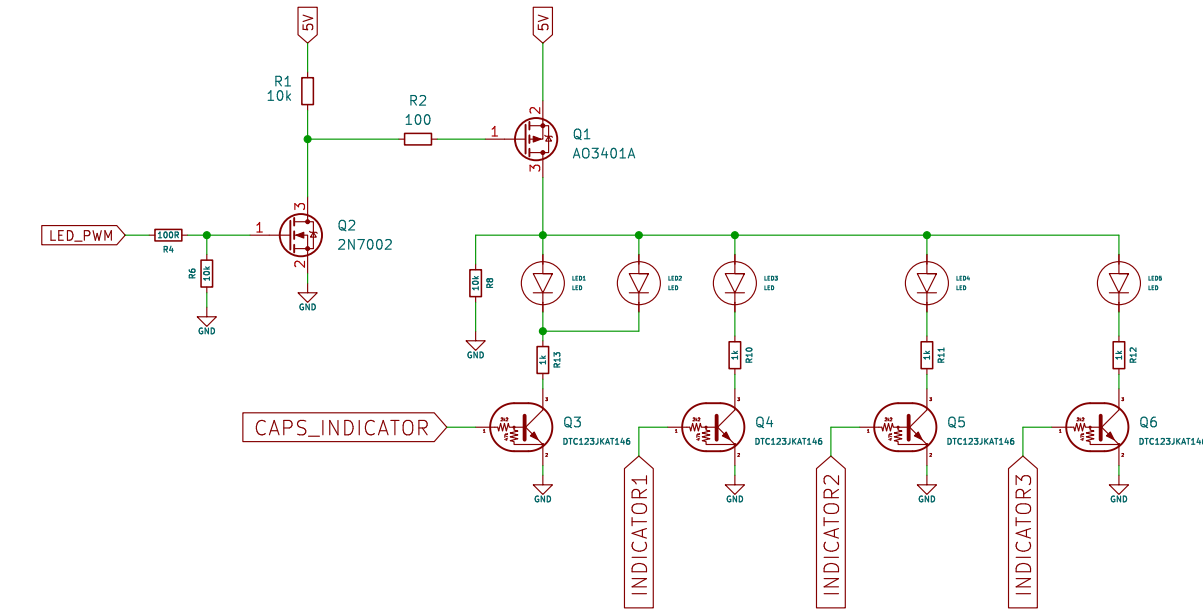[illegible]

MCU

U4
STM32F401RCT6

X1
USB

C10
16V 10uF Tantalum





C1-C13

LDO33
LDO18

TAXINEM401R01

3.3V
1.8V

MCU

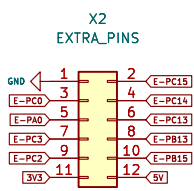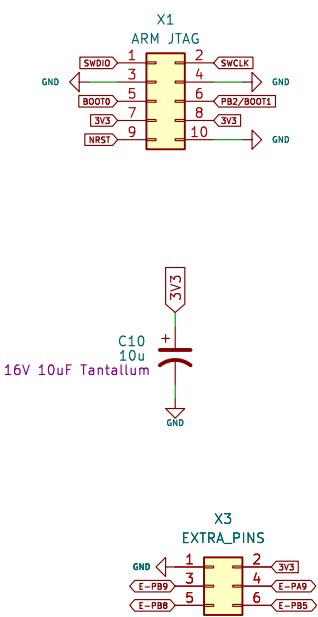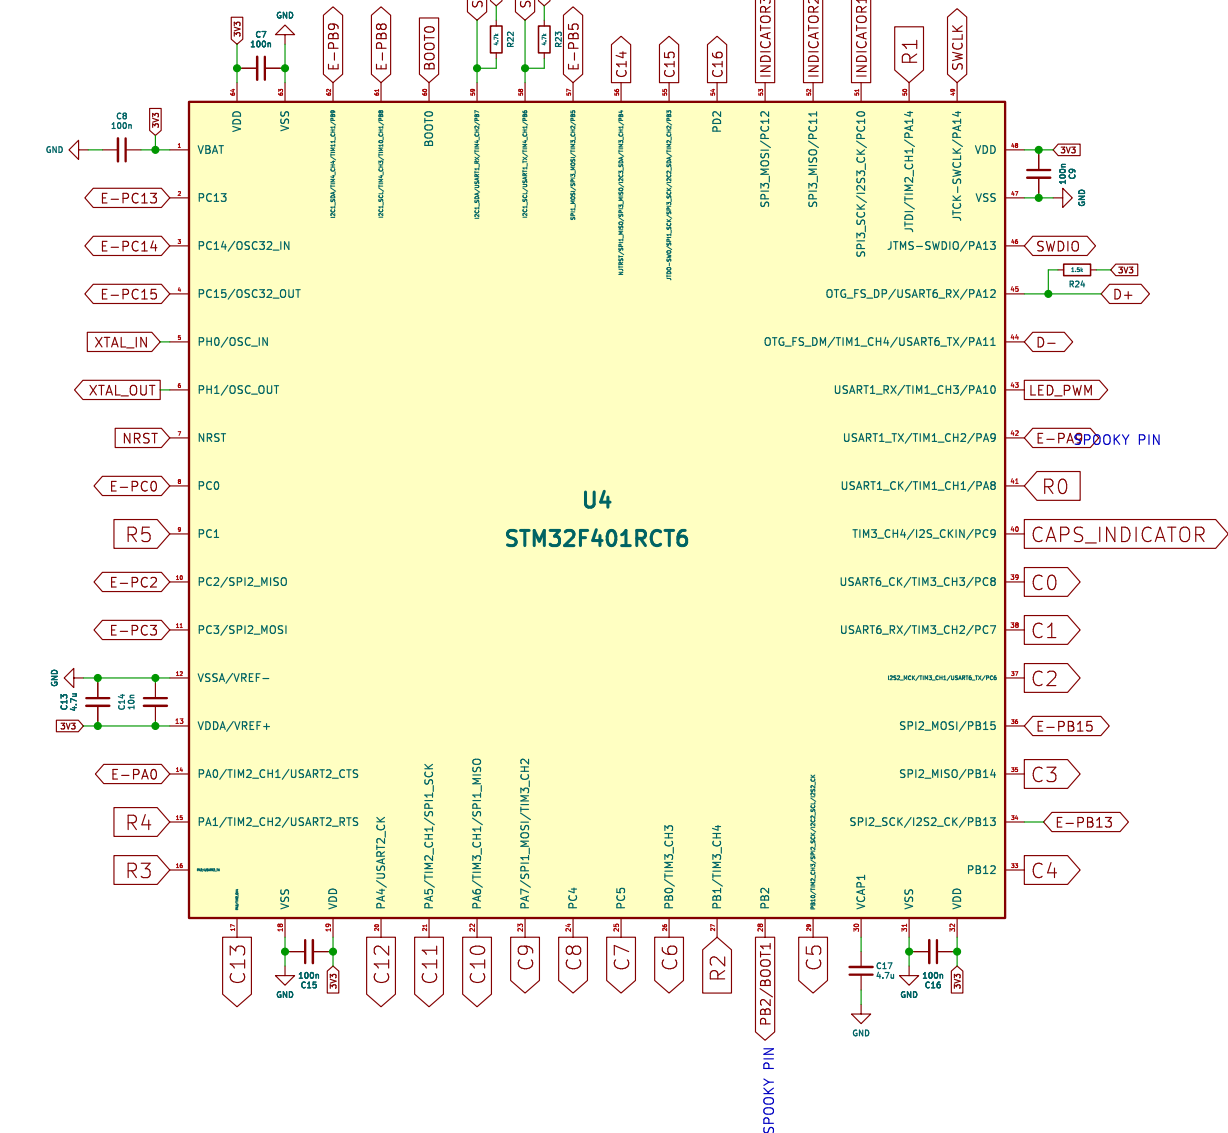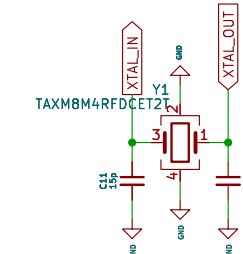

(*) "Spooky pins": on STM32F4x1, pins A9 and B2 cannot be used for switch matrix:
 - A9 is meant to be used as a VBUS sensing, it has a undocumented internal pulldown resistor;
 - B2 is used as 80011 during bootup, so it needs an external pulldown for successful bootup

(**) PA9 jumper: a solderable jumper used to tie PA9 to VBUS. It is disconnected by default, hence PA9 is left floating

_____ SWITCH MATRIX