



Directional Controls

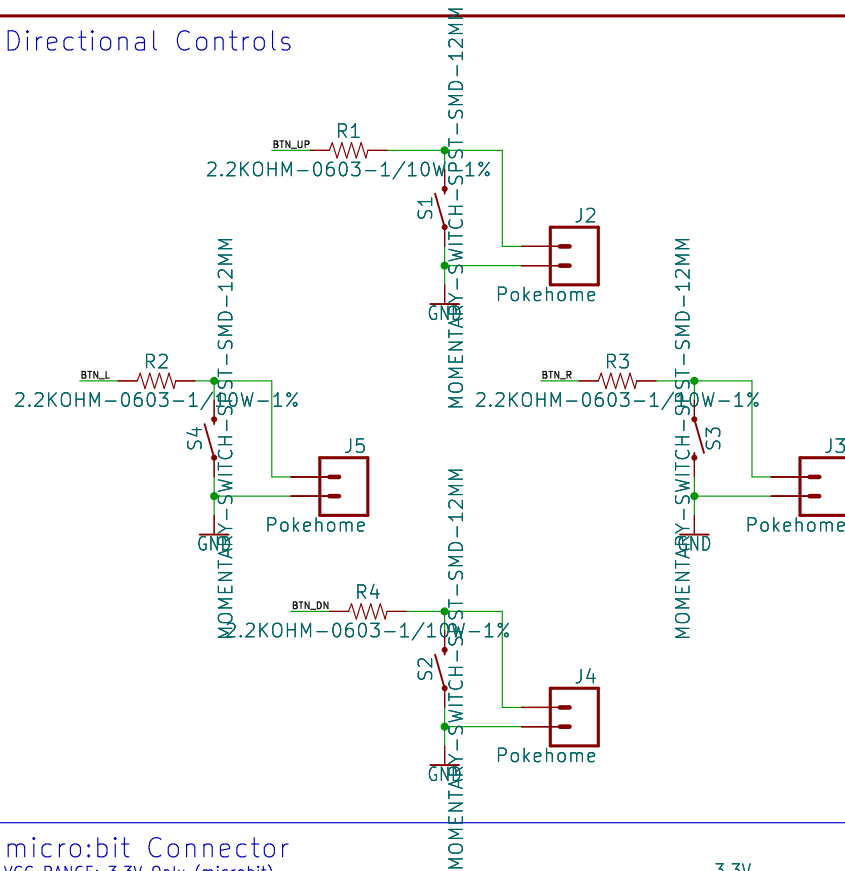


micro:bit Connector


VCC RANGE: 3.3V Only (microbit)

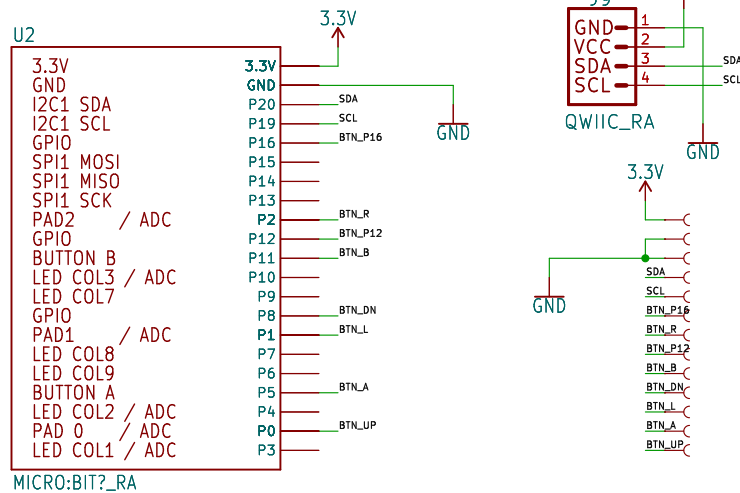

"Fire" Buttons

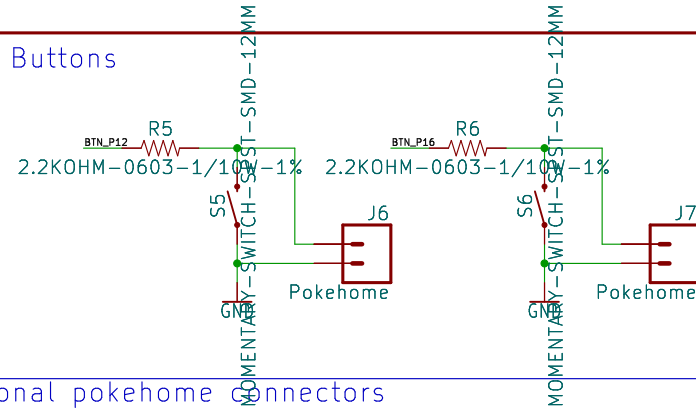

Additional pokehome Connectors for button A & B signals

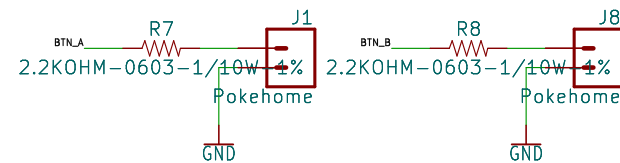

2.2K series resistors on signal lines to prevent excess current draw if micro:bit pins are configured as outputs, written to a logic high state, and the buttons are pressed. This also means that logic "low" will be in the neighborhood of 0.5 V. The nordic IC claims logic low threshold of $0.3 \times V_{cc}$, approx 1V for 3.3V supply.

All buttons are wired as active low, consistent with micro:bit buttons A and B. If using hardware directly, user will need to enable pull up resistors on corresponding hardware pins.



controller:bit
controller:bit

Released under the Creative Commons Attribution Share-Alike 4.0 License https://creativecommons.org/licenses/by-sa/4.0/		Special Instructions	
TITLE: \${PROJECTNAME}		REV: v21	
Design by: Byron Jacquot Revised by: Pete Lewis		Sheet: \${#}/\${##}	
Date: \${CURRENT_DATE}		Sheet: \${#}/\${##}	

Size: User	Date:	Rev:
KiCad E.D.A.	kiCad-cl 7.0.6-7.0.6-ubuntu22.04.1	Id: 1/1