


Chg/Dsg FETs

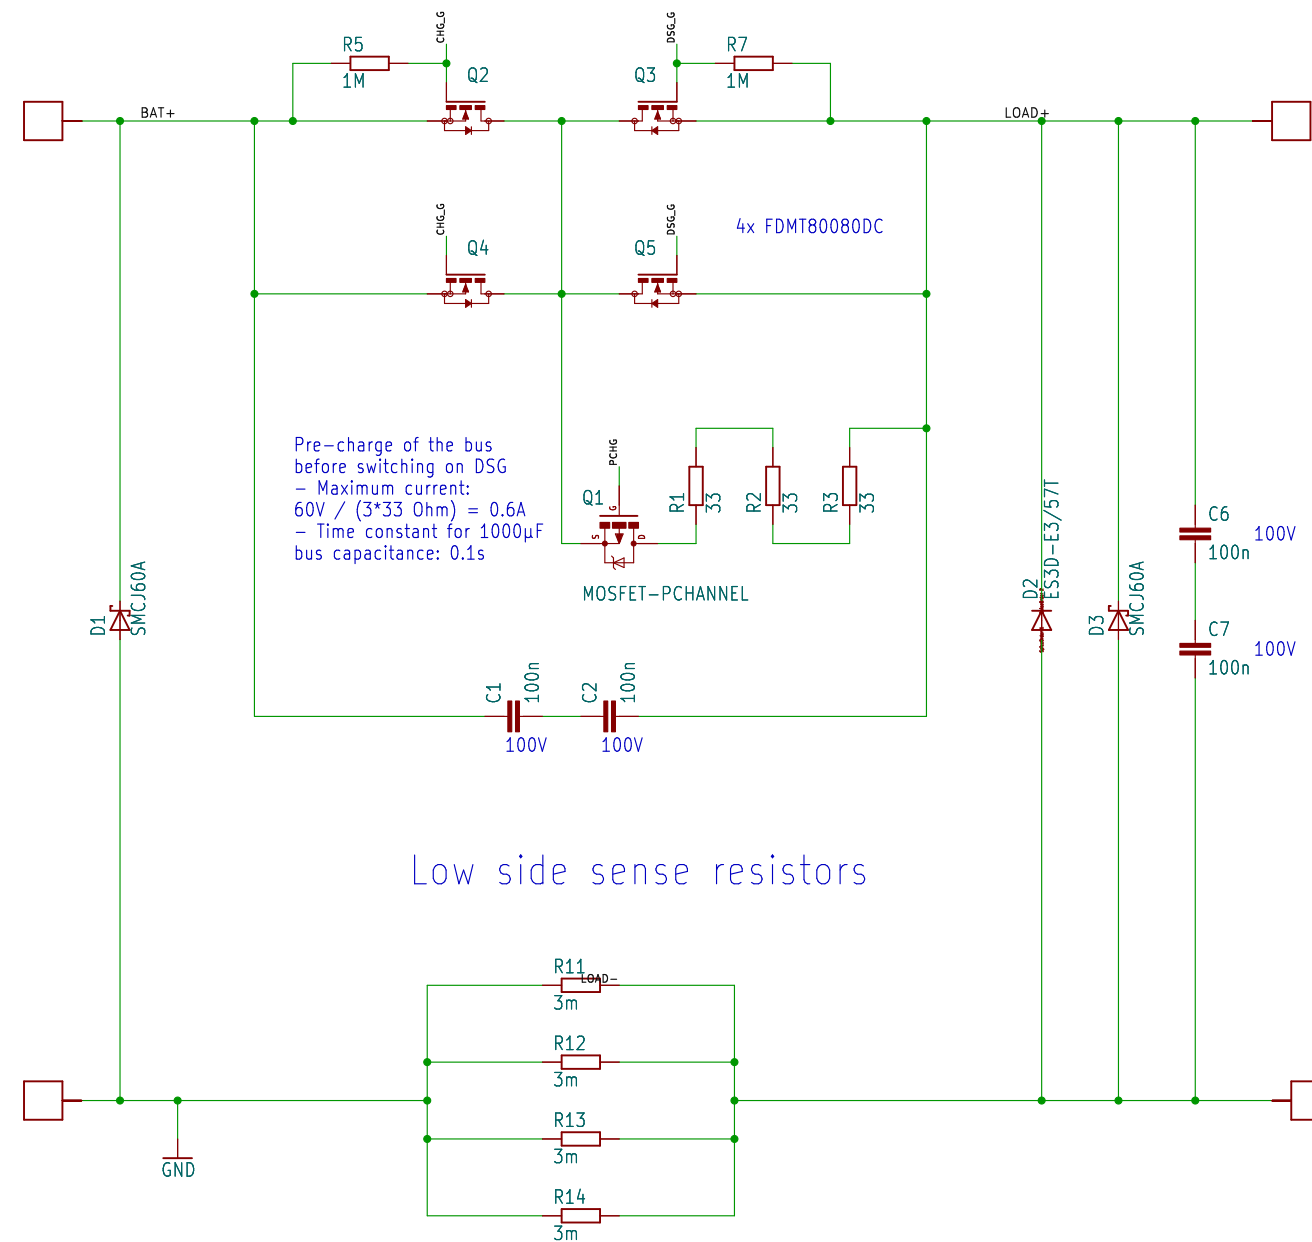


Pre-charge of the bus
before switching on DSG

- Maximum current:
 $60V / (3 \times 33 \text{ Ohm}) = 0.6A$
- Time constant for $1000\mu F$
bus capacitance: $0.1s$


MOSFET-PCHANNEL

Low side sense resistors

Take resistor with low temperature coefficient and 3W thermal rating, e.g.:
Bourns CRE2512-FZ-R001E-3 (75 ppm/K, 3W, 1%)




High side MOSFET driver

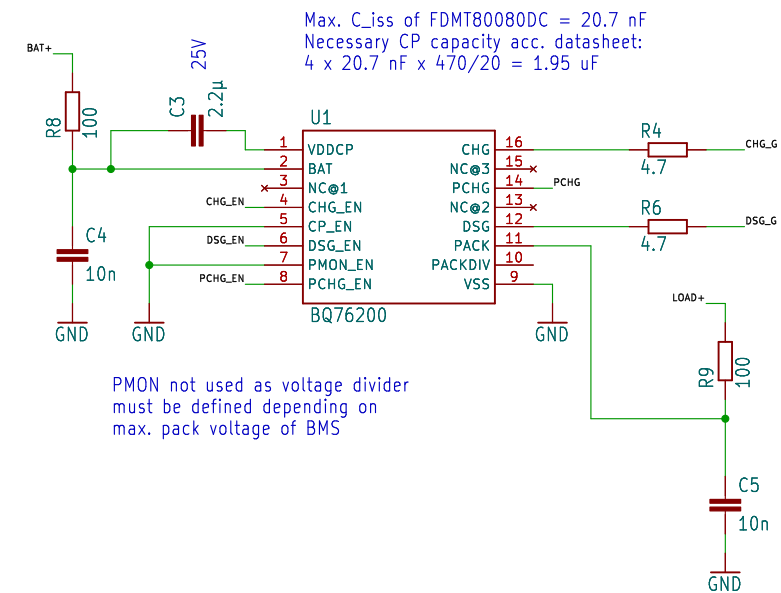

PMON not used as voltage divider
must be defined depending on
max. pack voltage of BMS

BMS connector

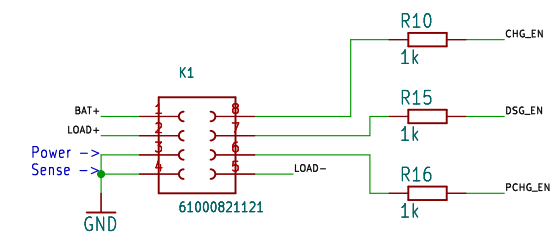

Design: Martin Jäger (<http://libre.solar>)
License: CC-BY-SA

TITLE: \${PROJECTNAME}			
Document Number:			REV:
Sheet: / File: \\${PROJECTNAME}\sheet\${SHEET}.dgn			
Date: \${CURRENT_DATE}		Sheet: \${#}/\${##}	
Title: _____			
Size: User	Date:	Rev:	
KiCad E.D.A.	eeschema 7.0.6	Id: 1/1	