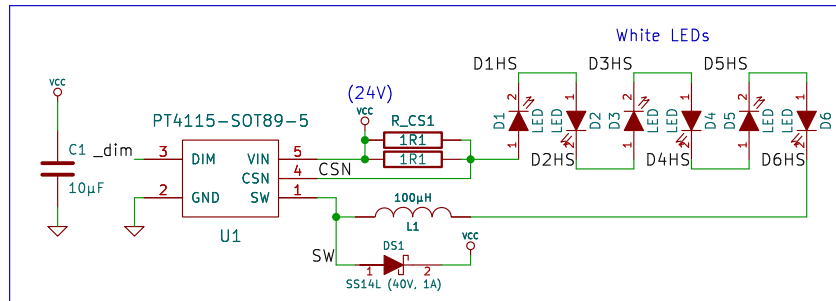


(*) Don't use C6 when driving DIM with a 5V PWM signal.
Replace R1 with a 10k pull-down resistor.

2014 – blog.spitzenfeil.org

Sheet: /

File: working.kicad_sch

Title: LED-Square PT4115

Size: User Date: 13 Sep 2014

KiCad E.D.A. eeschema 7.0.6

Rev: 1.2

Id: 1/1