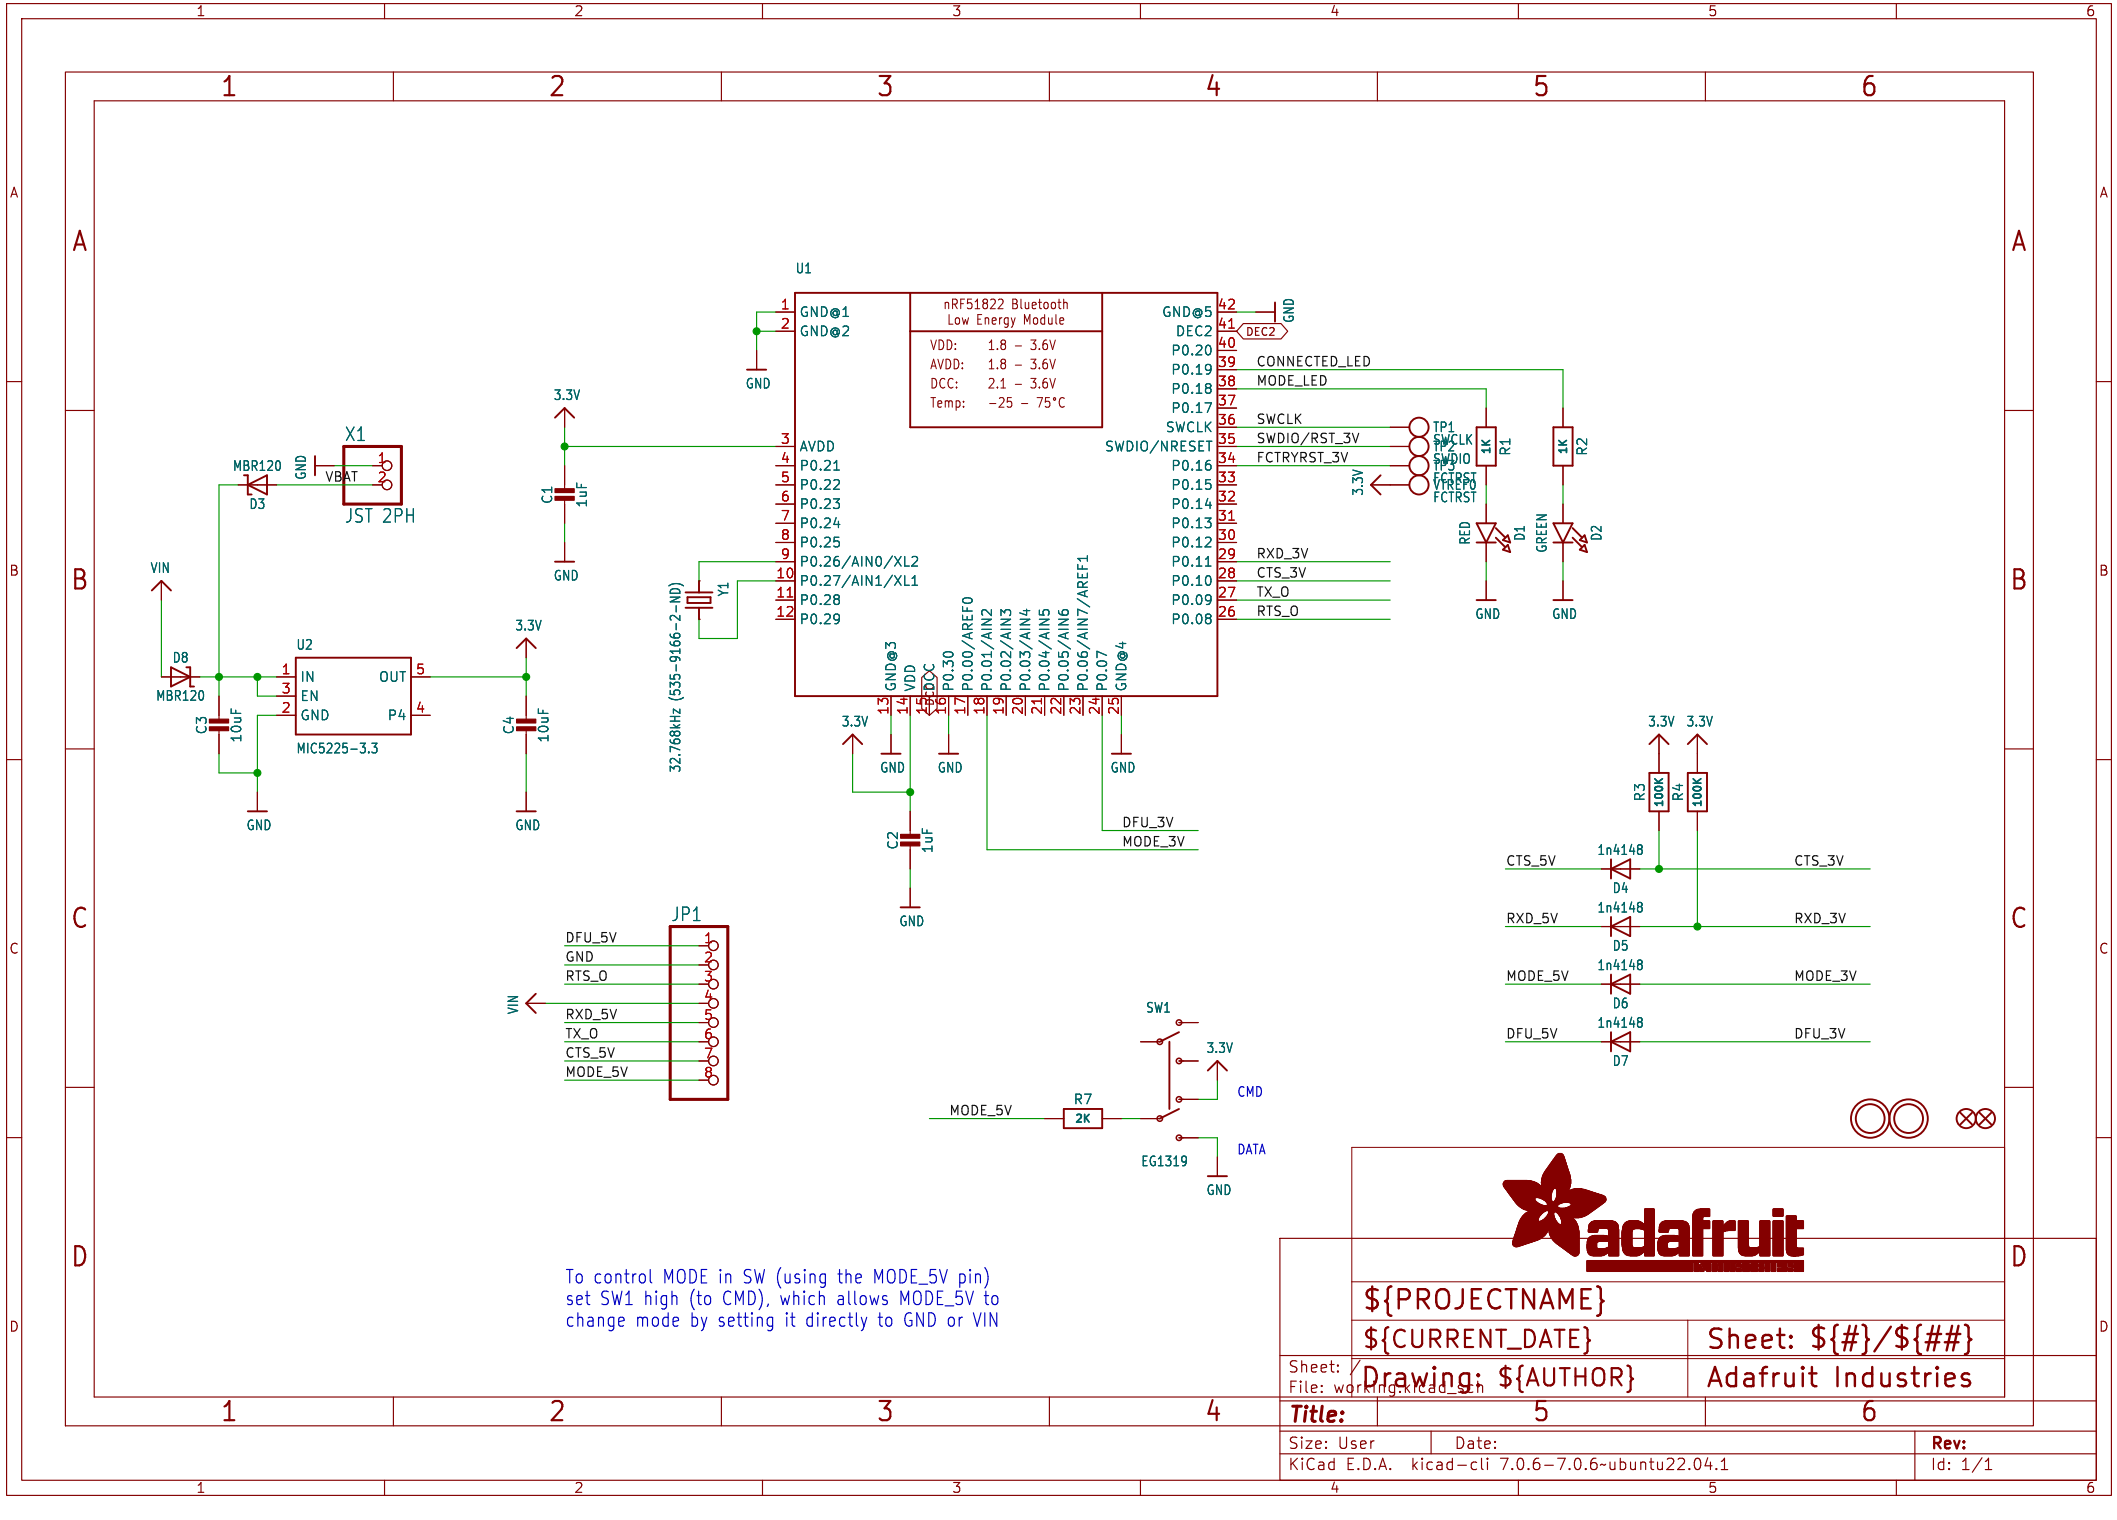

U1
nRF51822 Bluetooth Low Energy Module
VDD: 1.8 – 3.6V
AVDD: 1.8 – 3.6V
DCC: 2.1 – 3.6V
Temp: –25 – 75°C
GND@1
GND@2
AVDD
P0.21
P0.22
P0.23
P0.24
P0.25
P0.26/AIN0/XL2
P0.27/AIN1/XL1
P0.28
P0.29
GND@5
DEC2
P0.20
P0.19
P0.18
P0.17
SWCLK
SWDIO/NRESET
P0.16
P0.15
P0.14
P0.13
P0.12
P0.11
P0.10
P0.09
P0.08
GND@3
VDD
DEC3
P0.30
P0.00/AREF0
P0.01/AIN2
P0.02/AIN3
P0.03/AIN4
P0.04/AIN5
P0.05/AIN6
P0.06/AIN7/AREF1
P0.07
GND@4
CONNECTED_LED
MODE_LED
SWCLK
SWDIO/RST_3V
FCTRYRST_3V
RXD_3V
CTS_3V
TX_O
RTS_O
X1
JST 2PH
MBR120
D3
VBAT
GND
C1
1uF
3.3V
Y1
32.768kHz (535-9166-2-ND)
VIN
D8
MBR120
U2
MIC5225-3.3
IN
EN
GND
OUT
P4
C3
10uF
C4
10uF
C2
1uF
TP1
TP2
TP3
TP4
SWCLK
SWDIO
FCTRST
VTREFO
R1
1K
R2
1K
RED
D1
GREEN
D2
R3
100K
R4
100K
1n4148
D4
D5
D6
D7
CTS_5V
RXD_5V
MODE_5V
DFU_5V
JP1
SW1
CMD
DATA
EG1319
R7
2K
To control MODE in SW (using the MODE_5V pin)
set SW1 high (to CMD), which allows MODE_5V to
change mode by setting it directly to GND or VIN
adafruit
${PROJECTNAME}
${CURRENT_DATE}
Sheet: ${#}/${##}
Drawing: ${AUTHOR}
Adafruit Industries
Sheet: /
File: working.kicad_sch
Title:
Size: User
Date:
Rev:
KiCad E.D.A. kicad-cli 7.0.6-7.0.6~ubuntu22.04.1
Id: 1/1