

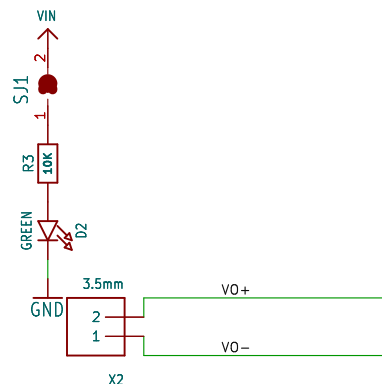


NOTE: For the best power on/off pop performance, the amplifier should be set in the shutdown mode prior to power on/off operation (set SD low to power down the amp).

ToDo: Ferrite (select w/high Z at high F, low Z at low F). Try to block everything >1MHz or so.

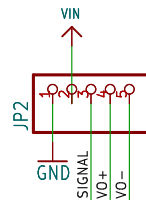

C3: Use 1uF to filter high frequency noise, or 10uF if lower frequency noise is present

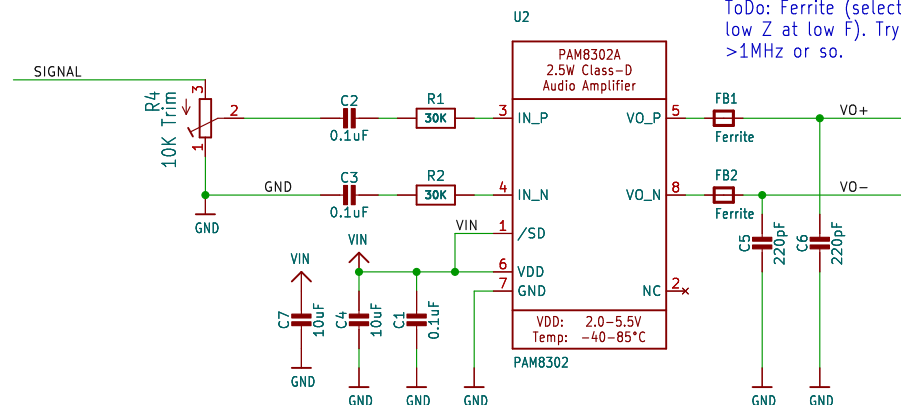

{PROJECTNAME}

{CURRENT_DATE}

Sheet: {#}/{##}

Sheet: {#}/{##}
File: working_kicad_sch

Drawing: {AUTHOR}

Adafruit Industries

Title:

Size: User

Date:

KiCad E.D.A. eeschema 7.0.6

Rev:

Id: 1/1