



Directional Controls

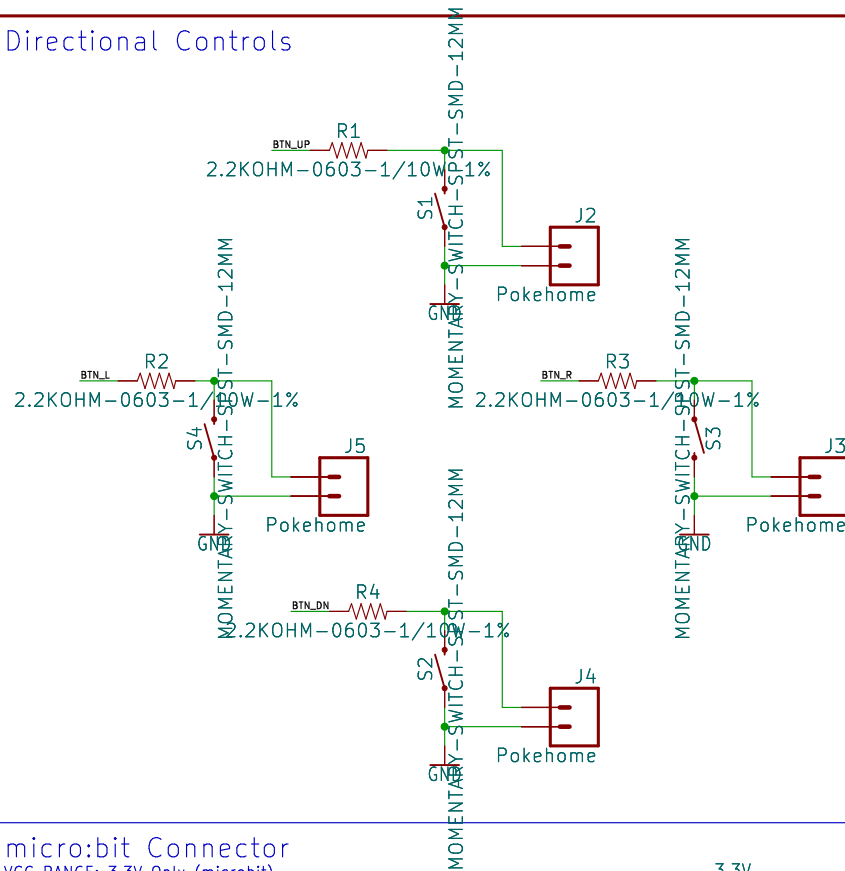


micro:bit Connector


VCC RANGE: 3.3V Only (microbit)

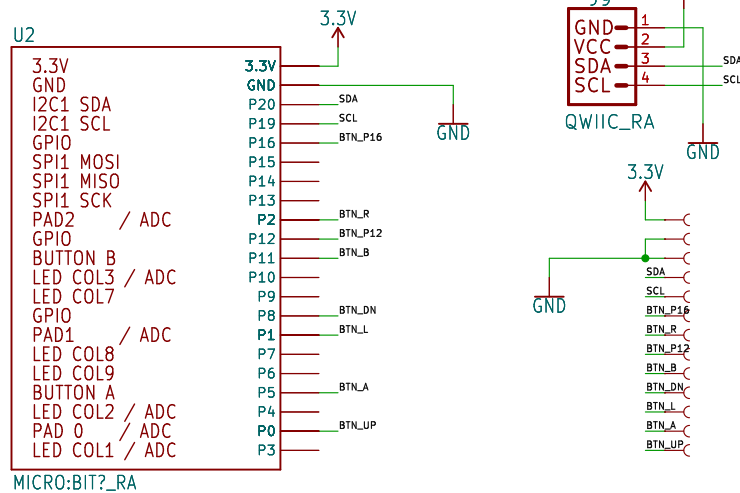

"Fire" Buttons

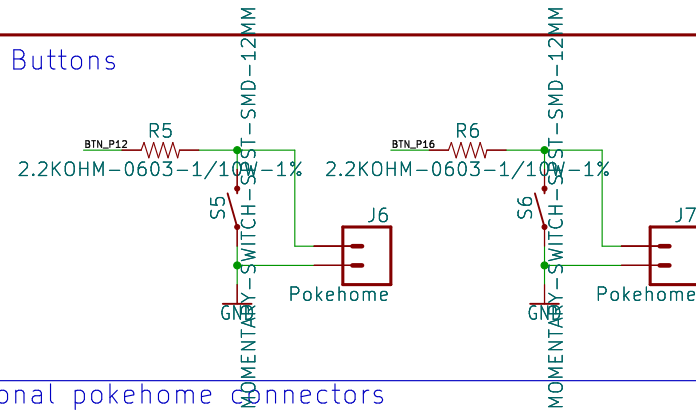

Additional pokehome Connectors for button A & B signals

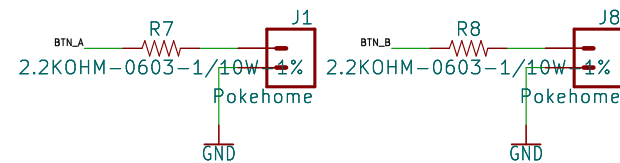

2.2K series resistors on signal lines to prevent excess current draw if micro:bit pins are configured as outputs, written to a logic high state, and the buttons are pressed. This also means that logic "low" will be in the neighborhood of 0.5 V. The nordic IC claims logic low threshold of $0.3 \times V_{cc}$, approx 1V for 3.3V supply.

All buttons are wired as active low, consistent with micro:bit buttons A and B. If using hardware directly, user will need to enable pull up resistors on corresponding hardware pins.



Released under the Creative Commons

Attribution Share-Alike 4.0 License

<https://creativecommons.org/licenses/by-sa/4.0/>

Special Instructions



TITLE: \${PROJECTNAME}

Design by: Byron Jacquot

Revised by: Pete Lewis

REV:

v21

Date: \${CURRENT_DATE}

Sheet: \${#}/\${##}

Size: User Date:
KiCad E.D.A. eeschema 7.0.6

Rev:
Id: 1/1

controller:bit
controller:bit