Processor Board Connector

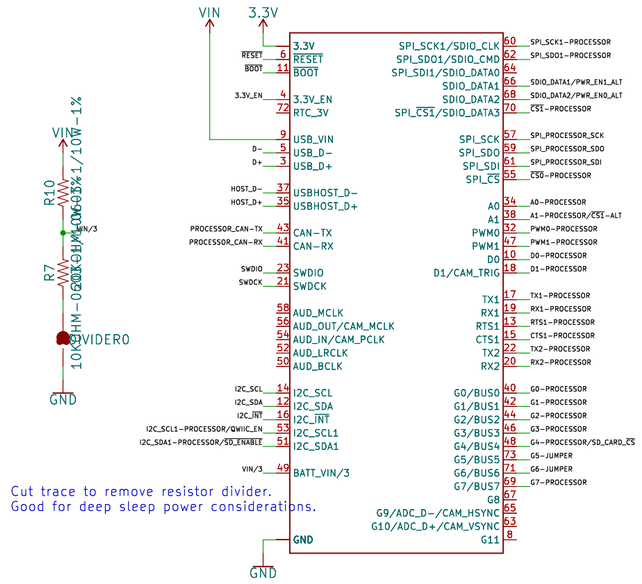

Cut trace to remove resistor divider.
Good for deep sleep power considerations.

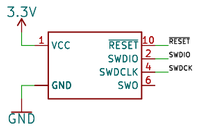

Alternative Power Enable Jumpers

Certain processors have limited GPIO and so these alternative power enable pins have been provided. Simply move the 2-pin Jumper to suit your project's needs.

Standoff

Processor Voltage Regulation

Closing jumper bypasses PTC to allow >2A current flows.

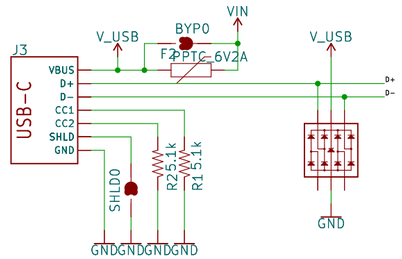

Cut SHLD jumper to disconnect USB Shield from Ground.

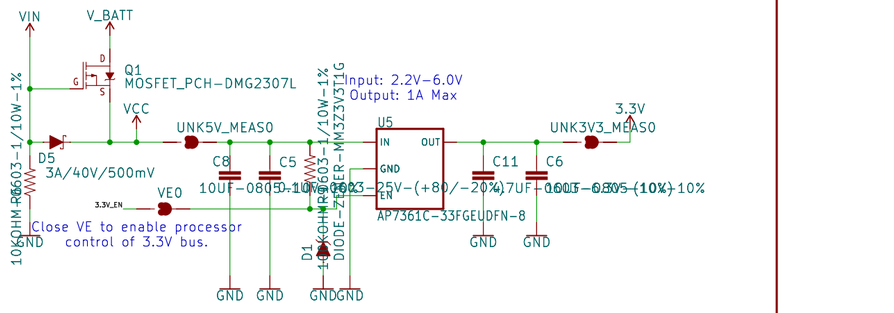

LEDs

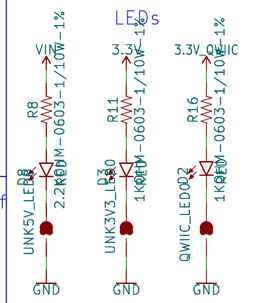

Testpoints

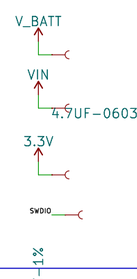

Lipo Battery Charger

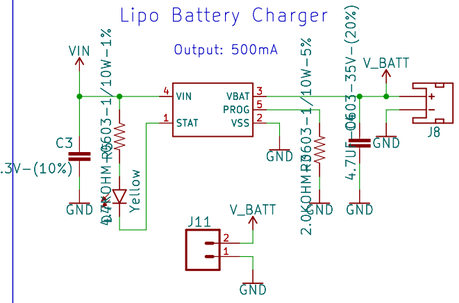

Qwiic Voltage Regulation - AP7347DQ

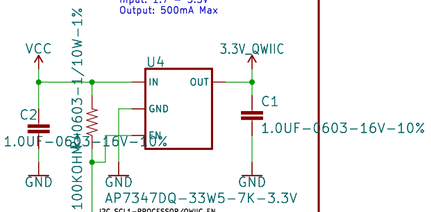

Function Board Connectors

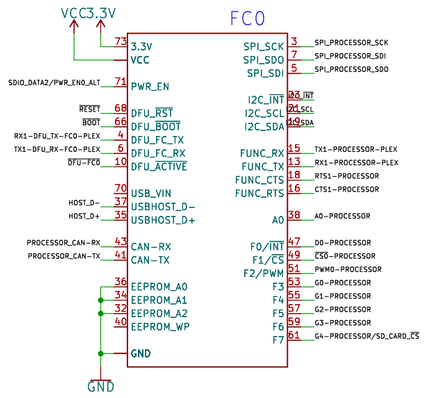

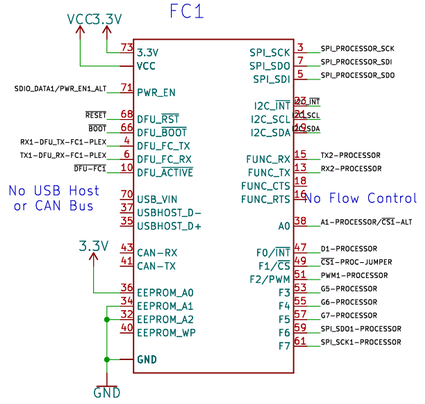

Standoff



microSD Card

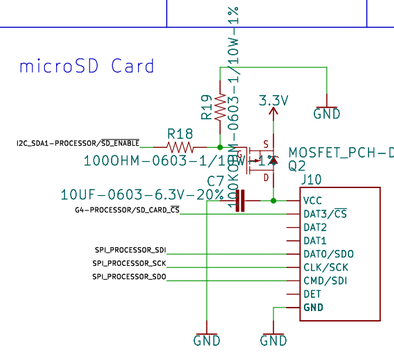

Buttons

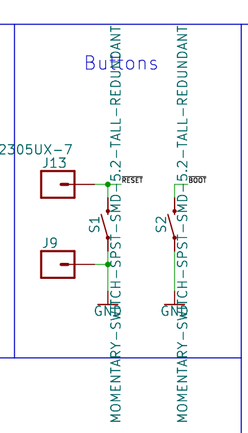

I2C - Qwiic

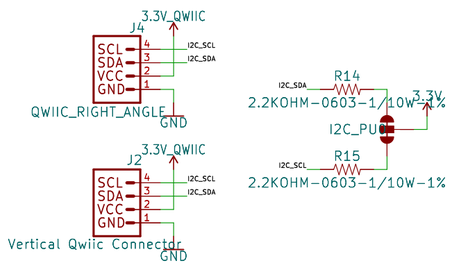

UART Multiplexer

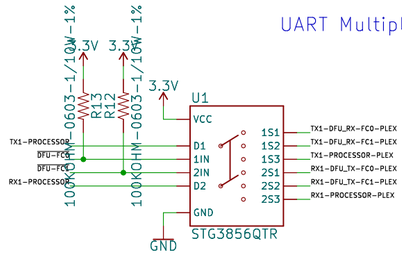

Mux Truth Table		
1IN	2IN	D->S
L	L	High Z
L	H	S1
H	L	S2
H	H	S3 (default)

Released under the Creative Commons Attribution Share-Alike 4.0 License
https://creativecommons.org/licenses/by-sa/4.0/

TITLE: ${PROJECTNAME}

Design by: ${DESIGNER} Elias Santistevan

REV: ${REV}

Date: ${CURRENT_DATE}

Sheet: ${#}/${##}

Sheet: /
File: Kicking_Wheel.sch

Title:

Size: User | Date: | Rev:

KiCad E.D.A. eeschema 7.0.6 | Id: 1/1