


This board requires bipolar power,
in the range from $\pm 5\text{VDC}$ to $\pm 20\text{VDC}$.

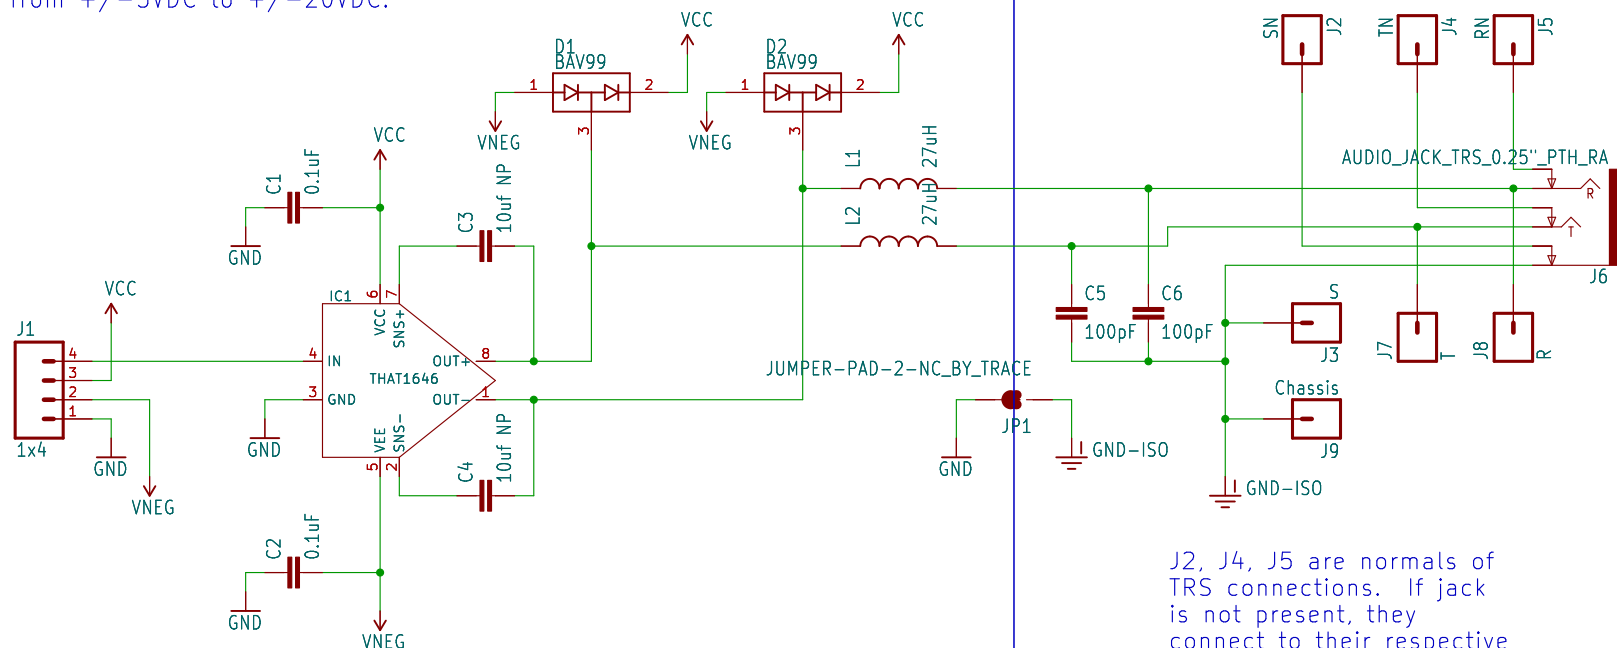

J2, J4, J5 are normals of
TRS connections. If jack
is not present, they
connect to their respective
T/R/S connections.
If jack is present, they float.

How to use JP1,
a note on grounding & shielding:
For prototyping/breadboarding, the entire board is grounded through the
output connector (J4). In that case, leave JP1 intact.
If installing in a metal enclosure, the enclosure should be tied to earth,
and the shield should be tied to the enclosure as directly as possible.
In this case, cut JP1, and run a heavy wire from J9 to the chassis.
This avoids the common "pin 1 problem,"
<http://www.rane.com/note151.html>
<http://www.rane.com/note165.html>



Released under the Creative Commons
Attribution Share-Alike 4.0 License
<https://creativecommons.org/licenses/by-sa/4.0/>

TITLE: \${PROJECTNAME}

Design by: Byron Jacquot

REV:
V10

Date: \${CURRENT_DATE}

Sheet: \${#}/\${##}

Size: User Date:
KiCad E.D.A. eeschema 7.0.6

Rev:
Id: 1/1