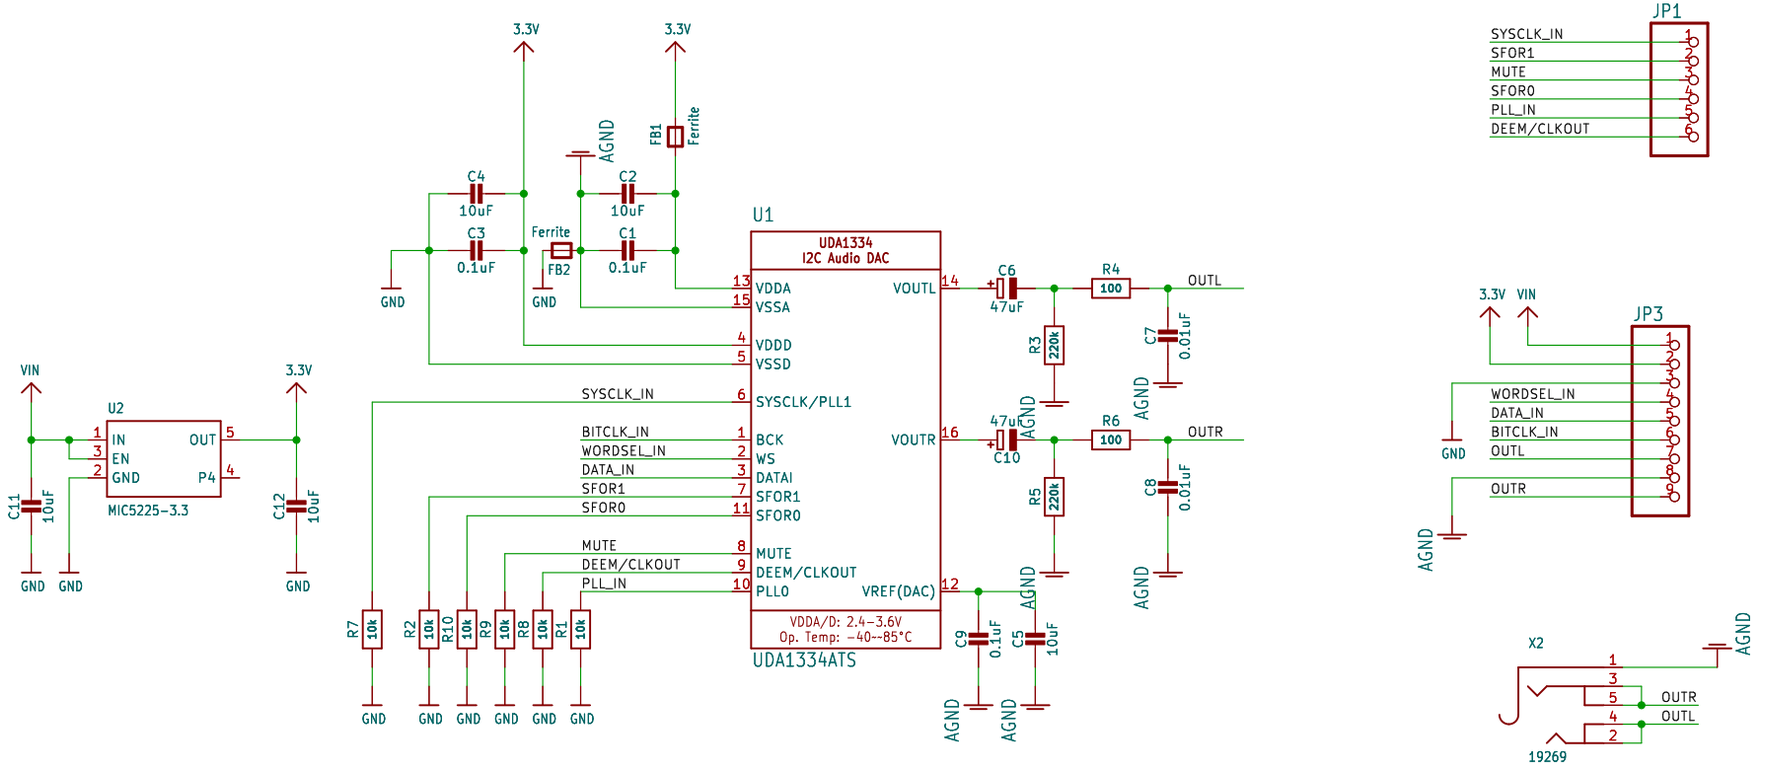

SFOR0 SFOR1 Function
LOW LOW I2S-Bus Input
LOW HIGH LSB-justified 16 bits input
HIGH LOW LSB-justified 20 bits input
HIGH HIGH LSB-justified 24 bits input

MUTE:
LOW = Mute Off
HIGH = Mute On

DEEM:
LOW = De-emphasis off
HIGH = De-emphasis on

ISSUE	${COMPANY}	© ${YEAR}
DRAWN ${DRAWN}	TITLE	REV ${REV}
CHECKED ${CHECKED}		
DATE ${DATE}	DATE ${CURRENT_DATE}	DRG № ${DRGNO}
	FILE: ${PROJECTNAME}	PAGE: ${#}/${##}

Sheet: /
File: working.kicad_sch

Title:		
Size: User	Date:	Rev:
KiCad E.D.A. kicad-cli 7.0.6-7.0.6~ubuntu22.04.1		Id: 1/1