



www.schmalzhaus.com/EBB

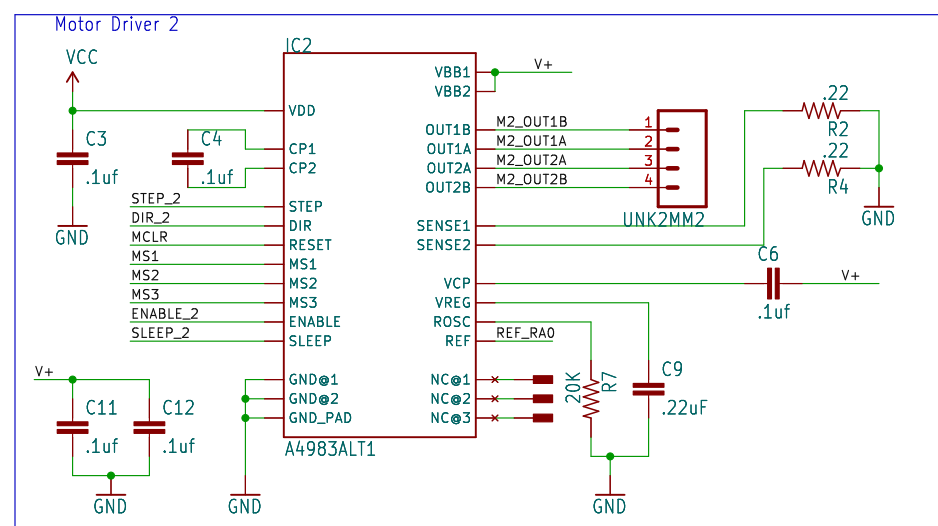

- replaced two driver IC footprints with 1:1 rev
- routed all traces directly away from those ICs
- moved some vias as necessary

The 10 K Ω on the pic is a Schmitt trigger which is 2.65V as a minimum HIGH threshold.



SFE SCHMALZHAUS	Title: \${PROJECTNAME}		
	Version:		
	\${CURRENT_DATE}		
	Sheet: / File: working_kicad.sch	Drawn By:	\${#}/\${##}
Title: G		H	
Size: User	Date:		Rev:
KiCad E.D.A.	kicad-cli 7.0.6-7.0.6-ubuntu22.04.1		Id: 1/1