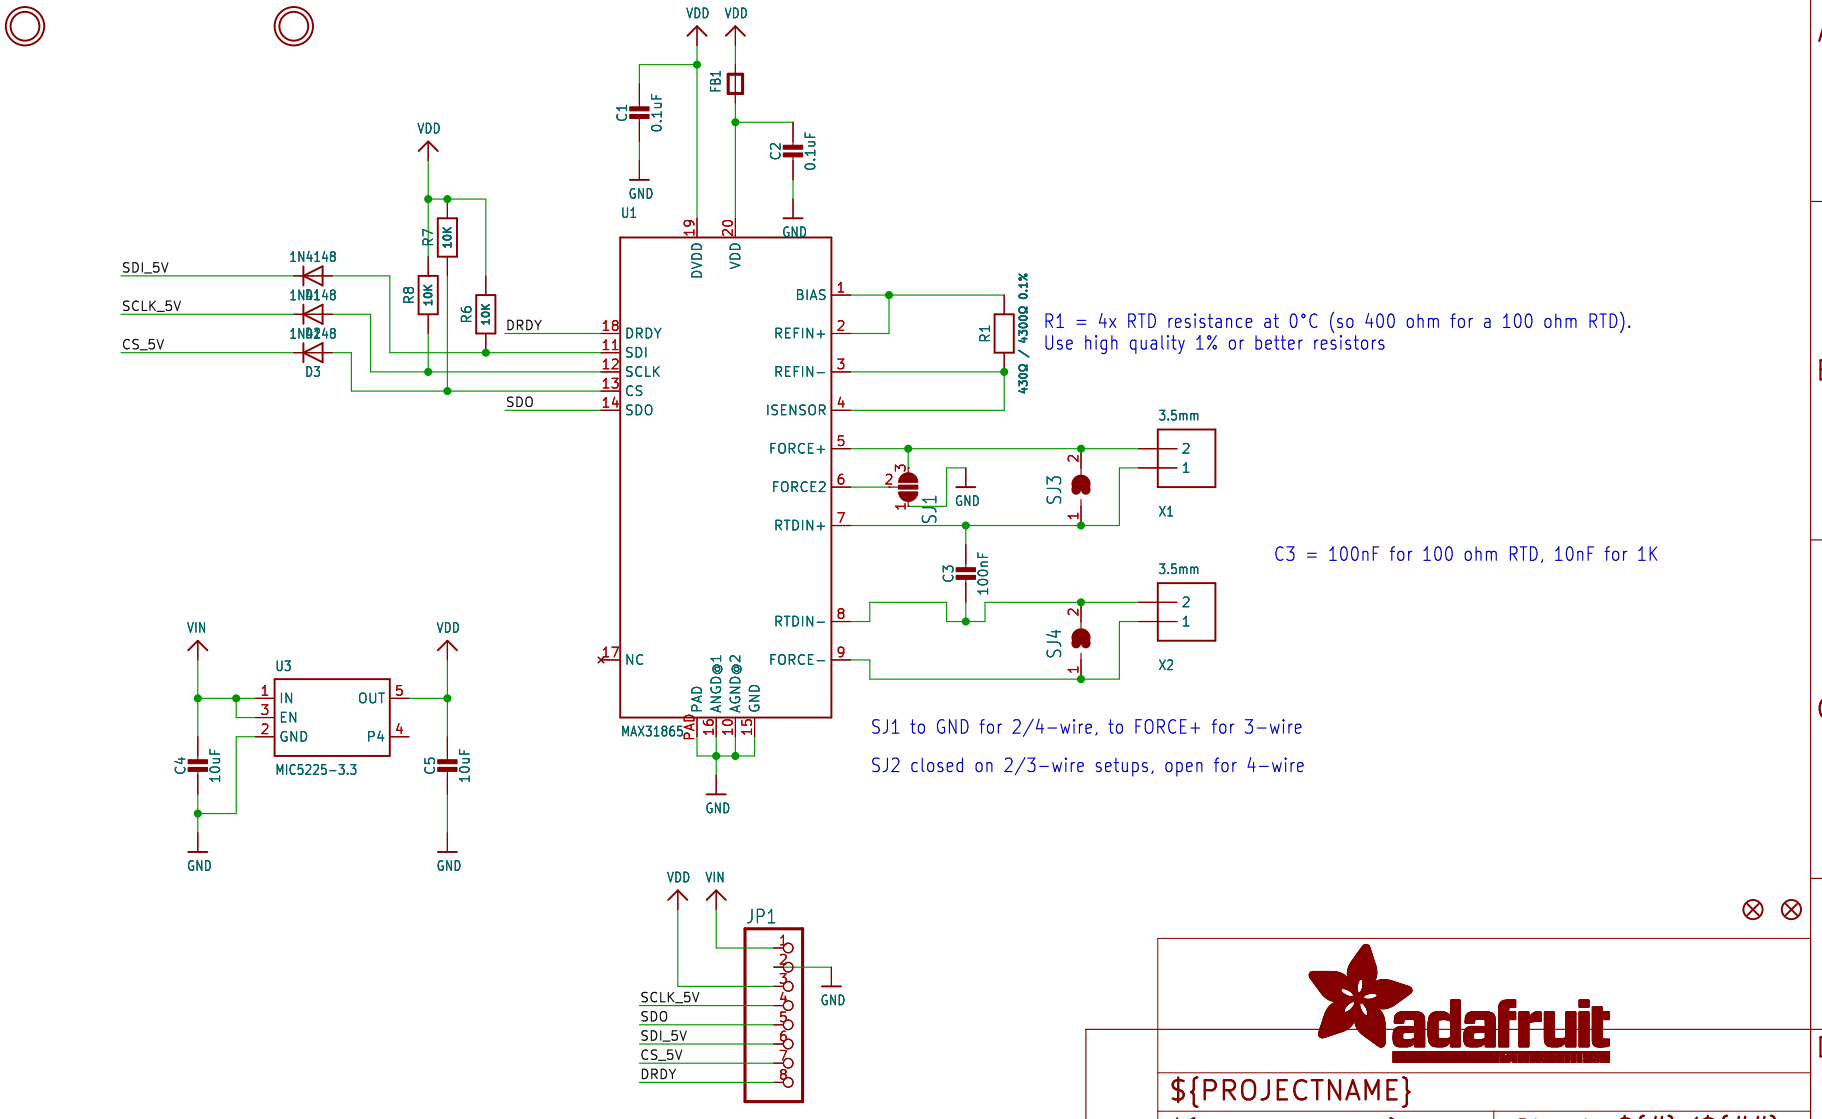

VDD
VDD
C1
0.1uF
FB1
C2
0.1uF
GND
U1
DVDD
VDD
GND
SDI_5V
SCLK_5V
CS_5V
1N4148
D1
1N4148
D2
1N4148
D3
R7
10K
R8
10K
R6
10K
DRDY
SDO
DRDY
SDI
SCLK
CS
SDO
BIAS
REFIN+
REFIN-
ISENSOR
FORCE+
FORCE2
RTDIN+
RTDIN-
FORCE-
NC
PAD
AGND@1
AGND@2
GND
MAX31865
R1
4300Ω / 4300Ω 0.1%
3.5mm
SJ1
SJ3
SJ4
X1
X2
C3
100nF
R1 = 4x RTD resistance at 0°C (so 400 ohm for a 100 ohm RTD).
Use high quality 1% or better resistors
C3 = 100nF for 100 ohm RTD, 10nF for 1K
SJ1 to GND for 2/4-wire, to FORCE+ for 3-wire
SJ2 closed on 2/3-wire setups, open for 4-wire
VIN
VDD
U3
IN
EN
GND
OUT
P4
MIC5225-3.3
C4
10uF
C5
10uF
GND
GND
VDD
VIN
JP1
SCLK_5V
SDO
SDI_5V
CS_5V
DRDY
GND
adafruit
${PROJECTNAME}
${CURRENT_DATE}
Sheet: ${#}/${##}
Drawing: ${AUTHOR}
Adafruit Industries
Sheet: /
File: working.kicad_sch
Title:
Size: User
Date:
Rev:
KiCad E.D.A. kicad-cli 7.0.6-7.0.6~ubuntu22.04.1
Id: 1/1