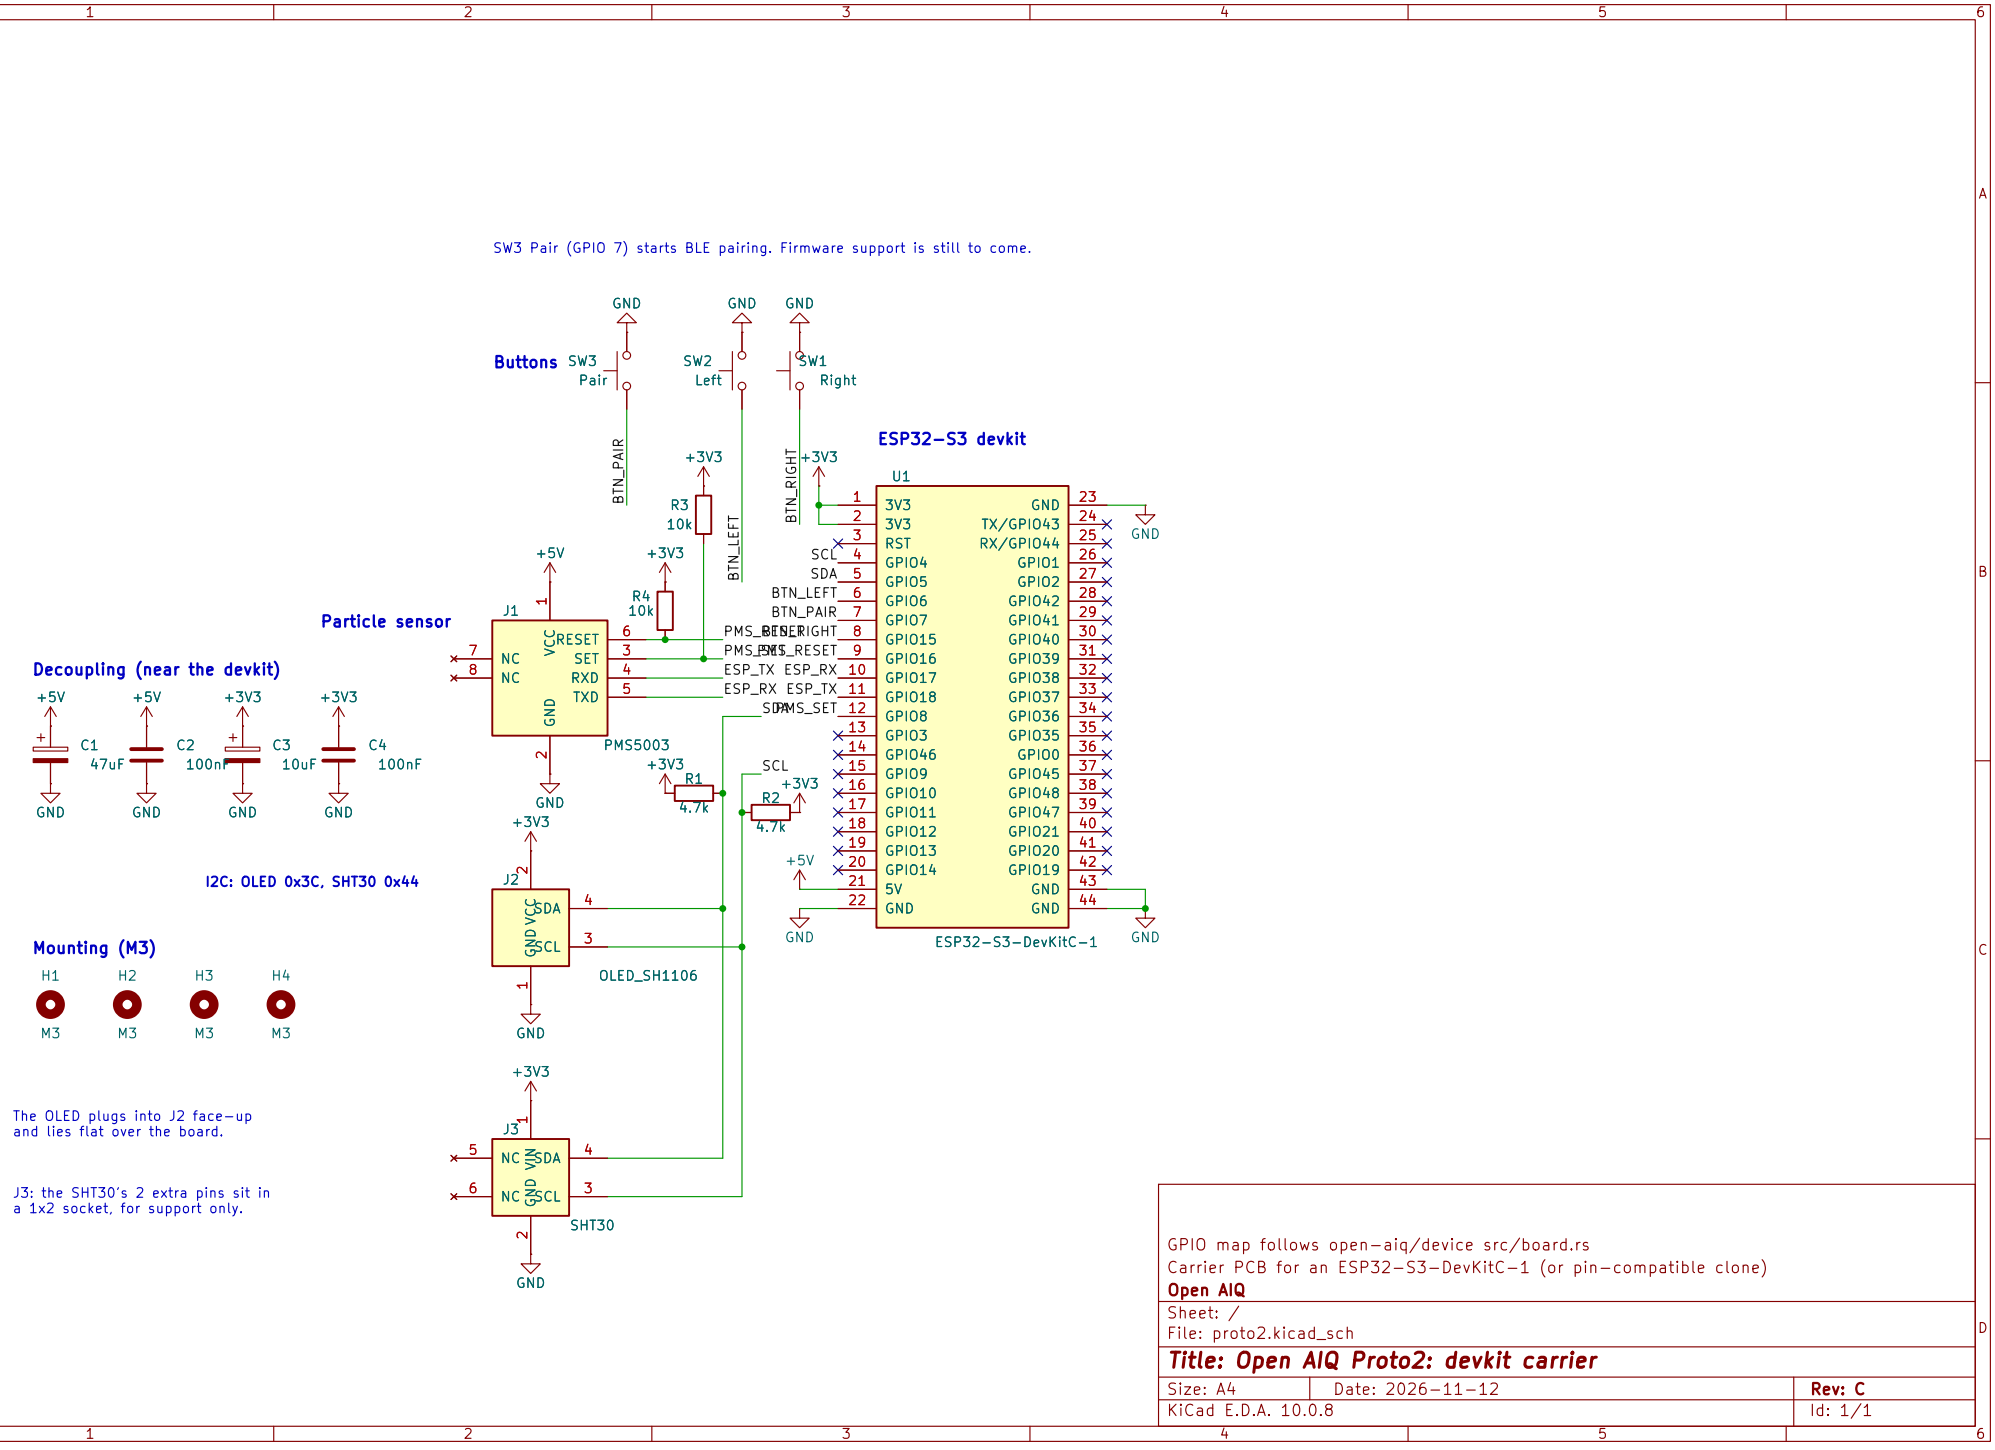

SW3 Pair (GPIO 7) starts BLE pairing. Firmware support is still to come.
Buttons
SW3 Pair
SW2 Left
SW1 Right
BTN_PAIR
BTN_LEFT
BTN_RIGHT
R3 10k
R4 10k
ESP32-S3 devkit
U1
3V3
3V3
RST
GPIO4
GPIO5
GPIO6
GPIO7
GPIO15
GPIO16
GPIO17
GPIO18
GPIO8
GPIO3
GPIO46
GPIO9
GPIO10
GPIO11
GPIO12
GPIO13
GPIO14
5V
GND
GND
TX/GPIO43
RX/GPIO44
GPIO1
GPIO2
GPIO42
GPIO41
GPIO40
GPIO39
GPIO38
GPIO37
GPIO36
GPIO35
GPIO0
GPIO45
GPIO48
GPIO47
GPIO21
GPIO20
GPIO19
GND
GND
ESP32-S3-DevKitC-1
Particle sensor
J1
NC
NC
VCC
RESET
SET
RXD
TXD
GND
PMS5003
PMS_RESET
ESP_TX
ESP_RX
R1 4.7k
R2 4.7k
SCL
SDA
Decoupling (near the devkit)
C1 47uF
C2 100nF
C3 10uF
C4 100nF
I2C: OLED 0x3C, SHT30 0x44
J2
VCC
GND
SCL
SDA
OLED_SH1106
Mounting (M3)
H1
H2
H3
H4
M3
The OLED plugs into J2 face-up and lies flat over the board.
J3: the SHT30's 2 extra pins sit in a 1x2 socket, for support only.
J3
NC
NC
VIN
GND
SCL
SDA
SHT30
GPIO map follows open-aiq/device src/board.rs
Carrier PCB for an ESP32-S3-DevKitC-1 (or pin-compatible clone)
Open AIQ
Sheet: /
File: proto2.kicad_sch
Title: Open AIQ Proto2: devkit carrier
Size: A4
Date: 2026-11-12
Rev: C
KiCad E.D.A. 10.0.8
Id: 1/1