## ML605 Hardware Setup

#### Prerequisites

• A valid development system which has OpenCPI and Xilinx installed. These instructions were performed using Xilinx ISE 14.7. Note that Xilinx cable drivers must be installed for OpenCPI's loadFlash command to work properly.

### **Hardware Description**

The ML605 is the PCI-Express development board for Virtex 6. It can be purchased directly from Xilinx or a distributor. Xilinx's URL for the board containing user guides and reference manuals can be found here:

http://www.xilinx.com/products/boards-and-kits/ek-v6-m1605-g.html#documentation

There is one version of the board. The below table contains platform name and part number for the development board.

OpenCPI Platform Name	Xilinx Kit Part Number	FPGA Part Number
ml605	EK-V6-ML605-G	XC6VLX240T-1FFG1156

#### **Setup Overview**

To use this board within OpenCPI, the board must be configured to load the FPGA with an OpenCPI bitstream upon power up. There is flash memory on the board which can be loaded with a bitstream to load the FPGA on power up. The process for loading this flash is:


- 1. Configure the board to boot from flash memory and the PCIe lane size.
- 2. Install board into OpenCPI development host.
- 3. Verify JTAG connection using OpenCPI script.
- 4. Run OpenCPI loadFlash script.
- 5. Verify that the ML605 is configured with a OpenCPI bitstream.
- 6. Modification of /opt/opencpi/system.xml

Details for implementing this procedure can be found in the sections below.

#### Configure the board to boot from flash memory and the PCIe lane size

For more information about configuring the ML605, reference Xilinx ML605 Hardware User Guide, UG534.pdf (v1.8) October 2, 2012.


1. The S2 DIP switch is a multi-purpose selector switch. It controls the state of the FPGA's configuration mode pins and must be set for "Slave SelectMAP Platform Flash XL" to boot from flash memory. Below is a picture of the S2 DIP switch with the expected setting:

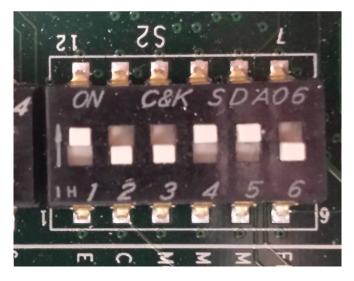

The table below contains the expected S2 DIP switch settings.

S2.1	S2.2	S2.3	S2.4	S2.5	S2.6
on	off	off	on	on	don't care

2. The J42 configures the board to support 4x PCIe lanes. Below is a picture of J42 with a 100mil shunt installed in the correct position.

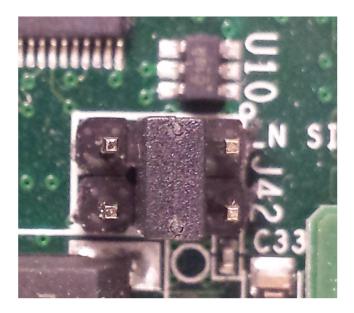

#### Install board into OpenCPI development host

- 1. Power off the development host.
- 2. Following anti-static best practices, insert the ML605 into a compatible PCIe slot.
- 3. Attach the USB cable between the ML605 JTAG port and a host USB port.
- 4. With the AUX power supply unplugged (powered OFF), attach the AUX power cable to the ML605 AUX power-in connector.
- 5. Power ON the AUX power supply by plugging it an A/C outlet. (at this point the development host is still
- 6. Locate the SW2 on the ML605, and switch it to the ON position, i.e, slide away from the AUX power-in connector. The board will power up, but the development host is not powered on.
- 7. Power ON the development host.

#### Verify JTAG connection using OpenCPI script

- 1. Enter a terminal and source the OpenCPI environment for x86.
- 2. Run the following script to test the JTAG connection: opencpi/hdl/scripts/probeJtag

An example of the output is shown below:

```
==== Probing for Altera JTAG ports:
Altera directory set by (OCPI_ALTERA_TOOLS_DIR) does not exist.
==== Probing for Xilinx JTAG ports:
Discovered ports are: usb21
Trying port usb21... ESN is 000013C8121101
Part at position 1 on is xccace
Part at position 2 on is xc6vlx240t.
```

For the purposes of this guide, ignore any messages related to Altera.

If the output doesn't look like this, refer Xilinx documentation to ensure the JTAG cable is correctly installed and operational.

#### Run OpenCPI loadFlash script

1. The loadFlash script is located at opencpi/tools/cdk/scripts. You must pass it a pre-built ML605 .bitz file generated by OpenCPI and the serial number (in hex) of the JTAG cable from probeJtag script above. This step with take approximately 10 minutes to complete.

#### ML605 syntax

\$ loadFlash m1605 <OpenCPI Bitstream File> <JTAG\_CABLE\_SERIAL\_NUMBER>

xilinx promgen tool.

```
Example output
$ loadFlash ml605 hdl/platforms/ml605/testbias_ml605_base.bitz 000013C8121101
Loading the flash memory on the m1605 platform attached to the JTAG pod with ESN 000013C8121101
Loading from file: hdl/platforms/ml605/testbias_ml605_base.bitz
Looking for the Xilinx USB port corresponding to JTAG Pod ESN 000013C8121101.
Discovered ports are: usb21
Trying usb21... ESN is: 000013C8121101
Found ESN 000013C8121101 on usb21, using it.
The bitstream file "hdl/platforms/ml605/testbias_ml605_base.bitz" is compressed. Expanding it.
Bitstream file decompressed into "/tmp/ocpibitstream3100.bit"
Converting "/tmp/ocpibitstream3100.bit" to flash format in "/tmp/ocpibitstream3100.mcs" using
```

Executing command: /opt/Xilinx/14.5/ISE\_DS/ISE/bin/lin64/promgen -w -p mcs -c FF -x xcf128x -data\_width 16 -u 00000000 /tmp/ocpibitstream3100.bit
Conversion to flash file format succeeded. Starting flash programming.
This can take a while - 10-15 minutes. Starting at 09:57:27.

real 11m55.080s user 0m28.494s sys 0m7.742s

Flash programming is complete. You must power-cycle the system to use it Use the "ocpihal search" command after power cycling to confirm success.

- 2. Once programming is complete, power cycle the system:
- i Power OFF the host
- ii Power cycle the ML605
- iii Power ON the host

#### Verify that the ML605 is configured with a OpenCPI bitstream

- 1. Open a terminal window.
- 2. Execute the following Linux command to verify the presence of the ML605.

\$ sudo lspci -vv

03:00.0 RAM memory: Xilinx Corporation Device 4243 (rev 02)

Subsystem: Xilinx Corporation Device 0007

Control: I/O- Mem- BusMaster- SpecCycle- MemWINV- VGASnoop- ParErr- Stepping- SERR- FastB2B-

DisINTx-

Status: Cap+ 66MHz- UDF- FastB2B- ParErr- DEVSEL=fast >TAbort- <TAbort- <MAbort- >SERR- <PERR-

INIX-

Interrupt: pin A routed to IRQ 11

Region 0: Memory at e8000000 (32-bit, non-prefetchable) [disabled] [size=64M]

Region 1: Memory at ec000000 (32-bit, non-prefetchable) [disabled] [size=1M]

Capabilities: [40] Power Management version 3

Flags: PMEClk- DSI- D1- D2- AuxCurrent=OmA PME(D0+,D1+,D2+,D3hot+,D3cold-)

Status: DO NoSoftRst+ PME-Enable- DSel=O DScale=O PME-

Capabilities: [48] MSI: Enable- Count=1/1 Maskable- 64bit+

Address: 000000000000000 Data: 0000 Capabilities: [60] Express (v2) Endpoint, MSI 01

DevCap: MaxPayload 512 bytes, PhantFunc 0, Latency LOs <64ns, L1 unlimited

ExtTag- AttnBtn- AttnInd- PwrInd- RBE+ FLReset-

DevCtl: Report errors: Correctable- Non-Fatal- Fatal- Unsupported-

RlxdOrd- ExtTag- PhantFunc- AuxPwr- NoSnoop+

MaxPayload 256 bytes, MaxReadReq 256 bytes

DevSta: CorrErr- UncorrErr- FatalErr- UnsuppReq- AuxPwr- TransPend-

LnkCap: Port #0, Speed 5GT/s, Width x4, ASPM LOs, Latency LO unlimited, L1 unlimited

ClockPM- Surprise- LLActRep- BwNot-

LnkCtl: ASPM Disabled; RCB 64 bytes Disabled- Retrain- CommClk-

ExtSynch- ClockPM- AutWidDis- BWInt- AutBWInt-

LnkSta: Speed 5GT/s, Width x4, TrErr- Train- SlotClk- DLActive- BWMgmt- ABWMgmt-

DevCap2: Completion Timeout: Range B, TimeoutDis-, LTR-, OBFF Not Supported

DevCtl2: Completion Timeout: 50us to 50ms, TimeoutDis-, LTR-, OBFF Disabled

LnkCtl2: Target Link Speed: 5GT/s, EnterCompliance- SpeedDis-

Transmit Margin: Normal Operating Range, EnterModifiedCompliance- ComplianceSOS-

Compliance De-emphasis: -6dB

LnkSta2: Current De-emphasis Level: -3.5dB, EqualizationComplete-, EqualizationPhase1- EqualizationPequest-

Capabilities: [100 v1] Device Serial Number 00-00-00-01-01-00-0a-35

Kernel modules: windrvr6

- 3. In the terminal window, source the OpenCPI environment for x86.
- 4. Execute an OpenCPI utility which calls Xilinx iMPACT to scan JTAG for devices

```
$ probeJtag
==== Probing for Altera JTAG ports:
Altera directory (set by OCPI_ALTERA_TOOLS_DIR) does not exist.
==== Probing for Xilinx JTAG ports:
Discovered ports are: usb21
Trying port usb21... ESN is 000013C8121101
Part at position 1 on is xccace
```

5. Load the OpenCPI driver (requires sudo privileges):

Part at position 2 on is xc6vlx240t

- \$ ocpidriver load
- 6. Execute an OpenCPI utility

```
$ ocpihdl search
```

```
OpenCPI HDL device found: 'PCI:0000:03:00.0': bitstream date Fri Jun 26 15:14:21 2015, platform "ml605", part "xc6vlx240t", UUID 8cd0a91e-1c37-11e5-8b5f-f30e2f82978a
```

7. Perform a container check using ocpirun -C. The result should look like this:

#### Modification of /opt/opencpi/system.xml

When multiple boards from same vendor are installed, and thus more than one JTAG USB, the OpenCPI load function (either explicit in "ocpihdl load" or implicit in 'ocpirun' needs to know which JTAG USB to use. The '/opt/opencpi/system.xml' file is used to map the PCI:\* with JTAG USB serial number information. An example is shown below:

Perform a container check using ocpirun -C. The result should look like this:

```
$ ocpirun -C
```

Available containers:

```
# Model Platform OS OS Version Name
0 rcc x86_64 linux c6 rcc0
1 hdl m1605 PCI:0000:08:00.0
2 hdl m1605 PCI:0000:03:00.0
```

# ML605 Card Support

If using a Zipper/Myriad RF with the ml605, ensure that the Myriad RF card is connected to the Zipper via FMC.