

CATCH-UP PLAN | REPLACES OLD DAYS 5-10

Finish the table in 4 sessions

Due Wednesday after office hours. **You are at** old Day 5, step 3 (base assembled). Class and office hours are about 5 hours apart each day. That gap is what makes this plan work.

How to use these pages

[] Use these 6 pages instead of old pages 9-14 (Days 5-10). Do one numbered step, check it, then move on.

[] **Show page 2 to your teacher in the first 5 minutes on Tuesday.** It has the two packet fixes.

[] **Keep old Page 4 with you on Tuesday.** It has the herringbone start picture (H1 and H2). Nothing else from the old packet is needed.

[] Do NOT use the old sizes for the plywood, border, H pieces, or shelf. The new sizes are on page 2.

[] Stop with the machine off if a cut, setup, or measurement does not match these pages.

The 4 sessions

Session	When	Finish line
1	Tuesday class	Top frame glued, 8 cleats screwed in, shelf cut and fits
2	Tuesday office hours	Herringbone glued and clamped overnight, base holes filled
3	Wednesday class	Everything sanded, first clear and white coats on
4	Wednesday office hours	Table assembled, 4 photos, second coat, turned in

Why the timing works

Tuesday: the border glue sets for 5 hours before the herringbone goes in. Tuesday night: the herringbone glue dries overnight. Wednesday: the first coat dries for 5 hours before you put the table together.

If you fall behind

1 Never skip gluing the herringbone on Tuesday, or assembling the table and taking the 4 photos on Wednesday.

2 Skip first filling the base screw holes.

3 Skip second the second coat. One coat and a finished table beat two coats on loose parts.

4 Edge pieces not done Tuesday? Glue them first thing in Session 3. Sand the base and shelf while they dry, and sand the top last.

What changed (hand this in as your record of changes)

Change	Old packet	New	Why
Top layers	3/4" plywood + 1/4" walnut	1/4" plywood + 3/4" walnut	Material change. Top is still 1" thick
Border B1-B4	1 1/2" wide, 20" long point	1 1/4" wide, 19 1/2" long point	Bands take the outer 1/4", so a 20" border will not fit
Shelf S1	14 7/8" square	Rail-to-rail minus 1/8" (about 15 5/8"), notched	Rails sit 3/8" outside the legs, so the old shelf's screws missed it
Herringbone	Dry-fit day, then glue day	Glued as you go in one session	Time
Second coat	Before assembly	After assembly	Never handle wet parts
Periods used	10 planned	Fill in: _____	

Walnut check: solid 3/4" pattern pieces use more wood than resawn ones. Plan on about 2 more board feet than the packet's 5 1/2. **Screws:** 24 for the cleats + 16 for the shelf and top, all #8 x 1 1/4".

SHOW YOUR TEACHER FIRST

New sizes and the two packet fixes

Both fixes happen in Session 1. They come from the packet forgetting that the rails and edge bands have thickness.

Fix 1: the border sits inside the bands

1 Top edge, cut open

outside edge

border
3/4" x 1 1/4"

pattern pieces
3/4" thick

1/4" plywood P1

1"

band 1/4" x 1" wraps plywood AND border (bottoms flush)

Border: 19 1/2" long point, 17" short point, 1 1/4" wide.
Band: 20" long point, 19 1/2" short point. Top of everything flush.

2 Top from above

20" outside

17" opening

Blue lines = centerlines.
Draw them on the plywood
9 3/4" from its edges
BEFORE the glue-up.
They end up 8 1/2" from
the border on all 4 sides.

Walnut frame looks 1 1/2" wide (1/4" band + 1 1/4" border),
same as the old picture check. The pattern field stays 17".

Fix 2: bigger shelf with notched corners

1 Shelf corner from above

new shelf

leg

rail

Red dashes = old 14 7/8" shelf edge. The screw hole (blue dot) was outside it and missed.

Yellow = cleat under the shelf.
New shelf sits 11/16" on it, so the centered hole hits wood.

Notch around each leg:
about 3/8" x 3/8"

1/16" gap to each rail

Measure between the rails (about 15 3/4"). Shelf = that minus 1/8".
Notch each corner by how far the leg sticks out past the rail.

2 Drill every cleat BEFORE installing it

SIDE face: 11/64" holes -> screws into the apron or rail. No countersink.

END

1 1/2"

6 3/4"

12"

13 1/2"

BOTTOM face: 3/16" holes -> screws up into top or shelf. Shallow countersink.

END

3 3/4"

9 3/4"

All holes are centered across the cleat and measured from the same END. Make 8 cleats (4 top, 4 shelf), 3/4" x 3/4" x 13 1/2".

New cut list for the top and shelf

Label	Qty	Exact size	Note
P1	1	1/4" plywood, 19 1/2" square	Draw centerlines 9 3/4" from the edges before the glue-up
B1-B4	4	3/4" x 1 1/4"; 19 1/2" long point, 17" short point	Same thickness as the pattern strips
E1-E4	4	1/4" x 1"; 20" long point, 19 1/2" short point	No change. Bottoms flush with the plywood bottom
H1-H40	40	3/4" x 2" x 6"	Cut from 2"-wide strips. H40 is the spare
S1	1	Rail-to-rail minus 1/8" (about 15 5/8") square	Notch 4 corners about 3/8" x 3/8". Grain front to back
Cleats	8	3/4" x 3/4" x 13 1/2"	No change. Drill before installing (picture above)

SESSION 1 OF 4 | TUESDAY CLASS

Glue the top frame and finish the base

Finish line The top frame is glued (20" outside, 17" opening), all 8 cleats are screwed in, and the shelf drops in with even gaps.

Bring P1, walnut for the border (or B1-B4), E1-E4, pattern strips, base, 8 cleats, shelf blank S1, 1 1/4" screws, these pages.

Tools Tape, square, pencil, planer, table saw, miter saw, band clamp, clamps, wax paper, glue, drill, 11/64" 3/16" 7/64" bits, countersink, tape, bandsaw, PPE.

Class plan

Minutes	Task	Move on when
0-5	Show teacher page 2; check your parts	Teacher OKs both fixes
5-15	Border strips (or cut the 40 H pieces)	4 strips 3/4" x 1 1/4", same thickness as pattern strips
15-30	Mark centerlines; glue the top frame	20" outside, 17" opening, diagonals match
30-33	Check the base	18" square; diagonals match within 1/16"
33-45	Drill and install 8 cleats	Flush at the apron top and rail bottom
45-55	Cut and notch the shelf	Drops in with 1/16" gaps
55-60	Clean and store	Top stays clamped flat

Build steps

- 1 Check your parts** Pattern strips must be 3/4" thick, not 1/4". Find the border strips and the 1/4" x 1" edge bands. No bands? Tell your teacher now.
- 2 Make the border strips** Skip if you have them. Plane walnut until it matches a pattern strip (lay them side by side; your finger feels no step). Rip 4 strips 1 1/4" wide, at least 21" long. **Already have them?** Cut the 40 H pieces now (Session 2, step 2).
- 3 Mark the centerlines** On P1, mark 9 3/4" from one edge at both ends and connect. Repeat the other way. Write TOP.
- 4 Miter the border** Cut 45-degree ends: 19 1/2" long point, 17" short point, one stop for all 4. Dry-fit on P1: outside edges flush with P1, miters closed.
- 5 Miter the bands** Cut E1-E4 to a 20" long point and 19 1/2" short point. Dry-fit them around P1 and the border.
- 6 Glue the frame** Wax paper on a flat bench. Thin glue under the border and on the miters; set it flush with P1's edges. Glue P1's edges and the border's outside edges, wrap the bands (bottoms flush on the bench), band clamp around, clamps and a caul press the border down.
- 7 Check before it sets** Opening is 17" in 3 places each way, outside is 20", and both opening diagonals match. Wipe glue out of the inside corners.
- 8 Check the base** Outside is 18" both ways; top diagonals are 25 29/64" and match within 1/16". If it is off and dry, tell your teacher. Do not force it.
- 9 Drill the cleats** At the bench (page 2 picture). Side face: 11/64" holes at 1 1/2", 6 3/4", 12", no countersink. Bottom face: 3/16" holes at 3 3/4", 9 3/4", shallow countersink (head just flush).
- 10 Install the cleats** Top cleats inside the aprons, 3/4" from each leg, top flush with the apron top. Shelf cleats inside the rails, bottom flush with the rail bottom. Countersinks face DOWN. Clamp, then drill 7/64" pilots with tape 1 1/4" from the tip, and drive 1 1/4" screws.
- 11 Cut the shelf** Measure rail to rail both ways and subtract 1/8" (about 15 5/8"). Cut S1 square, grain front to back, mark FRONT. Measure how far a leg sticks out past the rail (about 3/8") and bandsaw that notch at each corner. Test the fit. Do not screw it.

End of class stop point

- [] Top frame is clamped flat: 20" outside, 17" opening.
- [] Base is 18" square and all 8 cleats are flush and screwed in.
- [] Shelf drops in with even gaps (not screwed).

If a machine is busy Drill cleats, mark the shelf notches, cut H pieces, or dry-fit miters.

If you run late Leave the shelf. Cut and notch it first thing in Session 3.

Picture check

1 Centerlines first

Both lines 9 3/4" from the plywood edges, before glue.

2 Glue order

1 = border, glued ON the plywood, flush with the plywood edge
2 = band, wraps both

Border ON the plywood.
Band wraps both.

3 Where the cleats go

top
apron
top cleat: flush with the apron TOP
shelf
rail
shelf cleat: flush with the rail BOTTOM

Screw holes that go up face down (countersunk).

4 Shelf drops in

shelf
FRONT

Notches clear the legs.
1/16" gap to the rails.

SESSION 2 OF 4 | TUESDAY OFFICE HOURS

Glue in the herringbone

Finish line Every pattern space is filled and glued, the top is clamped flat overnight, and the base holes are filled.

Bring Framed top, pattern strips or H1-H40, **old Page 4**, glue, spreader, painter's tape, damp towel, wax paper, flat caul, clamps or weights, filler, putty knife.

Tools Miter saw with 6" stop, square, speed square, pencil, 2" x 2" cardboard square, sanding block with 120, vacuum.

Class plan

Minutes	Task	Move on when
0-5	Unclamp and set up	Opening is 17"; no glue in the corners
5-15	Cut H1-H40 (skip if done in class)	40 pieces, all exactly 6"
15-18	Starter dot; dry-check H1 and H2	L matches old Page 4
18-33	Glue full pieces, center out	Rows stay at 45 degrees
33-50	Fit and glue edge pieces	Gaps 1/32" or less
50-55	Wax paper, caul, clamps	Top is flat under even pressure
55-60	Fill base holes and clean	Holes slightly overfilled

Build steps

1 Unclamp the frame Scrape any glue out of the inside corners. The opening is 17".

2 Cut H1-H40 Set the stop at 6", cut one test piece and check it, then lock the stop. Keep the same end against the stop and cut 40.

3 Check the centerlines Your lines should be 8 1/2" from the border on all four sides. Redraw any that are not.

4 Mark the starter dot Set the 2" square like a diamond on the center, top and bottom corners on the vertical line. Mark the bottom corner (old Page 4).

5 Dry-check H1 and H2 No glue yet. Place them like old Page 4: the middle of H2's short end on the dot, a 90-degree L. Then lift them off.

6 Glue as you go Thin glue on the plywood only where the next 2-3 pieces go. Press each piece down and tight to its neighbor. Tape across it toward the center.

7 Check every 4 pieces Use the speed square: pieces stay at 45 degrees to the border. Wipe squeeze-out with a damp (not wet) towel.

8 Mark the edge pieces Lay a full piece over its gap with one end on the border. Prop the other end with H40 so it lies flat. Reach under and trace along the border's inside edge.

9 Cut the edge pieces Every edge cut is 45 degrees, because the pieces run at 45 degrees to the border. Cut 1/32" long, sand to fit, glue in. Corner pieces may need two cuts.

10 Clamp flat Wax paper over the whole top, then the flat caul, then even pressure at the center and edges. Check no piece popped up. Leave it overnight.

11 Fill the base holes Press filler into every countersunk hole on the legs and X ends. Leave it slightly proud for sanding.

End of session stop point

[] Every space is filled, nothing rocks, and no gap is over 1/32".

[] The top is under the caul with even pressure, overnight.

[] All visible base screw holes are filled.

If a machine is busy Keep gluing full pieces, mark edge pieces, or fill the base holes.

If you run late At minute 50, clamp what is glued anyway. Glue the last edge pieces first thing in Session 3.

Picture check

1 Start at the dot

Then copy H1 and H2 from old Page 4.

2 Glue 2-3 at a time

Glue only the next spot. Press, push tight, tape.

3 Mark an edge piece

Trace underneath, then cut at 45 degrees, 1/32" long.

4 Clamp overnight

Wax paper under the caul. Even pressure everywhere.

SESSION 3 OF 4 | WEDNESDAY CLASS

Sand everything and put on the first coats

Finish line Top, shelf, and base are sanded through 180 grit and have one thin coat: clear on the walnut, white on the base.

Bring Top, shelf, base, 80 120 180 paper, clear satin water-based polyurethane, white satin paint, brushes, finish stands, clean towels.

Tools Glue scraper, palm sander, sanding block, vacuum, stir sticks, PPE.

Class plan

Minutes	Task	Move on when
0-5	Unclamp and scrape glue	No hard glue left
5-20	Sand the top	Flat and smooth through 180
20-30	Sand the base	Filler flush; 180 everywhere
30-35	Sand the shelf; ease edges	Edges feel safe but look crisp
35-40	Remove dust	Clean and dry
40-55	First coats	Thin and even, no runs
55-60	Clean brushes	Parts dry apart

Build steps

1 Unclamp Peel off the wax paper. Scrape hard glue with the scraper, not the sander.

2 Level the pattern Use 80 grit only where a piece sticks up more than 1/32". Keep the sander flat and moving.

3 Sand the top 120, then 180. Draw light pencil squiggles before each grit and change grits only when they are gone.

4 Sand the base 120, then 180. Sand the filler flush. Hand-sand the X corners. Do not round the X tips or apron corners.

5 Sand the shelf 120, then 180.

6 Ease sharp edges Two light hand passes with 180 on every edge.

7 Remove dust Vacuum, wipe with a clean slightly damp towel, and let it dry. No oily tack cloth.

8 Clear coat Stir, do not shake. Thin coat on the top and shelf: undersides, then edges, then faces, following each piece's grain. Catch runs.

9 White paint Stir. Inside the X corners first, then aprons, rails, and legs. Catch drips under the rails. The cleats can stay bare.

10 Dry apart Top, shelf, and base on stands, not touching. Hands off until office hours.

End of class stop point

[] Everything is sanded through 180 grit.

[] Every part has one thin coat with no puddles or heavy runs.


[] Top, shelf, and base are drying apart.

If Session 1 or 2 ran late Cut the shelf or glue the last edge pieces first. Sand the base and shelf while the glue dries, and sand the top last.

If you run late Coat the visible faces first. Undersides can go without.

Picture check

1 Squiggle trick

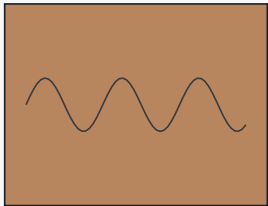

Sand until the pencil is gone, then change grit.


2 Grit order



80 = only where a piece sticks up. Then 120, 180.


Base and shelf start at 120.

3 Paint order

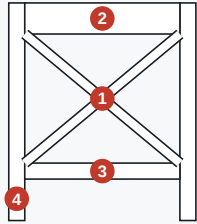

X corners, aprons, rails, then legs.

4 Dry apart

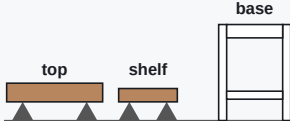

Nothing touches. Hands off for 5 hours.

SESSION 4 OF 4 | WEDNESDAY OFFICE HOURS

Assemble, photograph, second coat, turn in

Finish line The table is assembled, does not rock, has 4 photos and a second coat, and is turned in.

Bring Dry top, shelf, base, 16 screws (#8 x 1 1/4"), 220 paper, clear finish, white paint, brushes, clean blanket, 2 clamps, 1/16" spacers, page 1.

Tools Drill, 7/64" bit, driver bit, painter's tape, tape measure, square, damp rag, camera.

Class plan

Minutes	Task	Move on when
0-5	Touch test	A hidden touch leaves no print
5-12	Light 220 sand and dust off	Smooth and evenly dull
12-22	Attach the shelf	8 snug screws, even gaps
22-32	Attach the top	1" overhang on every side
32-35	Check rocking	All 4 feet touch
35-40	Take 4 photos	All 4 saved
40-55	Second coats	Thin and even
55-60	Clean and turn in	Teacher knows the coat is wet

Build steps

1 Touch test Press a fingertip on a hidden underside. If it is sticky, wait, and fill in page 1 while you wait.

2 Light sand 220 grit, almost no pressure, 2-3 passes on the visible faces. Wipe with a damp towel.

3 Set the shelf Base upright. Shelf on the cleats, FRONT forward, 1/16" spacers in the gaps. Clamp the shelf to two cleats.

4 Screw the shelf Flip the base upside down on the blanket. Tape the 7/64" bit 1 1/4" from the tip. Drill through the 8 shelf-cleat holes until the tape touches the cleat. Drive screws snug. Remove the clamps.

5 Center the top Top face down on the clean blanket. Set the upside-down base on it. Measure until every overhang is 1".

6 Screw the top Same taped bit through the 8 top-cleat holes. Drive screws snug without burying the heads.

7 Check rocking Flip it upright on the flattest bench. Never shorten a leg without teacher approval.

8 Take 4 photos Front, X side, top from above, and a close-up of the pattern and a half-lap.

9 Second coats White on the base first (legs, X, aprons, rails), then clear on the shelf, then clear on the top. Small brush near the walnut; wipe any white off with a damp rag right away.

10 Turn it in Tell your teacher the second coat is wet. Hand in page 1 as your record of changes.

End of session stop point

[] Table is 20" x 20" x 22" and does not rock.

[] Overhang is 1" on every side, shelf gaps are even, screws are snug.

[] 4 photos are saved, and the teacher knows the second coat is wet.

If you run late Skip the second coat. The photos and an assembled table matter more.

Picture check

1 Clamp, then flip

drill down
upside down
red = clamps
yellow = cleats
blanket

Clamps hold the shelf while you drill down.

2 Tape the bit

cleat
shelf or top
tape
1 1/4"

3/4" cleat + 1/2" into wood.
Stop at the tape.

3 Center the top

1"
base outline
1"
1"

Face down on a clean blanket. 1" all around.

4 4 photos

- ☐ 1 Front
- ☐ 2 X side
- ☐ 3 Top from above
- ☐ 4 Pattern + half-lap

Take them before the second coat.