

Badge Install

Step 1

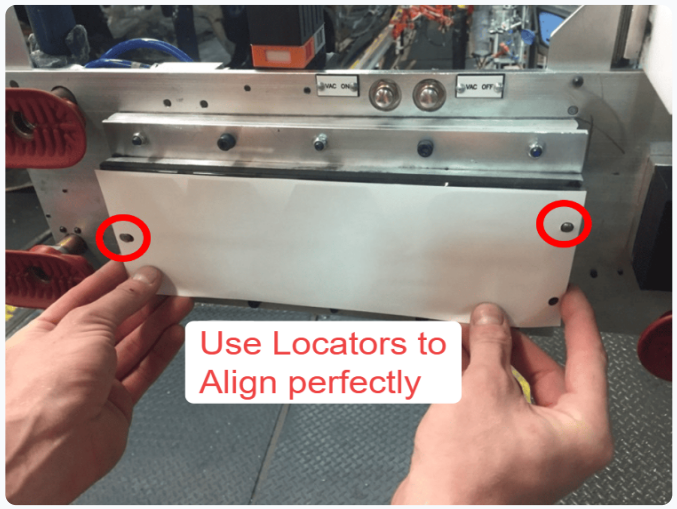

Load the correct HEMI badge into the fixture with the nameplate facing forward and backing toward the operator.

Step 2

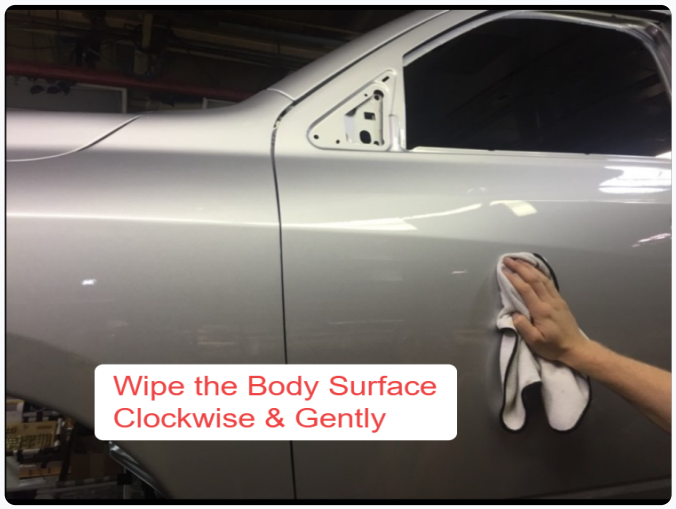


Clean the badge location with an approved alcohol wipe. Ensure the surface is dry and free of dust, oil, and residue.

Step 3




Remove the badge backing only after the vehicle enters the station. Do not touch the adhesive or contaminate the bond surface.

Step 4

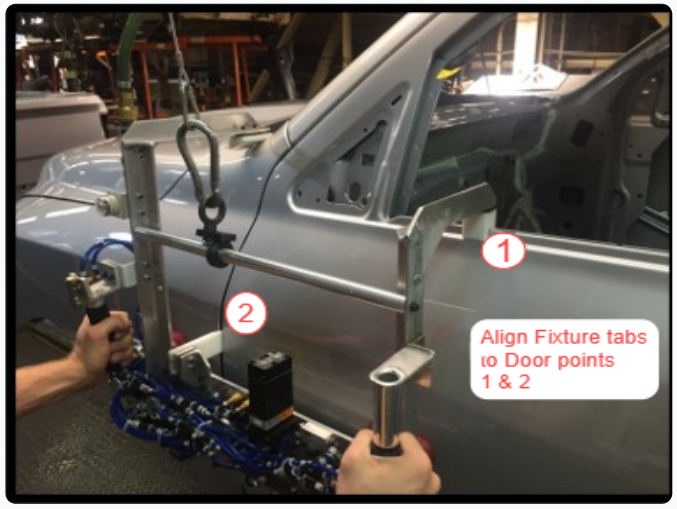

Align the fixture tabs with the door reference points, seat the fixture fully, and confirm it is flush before application.

Step 5

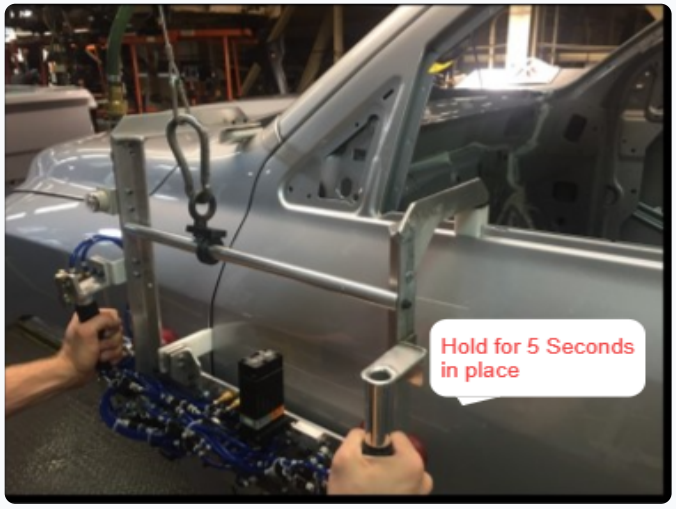

Press and hold the badge in place for 5 seconds using firm, even pressure to ensure full adhesive contact.

Step 6



Remove the fixture carefully. Verify badge position, orientation, adhesion, surface condition, and freedom from damage or contamination.

PROCESS REF. NO	REVISION	REVISION DATE	REVISION BY	RAISED	PAGE
SOP-0002	v3	Jul 29, 2026	john wick-100	Jul 29, 2026 · john wick-100	1 of 1