Badge Install - HEMI Badge, Left Front Door

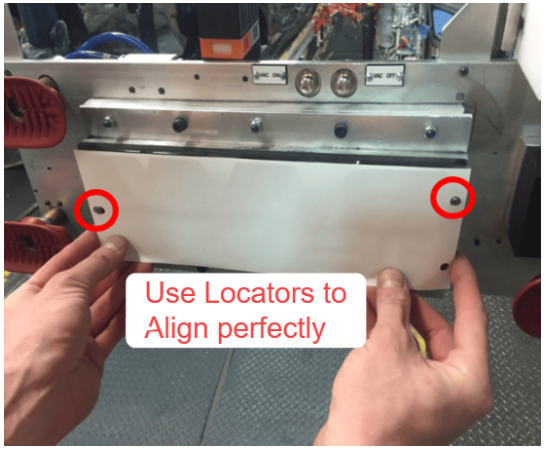
Description Installation of HEMI badge to the left front door. Applies to every vehicle the build sheet calls for a HEMI badge.	Department Assembly	Status: Issued - sign to approve	# SW-0002-V2.0
	Line or Cell: Trim 2	Author / Revised by: DCC_Detroit	
	Station: 1940L (left side)	Effective date: October 27, 2026	
	Cycle time: 45 sec work content (within line takt)	Next review: October 27, 2027 (or sooner after any defect, part, or fixture change)	
Approved - Production Signature / Date:	Approved - Quality Signature / Date:	Approved - Safety Signature / Date:	Related documents Station 1940L first-piece check sheet; Trim 2 defect log

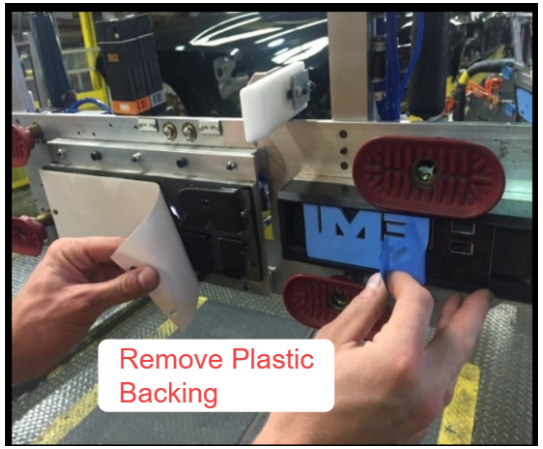
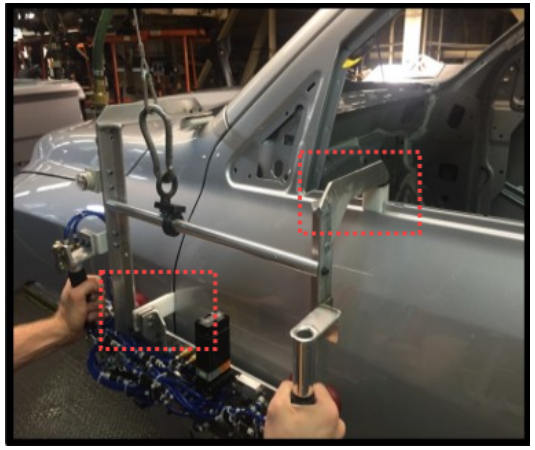
Before You Start

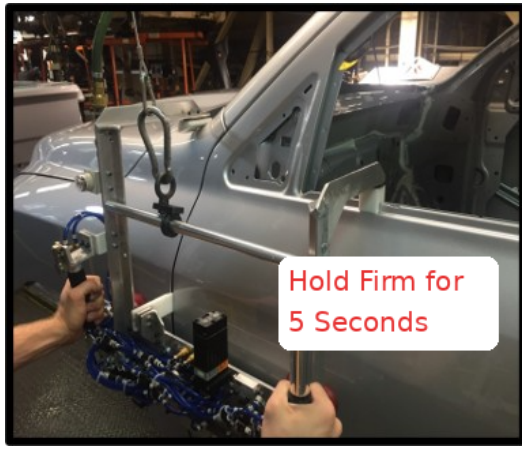
Part	HEMI badge, left side. The part number on the badge box label must match the part number on the vehicle build sheet. Use the oldest box first (FIFO). Do not use a box past the date on its label.
Tools & materials	Station 1940L left-hand badge fixture; 70% isopropyl alcohol (IPA) / 30% water wipes; clean, dry, lint-free cloths (light colored); badge position gauge; backing scrap bin; red scrap bin; yellow hold tags.
PPE	Safety glasses, safety shoes, clean nitrile gloves (also keep skin oil off the adhesive). Hearing protection where posted.
Conditions	Door surface between **16 °C and 43 °C (60 °F - 110 °F)**. No condensation on the door (cold vehicle in a warm area). If outside this range: stop and call the team leader.
Start of shift (team leader)	1. Fixture pads clean and not cut or worn. Locator pins straight and tight. 2. Fixture air gauge in the green zone; press timer counts 5 seconds. 3. First vehicle checked with the badge position gauge. Record pass/fail on the Station 1940L first-piece check sheet. Do not run if it fails.

If Something Goes Wrong (Reaction Plan)

1. **Do not** peel off and re-stick the badge.
2. Put a yellow hold tag on the vehicle and call the team leader right away.
3. Put the badge in the red scrap bin. Never reuse a badge.
4. Team leader writes the VIN, defect type and time in the Trim 2 defect log and checks the fixture.
5. Same defect **2 times in one shift**: stop the station and call Quality before restarting.

Steps	Pictures	Instructions	Reminders
1		**Check the badge, then load it into the fixture.** **Key points:** • Box label part number matches the build sheet. • Badge not bent or scratched. Backing not lifted. • Seat the badge on both locator pins (red circles). • Letters face the fixture pad. Backing faces you. H-E-M-I reads left to right. **Why:** Wrong, damaged or reversed badge is a defect sent to the customer.	Ensure Ensure
2		**Clean the badge area, then dry it.** **Key points:** • Use a NEW 70% IPA wipe for every vehicle. • Wipe in ONE direction only, toward the rear. Do not scrub in circles. • Clean an area 25 mm (1 in) bigger than the badge on all sides. • Dry wipe with a clean lint-free cloth. Wait until no wet streaks show (about 30 seconds). • Do not touch the cleaned area. **Why:** Dirt, oil or wet alcohol stops the adhesive from bonding. The badge can fall off later.	**QUALITY CRITICAL**

Steps	Pictures	Instructions	Reminders
3		**Peel off the badge backing.** **Key points:** • Peel only after the area is clean and dry, right before Step 4. • Hold the backing by its edge. Do not touch the adhesive. • Put the backing in the backing scrap bin. • Adhesive touched or badge dropped: put the badge in the red scrap bin and get a new one. **Why:** Touched or dirty adhesive will not bond fully.	 Scrap bin
4		**Place the fixture on the door.** **Key points:** • Line up both fixture tabs with the door reference points (red boxes). • All tabs touch the door. Fixture does not rock. No gap. • Do not slide the fixture on the paint. **Why:** A fixture that is not seated puts the badge in the wrong spot.	 Ensure

Steps	Pictures	Instructions	Reminders
5		**Press and hold the badge for 5 seconds.** **Key points:** • Air gauge in the green zone (gives at least 15 psi on the badge). • Hold until the timer ends (5 seconds). Do not let go early. • Keep the fixture square to the door. Do not tilt. **Why:** A short or uneven press lets badge edges lift later.	QUALITY CRITICAL Hold Hold
6		**Pull the fixture straight off, then inspect the badge.** **Key points:** • Pull straight away from the door. Do not drag. • Badge within ±1.5 mm of the gauge marks. Straight and level. • All edges stuck down. No bubbles, scratches, dents or adhesive showing. • Fails any check: follow the Reaction Plan (page 1). **Why:** Catch defects before the vehicle leaves the station.	Visual Visual

Training Sign-off

Operator must do 10 vehicles in a row with no defects, watched by the trainer, before signing.

Operator name	Shift	Date trained	Trainer signature	Operator signature

Revision History

Version	Date	Change	By
V1.1	-	Original release	DCC_Detroit
V2.0	Oct 27, 2026	Added part check, PPE, temperature limits, start-of-shift check, key points and reasons, one-direction wipe with dry wipe (replaces circular wipe), 5-second hold at 15 psi minimum, ±1.5 mm inspection limit, reaction plan, training sign-off, Quality and Safety approval. Fixed photo typos. New QR code.	DCC_Detroit

References

1. 3M - Applying 3M VHB Tapes (cleaning with 70% IPA / 30% water, at least 15 psi pressure)
https://www.3m.com/3m/en_us/vhb-tapes-us/resources/applying-3m-vhb-tapes
2. 3M - Acrylic Plus Tapes Repair Procedures (vehicle surface 60-110 °F, no condensation, clean and dry before taping)
https://multimedia.3m.com/mws/media/186720O/3m-acrylic-plus-tapes-repair-procedures.pdf

The ±1.5 mm position limit, 30-second dry time and 25 mm clean area are common trim-shop standards. If your engineering drawing or adhesive data sheet gives a different value, the drawing / data sheet wins.