



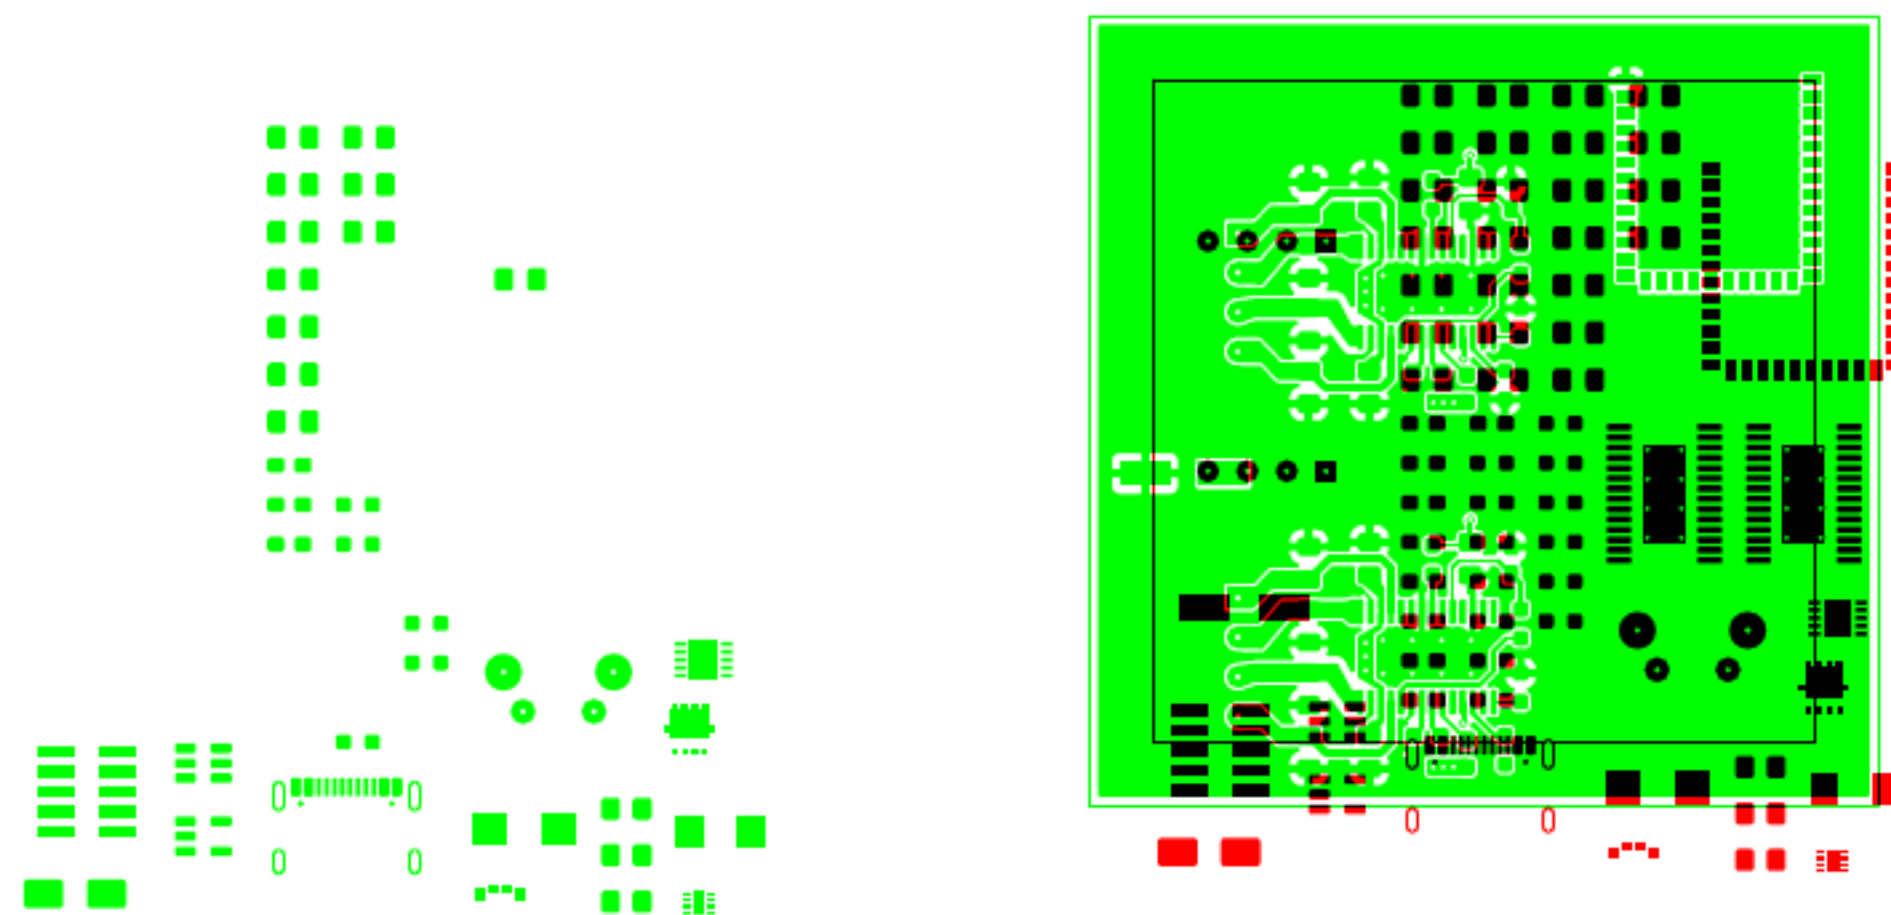


Layer: F.Mask

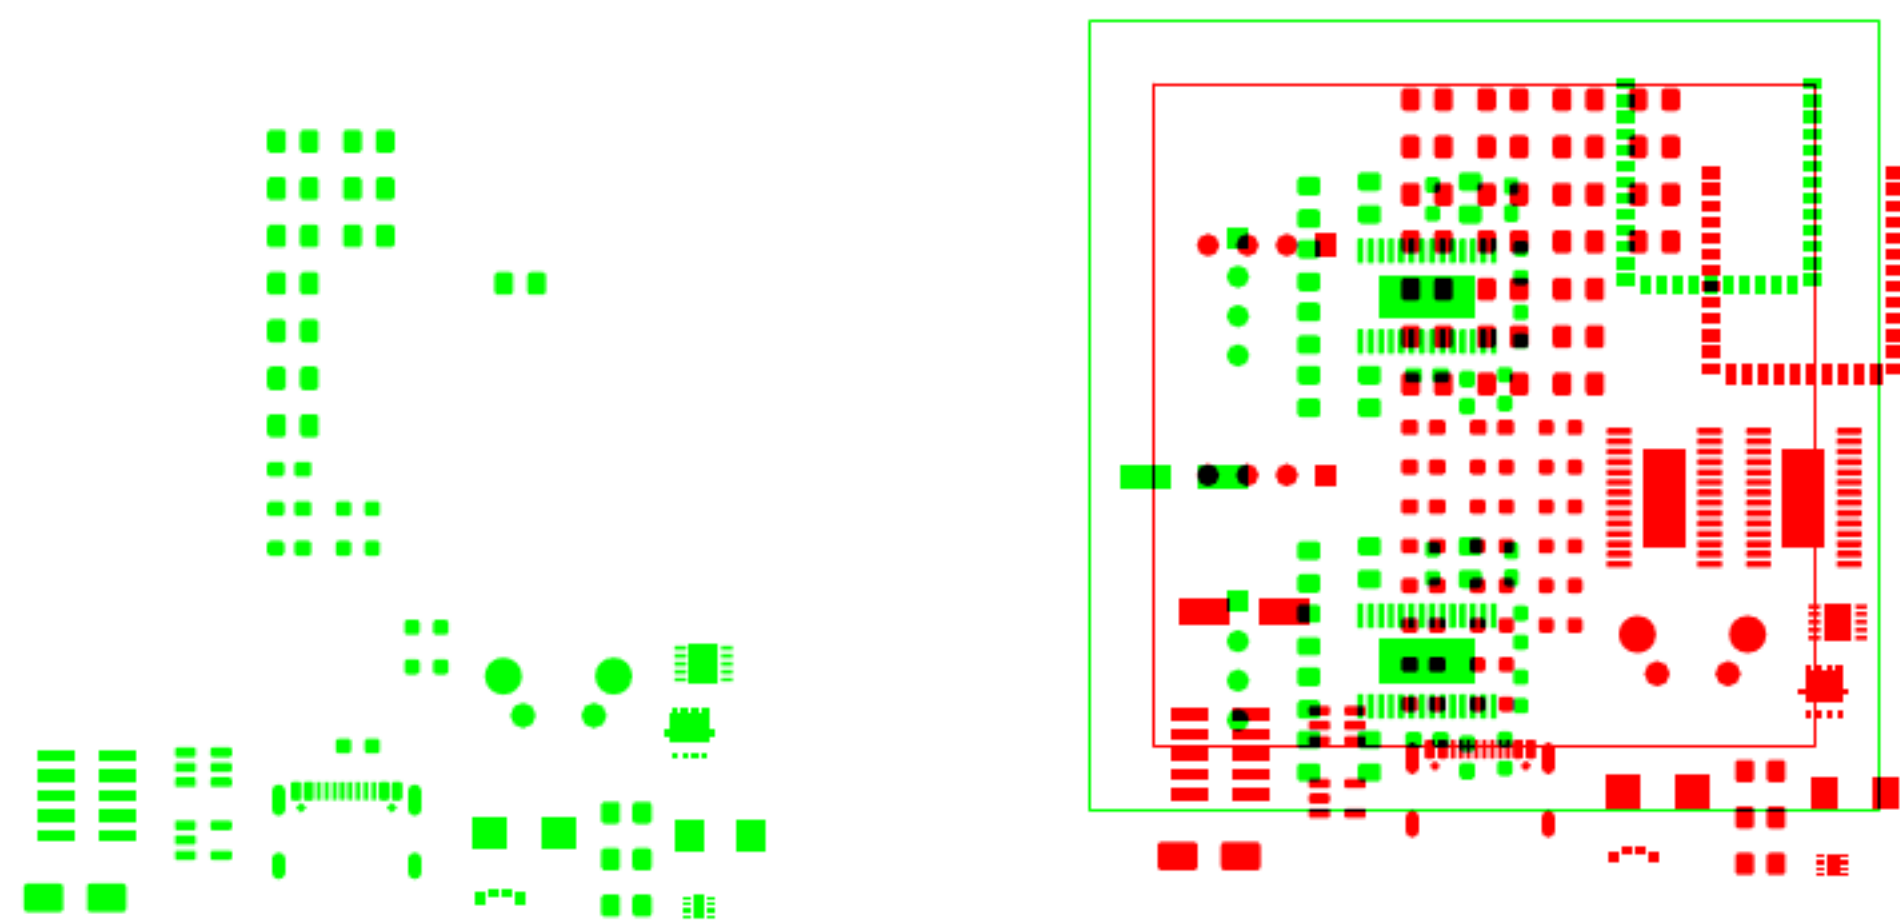

Layer: B.Cu


0. 0
0 0

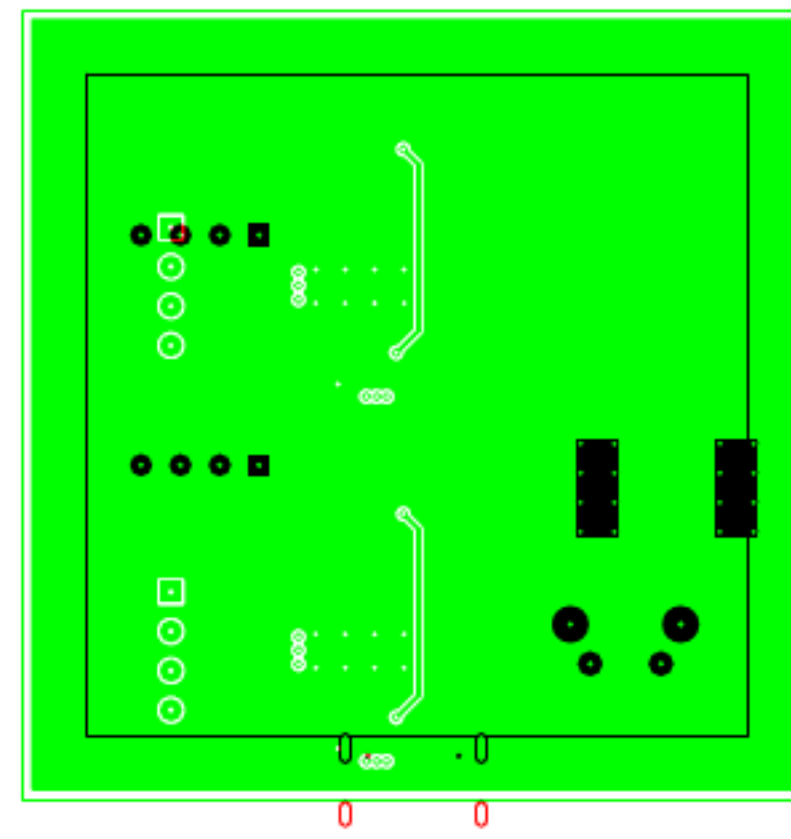



Layer: B.Mask

Layer: In1.Cu only in new file

0. 0
0 0

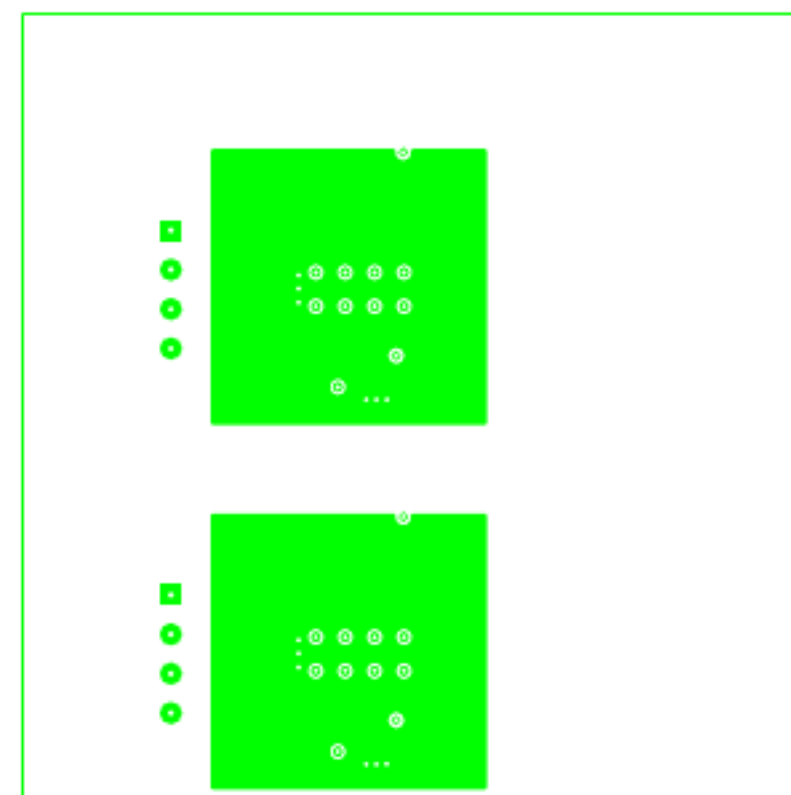


Layer: F.SilkS (F.Silkscreen)

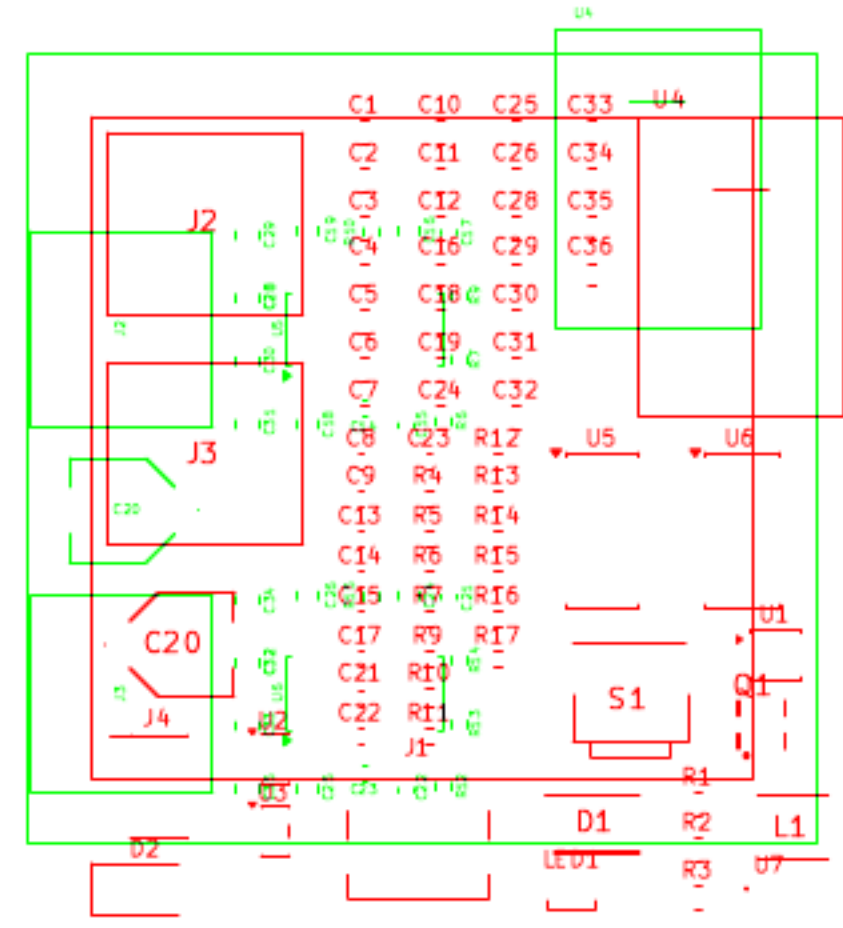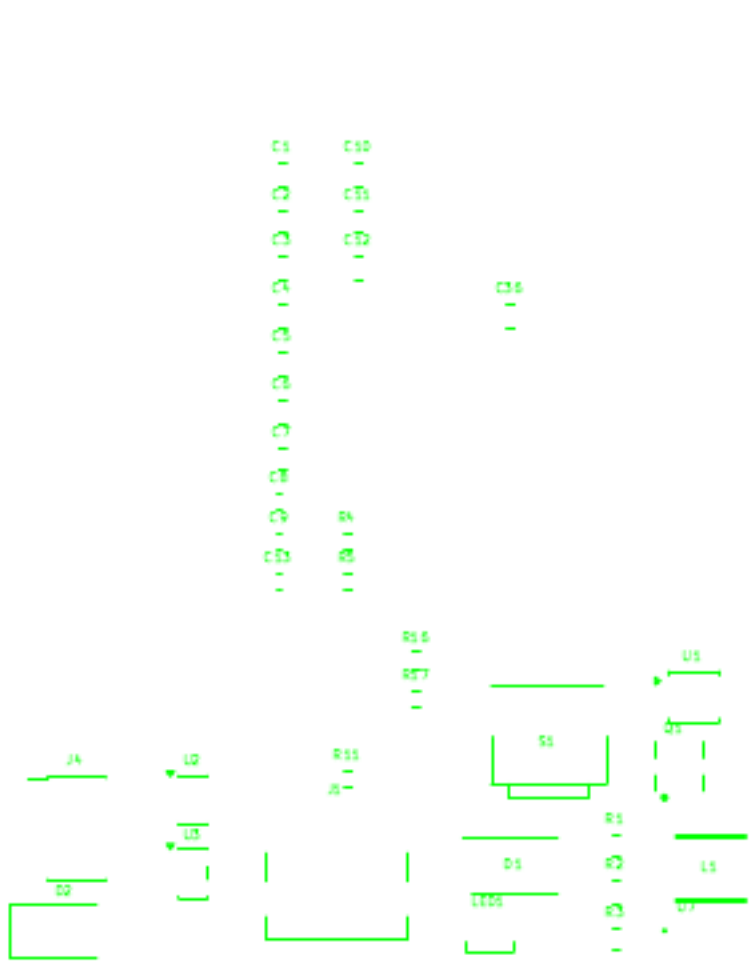


Layer: In2.Cu only in new file


0. 0
0 0

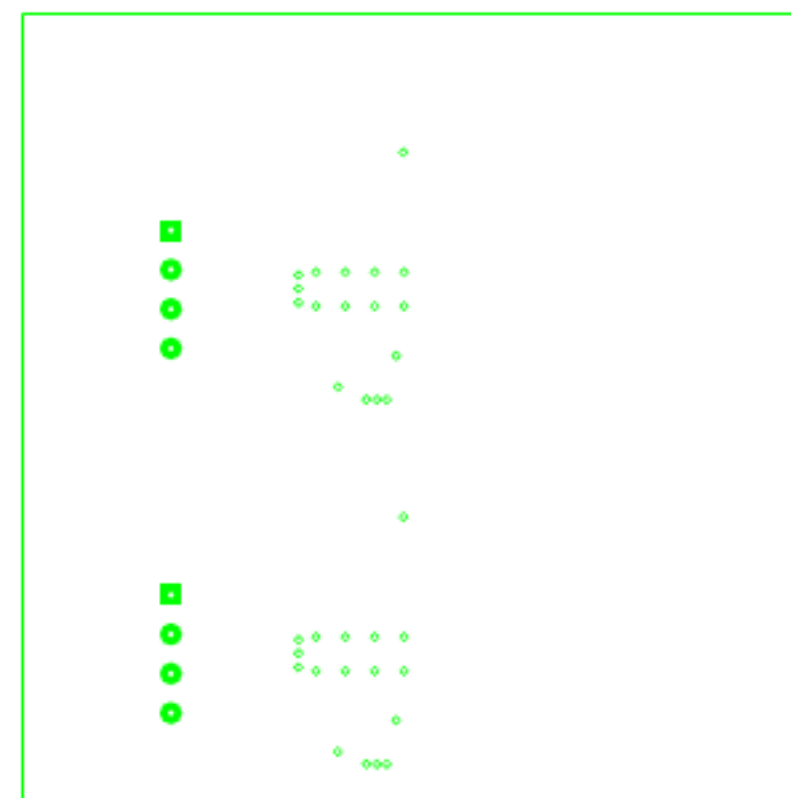


Layer: B.SilkS (B.Silkscreen)




Layer: F.Adhes (F.Adhesive)




Layer: B.Adhes (B.Adhesive)



Layer: F.Paste

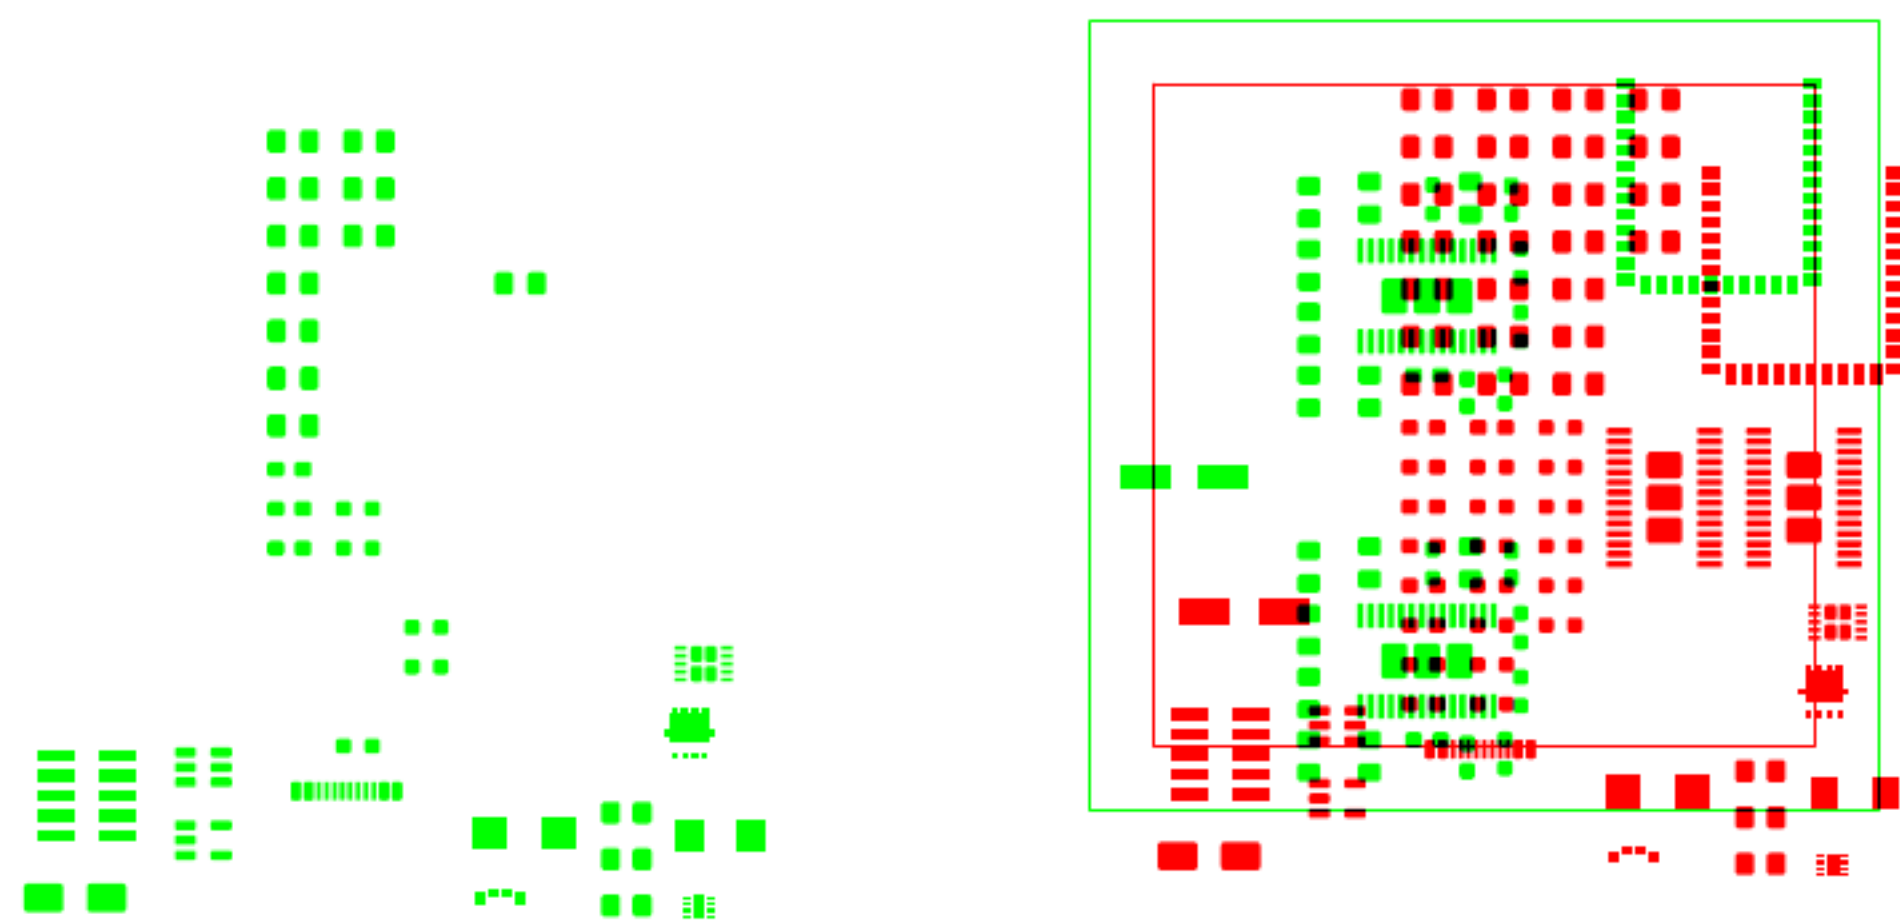


Layer: B.Paste




Layer: Dwgs.User (User.Drawings)

PCB Edge


PCB Edge




Layer: Cmts.User (User.Comments)




Layer: Eco1.User (User.Eco1)




Layer: Eco2.User (User.Eco2)




Layer: Edge.Cuts




Layer: Margin




Layer: B.CrtYd (B.Courtyard)





Layer: F.CrtYd (F.Courtyard)

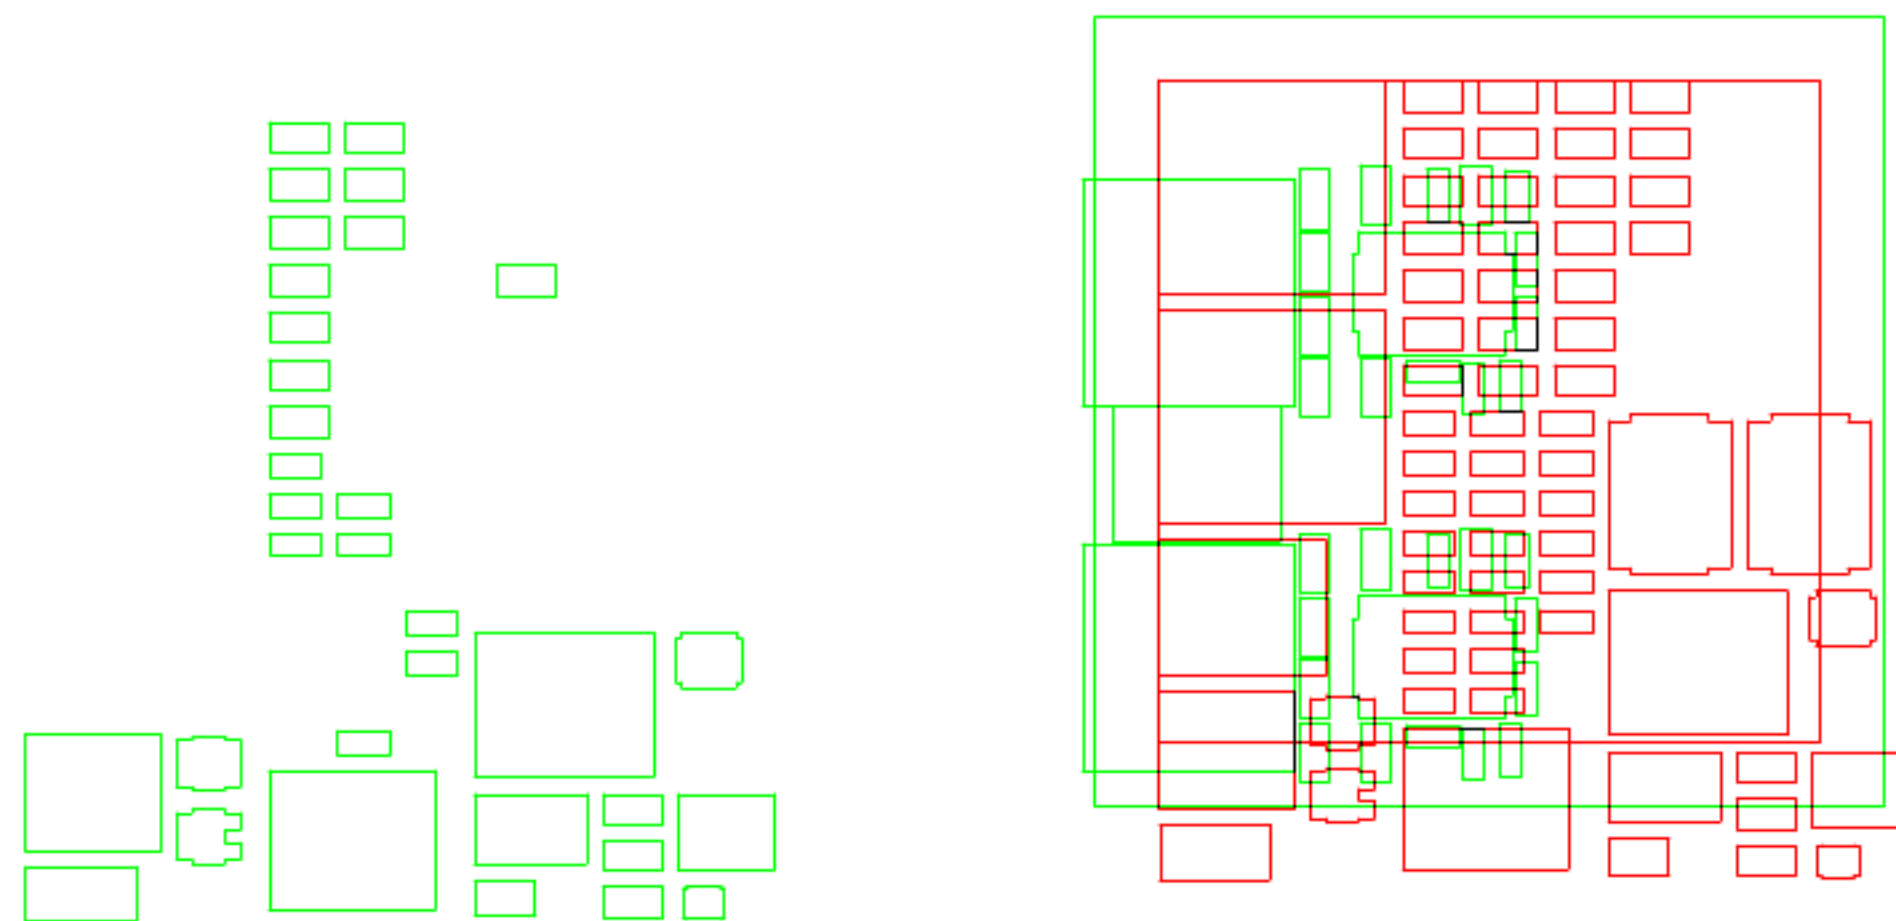

Layer: B.Fab



Layer: F.Fab

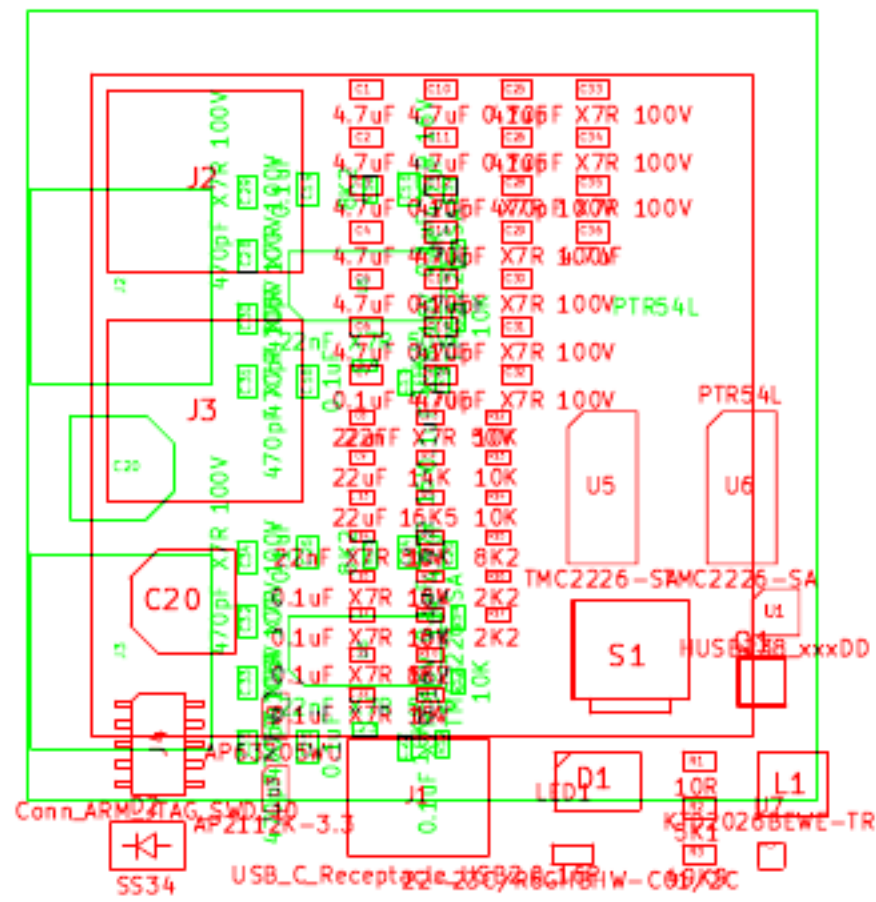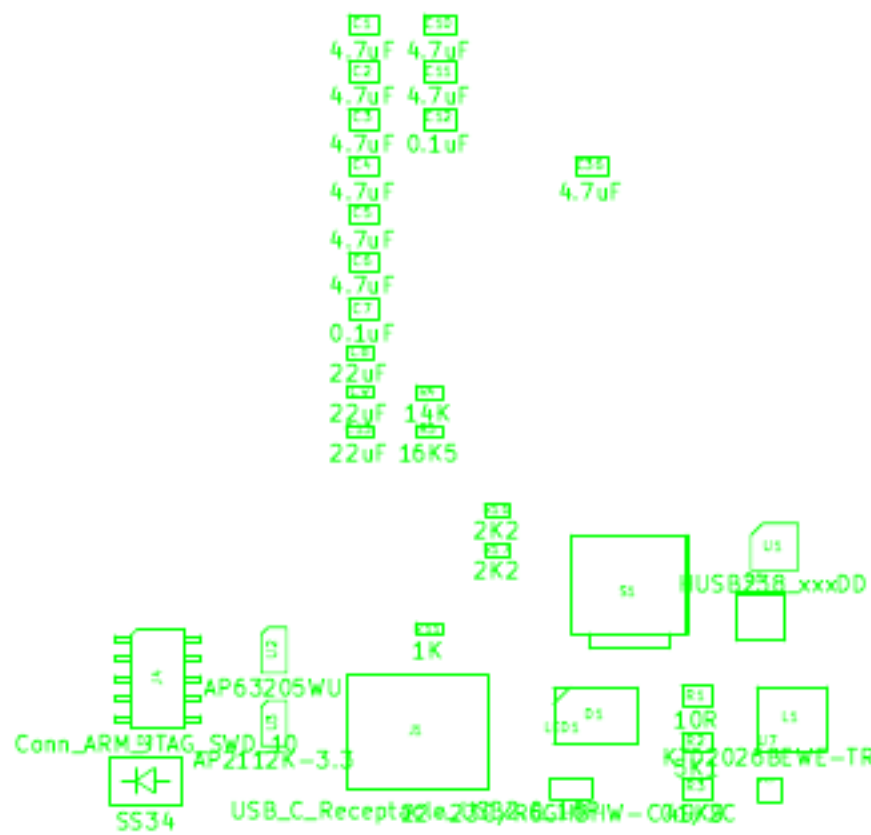

Layer: User.1

