



— **CONSTANT · LOW-POWER · FACTORY INSTALL**

EM08-AMB/48DC

Auxiliary-Mount Emergency LED Driver — Low-Voltage

8W constant-power emergency LED driver with separate auxiliary-mount battery enclosure. Drives 25–48 VDC LED arrays at constant power for 90 minutes. Optimized for the plano[®]RCH downlight family. Field-installable in damp locations.

KEY FEATURES

- Universal 100–277 VAC input — one driver, every building voltage
- Operating range 32°F to 122°F
- Constant brightness for 90 min — no dimming as battery drains
- Self-protecting battery — overcharge / over-discharge / short-circuit
- Test switch with red LED status indicator
- UL 924 listed for code-compliant emergency egress
- 5-year limited warranty on driver and battery
- CSA C22.2 No.141 + CEC Title 20 compliant

PERFORMANCE

Emergency Output Power	8 W
Emergency Runtime	90 min
Output Type	Constant power
Recharge Time	24 hours
Battery Type	LiFePO4
Battery Charging Current	0–250 mA

CONSTRUCTION

Battery Information	LiFePO4 6.4V 3000mAh
Max. Application	150 W or 4 A
Operating Temperature	32°F to 122°F
Storage Temperature	158°F max
Location Rating	Dry, damp
Warranty	5-year limited

ELECTRICAL

Input Voltage	100–277 VAC
Input Frequency	50 / 60 Hz
Input Current	100 mA max
Input Power	5.5 W max
Output Voltage	DC 25–48 V (Class 2)
Output Current	170–320 mA

COMPLIANCE

Safety Listings	UL 924 · CSA C22.2 No.141
Energy Compliance	CEC Title 20
Installation Li...	UL listed for factory & field install
Compatibility	plano[®]RCH series

INSTALLATION

Mounting Type	Auxiliary-mount bracket
Test Switch	Test switch with indicator light
Wire Type	UL 2464, 24 AWG, 300 V, 80°C
Wire Length	550 mm (21.65")
Installation	Factory or field
Power Factor	>0.50

COMPATIBILITY · CONSTANT APPLICATION QUICK GUIDE

plano[®]RCH

See full Application Quick Guide for sensor & controller pairings.

ORDERING INFORMATION

EM08-AMB/48DC

Standard 8 W driver

8W

OUTPUT POWER

90 min

EGRESS RUNTIME

100–277V

INPUT RANGE

32° to 122°F

OPERATING RANGE

LiFePO4

BATTERY

UL 924

LISTED




— CONST **A** NT · LOW-POWER · FACTORY-INSTALL

EM08-AMB/48DC

Page 2 of 2 · Dimensions, Wiring, and Operation Notes

— DIMENSIONS

DRIVER ENCLOSURE · Integrated Ni-MH

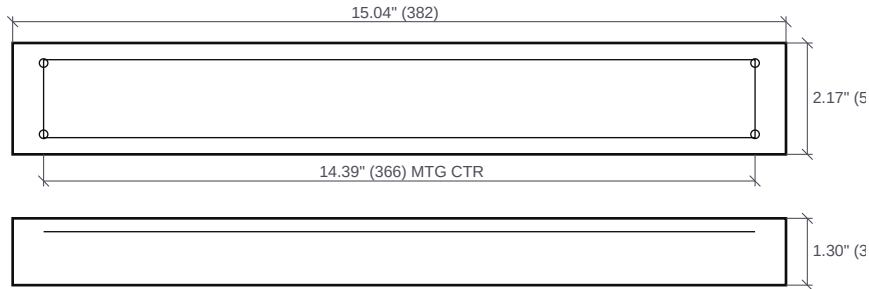


L 15.04" (382) · W 2.17" (55) · H 1.30" (33) · MtgCtr 14.39" (366)

Wide integrated case with 4W/6W/8W selectable emergency power

All dimensions are inches (millimeters) unless otherwise indicated.

— WIRING DIAGRAM

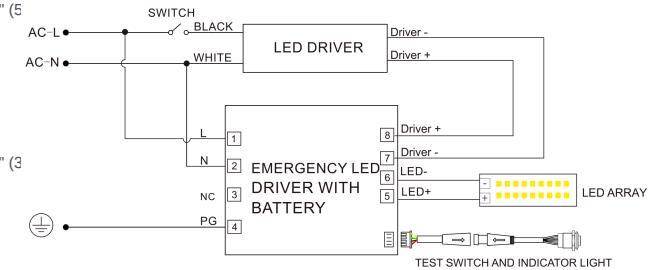

OPERATION

AC Operation:

AC power present · the AC LED driver supplies normal power; emergency driver charges in standby. Red LED indicator on = charging.

Emergency Operation:

On AC failure the emergency driver auto-detects the outage and powers the LED array for ~90 min. Red LED off during egress. AC restoration resumes charging.

— INSTALL REQUIREMENT

The AC LED driver **MUST** be on the same branch circuit as the emergency LED driver. An unswitched hot lead must connect to the emergency driver. Do not mate the battery connector until all other wiring is complete and AC power is on.

8W
OUTPUT POWER

90 min
EGRESS RUNTIME

100-277V
INPUT RANGE

32° to 122°F
OPERATING RANGE

LiFePO4
BATTERY

UL 924
LISTED