



— CONSTANT · MID-POWER · FACTORY / FIELD INSTALL

EM25-PMB/120AC

⚠ INFERRED SPECS — PENDING VERIFICATION

120 VAC Output Emergency Driver — High-Output Mid-Power

25W emergency LED driver with 120 VAC output for legacy fluorescent-replacement and AC-driven LED fixtures. Universal 100–347 VAC input. Compatible with all constANT-listed fixture series. Specify /CL adder for SILVAIR-networked Title 24 NLC compliance and auto-test.

KEY FEATURES

- Universal 100–347 VAC input — one driver, every building voltage
- Operating range 32°F to 122°F
- Constant brightness for 90 min — no dimming as battery drains
- Self-protecting battery — overcharge / over-discharge / short-circuit
- Test switch with red LED status indicator
- /CL constANTLink option — SILVAIR networked auto-test
- 5-year limited warranty on driver and battery
- CSA C22.2 No.141 + CEC Title 20 compliant

PERFORMANCE

Emergency Output Power	25 W
Emergency Runtime	90 min
Output Type	AC constant
Recharge Time	24 hours
Battery Type	LiFePO4
Battery Charging Current	0–250 mA

CONSTRUCTION

Max. Application	200 W or 4 A
Operating Temperature	32°F to 122°F
Storage Temperature	158°F max
Location Rating	Dry, damp
Battery Cycles	500 full cycles
Warranty	5-year limited

ELECTRICAL

Input Voltage	100–347 VAC
Input Frequency	50 / 60 Hz
Input Current	150 mA max
Input Power	10 W max
Output Voltage	120 VAC
Output Power	25 W max

COMPLIANCE

Safety Listings	UL 924 · CSA C22.2 No.141
Energy Compliance	CEC Title 20
Installation Li...	UL listed for factory & field install
Compatibility	All constANT-listed fixture series

INSTALLATION

Mounting Type	Surface mount
Test Switch	Test switch with indicator light
Wire Type	UL 2464, 24 AWG, 300 V, 80°C
Wire Length	550 mm (21.65")
Installation	Factory or field
Power Factor	>0.50

COMPATIBILITY · CONSTANT APPLICATION QUICK GUIDE

lamparARCH

luxoARCH

planoARCH

tubulARCH

See full Application Quick Guide for sensor & controller pairings.

ORDERING INFORMATION

EM25-PMB/120AC	Standard 25 W driver
EM25-PMB/120AC/CL	With constANTLink: SILVAIR networked auto-test

25W

OUTPUT POWER

90 min

EGRESS RUNTIME

100–347V

UNIVERSAL INPUT

/CL Ready

NLC ADDER

AC Output

120 VAC

UL 924

LISTED




— CONST **A** NT · HIGH-POWER · FACTORY/FIELD INSTALL

EM25-PMB/120AC

Page 2 of 2 · Dimensions, Wiring, and Operation Notes

— DIMENSIONS

DRIVER ENCLOSURE

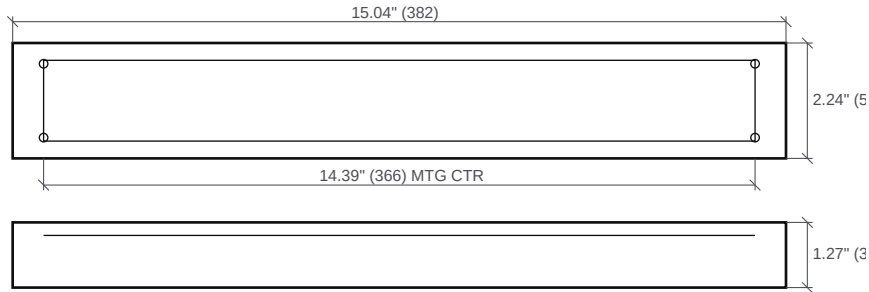


L 15.04" (382) · W 2.24" (57) · H 1.27" (32) · MtgCtr 14.39" (366)

Integrated PRO-tier case · for high-bay & assembly-occupancy LED fixtures

All dimensions are inches (millimeters) unless otherwise indicated.

— WIRING DIAGRAM

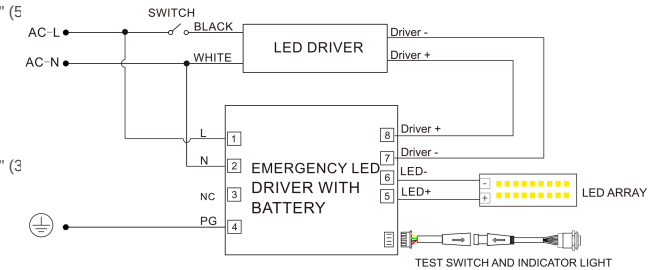

OPERATION

AC Operation:

AC power present · the AC LED driver supplies normal power; emergency driver charges in standby. Red LED indicator on = charging.

Emergency Operation:

On AC failure the emergency driver auto-detects the outage and powers the LED array for ~90 min. Red LED off during egress. AC restoration resumes charging.

— INSTALL REQUIREMENT

The AC LED driver **MUST** be on the same branch circuit as the emergency LED driver. An unswitched hot lead must connect to the emergency driver. Do not mate the battery connector until all other wiring is complete and AC power is on.

25W

OUTPUT POWER

90 min

EGRESS RUNTIME

100-347V

UNIVERSAL INPUT

/CL Ready

NLC ADDER

AC Output

120 VAC

UL 924

LISTED