



— CONSTANT · HIGH-POWER · FIELD INSTALL

EM30-UMB/170DC

External Universal-Mount Emergency LED Driver

30W constant-power external emergency LED driver. Mounts to the side of high-bay LED fixtures. Universal 100–347 VAC input. Drives 170 VDC LED arrays for 90 minutes. Field-installable by certified electrician.

KEY FEATURES

- Universal 100–347 VAC input — one driver, every building voltage
- Operating range 32°F to 122°F
- Constant brightness for 90 min — no dimming as battery drains
- Self-protecting battery — overcharge / over-discharge / short-circuit
- Test switch with red LED status indicator
- UL 924 listed for code-compliant emergency egress
- 5-year limited warranty on driver and battery
- CSA C22.2 No.141 + CEC Title 20 compliant

PERFORMANCE

Emergency Output Power	30 W
Emergency Runtime	90 min
Output Type	Constant power
Recharge Time	24 hours
Battery Type	LiFePO4 6.4V 3000mAh
Battery Charging Current	300 mA

CONSTRUCTION

Battery Information	LiFePO4 6.4V 3000mAh
Max. Application	300 W
Operating Temperature	32°F to 122°F
Storage Temperature	158°F max
Location Rating	Dry, damp
Warranty	5-year limited

ELECTRICAL

Input Voltage	100–347 VAC
Input Frequency	50 / 60 Hz
Input Current	200 mA max
Input Power	15 W max
Output Voltage	DC 170 V
Output Current	170 mA max (DC 175V max)

COMPLIANCE

Safety Listings	UL 924 · CSA C22.2 No.141
Energy Compliance	CEC Title 20
Installation Listing	UL listed for field install
Compatibility	lampar RCH high-bay series

INSTALLATION

Mounting Type	External chassis (fixture-side)
Test Switch	Test switch with indicator light
Wire Type	UL 2464, 24 AWG, 300 V, 80°C
Wire Length	550 mm (21.65")
Installation	Field (certified electrician)
Power Factor	>0.50

COMPATIBILITY · CONSTANT APPLICATION QUICK GUIDE

lampar|RCH

See full Application Quick Guide for sensor & controller pairings.

ORDERING INFORMATION

EM30-UMB/170DC

Standard 30 W driver

30W

OUTPUT POWER

90 min

EGRESS RUNTIME

100–347V

UNIVERSAL INPUT

External

MOUNT TYPE

LiFePO4

BATTERY

UL 924

LISTED




— CONST **A** NT · HIGH-POWER · FIELD INSTALL

EM30-UMB/170DC

Page 2 of 2 · Dimensions, Wiring, and Operation Notes

— DIMENSIONS

DRIVER ENCLOSURE · External Box

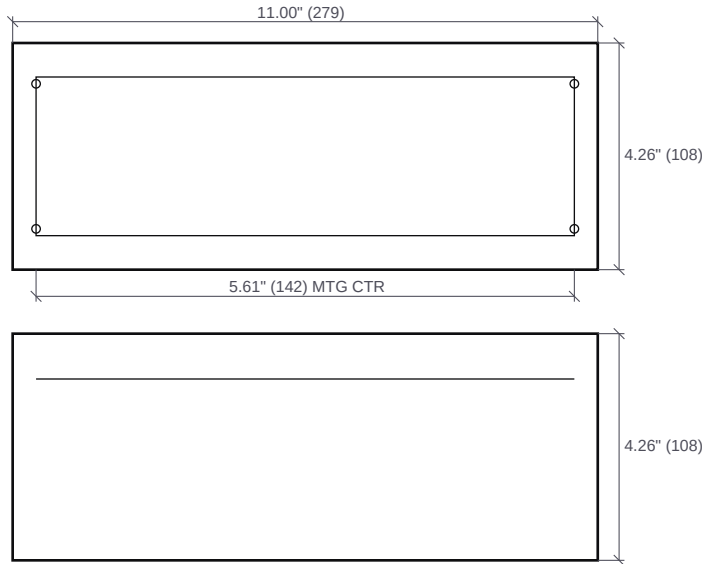


L 11.00" (279) · W 4.26" (108) · H 4.26" (108) · MtgCtr 5.61" (142)

Side-mount external chassis for high-bay LED fixtures · 11×4.26×4.26"

All dimensions are inches (millimeters) unless otherwise indicated.

— WIRING DIAGRAM

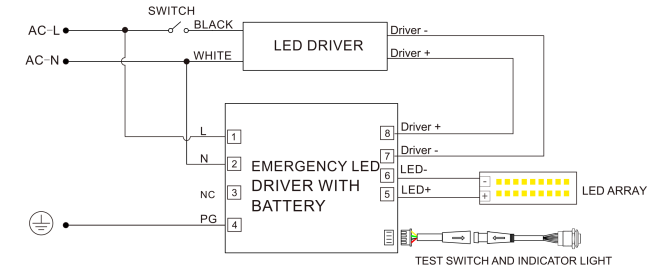

OPERATION

AC Operation:

AC power present · the AC LED driver supplies normal power; emergency driver charges in standby. Red LED indicator on = charging.

Emergency Operation:

On AC failure the emergency driver auto-detects the outage and powers the LED array for ·90 min. Red LED off during egress. AC restoration resumes charging.

— INSTALL REQUIREMENT

The AC LED driver **MUST** be on the same branch circuit as the emergency LED driver. An unswitched hot lead must connect to the emergency driver. Do not mate the battery connector until all other wiring is complete and AC power is on.

30W
OUTPUT POWER

90 min
EGRESS RUNTIME

100-347V
UNIVERSAL INPUT

External
MOUNT TYPE

LiFePO4
BATTERY

UL 924
LISTED