OSRBOT Link

Keyboard and Mouse Sharing Device

Zero setup on the controlled device. One cable. Instant control.

Run OSRBOT Link on the control computer and connect the controlled device by USB to operate it with your own keyboard and mouse. Add a capture card to view its screen on your computer, making on-site work with robots, development boards and industrial equipment easier.

1 Product overview



Figure 1-1 OSRBOT Link Keyboard and Mouse Sharing Device

Low lag	No app	Control	Network	Secure
USB input	No target app	Paste & record	Share internet	LAN permissions

Choose a capture card to suit your needs. Video features require a capture card. Buy one from OSRBOT or choose your own according to your image-quality, frame-rate and interface needs.

- The controlled device must support USB keyboard and mouse input.
- Low latency refers to the keyboard and mouse input path. Video specifications and delay depend on the capture card and video path.
- Viewing, screenshots, screen recording and GIF capture require a capture card.

2 Ports and connections

Control computer is the computer connected to the sharing device and running OSRBOT Link. The **controlled device** is the equipment you want to operate. Each expansion port belongs to the equipment on its own side.

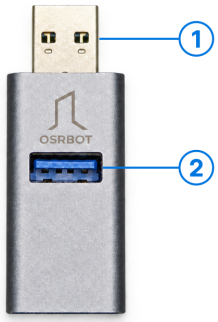


Figure 2-1 Control computer ports 1 and 2



Figure 2-2 Controlled device ports 3 and 4

Port 1 Control computer plug

Insert the USB-A plug directly into the control computer, which runs OSRBOT Link.

Port 2 Control computer USB 3.0 expansion port

The blue port on top adds a USB port to the control computer for peripherals such as a USB drive or a keyboard/mouse receiver.

Port 3 Controlled device USB 2.0 expansion port

The upper port at the two-port end connects USB peripherals to the controlled device.

Port 4 Controlled device connection port

Use the supplied USB-A to USB-A data cable to connect the lower port at the two-port end to a USB port on the controlled device.

2.1 Keyboard, mouse and optional video connections



Figure 2-3 Keyboard and mouse connection Required

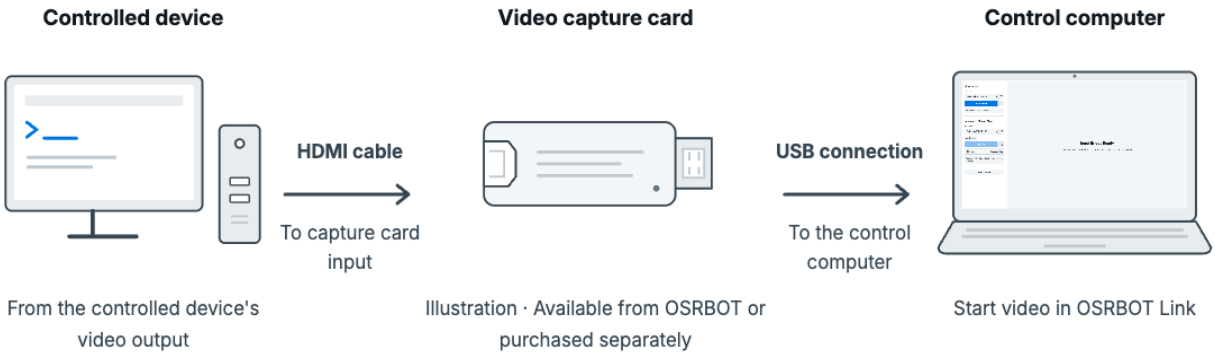


Figure 2-4 Video connection Optional

An HDMI capture card is shown as an example. Complete the keyboard and mouse connection for input sharing. Add the video connection when you also need to view the screen.

About latency: The sharing device transfers keyboard and mouse input directly over USB with very low control latency. When using captured video, most feedback delay comes from video capture, processing and display.

3 Download and first use

Install OSRBOT Link on the control computer. No companion software is required on the controlled device, which must accept USB keyboard and mouse input.

3.1 Download OSRBOT Link

Figure 3-1 Software download

Open the releases page and choose the package for the control computer's operating system and processor.

- **Windows**: choose the installer or portable package.
- **macOS**: choose Apple Silicon or Intel as appropriate.
- **Ubuntu**: choose the appropriate DEB or AppImage package.

github.com/osrbot/osrbot-link/releases

If you cannot access the download, find the right package, or need help selecting devices and accessories, contact your sales representative or email winter@osrbot.com.

3.2 Connect and control for the first time

3.2.1 Connect the sharing device

Insert the sharing device's USB-A plug into the control computer. Use the supplied USB-A to USB-A data cable to connect **port 4** to the controlled device. If you need video, also connect the capture card as illustrated.

3.2.2 Connect keyboard and mouse sharing

Open OSRBOT Link. In Keyboard / Mouse Share on the left, refresh the device list, select OSRBOT HID and click Connect. Check that the status reads Connected.

3.2.3 Start video preview when using a capture card

In Video Input on the left, select the capture card. Set the resolution and frame rate under Capture Options, then click Start Video. Skip this step if you only need keyboard and mouse sharing.

3.2.4 Click the workspace to take control

Click the video or blank workspace to operate the controlled device with the control computer's keyboard and mouse.

Shift + Esc

Release control and return input to the control computer.
This also exits fullscreen. Click the workspace again to resume control of the device.

3.3 System permissions on first use

Windows
Allow camera access for video preview. Follow system authorization prompts when configuring network sharing.

macOS
Allow camera access for the capture card. Forwarding system shortcuts also requires Accessibility permission.

Ubuntu
If HID access is denied, open Settings → Input & Shortcuts and repair Linux HID permissions. Reconnect after authorization.

4 Software features and operation


Control the device, preview video, enter commands and record procedures in one application.

Top menu
Adjust screen display, send control commands, capture images, and access settings and network features.

Device sidebar
Select and connect the sharing device and capture card, and check connection status and actual capture parameters.

Video and control workspace
View the controlled device's screen and click to begin keyboard and mouse control. Hide the sidebar for more viewing space.

OSRBOT Link · Function locations

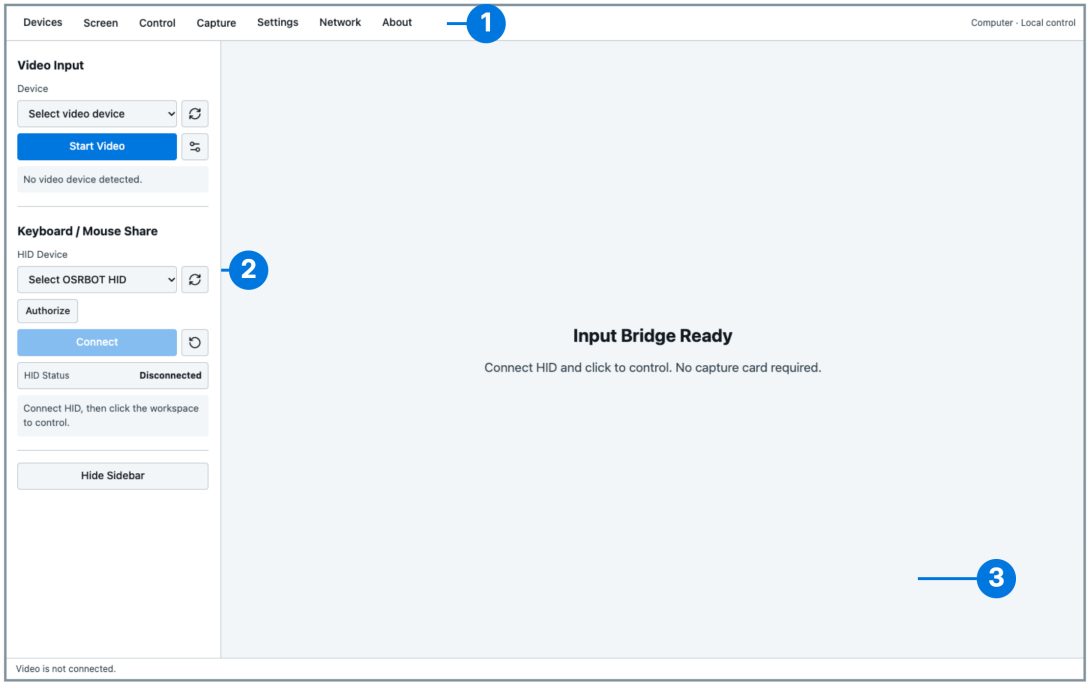

Top menus · enlarged



1 Menus 2 Devices & status 3 Screen & control

Figure 4-1 Main interface and function locations (no device connected)

4.1 Control computers or switch to Android mode

Operate the controlled device with the control computer's keyboard and mouse. Select the mouse mode for the device type.

1. Follow Download and first use to connect HID, then click the workspace to take control.
2. In the Control menu, select **Computer** or **Android**. Computer mode uses absolute mouse positioning; Android mode uses relative mouse movement.
3. To send a system key combination, select Ctrl+Alt+Del in the Control menu. Some reserved system shortcuts are limited by the control computer's platform.
4. Press Shift+Esc to release control. Click Disconnect in Keyboard / Mouse Share to end the HID connection.

Local control pauses when you open settings, change modes or switch to another window. Click the workspace on return to resume. You can also enable Right Ctrl to release control in Settings.

4.2 Choose a display mode for your task

Use Original to inspect detail, Fit for ongoing operation, or enter fullscreen.

1. Select the capture card, set the resolution and frame rate under Capture Options, then click Start Video. Add a custom resolution if needed.
2. Use the Screen menu to choose a display mode or enter fullscreen. The fullscreen toolbar can be moved, hidden and shown again. It provides zoom, mode, paste, screenshot, video recording and GIF controls.
3. Stop video before changing the capture device or parameters. Check the status bar for the actual resolution and frame rate.

Table 4-1 Display modes

Mode	Display behavior
Fit	Preserves aspect ratio and shows the entire image.
Fill	Preserves aspect ratio; edges may be cropped.
Original	Displays the original pixel dimensions.
Stretch	Fills the workspace; the aspect ratio may change.

Preview, resolution and frame rate depend on the capture card and input signal. Entering custom parameters does not increase the capture card's capabilities.

4.3 Screenshots, video and GIFs

Save device images and procedures for debugging, teaching and support.

Start video first, then use the Capture menu or fullscreen toolbar.

Table 4-2 Capture tools and saving

Tool	Operation and saving
Screenshot	Click Screenshot, choose a location and save the current captured image.
Video recording	Click Record to start and Stop Record to finish and save. A recording stops and saves automatically at 256 MiB; you can then start another segment.
GIF	Click GIF to record a short clip, then stop to save it. Each clip is limited to approximately 10 seconds.
Custom watermark	Enter a name under Settings → Capture & Watermark to append it to the OSRBOT Link watermark.

Recordings use the capture card's video. Stopping video ends recording. Wait for saving to finish before closing the software or unplugging devices.

4.4 Send commands to the controlled device

Paste Helper converts English commands on the control computer into keyboard input, reducing manual typing.

1. Connect HID and place the controlled device's input focus in a terminal or the required text field.
2. Open Control → Paste Helper. Check the clipboard contents or type the command directly.
3. Choose Fast, Normal or Slow and decide whether to enable Press Enter after paste.
4. Click Send Paste and wait for completion. Click Stop if you need to interrupt sending.

Quick Paste: Ctrl + Alt + V

During local control, directly send a single line of up to 256 printable ASCII characters without automatically pressing Enter. Longer or multiline text opens a preview before sending.

Control → Paste Helper

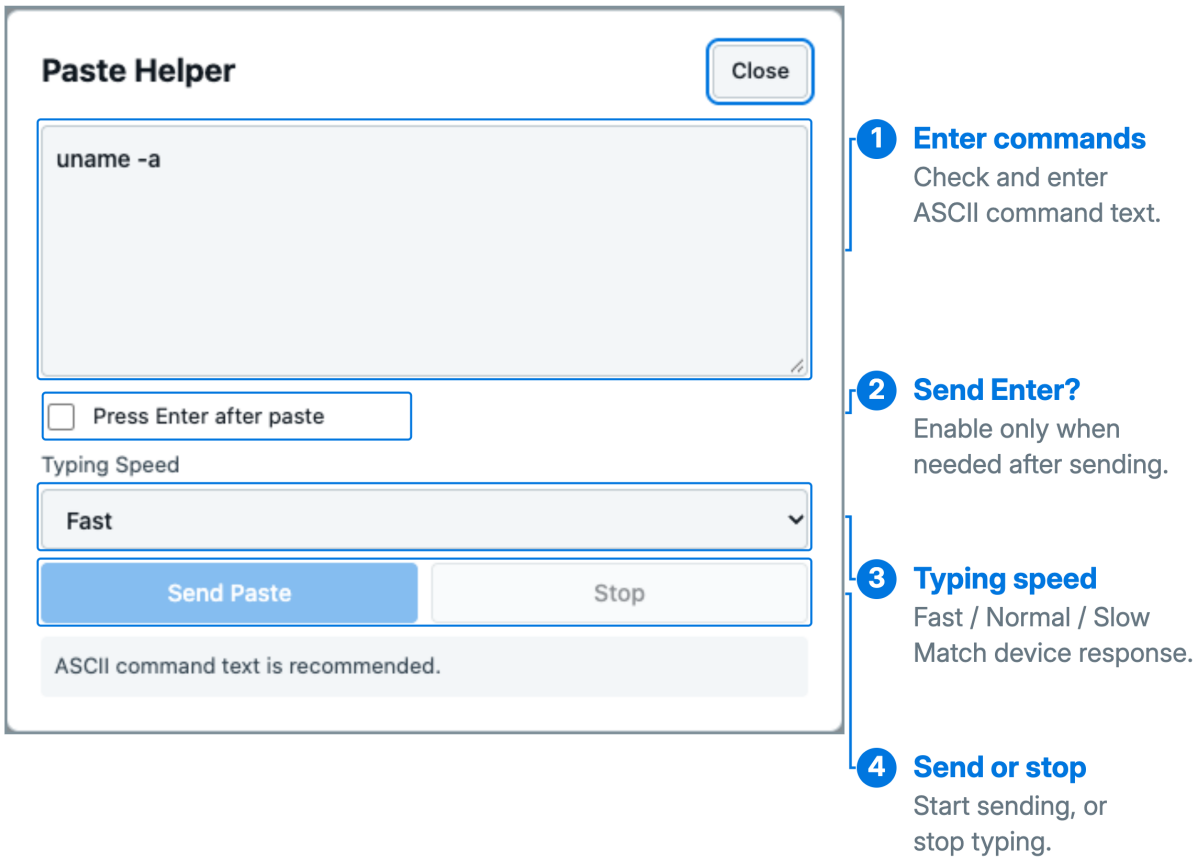


Figure 4-2 Paste Helper: entering and sending commands

Paste Helper supports up to 1,200 ASCII characters. It does not support Chinese text or file transfer. Ordinary Ctrl+V only sends the shortcut to the controlled device; it does not synchronize the two devices' clipboards.

4.5 Set the interface and input preferences

Interface and input preferences are saved on the control computer. Choose Chinese or English and a light, dark or system appearance.

Settings → General

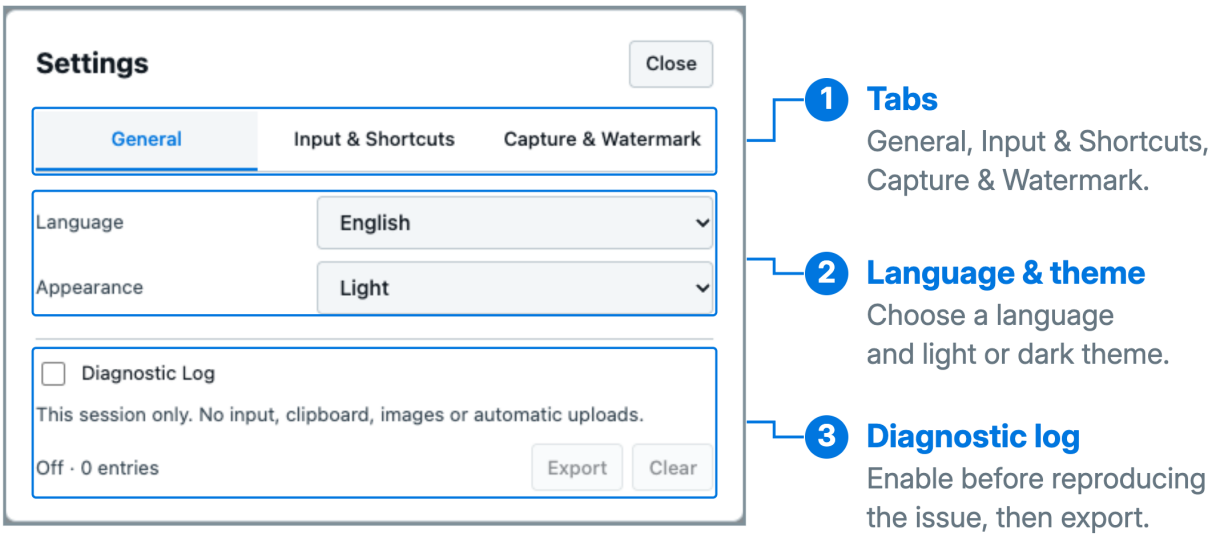


Figure 4-3 Settings: tabs and common options

Input & Shortcuts: Choose Computer or Android mode and Traditional or Natural scrolling. Configure Right Ctrl to release control, the mouse position indicator and Quick Paste.

Capture & Watermark: Set a custom watermark name for screenshots, video recordings and GIFs.

Window layout and application information: Show or hide the sidebar through Devices or Screen. Open About for application information and third-party notices.

Changing preferences does not connect devices automatically. Select and connect the sharing device or capture card manually when needed.

4.6 Recover devices and retain diagnostic information

Handle HID, permissions and logs separately to resume work or contact support.

Reset HID: If input stops responding, click Reset HID on the left. Wait, refresh the list, then reconnect the device. Resetting neither resumes control nor stops video or recording.

Repair Linux HID Permissions: Open Settings → Input & Shortcuts → Repair Linux HID Permissions. Authorize, scan again and reconnect the USB device if necessary.

Export diagnostic logs: Enable Diagnostic Log under Settings → General, reproduce the issue and click Export. Send the log, error message and reproduction steps to support. Clear deletes the current log.

Session status only; no keystrokes, clipboard content, images or automatic upload.

5 Network sharing and LAN control

Use network sharing and LAN control under Network. The two features can be enabled independently.

5.1 Network sharing

Share the control computer's existing network connection with the controlled device for network-based work.

1. **Connect both networks**: Connect the control computer to the internet, then use another network adapter and an Ethernet cable to connect to the controlled device.
2. **Choose adapters and enable sharing**: Open Network Sharing. Select the internet adapter and controlled-device adapter, then enable sharing and approve system authorization.
3. **Verify and finish**: Check the status and device IP hints, then verify internet access on the controlled device. Disable sharing when finished. Closing the application does not automatically turn off system network sharing.

Networking uses Ethernet. The sharing device's USB keyboard/mouse cable does not provide a network link. Windows requires administrator privileges; Linux relies on NetworkManager and system authorization. On macOS, enable Internet Sharing manually in System Settings.

5.2 LAN browser control

Keep OSRBOT Link running on the control computer. Other computers on the same trusted LAN can view or help operate the device through a browser.

1. **Enable and pair**: Open LAN Control, select the LAN IP address and port, and enable it. Open the displayed address in the browser and enter the pairing code. Each code is valid for two minutes and can be used once.
2. **View and control**: To view video, start the capture card video on the control computer. To operate the device, connect HID, turn on Allow Control, then grant control to the relevant browser session.
3. **Revoke control or finish**: Click Stop Control to revoke remote input; viewing may continue. Turning off LAN control ends all sessions.

Up to four browsers can view, with only one granted remote input at a time. The browser can adjust display mode, transmission quality and fullscreen. The control computer and authorized browser can both send input; coordinate operation.

Use on a trusted LAN

Keep devices reachable on the network. Allow private-network firewall access as needed; do not forward the port to the public internet. A browser needs a new code to reconnect. If the control computer's address changes, stop LAN control, refresh the address and enable it again.

6 Specifications and options

Choose the sharing device and capture card for your needs. Video specifications depend on the capture card you select.

Table 6-1 Sharing device specifications

Item	Configuration
Product name	OSRBOT Link Keyboard and Mouse Sharing Device
Housing	Aluminum alloy and engineering plastic
Control computer	USB 3.0 with one USB 3.0 expansion port
Controlled device	USB 2.0 with one USB 2.0 expansion port
Connection cable	USB-A to USB-A data cable, included with the sharing device
Companion software	OSRBOT Link
Control computer platforms	Windows, macOS, Ubuntu Choose the package for your system and processor.
Video viewing	Requires an external capture card

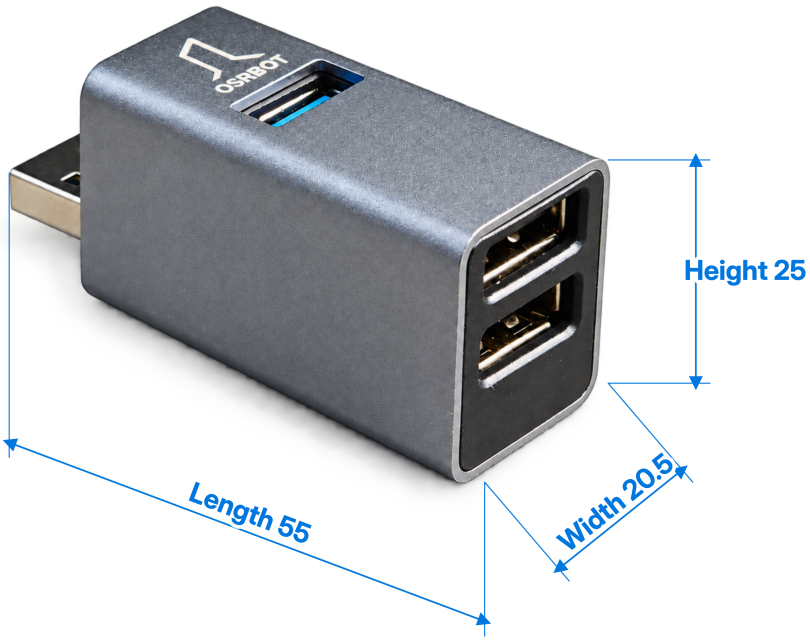


Figure 6-1 Mechanical dimensions

6.1 Ordering and contact

Contact sales

For product selection, bundles or bulk orders, contact OSRBOT by email.

winter@osrbot.com

- **Keyboard and Mouse Sharing Device:** For users who already have a screen-viewing solution or only need keyboard and mouse control. Includes a USB-A to USB-A data cable.
- **Video capture card:** For users who already have a sharing device or only need video capture. Choose by resolution, frame rate, interfaces and appearance.
- **Sharing device and capture card bundle:** Includes the equipment for keyboard/mouse control and video viewing, with accessories supplied according to the selected bundle.

Choose according to the video input interface, actual USB capture output resolution and frame rate, and control-computer compatibility. A capture card's input specifications may differ from its actual capture output.

7 Troubleshooting and support

First identify whether the issue affects input, video or networking, then check the relevant connections and settings.

7.1 Sharing device not found or HID cannot connect

Check the USB connection to the control computer. Refresh the HID list and select the device again. If it is still unavailable, reset HID or repair Linux permissions as described in Recover devices and retain diagnostic information.

7.2 Video works but the keyboard and mouse do not respond

Check that HID is Connected, the controlled device's cable is attached to port 4, and you have clicked the workspace. A browser also needs control granted by the control computer; see LAN browser control.

7.3 No video, a black screen or unsupported capture parameters

Check the capture card connection, the controlled device's video output and camera permissions. Close other software using the capture card. Stop video, select supported capture parameters and retry; see Choose a display mode for your task.

7.4 Network sharing is on but the controlled device cannot access the internet

Check the two adapter selections, Ethernet cable, and the controlled device's address, gateway and DNS. Even if status or Ping indicates reachability, verify internet access on the controlled device.

7.5 Browser pairing fails or viewing works without control

Generate a new pairing code on the control computer and retry. Check network reachability. For viewing without control, check the HID connection, Allow Control and the authorized browser session.

7.6 Contact sales or OSRBOT

Contact sales for downloads, device selection and accessories. For a usage issue, provide the control computer's OS, controlled-device model, wiring photos, error message and reproduction steps. Include diagnostic logs if needed.

Product support: winter@osrbot.com