


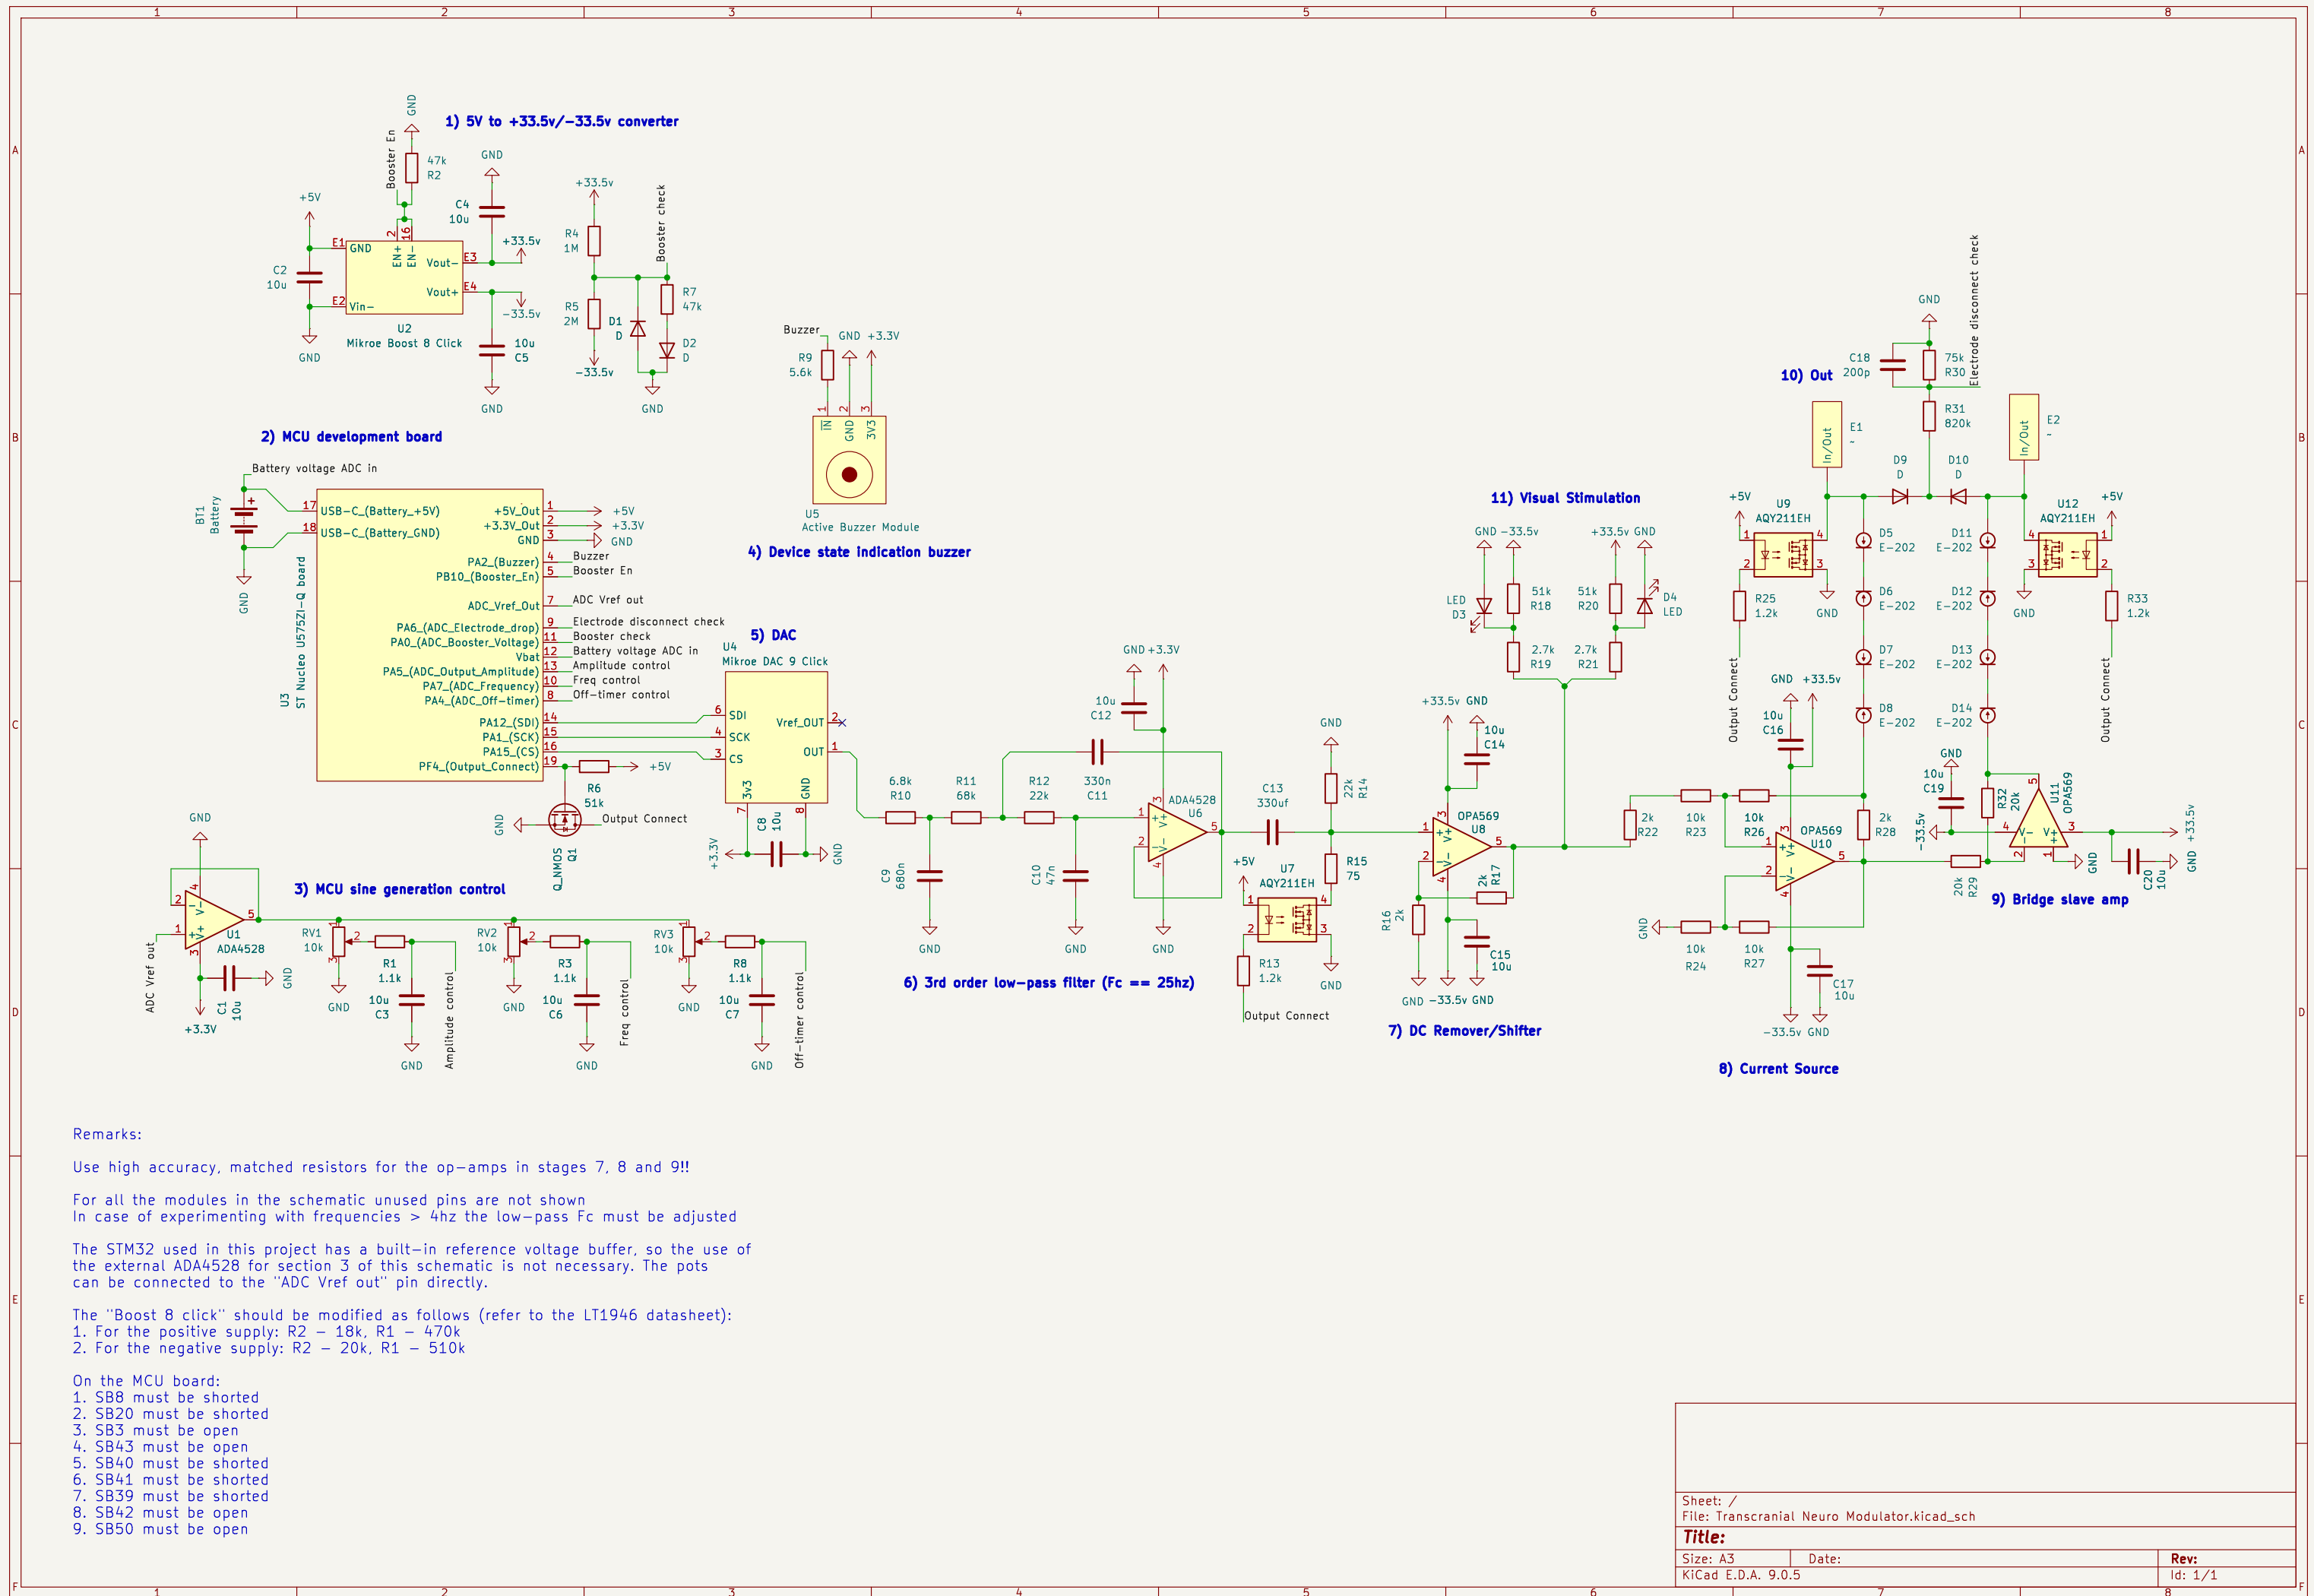

Remarks:

Use high accuracy, matched resistors for the op-amps in stages 7, 8 and 9!!

For all the modules in the schematic unused pins are not shown
In case of experimenting with frequencies > 4hz the low-pass Fc must be adjusted

The STM32 used in this project has a built-in reference voltage buffer, so the use of the external ADA4528 for section 3 of this schematic is not necessary. The pots can be connected to the "ADC Vref out" pin directly.

The "Boost 8 click" should be modified as follows (refer to the LT1946 datasheet):

1. For the positive supply: R2 – 18k, R1 – 470k
2. For the negative supply: R2 – 20k, R1 – 510k

On the MCU board:

1. SB8 must be shorted
2. SB20 must be shorted
3. SB3 must be open
4. SB43 must be open
5. SB40 must be shorted
6. SB41 must be shorted
7. SB39 must be shorted
8. SB42 must be open
9. SB50 must be open

Sheet: /
File: Transcranial Neuro Modulator.kicad_sch

Title:

Size: A3

Date:

Rev:

KiCad E.D.A. 9.0.5

Id: 1/1