



Yocto Project and OpenEmbedded Training

© Copyright 2004-2022, Bootlin.
Creative Commons BY-SA 3.0 license.
Latest update: April 15, 2022.

Document updates and sources:
<https://bootlin.com/doc/training/yocto>

Corrections, suggestions, contributions and translations are welcome!
Send them to feedback@bootlin.com





Rights to copy

© Copyright 2004-2022, Bootlin

License: Creative Commons Attribution - Share Alike 3.0

<https://creativecommons.org/licenses/by-sa/3.0/legalcode>

You are free:

- ▶ to copy, distribute, display, and perform the work
- ▶ to make derivative works
- ▶ to make commercial use of the work

Under the following conditions:

- ▶ **Attribution.** You must give the original author credit.
- ▶ **Share Alike.** If you alter, transform, or build upon this work, you may distribute the resulting work only under a license identical to this one.
- ▶ For any reuse or distribution, you must make clear to others the license terms of this work.
- ▶ Any of these conditions can be waived if you get permission from the copyright holder.

Your fair use and other rights are in no way affected by the above.

Document sources: <https://github.com/bootlin/training-materials/>



Hyperlinks in the document

There are many hyperlinks in the document

- ▶ Regular hyperlinks:
<https://kernel.org/>
- ▶ Kernel documentation links:
[dev-tools/kasan](#)
- ▶ Links to kernel source files and directories:
[drivers/input/](#)
[include/linux/fb.h](#)
- ▶ Links to the declarations, definitions and instances of kernel symbols (functions, types, data, structures):
[platform_get_irq\(\)](#)
[GFP_KERNEL](#)
[struct file_operations](#)



Company at a glance

- ▶ Engineering company created in 2004, named "Free Electrons" until Feb. 2018.
- ▶ Main locations: Toulouse, Lyon (France). Presence in Italy too.
- ▶ Serving customers all around the world
- ▶ Head count: 14 - Only Free Software enthusiasts!
- ▶ Focus: Embedded Linux, Linux kernel, build systems and low level Free and Open Source Software for embedded and real-time systems.
- ▶ Feb. 2021: Bootlin is the 20th all-time Linux kernel contributor
- ▶ Activities: development, training, consulting, technical support.
- ▶ Added value: get the best of the user and development community and the resources it offers.



No.1	Unknown	140019(15.26%)
No.2	Intel	94806(10.33%)
No.3	Red Hat	78140(8.52%)
No.4	Hobbyists	73603(8.02%)
No.5	Novell	39218(4.27%)
No.6	IBM	35085(3.82%)
No.7	Linaro	28288(3.08%)
No.8	AMD	22426(2.44%)
No.9	Google	20489(2.23%)
No.10	Renesas Electronics	18443(2.01%)
No.11	Oracle	17729(1.93%)
No.12	Samsung	17514(1.91%)
No.13	Texas Instruments	16372(1.78%)
No.14	HuaWei	13377(1.46%)
No.15	Mellanox Technologies	11477(1.25%)
No.16	ARM	8919(0.97%)
No.17	Academics	8560(0.93%)
No.18	Consultants	8073(0.88%)
No.19	Broadcom	8011(0.87%)
No.20	Bootlin	7611(0.83%)
No.21	NXP	7549(0.82%)
No.22	Linutronix	7430(0.81%)
No.23	NVIDIA	6951(0.76%)
No.24	Canonical	6855(0.75%)
No.25	Linux Foundation	6369(0.69%)
No.26	Code Aurora Forum	6280(0.68%)
No.27	Pengutronix	6201(0.68%)
No.28	VISION Engraving and Routing Systems	6045(0.66%)
No.29	Analog Devices	5944(0.65%)
No.30	Fujitsu	5120(0.56%)
No.31	QUALCOMM	4903(0.53%)
No.32	Freescale	4694(0.51%)
No.33	Wolfson Microelectronics	4180(0.46%)
No.34	Marvell	4178(0.46%)
No.35	Nokia	4097(0.45%)
No.36	Cisco	4071(0.44%)
No.37	Parallels	3841(0.42%)
No.38	Imagination Technologies	3774(0.41%)
No.39	Facebook	3484(0.38%)
No.40	QLogic	3394(0.37%)
No.41	ST Microelectronics	3188(0.35%)
No.42	Astaro	2981(0.32%)
No.43	NetApp	2860(0.31%)

Top Linux contributors since git (2005)



- ▶ All our training materials and technical presentations:
<https://bootlin.com/docs/>
- ▶ Technical blog:
<https://bootlin.com/>
- ▶ Quick news (Twitter):
<https://twitter.com/bootlincom>
- ▶ Quick news (LinkedIn):
<https://www.linkedin.com/company/bootlin>
- ▶ Elixir - browse Linux kernel sources on-line:
<https://elixir.bootlin.com>




Generic course information

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.


Corrections, suggestions, contributions and translations are welcome!

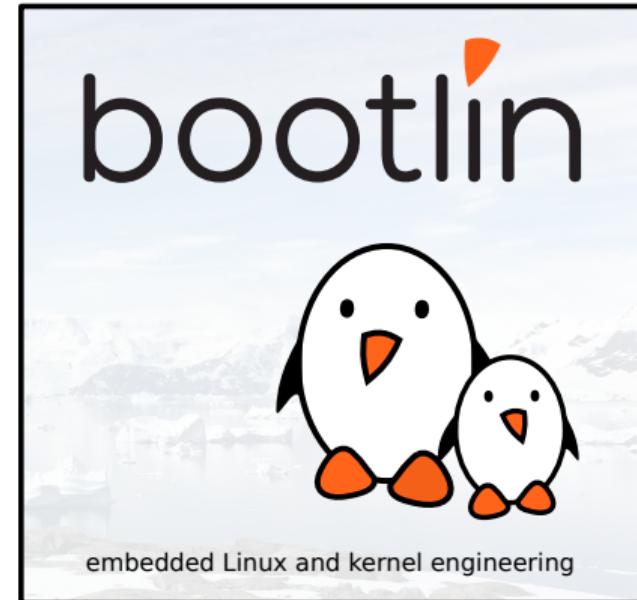



Two supported hardware platforms

Two variants for this course, each using a different hardware platform.

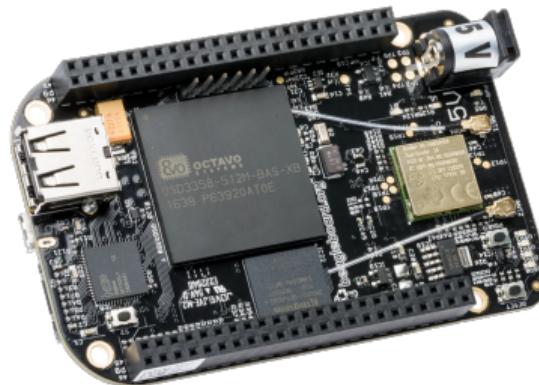

Beaglebone Black

<https://bootlin.com/doc/training/yocto/>



STM32MP157D-DK1 Discovery

<https://bootlin.com/doc/training/yocto-stm32/>



Shopping list: BeagleBone Black Wireless variant

- ▶ Beaglebone Black or Beaglebone Black Wireless, USB-A to micro B power cable included

<https://www.mouser.fr/ProductDetail/BeagleBoard-by-GHI/BBBWL-SC-562?qs=k%2Fsw%252B3Yi%2FUbELBjXQpiBUQ%3D%3D>



- ▶ USB Serial Cable - 3.3 V - female ends (for serial console)

<https://www.olimex.com/Products/Components/Cables/USB-Serial-Cable/USB-SERIAL-F/>

- ▶ Nintendo Nunchuk with UEXT connector

<https://www.olimex.com/Products/Modules/Sensors/MOD-WII/MOD-Wii-UEXT-NUNCHUCK/>

- ▶ Breadboard jumper wires - Male ends (to connect to Nunchuk) <https://www.olimex.com/Products/Breadboarding/JUMPER-WIRES/JW-110x10/>



- ▶ Micro SD card with 8 GB capacity





Shopping list: STM32MP1 Discovery Kit variant

- ▶ STMicroelectronics STM32MP157D-DK1 Discovery kit

<https://www.st.com/en/evaluation-tools/stm32mp157d-dk1.html#sample-buy>



- ▶ USB-C cable for the power supply
- ▶ USB-A to micro B cable for the serial console
- ▶ RJ45 cable for networking
- ▶ Nintendo Nunchuk with UEXT connector

<https://www.olimex.com/Products/Modules/Sensors/MOD-WII/MOD-Wii-UEXT-NUNCHUCK/>



- ▶ Breadboard jumper wires - Male ends

<https://www.olimex.com/Products/Breadboarding/JUMPER WIRES/JW-110x10/>



- ▶ Micro SD card with 8 GB capacity





Supported hardware

BeagleBone Black or BeagleBone Black Wireless, from [BeagleBoard.org](https://beagleboard.org)

- ▶ Texas Instruments AM335x (ARM Cortex-A8 CPU)
- ▶ SoC with 3D acceleration, additional processors (PRUs) and lots of peripherals.
- ▶ 512 MB of RAM
- ▶ 4 GB of on-board eMMC storage
- ▶ USB host and USB device, microSD, micro HDMI
- ▶ WiFi and Bluetooth (wireless version), otherwise Ethernet
- ▶ 2 x 46 pins headers, with access to many expansion buses (I2C, SPI, UART and more)
- ▶ A huge number of expansion boards, called *capes*. See https://elinux.org/Beagleboard:BeagleBone_Capes.





Supported hardware

STMicroelectronics STM32MP157D-DK1 Discovery board

- ▶ STM32MP157D (Dual Cortex-A7 + Cortex-M4) CPU from STMicroelectronics
- ▶ 512 MB DDR3L RAM
- ▶ Gigabit Ethernet port
- ▶ 4 USB 2.0 host ports
- ▶ 1 USB-C OTG port
- ▶ 1 Micro SD slot
- ▶ On-board ST-LINK/V2-1 debugger
- ▶ Misc: buttons, LEDs, Audio codec
- ▶ Currently sold at 65 EUR + VAT at Mouser



Board and CPU documentation, design files, software:

<https://www.st.com/en/evaluation-tools/stm32mp157d-dk1.html>



Training quiz and certificate

- ▶ You have been given a quiz to test your knowledge on the topics covered by the course. That's not too late to take it if you haven't done it yet!
- ▶ At the end of the course, we will submit this quiz to you again. That time, you will see the correct answers.
- ▶ It allows Bootlin to assess your progress thanks to the course. That's also a kind of challenge, to look for clues throughout the lectures and labs / demos, as all the answers are in the course!
- ▶ Another reason is that we only give training certificates to people who achieve at least a 50% score in the final quiz **and** who attended all the sessions.



Participate!

During the lectures...

- ▶ Don't hesitate to ask questions. Other people in the audience may have similar questions too.
- ▶ Don't hesitate to share your experience too, for example to compare Linux with other operating systems you know.
- ▶ Your point of view is most valuable, because it can be similar to your colleagues' and different from the trainer's.
- ▶ In on-line sessions
 - Please keep your camera on too if you have one.
 - Also make sure your name is properly filled.
 - If Jitsi Meet is used, you can also use the "Raise your hand" button when you wish to ask a question but don't want to interrupt.
- ▶ All this helps the trainer to engage with participants, see when something needs clarifying and make the session more interactive, enjoyable and useful for everyone.



Collaborate!

As in the Free Software and Open Source community, collaboration between participants is valuable in this training session:

- ▶ Use the dedicated Matrix channel for this session to add questions.
- ▶ If your session offers practical labs, you can also report issues, share screenshots and command output there.
- ▶ Don't hesitate to share your own answers and to help others especially when the trainer is unavailable.
- ▶ The Matrix channel is also a good place to ask questions outside of training hours, and after the course is over.

The screenshot shows a Matrix channel interface with several messages from users Srinath and michael.o. Srinath asks about the CROSS_COMPILE variable for the Xplained board. Michael.o responds with instructions on setting it correctly. Srinath also mentions asking about labs after the session is over. Another user, arnsud.a, reports a kernel panic. A file named 'Decrypt Image.png' is attached to one of the messages.

E # embedded-linux-nov2020 Channel for

Srinath

michael.o: What should be CROSS_COMPILE variable set to in case of the Xplained board? I ran into some issues with my USB hub so doing the u-boot again

michael.o: you should look at the name of the cross-compiler in the toolchain's bin/ directory. CROSS_COMPILE should be set to what's before "gcc" in the name, including the trailing "-". Like if the compiler is arm-buildroot-linux-gcc, CROSS_COMPILE should be arm-buildroot-linux-

2 messages deleted.

Srinath

Will ask them here since I am going to do labs after the session is over! Thanks!

michael.o changed their display name to michael.r.

@bootlin-eu@matrix.org

I tried to finalize Kernel - Cross-compiling task, but my system is not able to restart the new kernel. Does anyone know what can be the root cause?

arnsud.a

I had the same because I accidentally removed the .overlays from the kernel

arnsud.a: Send an encrypted message...

Decrypt Image.png (109.2 KB)



Practical lab - Training Setup



Prepare your lab environment

- ▶ Download and extract the lab archive



Introduction to Embedded Linux

© Copyright 2004-2022, Bootlin.


Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!






Simplified Linux system architecture

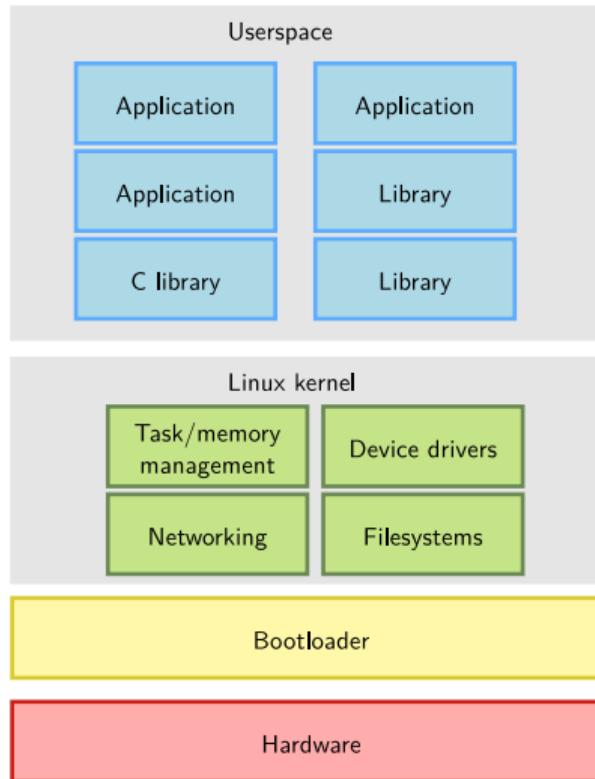



Overall Linux boot sequence

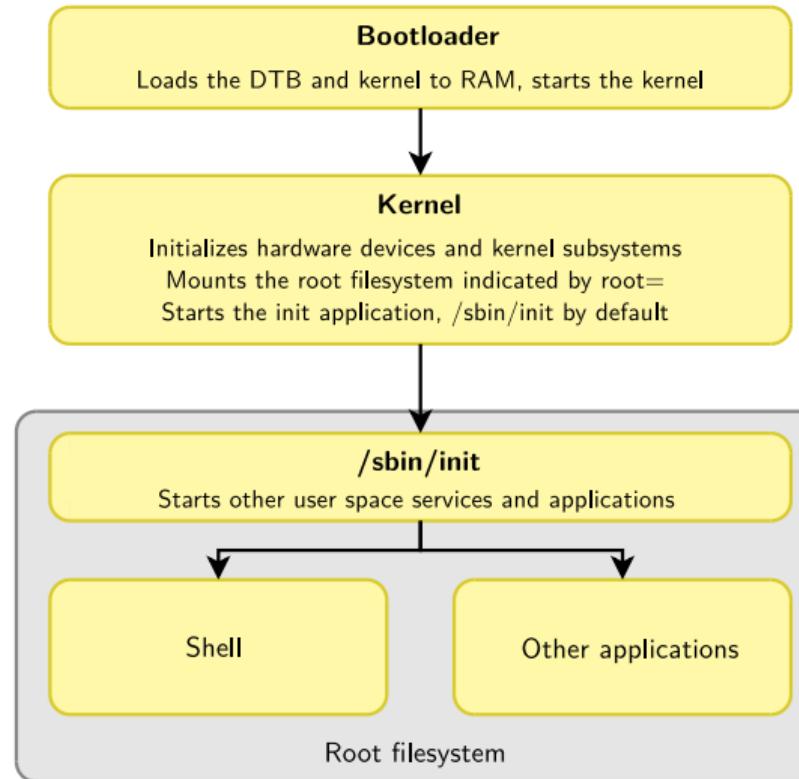




- ▶ **BSP work:** porting the bootloader and Linux kernel, developing Linux device drivers.
- ▶ **system integration work:** assembling all the user space components needed for the system, configure them, develop the upgrade and recovery mechanisms, etc.
- ▶ **application development:** write the company-specific applications and libraries.



Complexity of user space integration

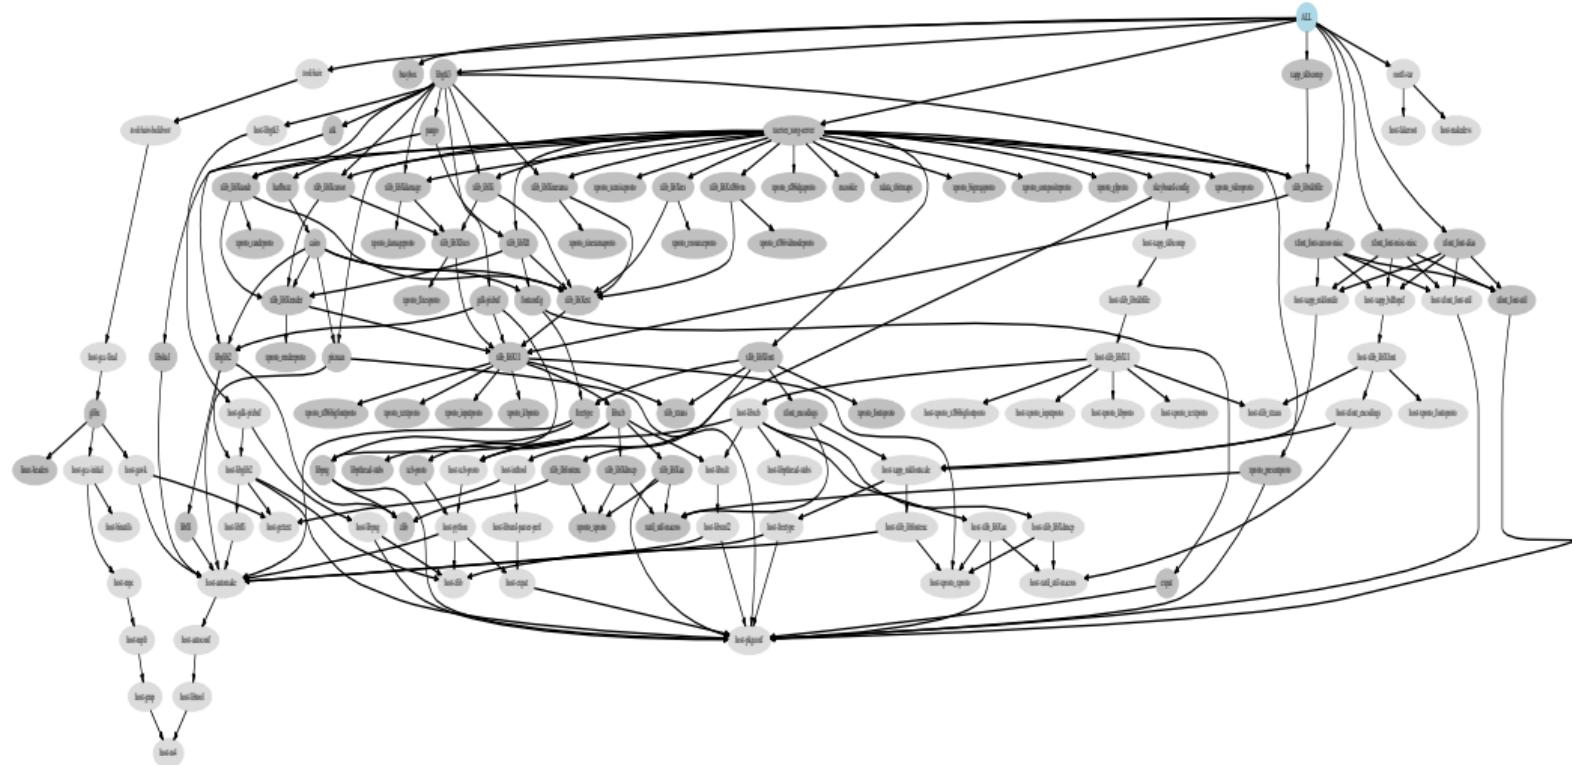




System integration: several possibilities

	Pros	Cons
Building everything manually Debian, Ubuntu, Fedora, etc.	Full flexibility Learning experience	Dependency hell Need to understand a lot of details Version compatibility Lack of reproducibility
Binary distribution Debian, Ubuntu, Fedora, etc.	Easy to create and extend	Hard to customize Hard to optimize (boot time, size) Hard to rebuild the full system from source Large system Uses native compilation (slow) No well-defined mechanism to generate an image Lots of mandatory dependencies Not available for all architectures
Build systems Buildroot, Yocto, PTXdist, etc.	Nearly full flexibility Built from source: customization and optimization are easy Fully reproducible Uses cross-compilation Have embedded specific packages not necessarily in desktop distros Make more features optional	Not as easy as a binary distribution Build time



Embedded Linux build system: principle

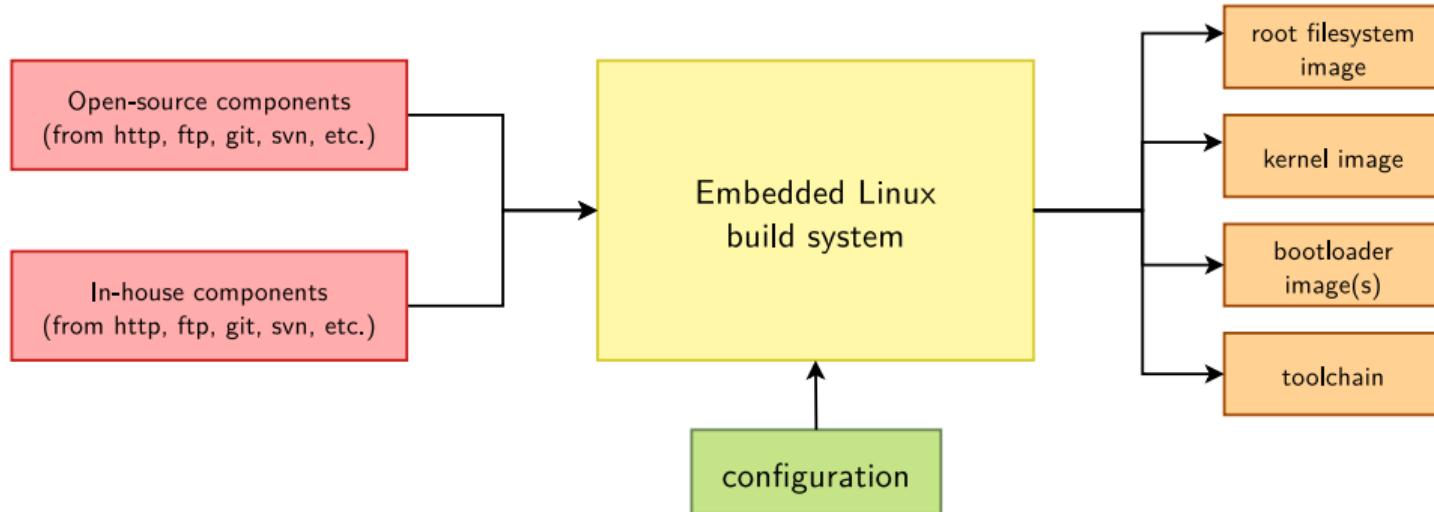

- ▶ Building from source → lot of flexibility
- ▶ Cross-compilation → leveraging fast build machines
- ▶ Recipes for building components → easy



Embedded Linux build system: tools

- ▶ A wide range of solutions: Yocto/OpenEmbedded, PTXdist, Buildroot, OpenWRT, and more.
- ▶ Today, two solutions are emerging as the most popular ones
 - **Yocto/OpenEmbedded**
Builds a complete Linux distribution with binary packages. Powerful, but somewhat complex, and quite steep learning curve.
 - **Buildroot**
Builds a root filesystem image, no binary packages. Much simpler to use, understand and modify.




Yocto Project and Poky reference system overview

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!

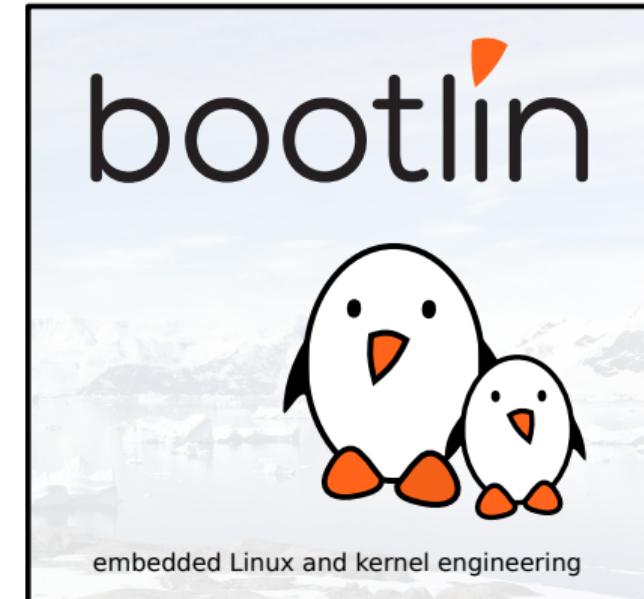



The Yocto Project overview



About

- ▶ The Yocto Project is a set of templates, tools and methods that allow to build custom embedded Linux-based systems.
- ▶ It is an open source project initiated by the Linux Foundation in 2010 and is still managed by one of its fellows: Richard Purdie.




The Yocto Project lexicon

- ▶ The core components of the Yocto Project are:
 - BitBake, the *build engine*. It is a task scheduler, like `make`. It interprets configuration files and recipes (also called *metadata*) to perform a set of tasks, to download, configure and build specified applications and filesystem images.
 - OpenEmbedded-Core, a set of base *layers*. It is a set of recipes, layers and classes which are shared between all OpenEmbedded based systems.
 - Poky, the *reference system*. It is a collection of projects and tools, used to bootstrap a new distribution based on the Yocto Project.



The Yocto Project lexicon

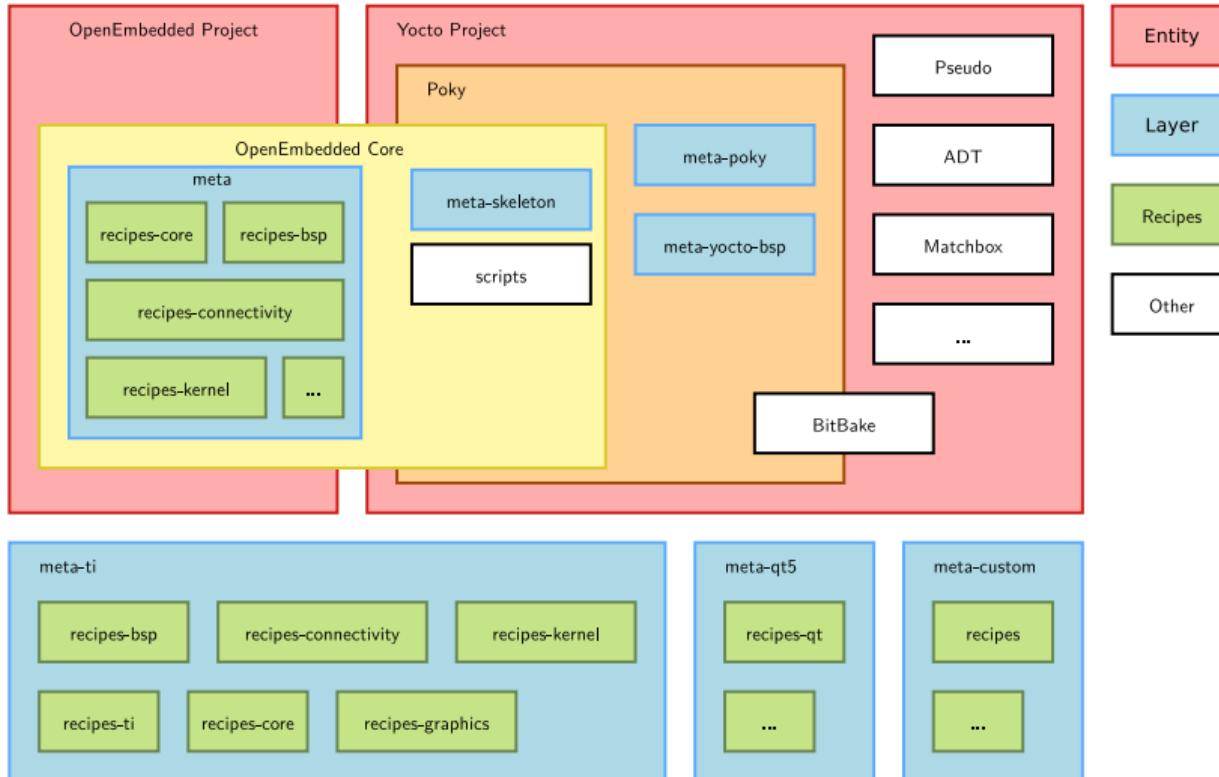



► Organization of OpenEmbedded-Core:

- *Recipes* describe how to fetch, configure, compile and package applications and images. They have a specific syntax.
- *Layers* are sets of recipes, matching a common purpose. For Texas Instruments board support, the *meta-ti* layer is used.
- Multiple layers are used within a same distribution, depending on the requirements.
- It supports the ARM, MIPS (32 and 64 bits), PowerPC, RISC-V and x86 (32 and 64 bits) architectures.
- It supports QEMU emulated machines for these architectures.



The Yocto Project lexicon

- ▶ The Yocto Project is **not used as** a finite set of layers and tools.
- ▶ Instead, it provides a **common base** of tools and layers on top of which custom and specific layers are added, depending on your target.
- ▶ The main required element is **Poky**, the reference system which includes OpenEmbedded-Core. Other available tools are optional, but may be useful in some cases.



Example of a Yocto Project based BSP

- ▶ To build images for a BeagleBone Black, we need:
 - The Poky reference system, containing all common recipes and tools.
 - The *meta-ti* layer, a set of Texas Instruments specific recipes.
- ▶ All modifications are made in the *meta-ti* layer. Editing Poky is a **no-go!**
- ▶ We will set up this environment in the lab.



The Poky reference system overview




Getting the Poky reference system

- ▶ All official projects part of the Yocto Project are available at
<https://git.yoctoproject.org/cgit/>
- ▶ To download the Poky reference system:
`git clone -b dunfell https://git.yoctoproject.org/git/poky`
- ▶ Each release has a codename such as dunfell or hardknott, corresponding to a release number.
 - A summary can be found at <https://wiki.yoctoproject.org/wiki Releases>
- ▶ A new version is released every 6 months, and maintained for 7 months
- ▶ **LTS** versions are maintained for 2 years, and announced before their release.



Poky

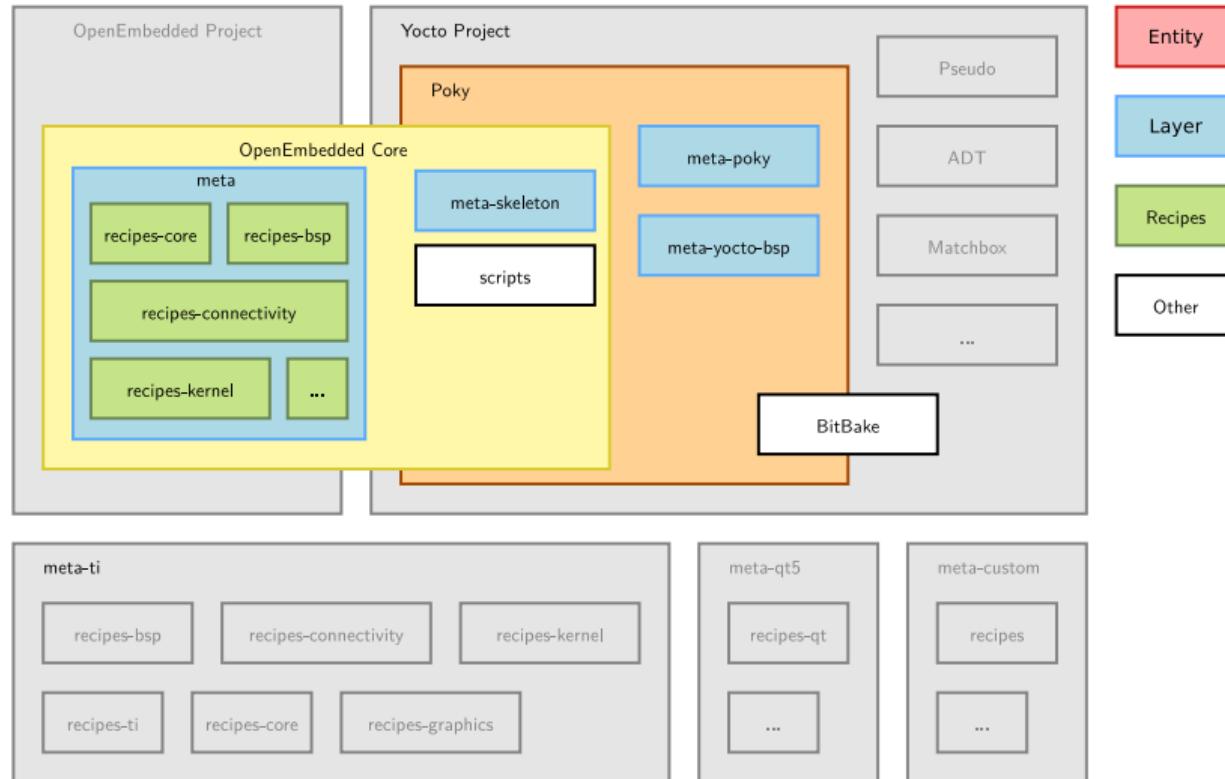



`bitbake/` Holds all scripts used by the BitBake command. Usually matches the stable release of the BitBake project.

`documentation/` All documentation sources for the Yocto Project documentation. Can be used to generate nice PDFs.

`meta/` Contains the OpenEmbedded-Core metadata.

`meta-skeleton/` Contains template recipes for BSP and kernel development.



`meta-poky/` Holds the configuration for the Poky reference distribution.

`meta-yocto-bsp/` Configuration for the Yocto Project reference hardware board support package.

`LICENSE` The license under which Poky is distributed (a mix of GPLv2 and MIT).

`oe-init-build-env` Script to set up the OpenEmbedded build environment. It will create the build directory. It takes an optional parameter which is the build directory name. By default, this is `build`. This script has to be sourced because it changes environment variables.

`scripts` Contains scripts used to set up the environment, development tools, and tools to flash the generated images on the target.



- ▶ Documentation for the current sources, compiled as a "mega manual", is available at: <https://docs.yoctoproject.org/singleindex.html>
- ▶ Variables in particular are described in the variable glossary:
<https://docs.yoctoproject.org/genindex.html>




Using Yocto Project - basics

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!

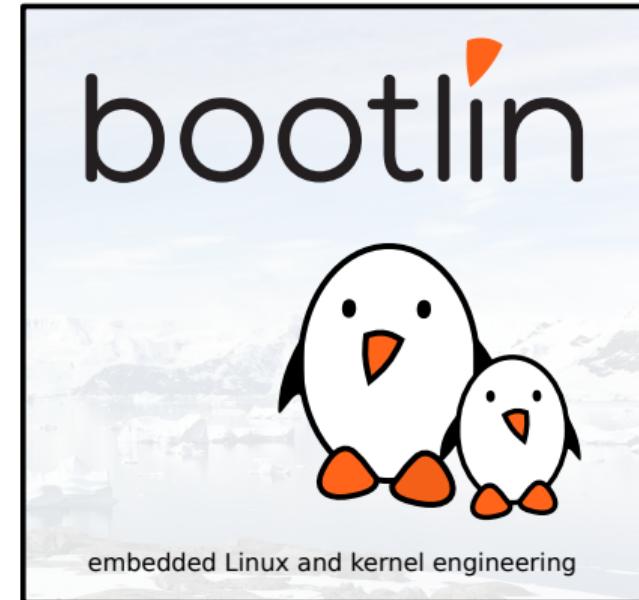



Environment setup



- ▶ All Poky files are left unchanged when building a custom image.
- ▶ Specific configuration files and build repositories are stored in a separate build directory.
- ▶ A script, `oe-init-build-env`, is provided to set up the build directory and the environment variables (needed to be able to use the `bitbake` command for example).



- ▶ Modifies the environment: has to be sourced!
- ▶ Adds environment variables, used by the build engine.
- ▶ Allows you to use commands provided in Poky.
- ▶ `source ./oe-init-build-env [builddir]`
- ▶ Sets up a basic build directory, named `builddir` if it is not found. If not provided, the default name is `build`.



- ▶ Common targets are listed when sourcing the script:

`core-image-minimal` A small image to boot a device and have access to core command line commands and services.

`core-image-sato` Image with Sato support. Sato is a GNOME mobile-based user interface.

`meta-toolchain` Generates the cross-toolchain in an installable format.

`meta-ide-support` Generates the cross-toolchain and additional tools (gdb, qemu, ...) for IDE integration.



Exported environment variables

BUILDDIR Absolute path of the build directory.

PATH Contains the directories where executable programs are located.
Absolute paths to `scripts/` and `bitbake/bin/` are prepended.



Available commands

- bitbake** The main build engine command. Used to perform tasks on available recipes (download, configure, compile...).
- bitbake-*** Various specific commands related to the BitBake build engine.



The build/ directory 1/2

- `conf/` Configuration files. Image specific and layer configuration.
- `downloads/` Downloaded upstream tarballs of the recipes used in the builds.
- `sstate-cache/` Shared state cache. Used by all builds.
- `tmp/` Holds all the build system outputs.



The build/ directory 2/2

`tmp/buildstats/` Build statistics for all packages built (CPU usage, elapsed time, host, timestamps...).

`tmp/deploy/` Final output of the build.

`tmp/deploy/images/` Contains the complete images built by the OpenEmbedded build system. These images are used to flash the target.

`tmp/work/` Set of specific work directories, split by architecture. They are used to unpack, configure and build the packages. Contains the patched sources, generated objects and logs.

`tmp/sysroots/` Shared libraries and headers used to compile applications for the target but also for the host.



Configuring the build system



The build/conf/ directory

- ▶ The `conf/` directory in the `build` one holds build specific configuration.
 - `bblayers.conf` Explicitly list the available layers.
 - `local.conf` Set up the configuration variables relative to the current user for the build. Configuration variables can be overridden there.



Configuring the build

- ▶ The `conf/local.conf` configuration file holds local user configuration variables:
 - `BB_NUMBER_THREADS` How many tasks BitBake should perform in parallel.
Defaults to the number of CPUs on the system.
 - `PARALLEL_MAKE` How many processes should be used when compiling.
Defaults to the number of CPUs on the system.
 - `MACHINE` The machine the target is built for, e.g. `beaglebone`.



Building an image



- ▶ The compilation is handled by the BitBake *build engine*.
- ▶ Usage: `bitbake [options] [recipename/target ...]`
- ▶ To build a target: `bitbake [target]`
- ▶ Building a minimal image: `bitbake core-image-minimal`
 - This will run a full build for the selected target.



Practical lab - First Yocto build



- ▶ Download the sources
- ▶ Set up the environment
- ▶ Configure the build
- ▶ Build an image



Using Yocto Project - advanced usage

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!





- ▶ Select package variants.
- ▶ Manually add packages to the generated image.
- ▶ Run specific tasks with BitBake.



A little reminder

- ▶ *Recipes* describe how to fetch, configure, compile and install applications.
- ▶ These tasks can be run independently (if their dependencies are met).
- ▶ All available packages in Poky are not selected by default in the images.
- ▶ Some packages may provide the same functionality, e.g. OpenSSH and Dropbear.



Advanced configuration



Overview

- ▶ The OpenEmbedded build system uses configuration variables to hold information.
- ▶ Configuration settings are in upper-case by convention, e.g. CONF_VERSION
- ▶ To make configuration easier, it is possible to prepend, append or define these variables in a conditional way.
- ▶ Variables defined in **Configuration Files** have a **global** scope
 - Files ending in .conf
- ▶ Variables defined in **Recipes** have a **local** scope
 - Files ending in .bb, .bbappend and .bbclass
- ▶ Recipes can also access the global scope
- ▶ All variables can be overridden or modified in \$BUILDDIR/conf/local.conf



- ▶ BitBake uses a dedicated set of operators to assign values to variables
- ▶ The operators apply their effect immediately when executed
- ▶ The parsing order is difficult to predict, no assumption should be made about it.
- ▶ Variables in the global scope therefore have a value difficult to predict
- ▶ Bitbake supports **overrides**, to allow appending, prepending or modifying a variable at expansion time, when the variable's value is read
- ▶ Overrides are written as `VARIABLE_override = "some_value"`
- ▶ A new syntax was introduced in bitbake : `VARIABLE:override = "some_value"`
- ▶ It will be the new syntax to be used starting with **Honister**, with no retrocompatibility



Methods and conditions 1/4

- ▶ Append the keyword `_append` to a configuration variable to add values **after** the ones previously defined (without space).
 - `IMAGE_INSTALL_append = " dropbear"` adds dropbear to the packages installed on the image.
- ▶ Append the keyword `_prepend` to add values **before** the ones previously defined (without space).
 - `FILESEXTRAPATHS_prepend := "${THISDIR}/${PN}:"` adds the folder to the set of paths where files are located (in a recipe).



- ▶ Append the keyword `_remove` to a configuration variable to remove all occurrences of a value within a configuration variable.
 - `IMAGE_INSTALL_remove = "i2c-tools"`
- ▶ Append the machine name to only define a configuration variable for a given machine. It tries to match with values from `MACHINEOVERRIDES` which include `MACHINE` and `SOC_FAMILY`.
 - `KERNEL_DEVICETREE_beaglebone = "am335x-bone.dtb"` tells to use the kernel device tree `am335x-bone.dtb` only when the machine is beaglebone.



Methods and conditions 3/4

- ▶ The previous methods can be combined.
- ▶ If we define:
 - IMAGE_INSTALL = "busybox mtd-utils"
 - IMAGE_INSTALL_append = " dropbear"
 - IMAGE_INSTALL_append_beaglebone = " i2c-tools"
- ▶ The resulting configuration variable will be:
 - IMAGE_INSTALL = "busybox mtd-utils dropbear i2c-tools" if the machine being built is beaglebone.
 - IMAGE_INSTALL = "busybox mtd-utils dropbear" otherwise.



Methods and conditions 4/4

- ▶ The most specific variable takes precedence.
- ▶ Example:

```
IMAGE_INSTALL_beaglebone = "busybox mtd-utils i2c-tools"  
IMAGE_INSTALL = "busybox mtd-utils"
```

- ▶ If the machine is beaglebone:
 - IMAGE_INSTALL = "busybox mtd-utils i2c-tools"
- ▶ Otherwise:
 - IMAGE_INSTALL = "busybox mtd-utils"



- ▶ Various operators can be used to assign values to configuration variables:
 - = expand the value when using the variable
 - := immediately expand the value
 - += append (with space)
 - =+ prepend (with space)
 - .= append (without space)
 - =. prepend (without space)
 - ?= assign if no other value was previously assigned
 - ??= same as previous, with a lower precedence



Operators 2/2

- ▶ Avoid using `+=`, `=+`, `.=` and `=.` in `$BUILDDIR/conf/local.conf` due to ordering issues.
 - If `+=` is parsed before `?=`, the latter will be discarded.
 - Using `_append` unconditionally appends the value.



Packages variants



Introduction to package variants

- ▶ Some packages have the same purpose, and only one can be used at a time.
- ▶ The build system uses **virtual packages** to reflect this. A virtual package describes functionalities and several packages may provide it.
- ▶ Only one of the packages that provide the functionality will be compiled and integrated into the resulting image.



Variant examples

- ▶ The virtual packages are often in the form `virtual/<name>`
- ▶ Example of available virtual packages with some of their variants:
 - `virtual/bootloader`: `u-boot`, `u-boot-ti-staging...`
 - `virtual/kernel`: `linux-yocto`, `linux-yocto-tiny`, `linux-yocto-rt`, `linux-ti-staging...`
 - `virtual/libc`: `glibc`, `musl`, `newlib`
 - `virtual/xserver`: `xserver-xorg`



Package selection

- ▶ Variants are selected thanks to the `PREFERRED_PROVIDER` configuration variable.
- ▶ The package names **have to** suffix this variable.
- ▶ Examples:
 - `PREFERRED_PROVIDER_virtual/kernel ?= "linux-ti-staging"`
 - `PREFERRED_PROVIDER_virtual/libgl = "mesa"`



Version selection

- ▶ By default, Bitbake will try to build the provider with the highest version number, from the highest priority layer, unless the recipe defines
`DEFAULT_PREFERENCE = "-1"`
- ▶ When multiple package versions are available, it is also possible to explicitly pick a given version with `PREFERRED_VERSION`.
- ▶ The package names **have to** suffix this variable.
- ▶ **%** can be used as a wildcard.
- ▶ Example:
 - `PREFERRED_VERSION_linux-yocto = "5.14%"`
 - `PREFERRED_VERSION_python = "2.7.3"`



Packages



- ▶ The set of packages installed into the image is defined by the target you choose (e.g. `core-image-minimal`).
- ▶ It is possible to have a custom set by defining our own target, and we will see this later.
- ▶ When developing or debugging, adding packages can be useful, without modifying the recipes.
- ▶ Packages are controlled by the `IMAGE_INSTALL` configuration variable.



- ▶ The list of packages to install is also filtered using the `PACKAGE_EXCLUDE` variable.
- ▶ If you choose to not install a package using this variable and some other package is dependent on it (i.e. listed in a recipe's `RDEPENDS` variable), the OpenEmbedded build system generates a fatal installation error.
- ▶ This only works with RPM and IPK packages.



The power of BitBake



Common BitBake options

- ▶ BitBake can be used to run a full build for a given target with `bitbake [target]`.
- ▶ But it can be more precise, with optional options:

`-c <task>` execute the given task

`-s` list all locally available packages and their versions

`-f` force the given task to be run by removing its stamp file
 `world` keyword for all recipes

`-b <recipe>` execute tasks from the given recipe (without resolving dependencies).



BitBake examples

- ▶ `bitbake -c listtasks virtual/kernel`
 - Gives a list of the available tasks for the recipe providing the package `virtual/kernel`. Tasks are prefixed with `do_`.
- ▶ `bitbake -c menuconfig virtual/kernel`
 - Execute the task `menuconfig` on the recipe providing the `virtual/kernel` package.
- ▶ `bitbake -f dropbear`
 - Force the `dropbear` recipe to run all tasks.
- ▶ `bitbake world --runall=fetch`
 - Download all recipe sources and their dependencies.
- ▶ For a full description: `bitbake --help`



shared state cache

- ▶ BitBake stores the output of each task in a directory, the shared state cache. Its location is controlled by the `SSTATE_DIR` variable.
- ▶ This cache is used to speed up compilation.
- ▶ Over time, as you compile more recipes, it can grow quite big. It is possible to clean old data with:

```
$ ./scripts/sstate-cache-management.sh -y -d \
--cache-dir=$SSTATE_DIR
```



Practical lab - Advanced Yocto configuration



- ▶ Modify the build configuration
- ▶ Customize the package selection
- ▶ Experiment with BitBake
- ▶ Mount the root file system over NFS




Writing recipes - basics

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!

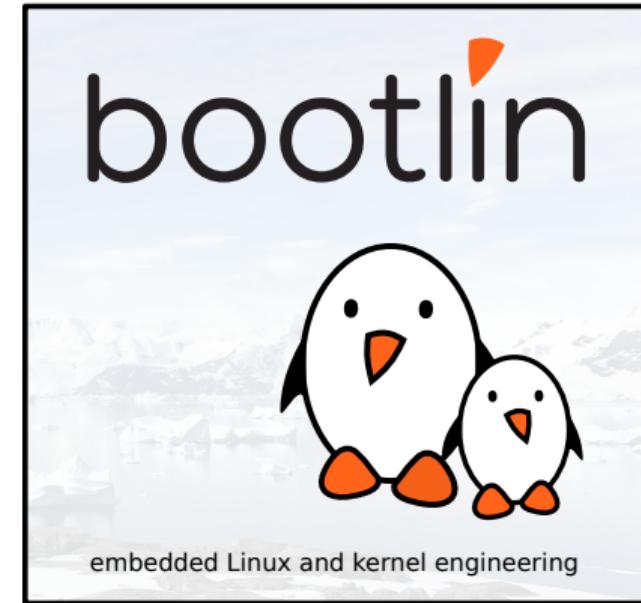




Recipes: overview



Recipes

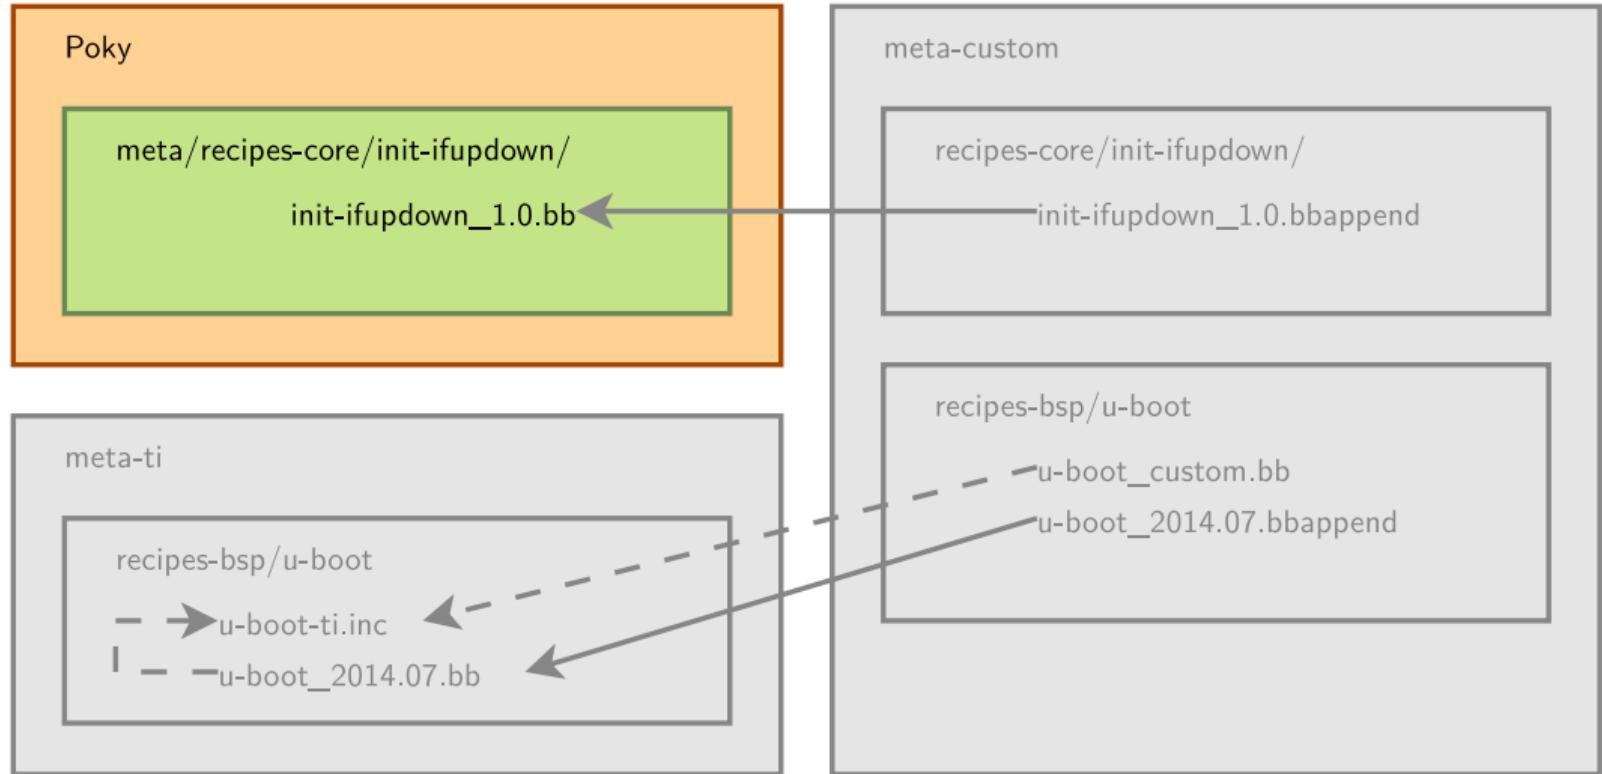



- ▶ Recipes describe how to handle a given application.
- ▶ A recipe is a set of instructions to describe how to retrieve, patch, compile, install and generate binary packages for a given application.
- ▶ It also defines what build or runtime dependencies are required.
- ▶ The recipes are parsed by the BitBake build engine.
- ▶ The format of a recipe file name is <application-name>_<version>.bb



Content of a recipe

- ▶ A recipe contains configuration variables: name, license, dependencies, path to retrieve the source code...
- ▶ It also contains functions that can be run (fetch, configure, compile...) which are called **tasks**.
- ▶ Tasks provide a set of actions to perform.
- ▶ Remember the `bitbake -c <task> <target>` command?



Common variables


- ▶ To make it easier to write a recipe, some variables are automatically available:
 - PN** package name, as specified in the recipe file name
 - BPN** PN with prefixes and suffixes removed such as nativesdk-, or -native
 - PV** package version, as specified in the recipe file name
 - PR** package revision, defaults to r0
 - BP** defined as \${BPN}-\${PV}
- ▶ The recipe name and version usually match the upstream ones.
- ▶ When using the recipe `bash_4.2.bb`:
 - \${PN} = "bash"
 - \${PV} = "4.2"



Organization of a recipe



Organization of a recipe

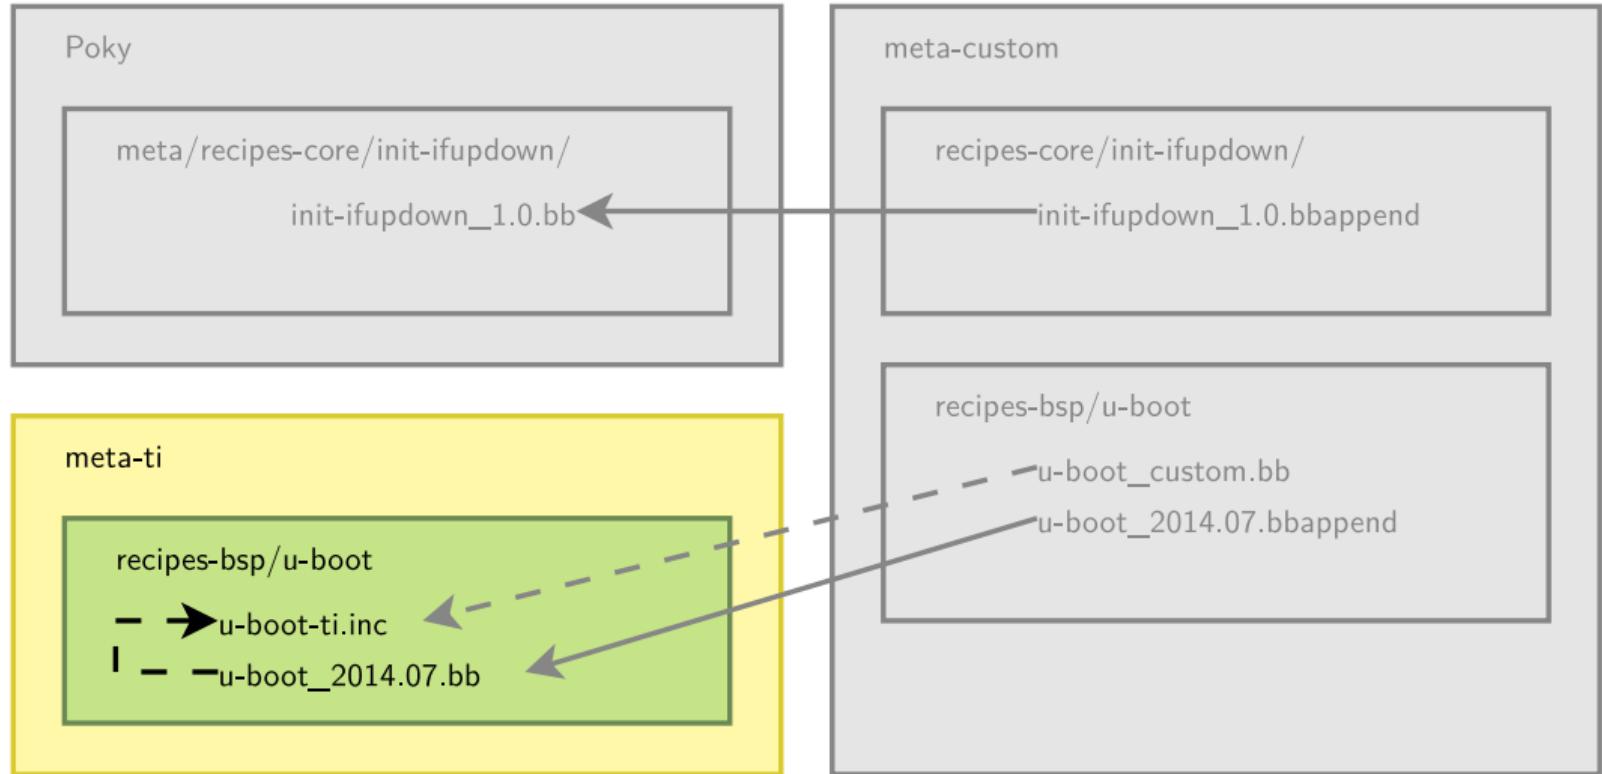



Organization of a recipe

- ▶ Many applications have more than one recipe, to support different versions. In that case the common metadata is included in each version specific recipe and is in a `.inc` file:
 - `<application>.inc`: version agnostic metadata.
 - `<application>_<version>.bb`: require `<application>.inc` and version specific metadata.
- ▶ We can divide a recipe into three main parts:
 - The header: what/who
 - The sources: where
 - The tasks: how



The header

- ▶ Configuration variables to describe the application:
 - DESCRIPTION** describes what the software is about
 - HOMEPAGE** URL to the project's homepage
 - PRIORITY** defaults to optional
 - SECTION** package category (e.g. console/utils)
 - LICENSE** the application's license



The source locations: overview

- ▶ We need to retrieve both the raw sources from an official location and the resources needed to configure, patch or install the application.
- ▶ `SRC_URI` defines where and how to retrieve the needed elements. It is a set of URI schemes pointing to the resource locations (local or remote).
- ▶ URI scheme syntax: `scheme://url;param1;param2`
- ▶ scheme can describe a local file using `file://` or remote locations with `https://`, `git://`, `svn://`, `hg://`, `ftp://`...
- ▶ By default, sources are fetched in `$BUILDDIR/downloads`. Change it with the `DL_DIR` variable in `conf/local.conf`



The source locations: remote files 1/2

- ▶ The git scheme:
 - `git://<url>;protocol=<protocol>;branch=<branch>`
 - When using git, it is necessary to also define `SRCREV`. If `SRCREV` is a hash or a tag not present in master, the branch parameter is mandatory. When the tag is not in any branch, it is possible to use `nobranch=1`
- ▶ The http, https and ftp schemes:
 - `https://example.com/application-1.0.tar.bz2`
 - A few variables are available to help pointing to remote locations:
 `${SOURCEFORGE_MIRROR}, ${GNU_MIRROR}, ${KERNELORG_MIRROR}...`
 - Example: `${SOURCEFORGE_MIRROR}/<project-name>/${BPN}-${PV}.tar.gz`
 - See `meta/conf/bitbake.conf`



The source locations: remote files 2/2

- ▶ An md5 or an sha256 sum must be provided when the protocol used to retrieve the file(s) does not guarantee their integrity. This is the case for https, http or ftp.

```
SRC_URI[md5sum] = "97b2c3fb082241ab5c56ab728522622b"
```

```
SRC_URI[sha256sum] = "..."
```

- ▶ It's possible to use checksums for more than one file, using the name parameter:

```
SRC_URI = "http://example.com/src.tar.bz2;name=tarball \
           http://example.com/fixes.patch;name=patch"
```

```
SRC_URI[tarball.md5sum] = "97b2c3fb082241ab5c56..."
```

```
SRC_URI[patch.md5sum] = "b184acf9eb39df794ffd..."
```



The source locations: local files

- ▶ All local files found in `SRC_URI` are copied into the recipe's working directory, in `$BUILDDIR/tmp/work/`.
- ▶ The searched paths are defined in the `FILESPATH` variable.

```
FILESPATH = "${@base_set_filespath(["${FILE_DIRNAME}/${BP}",  
"${FILE_DIRNAME}/${BPN}", "${FILE_DIRNAME}/files"], d)}
```

```
FILESOVERRIDES = "${TRANSLATED_TARGET_ARCH}:  
${MACHINEOVERRIDES}:${DISTROOVERRIDES}"
```

- ▶ The `base_set_filespath(path)` function uses its path parameter, `FILESEXTRAPATHS` and `FILESOVERRIDES` to fill the `FILESPATH` variable.
- ▶ Custom paths and files can be added using `FILESEXTRAPATHS` and `FILESOVERRIDES`.
- ▶ Prepend the paths, as the order matters.



The source locations: tarballs

- ▶ When extracting a tarball, BitBake expects to find the extracted files in a directory named <application>-<version>. This is controlled by the `S` variable. If the directory has another name, you must explicitly define `S`.
- ▶ If the scheme is `git`, `S` must be set to `${WORKDIR}/git`



The source locations: license files

- ▶ License files must have their own checksum.
- ▶ LIC_FILES_CHKSUM defines the URI pointing to the license file in the source code as well as its checksum.

```
LIC_FILES_CHKSUM = "file://gpl.txt;md5=393a5ca..."  
LIC_FILES_CHKSUM = \  
    "file://main.c;beginline=3;endline=21;md5=58e..."  
LIC_FILES_CHKSUM = \  
    "file://${COMMON_LICENSE_DIR}/MIT;md5=083..."
```

- ▶ This allows to track any license update: if the license changes, the build will trigger a failure as the checksum won't be valid anymore.



- ▶ A recipe can have dependencies during the build or at runtime. To reflect these requirements in the recipe, two variables are used:
 - DEPENDS** List of the recipe build-time dependencies.
 - RDEPENDS** List of the package runtime dependencies. Must be package specific (e.g. with `_${PN}`).
- ▶ `DEPENDS = "recipe-b"`: the local `do_configure` task depends on the `do_populate_sysroot` task of recipe-b.
- ▶ `RDEPENDS_${PN} = "recipe-b"`: the local `do_build` task depends on the `do_package_write_<archive-format>` task of recipe b.



Dependencies 2/2

- ▶ Sometimes a recipe have dependencies on specific versions of another recipe.
- ▶ BitBake allows to reflect this by using:
 - DEPENDS = "recipe-b (>= 1.2)"
 - RDEPENDS_\${PN} = "recipe-b (>= 1.2)"
- ▶ The following operators are supported: =, >, <, >= and <=.
- ▶ A graphical tool can be used to explore dependencies or reverse dependencies:
 - `bitbake -g -u taskexp core-image-minimal`



Default tasks already exists, they are defined in classes:

- ▶ do_fetch
- ▶ do_unpack
- ▶ do_patch
- ▶ do_configure
- ▶ do_compile
- ▶ do_install
- ▶ do_package
- ▶ do_rootfs

You can get a list of existing tasks for a recipe with:

```
bitbake <recipe> -c listtasks
```



Writing tasks 1/2

- ▶ Functions use the sh shell syntax, with available OpenEmbedded variables and internal functions available.

WORKDIR the recipe's working directory

- S The directory where the source code is extracted
- B The directory where bitbake places the objects generated during the build
- D The destination directory (root directory of where the files are installed, before creating the image).

- ▶ Syntax of a task:

```
do_task() {  
    action0  
    action1  
    ...  
}
```



Writing tasks 2/2

► Example:

```
do_compile() {  
    oe_runmake  
}  
  
do_install() {  
    install -d ${D}${bindir}  
    install -m 0755 hello ${D}${bindir}  
}
```



Modifying existing tasks

Tasks can be extended with `_prepend` or `_append`

```
do_install_append() {
    install -d ${D}${sysconfdir}
    install -m 0644 hello.conf ${D}${sysconfdir}
}
```



Adding new tasks

Tasks can be added with addtask

```
do_mkimage () {  
    uboot-mkimage ...  
}
```

```
addtask do_mkimage after do_compile before do_install
```



Applying patches



Patches can be applied to resolve build-system problematics:

- ▶ To support old versions of a software: bug and security fixes.
- ▶ To fix cross-compilation issues.
 - In certain simple cases the `-e` option of `make` can be used.
 - The `-e` option gives variables taken from the environment precedence over variables from Makefiles.
 - Helps when an upstream Makefile uses hardcoded `CC` and/or `CFLAGS`.
- ▶ To apply patches before they get their way into the upstream version.



The source locations: patches

- ▶ Files ending in `.patch`, `.diff` or having the `apply=yes` parameter will be applied after the sources are retrieved and extracted, during the `do_patch` task.

```
SRC_URI += "file://joystick-support.patch \
            file://smp-fixes.diff \
            "
```

- ▶ Patches are applied in the order they are listed in `SRC_URI`.
- ▶ It is possible to select which tool will be used to apply the patches listed in `SRC_URI` variable with `PATCHTOOL`.
- ▶ By default, `PATCHTOOL = 'quilt'` in Poky.
- ▶ Possible values: `git`, `patch` and `quilt`.



- ▶ The `PATCHRESOLVE` variable defines how to handle conflicts when applying patches.
- ▶ It has two valid values:
 - `noop`: the build fails if a patch cannot be successfully applied.
 - `user`: a shell is launched to resolve manually the conflicts.
- ▶ By default, `PATCHRESOLVE = "noop"` in `meta-poky`.



Example of a recipe



Hello world recipe

```
DESCRIPTION = "Hello world program"
HOMEPAGE = "http://example.net/hello/"
PRIORITY = "optional"
SECTION = "examples"
LICENSE = "GPLv2"

SRC_URI = "git://git.example.com/hello;protocol=https"
SRCREV = "2d47b4eb66e705458a17622c2e09367300a7b118"
S = "${WORKDIR}/git"
LIC_FILES_CHKSUM = \
    "file://hello.c;beginline=3;endline=21;md5=58e..."
```

```
do_compile() {
    oe_runmake
}
do_install() {
    install -d ${D}${bindir}
    install -m 0755 hello ${D}${bindir}
}
```



Example of a recipe with a version agnostic part



```
SUMMARY = "GNU file archiving program"
HOMEPAGE = "https://www.gnu.org/software/tar/"
SECTION = "base"

SRC_URI = "${GNU_MIRROR}/tar/tar-${PV}.tar.bz2"

do_configure() { ... }

do_compile() { ... }

do_install() { ... }
```



```
require tar.inc

LICENSE = "GPLv2"
LIC_FILES_CHKSUM = \
    "file://COPYING;md5=59530bdf33659b29e73d4adb9f9f6552"

SRC_URI += "file://avoid_heap_overflow.patch"

SRC_URI[md5sum] = "c6c4f1c075dbf0f75c29737faa58f290"
```



tar_1.26.bb

```
require tar.inc

LICENSE = "GPLv3"
LIC_FILES_CHKSUM = \
    "file://COPYING;md5=d32239bcb673463ab874e80d47fae504"

SRC_URI[md5sum] = "2cee42a2ff4f1cd4f9298eeeb2264519"
```



Practical lab - Add a custom application



- ▶ Write a recipe for a custom application
- ▶ Integrate it in the image



Writing recipes - advanced

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!





Extending a recipe



Introduction to recipe extensions

- ▶ It is a good practice **not** to modify recipes available in Poky.
- ▶ But it is sometimes useful to modify an existing recipe, to apply a custom patch for example.
- ▶ The BitBake *build engine* allows to modify a recipe by extending it.
- ▶ Multiple extensions can be applied to a recipe.




Introduction to recipe extensions

- ▶ Metadata can be changed, added or appended.
- ▶ Tasks can be added or appended.
- ▶ Operators are used extensively, to add, append, prepend or assign values.



Extend a recipe

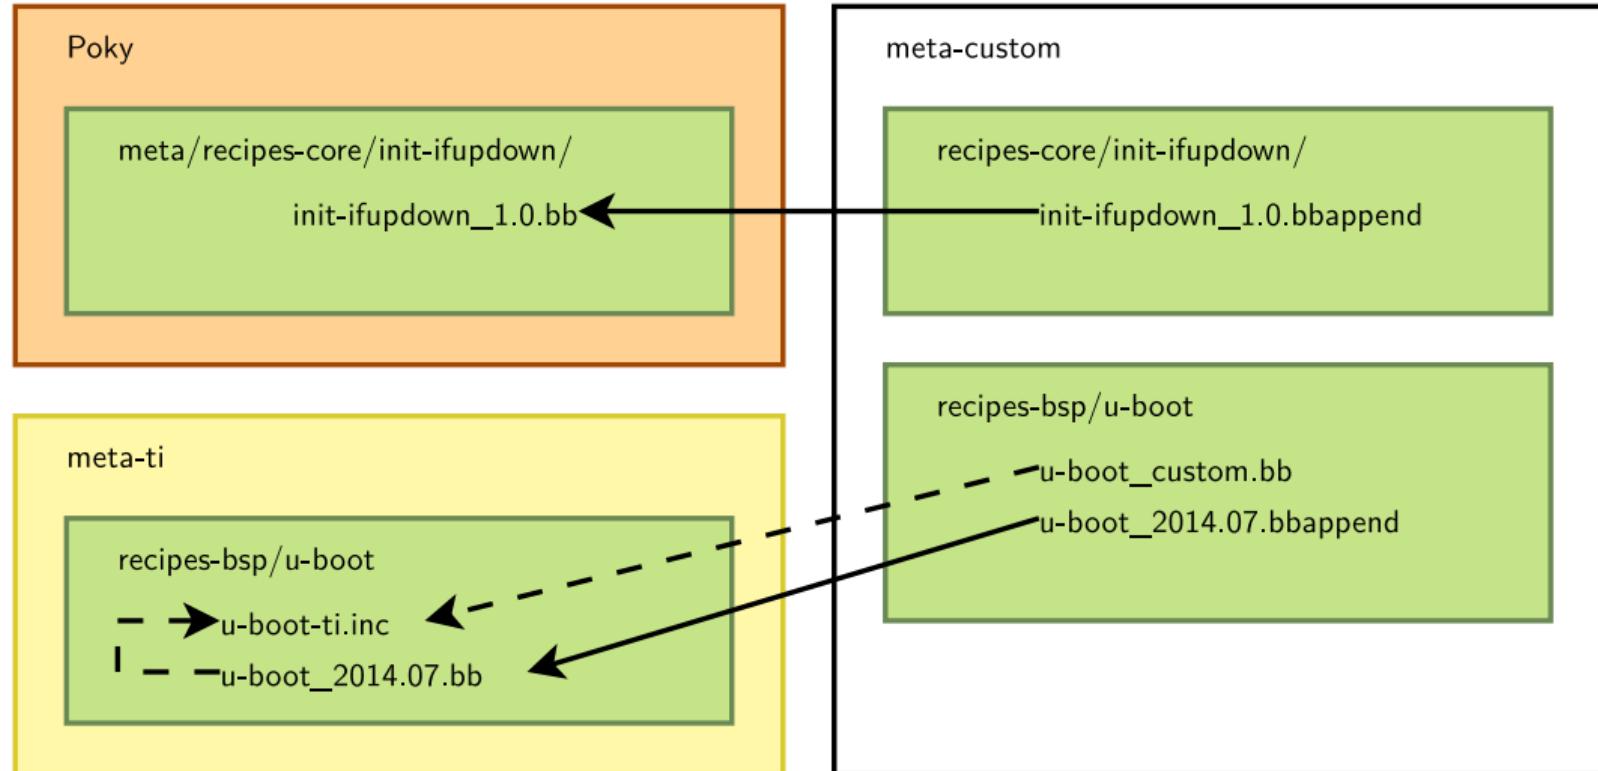



Extend a recipe

- ▶ The recipe extensions end in `.bbappend`
- ▶ Append files must have the same root name as the recipe they extend.
 - `example_0.1.bbappend` applies to `example_0.1.bb`
- ▶ Append files are **version specific**. If the recipe is updated to a newer version, the append files must also be updated.
- ▶ If adding new files, the path to their directory must be prepended to the `FILESEXTRAPATHS` variable.
 - Files are looked up in paths referenced in `FILESEXTRAPATHS`, from left to right.
 - Prepending a path makes sure it has priority over the recipe's one. This allows to override recipes' files.



Append file example



Hello world append file

```
FILESEXTRAPATHS_prepend := "${THISDIR}/files:"  
  
SRC_URI += "file://custom-modification-0.patch \  
           file://custom-modification-1.patch \  
           "
```



Advanced recipe configuration



- ▶ In the real world, more complex configurations are often needed because recipes may:
 - Provide virtual packages
 - Inherit generic functions from classes



Providing virtual packages

- ▶ BitBake allows to use virtual names instead of the actual package name. We saw a use case with *package variants*.
- ▶ The virtual name is specified through the `PROVIDES` variable.
- ▶ Several recipes can provide the same virtual name. Only one will be built and installed into the generated image.
- ▶ `PROVIDES = "virtual/kernel"`



Classes



Introduction to classes

- ▶ Classes provide an abstraction to common code, which can be re-used in multiple recipes.
- ▶ Common tasks do not have to be re-developed!
- ▶ Any metadata and task which can be put in a recipe can be used in a class.
- ▶ Classes extension is `.bbclass`
- ▶ Classes are located in the `classes` folder of a layer.
- ▶ Recipes can use this common code by inheriting a class:
 - `inherit <class>`



Common classes

► Common classes can be found in `meta/classes/`

- `base.bbclass`
- `kernel.bbclass`
- `autotools.bbclass`
- `autotools-brokensep.bbclass`
- `cmake.bbclass`
- `native.bbclass`
- `systemd.bbclass`
- `update-rc.d.bbclass`
- `useradd.bbclass`
- ...



The base class

- ▶ Every recipe inherits the base class automatically.
- ▶ Contains a set of basic common tasks to fetch, unpack or compile applications.
- ▶ Inherits other common classes, providing:
 - Mirrors definitions: DEBIAN_MIRROR, GNU_MIRROR, KERNELORG_MIRROR...
 - The ability to filter patches by SRC_URI
 - Some tasks: clean, listtasks or fetch.
- ▶ Defines oe_runmake, using EXTRA_OEMAKE to use custom arguments.



The kernel class

- ▶ Used to build Linux kernels.
- ▶ Defines tasks to configure, compile and install a kernel and its modules.
- ▶ The kernel is divided into several packages: kernel, kernel-base, kernel-dev, kernel-modules...
- ▶ Automatically provides the virtual package `virtual/kernel`.
- ▶ Configuration variables are available:
 - `KERNEL_IMAGETYPE`, defaults to `zImage`
 - `KERNEL_EXTRA_ARGS`
 - `INITRAMFS_IMAGE`



The autotools class

- ▶ Defines tasks and metadata to handle applications using the autotools build system (autoconf, automake and libtool):
 - `do_configure`: generates the configure script using `autoreconf` and loads it with standard arguments or cross-compilation.
 - `do_compile`: runs `make`
 - `do_install`: runs `make install`
- ▶ Extra configuration parameters can be passed with `EXTRA_OECONF`.
- ▶ Compilation flags can be added thanks to the `EXTRA_OEMAKE` variable.



Example: use the autotools class

```
DESCRIPTION = "Print a friendly, customizable greeting"
HOMEPAGE = "https://www.gnu.org/software/hello/"
PRIORITY = "optional"
SECTION = "examples"
LICENSE = "GPLv3"

SRC_URI = "${GNU_MIRROR}/hello/hello-${PV}.tar.gz"
SRC_URI[md5sum] = "67607d2616a0faaf5bc94c59dca7c3cb"
SRC_URI[sha256sum] = "ecbb7a2214196c57ff9340aa71458e1559abd38f6d8d169666846935df191ea7"
LIC_FILES_CHKSUM = "file://COPYING;md5=d32239bcb673463ab874e80d47fae504"

inherit autotools
```



The useradd class

- ▶ This class helps to add users to the resulting image.
- ▶ Adding custom users is required by many services to avoid running them as root.
- ▶ `USERADD_PACKAGES` must be defined when the `useradd` class is inherited. Defines the list of packages which needs the user.
- ▶ Users and groups will be created before the packages using it perform their `do_install`.
- ▶ At least one of the two following variables must be set:
 - `USERADD_PARAM`: parameters to pass to `useradd`.
 - `GROUPADD_PARAM`: parameters to pass to `groupadd`.



Example: use the useradd class

```
DESCRIPTION = "useradd class usage example"
PRIORITY = "optional"
SECTION = "examples"
LICENSE = "MIT"

SRC_URI = "file://file0"
LIC_FILES_CHKSUM = "file://${COREBASE}/meta/files/common-licenses/MIT;md5=0835ade698e0bc..."

inherit useradd

USERADD_PACKAGES = "${PN}"
USERADD_PARAM = "-u 1000 -d /home/user0 -s /bin/bash user0"

do_install() {
    install -m 644 file0 ${D}/home/user0/
    chown user0:user0 ${D}/home/user0/file0
}
```



Binary packages



Specifics for binary packages

- ▶ It is possible to install binaries into the generated root filesystem.
- ▶ Set the LICENSE to CLOSED.
- ▶ Use the do_install task to copy the binaries into the root file system.



BitBake file inclusions



Locate files in the build system

- ▶ Metadata can be shared using included files.
- ▶ BitBake uses the BBPATH to find the files to be included. It also looks into the current directory.
- ▶ Three keywords can be used to include files from recipes, classes or other configuration files:
 - inherit
 - include
 - require



The inherit keyword

- ▶ `inherit` can be used in recipes or classes, to inherit the functionalities of a class.
- ▶ To inherit the functionalities of the `kernel` class, use: `inherit kernel`
- ▶ `inherit` looks for files ending in `.bbclass`, in `classes` directories found in `BBPATH`.
- ▶ It is possible to include a class conditionally using a variable: `inherit ${FOO}`



The include and require keywords

- ▶ `include` and `require` can be used in all files, to insert the content of another file at that location.
- ▶ If the path specified on the `include` (or `require`) path is relative, BitBake will insert the first file found in `BBPATH`.
- ▶ `include` does not produce an error when a file cannot be found, whereas `require` raises a parsing error.
- ▶ To include a local file: `include ninvaders.inc`
- ▶ To include a file from another location (which could be in another layer):
`include path/to/file.inc`



Debugging recipes



Debugging recipes

- ▶ For each task, logs are available in the temp directory in the work folder of a recipe. This includes both the actual tasks code that ran and the output of the task.
- ▶ bitbake can dump the whole environment, including the variable values and how they were set:

```
$ bitbake -e ninvaders
# $DEPENDS [4 operations]
#   set /yocto-labs/poky/meta/conf/bitbake.conf:268
#     ""
#   set /yocto-labs/poky/meta/conf/documentation.conf:130
#     [doc] "Lists a recipe's build-time dependencies (i.e. other recipe files)."
#   _prepend /yocto-training/yocto-labs/poky/meta/classes/base.bbclass:74
#     "${BASEDEPENDS} "
#   set /yocto-labs/meta-bootlinlabs/recipes-games/ninvaders/ninvaders.inc:11
#     "ncurses"
# pre-expansion value:
#   "${BASEDEPENDS} ncurses"
DEPENDS="virtual/arm-poky-linux-gnueabi-gcc virtual/arm-poky-linux-gnueabi-compilerlibs virtual/libc ncurses"
```



- ▶ A development shell, exporting the full environment can be used to debug build failures:

```
$ bitbake -c devshell <recipe>
```

- ▶ To understand what a change in a recipe implies, you can activate build history in local.conf:

```
INHERIT += "buildhistory"  
BUILDHISTORY_COMMIT = "1"
```

Then use the buildhistory-diff tool to examine differences between two builds.

- ./scripts/buildhistory-diff



Network usage



Source fetching

- ▶ BitBake will look for files to retrieve at the following locations, in order:
 1. `DL_DIR` (the local download directory).
 2. The `PREMIRRORS` locations.
 3. The upstream source, as defined in `SRC_URI`.
 4. The `MIRRORS` locations.
- ▶ If all the mirrors fail, the build will fail.



Mirror configuration in Poky

```
PREMIRRORS ??= "\n
bzr://.*.* http://downloads.yoctoproject.org/mirror/sources/ \n \
cvs://.*.* http://downloads.yoctoproject.org/mirror/sources/ \n \
git://.*.* http://downloads.yoctoproject.org/mirror/sources/ \n \
hg://.*.* http://downloads.yoctoproject.org/mirror/sources/ \n \
osc://.*.* http://downloads.yoctoproject.org/mirror/sources/ \n \
p4://.*.* http://downloads.yoctoproject.org/mirror/sources/ \n \
svk://.*.* http://downloads.yoctoproject.org/mirror/sources/ \n \
svn://.*.* http://downloads.yoctoproject.org/mirror/sources/ \n"

MIRRORS += "\n
ftp://.*.* http://downloads.yoctoproject.org/mirror/sources/ \n \
http://.*.* http://downloads.yoctoproject.org/mirror/sources/ \n \
https://.*.* http://downloads.yoctoproject.org/mirror/sources/ \n"
```



Configuring the mirrors

- ▶ It's possible to prepend custom mirrors, using the PREMIRRORS variable:

```
PREMIRRORS_prepend = "\n" +\n    "git://.* http://www.yoctoproject.org/sources/\n" +\n    "ftp://.* http://www.yoctoproject.org/sources/\n" +\n    "http://.* http://www.yoctoproject.org/sources/\n" +\n    "https://.* http://www.yoctoproject.org/sources/\n"
```

- ▶ Another solution is to use the own-mirrors class:

```
INHERIT += "own-mirrors"\nSOURCE_MIRROR_URL = "http://example.com/my-source-mirror"
```



Forbidding network access

- ▶ You can use `BB_GENERATE_MIRROR_TARBALLS = "1"` to generate tarballs of the git repositories in `DL_DIR`
- ▶ You can also completely disable network access using `BB_NO_NETWORK = "1"`
- ▶ Or restrict BitBake to only download files from the PREMIRRORS, using `BB_FETCH_PREMIRRORONLY = "1"`




Layers

Layers

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!

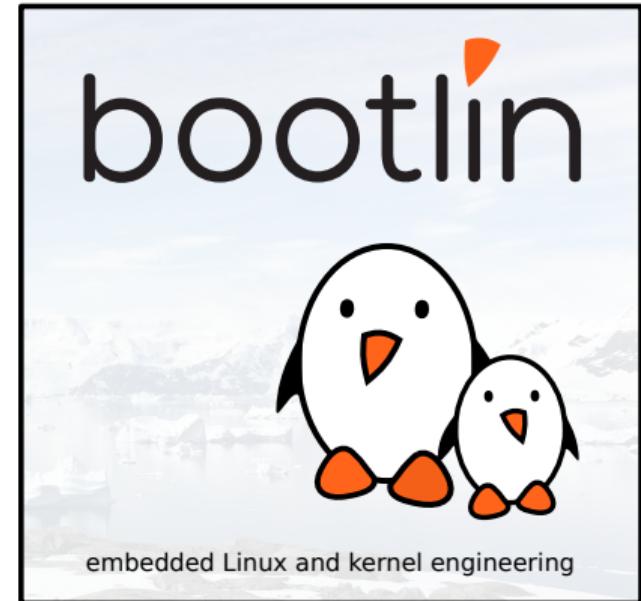



Introduction to layers




Layers' principles

- ▶ The OpenEmbedded *build system* manipulates *metadata*.
- ▶ Layers allow to isolate and organize the metadata.
 - A layer is a collection of recipes.
- ▶ It is a good practice to begin a layer name with the prefix `meta-`.



Layers in Poky

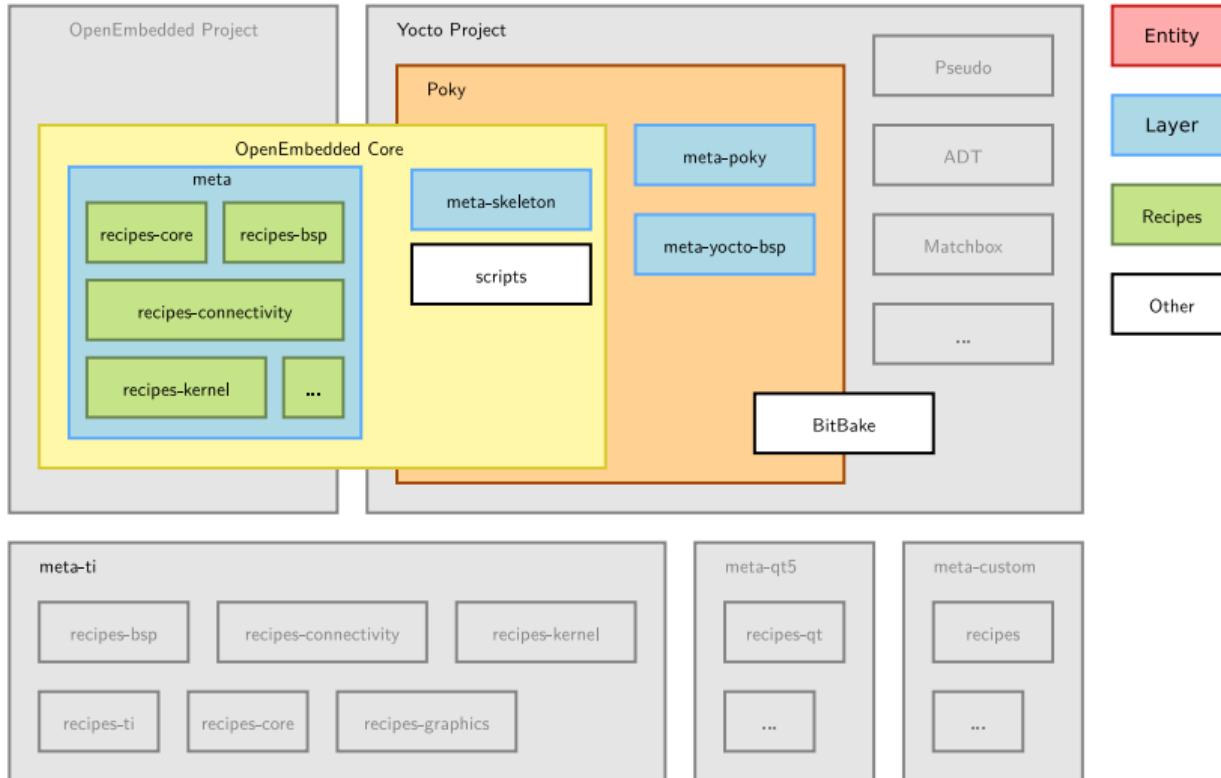




- ▶ The Poky *reference system* is a set of basic common layers:
 - meta
 - meta-skeleton
 - meta-poky
 - meta-yocto-bsp
- ▶ Poky is not a final set of layers. It is the common base.
- ▶ Layers are added when needed.
- ▶ When making modifications to the existing recipes or when adding new ones, it is a good practice not to modify Poky. Instead you can create your own layers!



Third party layers

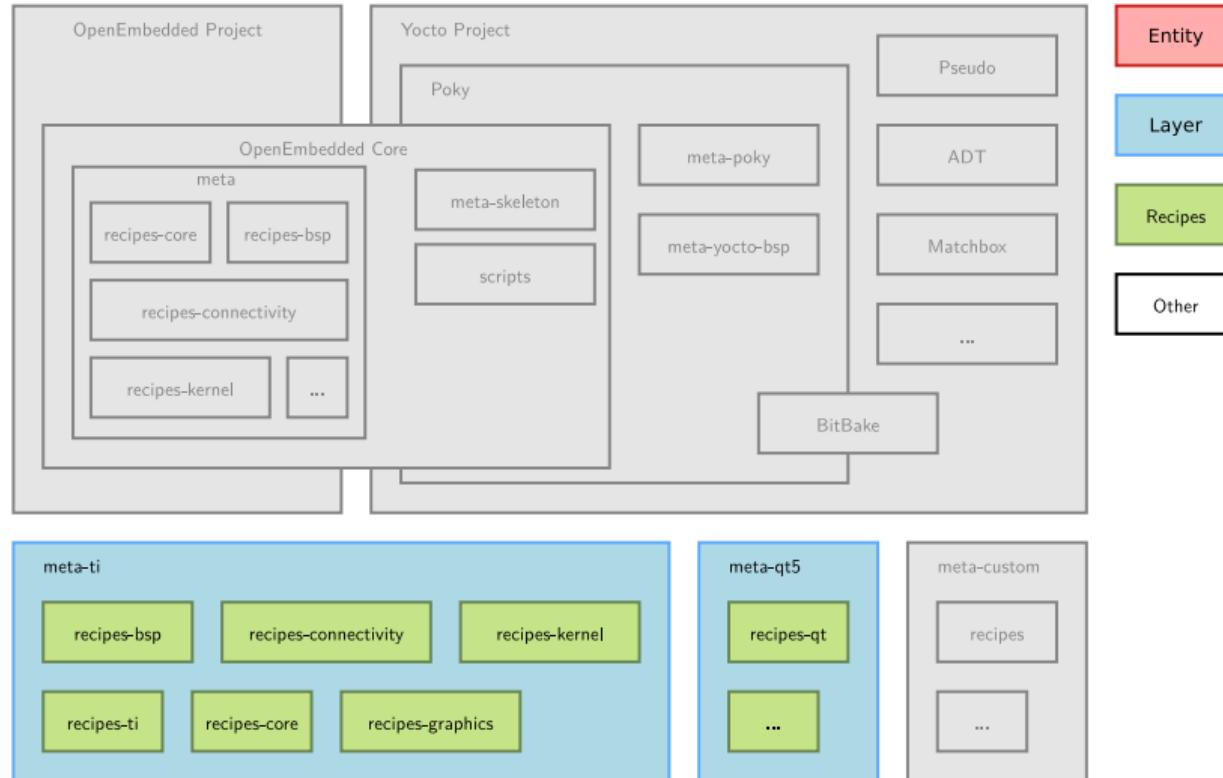



Integrate and use a layer 1/3

- ▶ A list of existing and maintained layers can be found at
<https://layers.openembedded.org/layerindex/branch/master/layers/>
- ▶ Instead of redeveloping layers, always check the work hasn't been done by others.
- ▶ It takes less time to download a layer providing a package you need and to add an append file if some modifications are needed than to do it from scratch.



Integrate and use a layer 2/3

- ▶ The location where a layer is saved on the disk doesn't matter.
 - But a good practice is to save it where all others layers are stored.
- ▶ The only requirement is to let BitBake know about the new layer:
 - The list of layers BitBake uses is defined in `$BUILDDIR/conf/bblayers.conf`
 - To include a new layer, add its absolute path to the `BBLAYERS` variable.
 - BitBake parses each layer specified in `BBLAYERS` and adds the recipes, configurations files and classes it contains.



Integrate and use a layer 3/3

- ▶ The `bitbake-layers` tool is provided alongside `bitbake`.
- ▶ It can be used to inspect the layers and to manage
`$BUILDDIR/conf/bblayers.conf`:
 - `bitbake-layers show-layers`
 - `bitbake-layers add-layer meta-custom`
 - `bitbake-layers remove-layer meta-qt5`



Some useful layers

- ▶ Many SoC specific layers are available, providing support for the boards using these SoCs. Some examples: `meta-ti`, `meta-freescale` and `meta-raspberrypi`.
- ▶ Other layers offer to support applications not available in the Poky reference system:
 - `meta-browser`: web browsers (Chromium, Firefox).
 - `meta-filesystems`: support for additional filesystems.
 - `meta-gstreamer10`: support for GStreamer 1.0.
 - `meta-java` and `meta-oracle-java`: Java support.
 - `meta-linaro-toolchain`: Linaro toolchain recipes.
 - `meta-qt5`: QT5 modules.
 - `meta-realtime`: real time tools and test programs.
 - `meta-telephony` and many more...


Notice that some of these layers do not come with all the Yocto branches. The `meta-browser` did not have a `krogoth` branch, for example.



Creating a layer



Custom layer

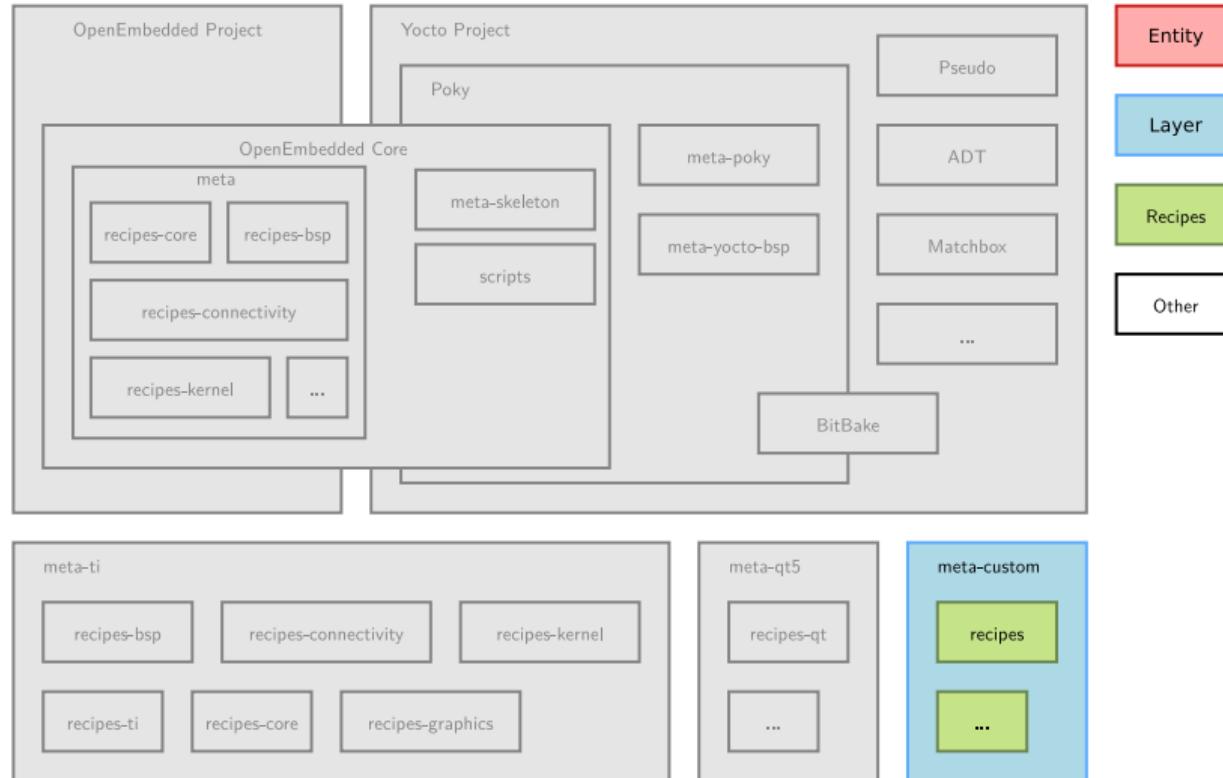



Create a custom layer 1/2

- ▶ A layer is a set of files and directories and can be created by hand.
- ▶ However, the `bitbake-layers create-layer` command helps us create new layers and ensures this is done right.
- ▶ `bitbake-layers create-layer -p <PRIORITY> <layer>`
- ▶ The **priority** is used to elect which recipe to use when multiple layers contains the same recipe
- ▶ The recipe priority takes precedence over the version number ordering



Create a custom layer 2/2

- ▶ The layer created will be pre-filled with the following files:
 - `conf/layer.conf` The layer's configuration. Holds its priority and generic information. No need to modify it in many cases.
 - `COPYING.MIT` The license under which a layer is released. By default MIT.
 - `README` A basic description of the layer. Contains a contact e-mail to update.
- ▶ By default, all metadata matching `./recipes-*/*/*.bb` will be parsed by the BitBake *build engine*.



Use a layer: best practices

- ▶ Do not copy and modify existing recipes from other layers. Instead use append files.
- ▶ Avoid duplicating files. Use append files or explicitly use a path relative to other layers.
- ▶ Save the layer alongside other layers, in `OEROOT`.
- ▶ Use `LAYERDEPENDS` to explicitly define layer dependencies.
- ▶ Use `LAYERSERIES_COMPAT` to define the Yocto version(s) with which the layer is compatible.



Practical lab - Create a custom layer



- ▶ Create a layer from scratch
- ▶ Add recipes to the new layer
- ▶ Integrate it to the build



Practical lab - Extend a recipe



- ▶ Apply patches to an existing recipe
- ▶ Use a custom configuration file for an existing recipe
- ▶ Extend a recipe to fit your needs




BSP Layers

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!

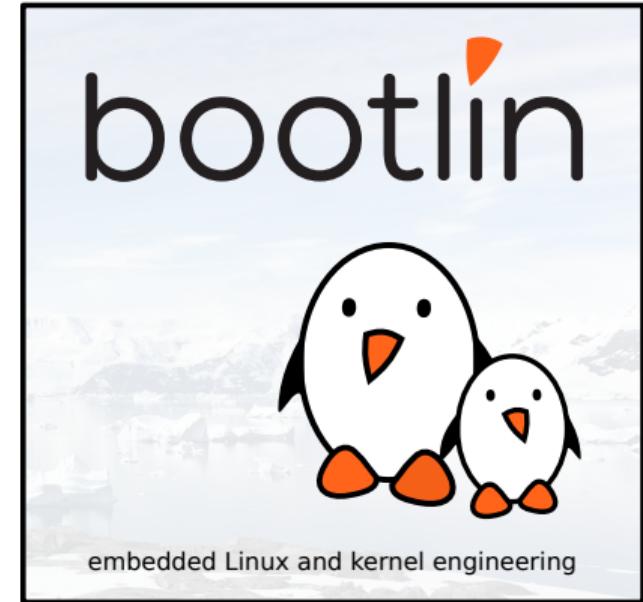




Introduction to BSP layers in the Yocto Project



BSP layers

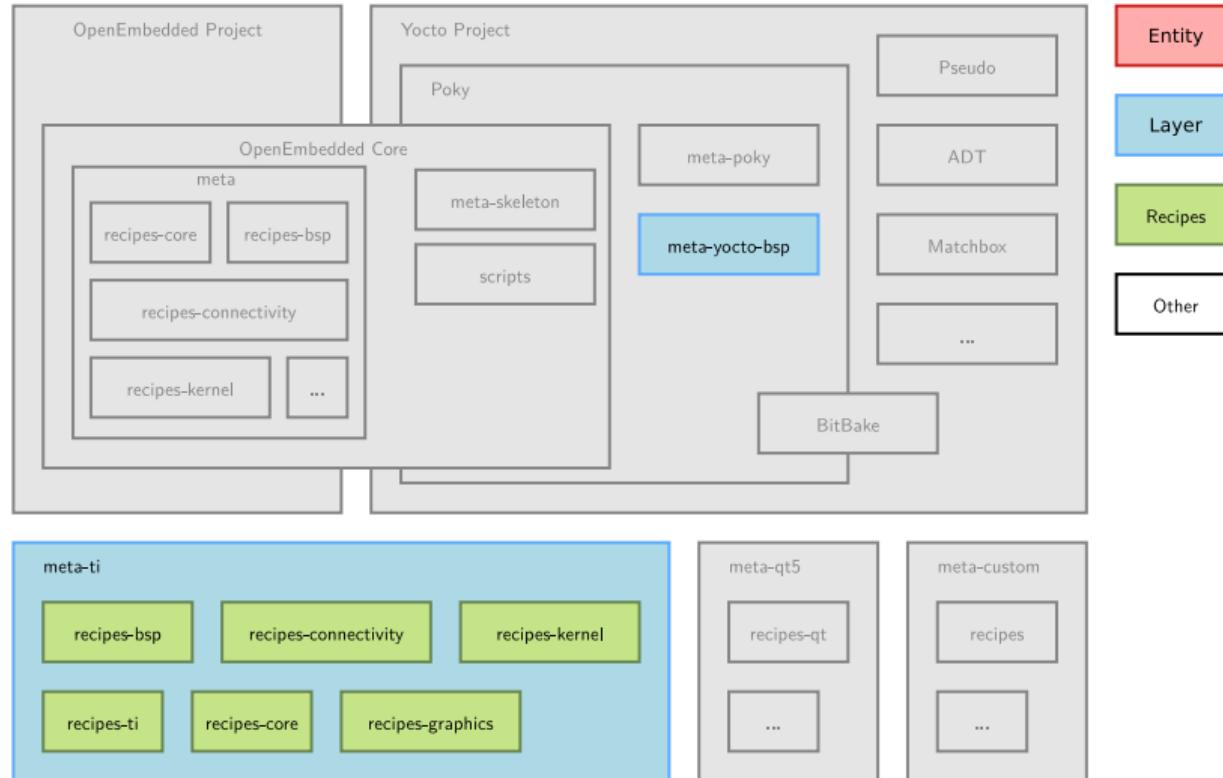



Overview

- ▶ BSP layers are device specific layers. They hold metadata with the purpose of supporting specific hardware devices.
- ▶ BSP layers describe the hardware features and often provide a custom kernel and bootloader with the required modules and drivers.
- ▶ BSP layers can also provide additional software, designed to take advantage of the hardware features.
- ▶ As a layer, it is integrated into the build system as we previously saw.
- ▶ A good practice is to name it `meta-<bsp_name>`.



BSP layers Specifics

- ▶ BSP layers are a subset of the layers.
- ▶ In addition to package recipes and build tasks, they often provide:
 - Hardware configuration files (machines).
 - Bootloader, kernel and display support and configuration.
 - Pre-built user binaries.



Hardware configuration files



- ▶ A layer provides one machine file (hardware configuration file) per machine it supports.
- ▶ These configuration files are stored under
meta-<bsp_name>/conf/machine/*.conf
- ▶ The file names correspond to the values set in the MACHINE configuration variable.
 - meta-ti/conf/machine/beaglebone.conf
 - MACHINE = "beaglebone"
- ▶ Each machine should be described in the README file of the BSP.



- ▶ The hardware configuration file contains configuration variables related to the architecture and to the machine features.
- ▶ Some other variables help customize the kernel image or the filesystems used.



TARGET_ARCH The architecture of the device being built.

PREFERRED_PROVIDER_virtual/kernel The default kernel.

MACHINE_FEATURES List of hardware features provided by the machine, e.g.
usbgadget usbhost screen wifi

SERIAL_CONSOLES Speed and device for the serial console to attach. Used to
configure getty, e.g. 115200;ttyS0

KERNEL_IMAGETYPE The type of kernel image to build, e.g. zImage



- ▶ Lists the hardware features provided by the machine.
- ▶ These features are used by package recipes to enable or disable functionalities.
- ▶ Some packages are automatically added to the resulting root filesystem depending on the feature list.
- ▶ The feature `bluetooth`:
 - Asks the `bluez` daemon to be built and added to the image.
 - Enables bluetooth support in ConnMan.



```
# Common definitions for cfa-10036 boards
include conf/machine/include/imx-base.inc
include conf/machine/include/tune-arm926ejs.inc

SOC_FAMILY = "mxs:mx28:cfa10036"

PREFERRED_PROVIDER_virtual/kernel ?= "linux-cfa"
PREFERRED_PROVIDER_virtual/bootloader ?= "barebox"
IMAGE_BOOTLOADER = "barebox"
BAREBOX_BINARY = "barebox"
IMAGE_FSTYPES_mxs = "tar.bz2 barebox.mxsboot-sdcard sdcard.gz"
IMXBOOTLETS_MACHINE = "cfa10036"

KERNEL_IMAGETYPE = "zImage"
KERNEL_DEVICETREE = "imx28-cfa10036.dtb"
# we need the kernel to be installed in the final image
IMAGE_INSTALL_append = " kernel-image kernel-devicetree"
SDCARD_ROOTFS ?= "${DEPLOY_DIR_IMAGE}/${IMAGE_NAME}.rootfs.ext3"
SERIAL_CONSOLE = "115200 ttyAMA0"
MACHINE_FEATURES = "usbgadget usbhost vfat"
```



```
#@TYPE: Machine
#@NAME: Crystalfontz CFA-10057
#@SOC: i.MX28
#@DESCRIPTION: Machine configuration for CFA-10057, also called CFA-920
#@MAINTAINER: Alexandre Belloni <alexandre.belloni@bootlin.com>

include conf/machine/include/cfa10036.inc

KERNEL_DEVICETREE += "imx28-cfa10057.dtb"

MACHINE_FEATURES += "touchscreen"
```



Bootloader



Default bootloader 1/2

- ▶ By default the bootloader used is the mainline version of U-Boot, with a fixed version (per Poky release).
- ▶ All the magic is done in `meta/recipes-bsp/u-boot/u-boot.inc`
- ▶ Some configuration variables used by the U-Boot recipe can be customized, in the machine file.



SPL_BINARY If an SPL is built, describes the name of the output binary. Defaults to an empty string.

UBOOT_SUFFIX bin (default) or img.

UBOOT_MACHINE The target used to build the configuration.

UBOOT_ENTRYPOINT The bootloader entry point.

UBOOT_LOADADDRESS The bootloader load address.

UBOOT_MAKE_TARGET Make target when building the bootloader. Defaults to all.



Customize the bootloader

- ▶ It is possible to support a custom U-Boot by creating an extended recipe and to append extra metadata to the original one.
- ▶ This works well when using a mainline version of U-Boot.
- ▶ Otherwise it is possible to create a custom recipe.
 - Try to still use `meta/recipes-bsp/u-boot/u-boot.inc`



Kernel



- ▶ There are basically two ways of compiling a kernel in the Yocto Project:
 - By using the `linux-yocto` packages, provided in Poky.
 - By using a fully custom kernel recipe.
- ▶ The kernel used is selected in the machine file thanks to:
`PREFERRED_PROVIDER_virtual/kernel`
- ▶ Its version is defined with: `PREFERRED_VERSION_<kernel_provider>`



- ▶ linux-yocto is a generic set of recipes for building mainline Linux kernel images.
- ▶ PREFERRED_PROVIDER_virtual/kernel = "linux-yocto"
- ▶ PREFERRED_VERSION_linux-yocto = "5.14%"



- ▶ Like other appended recipes, patches can be added by filling `SRC_URI` with `.patch` and/or `.diff` files.
- ▶ The kernel configuration must also be provided, and the file containing it must be called `defconfig`.
 - This can be generated from a Linux source tree, by using `make savedefconfig`
 - The configuration can be split in several files, by using the `.cfg` extension. It is the best practice when adding new features:

```
SRC_URI += "file://defconfig      \
            file://nand-support.cfg \
            file://ethernet-support.cfg"
```



- ▶ Configuration fragments can be generated directly with the `bitbake` command:
 1. Configure the kernel following its recipe instructions:
`bitbake -c kernel_configme linux-yocto`
 2. Edit the configuration: `bitbake -c menuconfig linux-yocto`
 3. Save the configuration differences: `bitbake -c diffconfig linux-yocto`
 - The differences will be saved at `$WORKDIR/fragment.cfg`
- ▶ After integrating configuration fragments into the appended recipe, you can check everything is fine by running:
`bitbake -c kernel_configcheck -f linux-yocto`



- ▶ Another way of configuring `linux-yocto` is by using *Advanced Metadata*.
- ▶ It is a powerful way of splitting the configuration and the patches into several pieces.
- ▶ It is designed to provide a very configurable kernel.
- ▶ The full documentation can be found at
<https://docs.yoctoproject.org/kernel-dev/advanced.html#working-with-advanced-metadata-yocto-kernel-cache>



- ▶ Kernel Metadata is a way to organize and to split the kernel configuration and patches in little pieces each providing support for one feature.
- ▶ Two main configuration variables help taking advantage of this:
LINUX_KERNEL_TYPE standard (default), tiny or preempt-rt
 - standard: generic Linux kernel policy.
 - tiny: bare minimum configuration, for small kernels.
 - preempt-rt: applies the PREEMPT_RT patch.

KERNEL_FEATURES List of features to enable. Features are sets of patches and configuration fragments.



- ▶ Kernel Metadata can be stored in the `linux-yocto` recipe space.
- ▶ It must be under `$FILESEXTRAPATHS`. A best practice is to follow this directory hierarchy:

```
bsp/  
cfg/  
features/  
ktypes/  
patches/
```

- ▶ Kernel Metadata are divided into 3 file types:
 - Description files, ending in `.scc`
 - Configuration fragments
 - Patches



Linux Yocto: Kernel Metadata 3/4

- ▶ Kernel Metadata description files have their own syntax, used to describe the feature provided and which patches and configuration fragments to use.
- ▶ Simple example, features/smp.scc

```
define KFEATURE_DESCRIPTION "Enable SMP"
```

```
kconf hardware smp.cfg  
patch smp-support.patch
```

- ▶ To integrate the feature into the kernel image:
`KERNEL_FEATURES += "features/smp.scc"`



► .scc syntax description:

branch <ref> Create a new branch relative to the current one.

define Defines variables.

include <scc file> Include another description file. Parsed inline.

kconf [hardware|non-hardware] <cfg file> Queues a configuration
fragment, to merge it into Linux's .config

git merge <branch> Merge branch into the current git branch.

patch <patch file> Applies patch file to the current git branch.



Practical lab - Create a custom machine configuration



- ▶ Write a machine configuration
- ▶ Understand how the target architecture is chosen




Distro Layers

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!

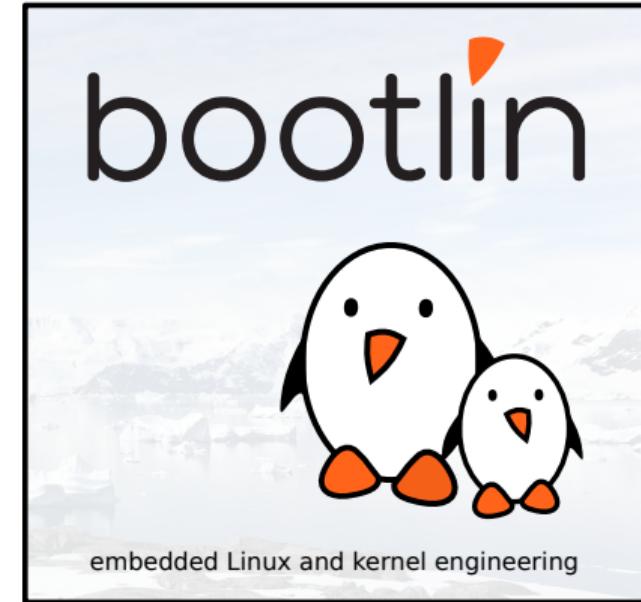




Distro Layers



Distro layers

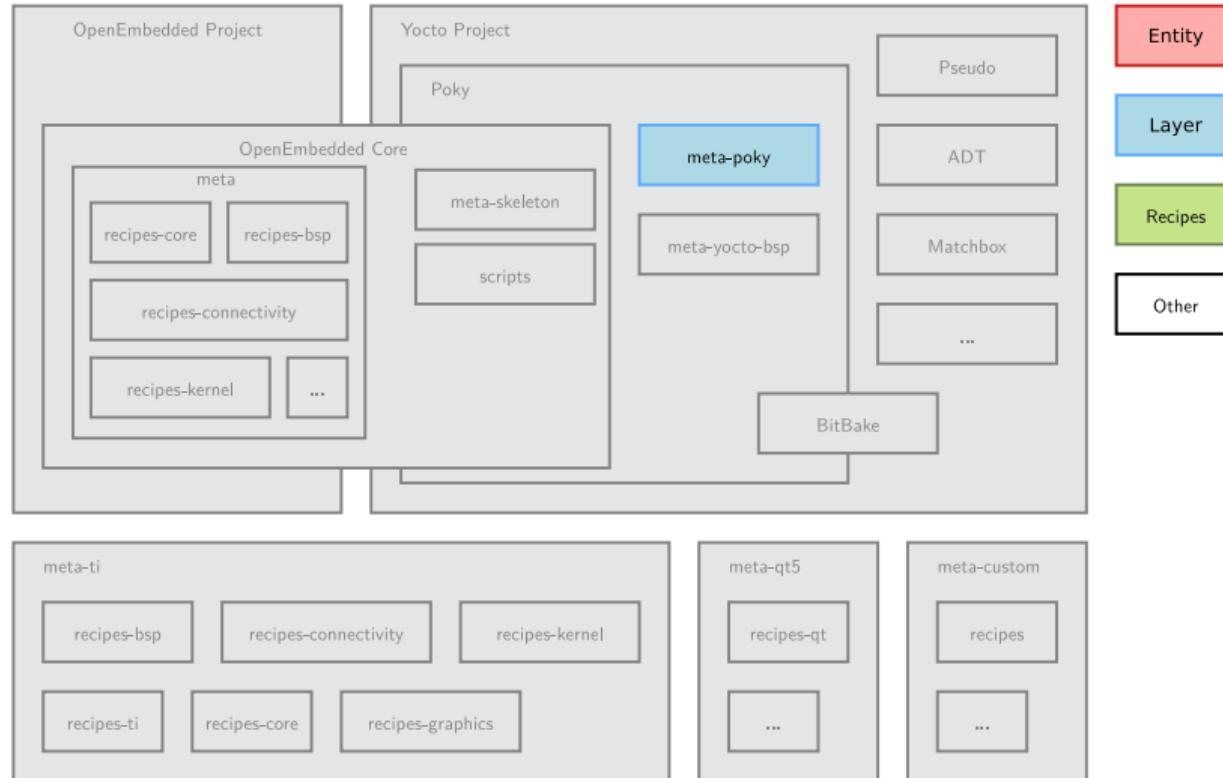



Distro layers

- ▶ You can create a new distribution by using a Distro layer.
- ▶ This allows to change the defaults that are used by Poky.
- ▶ It is useful to distribute changes that have been made in local.conf



- ▶ A distro layer is used to provide policy configurations for a custom distribution.
- ▶ It is a best practice to separate the distro layer from the custom layers you may create and use.
- ▶ It often contains:
 - Configuration files.
 - Specific classes.
 - Distribution specific recipes: initialization scripts, splash screen...



Creating a Distro layer

- ▶ The configuration file for the distro layer is `conf/distro/<distro>.conf`
- ▶ This file must define the `DISTRO` variable.
- ▶ It is possible to inherit configuration from an existing distro layer.
- ▶ You can also use all the `DISTRO_*` variables.
- ▶ Use `DISTRO = "<distro>"` in `local.conf` to use your distro configuration.

```
require conf/distro/poky.conf

DISTRO = "distro"
DISTRO_NAME = "distro description"
DISTRO_VERSION = "1.0"

MAINTAINER = "..."
```



- ▶ Lists the features the distribution will provide.
- ▶ As for `MACHINE_FEATURES`, this is used by package recipes to enable or disable functionalities.
- ▶ `COMBINED_FEATURES` provides the list of features that are enabled in both `MACHINE_FEATURES` and `DISTRO_FEATURES`.



Toolchain selection

- ▶ The toolchain selection is controlled by the TCMODE variable.
- ▶ It defaults to "default".
- ▶ The `conf/distro/include/tcmode-${TCMODE}.inc` file is included.
 - This configures the toolchain to use by defining preferred providers and versions for recipes such as `gcc`, `binutils`, `*libc`...
- ▶ The providers' recipes define how to compile or/and install the toolchain.
- ▶ Toolchains can be built by the build system or external.



Sample files

- ▶ A distro layer often contains sample files, used as templates to build key configurations files.
- ▶ Example of sample files:
 - `bblayers.conf.sample`
 - `local.conf.sample`
- ▶ In Poky, they are in `meta-poky/conf/`.
- ▶ The `TEMPLATECONF` variable controls where to find the samples.
- ▶ It is set in `${OEROOT}/.templateconf`.



Release management



Release management

There are multiple tasks that OE/bitbake based projects let you do on your own to ensure build reproducibility:

- ▶ Code distribution and project setup.
- ▶ Release tagging

A separate tool is needed for that, usual solutions are:

- ▶ combo-layer, as done by Poky:
<https://wiki.yoctoproject.org/wiki/Combo-layer>
- ▶ git submodules + setup script. Great example in YOE:
<https://github.com/YoeDistro/yoe-distro>
- ▶ repo and templateconf or setup script
- ▶ kas



Distribute the distribution

- ▶ A good way to distribute a distribution (Poky, custom layers, BSP, .templateconf...) is to use Google's repo.
- ▶ Repo is used in Android to distribute its source code, which is split into many git repositories. It's a wrapper to handle several git repositories at once.
- ▶ The only requirement is to use git.
- ▶ The repo configuration is stored in manifest file, usually available in its own git repository.
- ▶ It could also be in a specific branch of your custom layer.
- ▶ It only handles fetching code, handling local.conf and bblayers.conf is done separately



Manifest example

```
<?xml version="1.0" encoding="UTF-8"?>
<manifest>
    <remote name="yocto-project" fetch="git.yoctoproject.org" />
    <remote name="private" fetch="git.example.net" />

    <default revision="dunfell" remote="private" />

    <project name="poky" remote="yocto-project" />
    <project name="meta-ti" remote="yocto-project" />
    <project name="meta-custom" />
    <project name="meta-custom-bsp" />
    <project path="meta-custom-distro" name="distro">
        <copyfile src="templateconf" dest="poky/.templateconf" />
    </project>
</manifest>
```



Retrieve the project using repo

```
$ mkdir my-project; cd my-project  
$ repo init -u https://git.example.net/manifest.git  
$ repo sync -j4
```

- ▶ repo init uses the default.xml manifest in the repository, unless specified otherwise.
- ▶ You can see the full repo documentation at <https://source.android.com/source/using-repo.html>.



To tag a release, a few steps have to be taken:

- ▶ Optionally tag the custom layers
- ▶ For each project entry in the manifest, set the revision parameter to either a tag or a commit hash.
- ▶ Commit and tag this version of the manifest.



- ▶ Specific tool developed by Siemens for OpenEmbedded:
<https://github.com/siemens/kas>
- ▶ Will fetch layers and build the image in a single command
- ▶ Uses a single JSON or YAML configuration file part of the custom layer
- ▶ Can generate and run inside a Docker container
- ▶ Can setup `local.conf` and `bblayers.conf`



kas configuration

```
header:  
    version: 8  
machine: mymachine  
distro: mydistro  
target:  
    - myimage  
  
repos:  
    meta-custom:  
  
    bitbake:  
        url: "https://git.openembedded.org/bitbake"  
        refspec: "1.46"  
        layers:  
            .: excluded  
  
    openembedded-core:  
        url: "https://git.openembedded.org/openembedded-core"  
        refspec: dunfell  
        layers:  
            meta:
```



kas configuration

```
meta-freescale:  
    url: "https://github.com/Freescale/meta-freescale"  
    refspec: dunfell  
  
meta-openembedded:  
    url: https://git.openembedded.org/meta-openembedded  
    refspec: dunfell  
    layers:  
        meta-oe:  
        meta-python:  
        meta-networking:
```

- ▶ Then a single command will build all the listed target for the machine:

```
$ kas build meta-custom/mymachine.yaml
```

- ▶ Or, alternatively, invoke bitbake commands:

```
$ kas shell /path/to/kas-project.yml -c 'bitbake dosfsutils-native'
```




Images

Images

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!

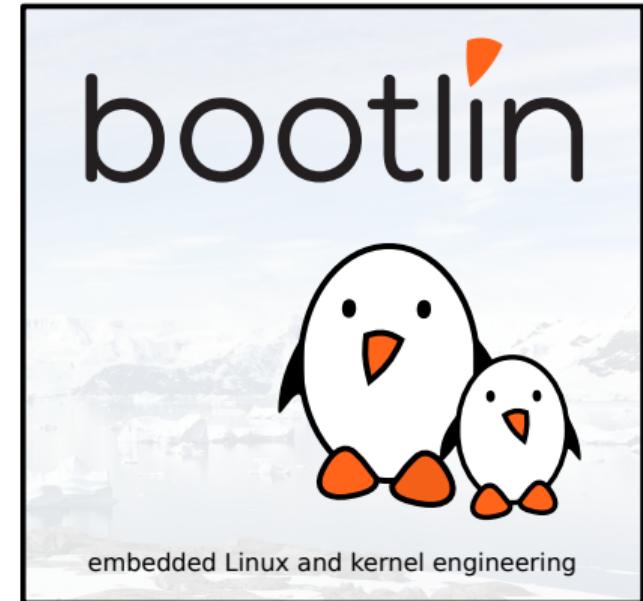



Introduction to images



- ▶ An `image` is the top level recipe and is used alongside the `machine` definition.
- ▶ Whereas the `machine` describes the hardware used and its capabilities, the `image` is architecture agnostic and defines how the root filesystem is built, with what packages.
- ▶ By default, several images are provided in Poky:
 - `meta*/recipes*/images/*.bb`



- ▶ Common images are:

`core-image-base` Console-only image, with full support of the hardware.

`core-image-minimal` Small image, capable of booting a device.

`core-image-minimal-dev` Small image with extra tools, suitable for development.

`core-image-x11` Image with basic X11 support.

`core-image-rt` `core-image-minimal` with real time tools and test suite.



- ▶ An `image` is no more than a recipe.
- ▶ It has a description, a license and inherits the `core-image` class.



Organization of an image recipe

- ▶ Some special configuration variables are used to describe an image:
 - IMAGE_BASENAME** The name of the output image files. Defaults to \${PN}.
 - IMAGE_INSTALL** List of packages and package groups to install in the generated image.
 - IMAGE_ROOTFS_SIZE** The final root filesystem size.
 - IMAGE_FEATURES** List of features to enable in the image.
 - IMAGE_FSTYPES** List of formats the OpenEmbedded build system will use to create images.
 - IMAGE_LINGUAS** List of the locales to be supported in the image.
 - IMAGE_PKGTYPE** Package type used by the build system. One of deb, rpm, ipk and tar.
 - IMAGE_POSTPROCESS_COMMAND** Shell commands to run at post process.



Example of an image

```
require recipes-core/images/core-image-minimal.bb

DESCRIPTION = "Example image"

IMAGE_INSTALL += "ninvaders"

LICENSE = "MIT"
```



Image types



- ▶ Configures the resulting root filesystem image format.
- ▶ If more than one format is specified, one image per format will be generated.
- ▶ Image formats instructions are delivered in Poky, thanks to
`meta/classes/image_types.bbclass`
- ▶ Common image formats are: ext2, ext3, ext4, squashfs, squashfs-xz, cpio, jffs2, ubifs, tar.bz2, tar.gz...



Creating an image type

- ▶ If you have a particular layout on your storage (for example bootloader location on an SD card), you may want to create your own image type.
- ▶ This is done through a class that inherits from `image_types`.
- ▶ It has to define a function named `IMAGE_CMD_<type>`.
- ▶ Append it to `IMAGE_TYPES`



Creating an image conversion type

- ▶ Common conversion types are: gz, bz2, sha256sum, bmap...
- ▶ This is done through a class that inherits from `image_types`.
- ▶ It has to define a function named `CONVERSION_CMD_<type>`.
- ▶ Append it to `CONVERSIONTYPES`
- ▶ Append valid combinations to `IMAGE_TYPES`



- ▶ wic is a tool that can create a flashable image from the compiled packages and artifacts.
- ▶ It can create partitions.
- ▶ It can select which files are located in which partition through the use of plugins.
- ▶ The final image layout is described in a .wks or .wks.in file.
- ▶ It can be extended in any layer.
- ▶ Usage example:

```
WKS_FILE = "imx-uboot-custom.wks.in"
IMAGE_FSTYPES = "wic.bmap wic"
```



```
part u-boot --source rawcopy --sourceparams="file=imx-boot" --ondisk sda --no-table --align ${IMX_BOOT_SEEK}  
part /boot --source bootimg-partition --ondisk sda --fstype=vfat --label boot --active --align 8192 --size 64  
part / --source rootfs --ondisk sda --fstype=ext4 --label root --exclude-path=home/ --exclude-path=opt/ --align 8192  
part /home --source rootfs --rootfs-dir=${IMAGE_ROOTFS}/home --ondisk sda --fstype=ext4 --label home --align 8192  
part /opt --source rootfs --rootfs-dir=${IMAGE_ROOTFS}/opt --ondisk sda --fstype=ext4 --label opt --align 8192  
  
bootloader --ptable msdos
```

- ▶ Copies imx-boot from \$DEPLOY_DIR in the image, aligned on (and so at that offset) \${IMX_BOOT_SEEK}.
- ▶ Creates a first partition, formatted in FAT32, with the files listed in the IMAGE_BOOT_FILES variable.
- ▶ Creates an ext4 partition with the contents on the root filesystem, excluding the content of /home and /opt
- ▶ Creates two ext4 partitions, one with the content of /home, the other one with the content of /opt, from the image root filesystem.



Package groups



Overview

- ▶ Package groups are a way to group packages by functionality or common purpose.
- ▶ Package groups are used in image recipes to help building the list of packages to install.
- ▶ They can be found under `meta*/recipes-core/packagegroups/`
- ▶ A package group is yet another recipe.
- ▶ The prefix `packagegroup-` is always used.
- ▶ Be careful about the `PACKAGE_ARCH` value:
 - Set to the value `all` by default,
 - Must be explicitly set to `$(MACHINE_ARCH)` when there is a machine dependency.



Common package groups

- ▶ packagegroup-core-boot
- ▶ packagegroup-core-buildessential
- ▶ packagegroup-core-nfs-client
- ▶ packagegroup-core-nfs-server
- ▶ packagegroup-core-tools-debug
- ▶ packagegroup-core-tools-profile



Example

```
./meta/recipes-core/packagegroups/packagegroup-core-tools-debug.bb:
```

```
SUMMARY = "Debugging tools"
```

```
LICENSE = "MIT"
```

```
inherit packagegroup
```

```
RDEPENDS_${PN} = "\\"
```

```
gdb \
```

```
gdbserver \
```

```
strace"
```



Practical lab - Create a custom image



- ▶ Write an image recipe
- ▶ Choose the packages to install




Licensing

Licensing

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!

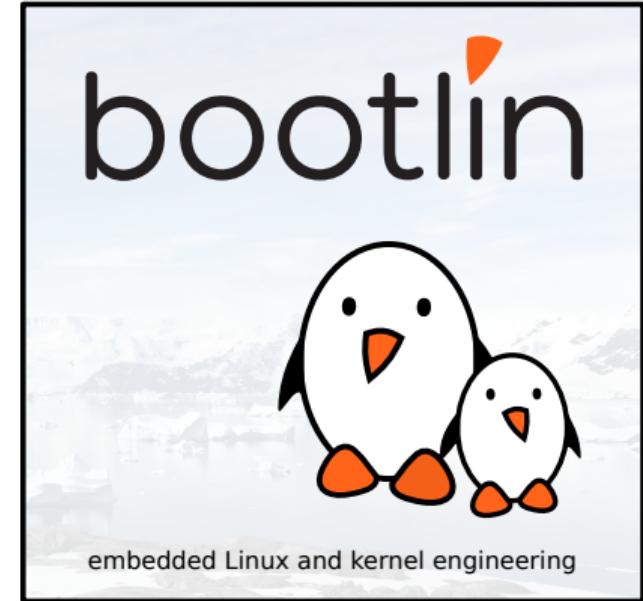



Managing licenses



Tracking license changes

- ▶ The license of an external project may change at some point.
- ▶ The `LIC_FILES_CHKSUM` tracks changes in the license files.
- ▶ If the license's checksum changes, the build will fail.
 - The recipe needs to be updated.

```
LIC_FILES_CHKSUM = "  
    file://COPYING;md5=...  
    file://src/file.c;beginline=3;endline=21;md5=..."
```

- ▶ `LIC_FILES_CHKSUM` is mandatory in every recipe, unless `LICENSE` is set to `CLOSED`.



Package exclusion

- ▶ We may not want some packages due to their licenses.
- ▶ To exclude a specific license, use `INCOMPATIBLE_LICENSE`
- ▶ To exclude all GPLv3 packages:

```
INCOMPATIBLE_LICENSE = "GPLv3"
```

- ▶ License names are the ones used in the `LICENSE` variable.
- ▶ The `meta-gplv2` layer provides recipes for software where upstream has moved to GPLv3 licenses.



Commercial licenses

- ▶ By default the build system does not include commercial components.
- ▶ Packages with a commercial component define:

```
LICENSE_FLAGS = "commercial"
```

- ▶ To build a package with a commercial component, the package must be in the LICENSE_FLAGS_WHITELIST variable.
- ▶ Example, gst-plugins-ugly:

```
LICENSE_FLAGS_WHITELIST = "commercial_gst-plugins-ugly"
```



Listing licenses

OpenEmbedded will generate a manifest of all the licenses of the software present on the target image in \$BUILDDIR/tmp/deploy/licenses/<image>/license.manifest

```
PACKAGE NAME: busybox
PACKAGE VERSION: 1.31.1
RECIPE NAME: busybox
LICENSE: GPLv2 & bzip2-1.0.6
```

```
PACKAGE NAME: dropbear
PACKAGE VERSION: 2019.78
RECIPE NAME: dropbear
LICENSE: MIT & BSD-3-Clause & BSD-2-Clause & PD
```



Providing license text

To include the license text in the root filesystem either:

- ▶ Use `COPY_LIC_DIRS = "1"` and `COPY_LIC_MANIFEST = "1"`
- ▶ or use `LICENSE_CREATE_PACKAGE = "1"` to generate packages including the license and install the required license packages.



Providing sources

OpenEmbedded provides the archiver class to generate tarballs of the source code:

- ▶ Use `INHERIT += "archiver"`
- ▶ Set the `ARCHIVER_MODE` variable, the default is to provide patched sources. To provide configured sources:

```
ARCHIVER_MODE[src] = "configured"
```




Writing recipes - going further

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!

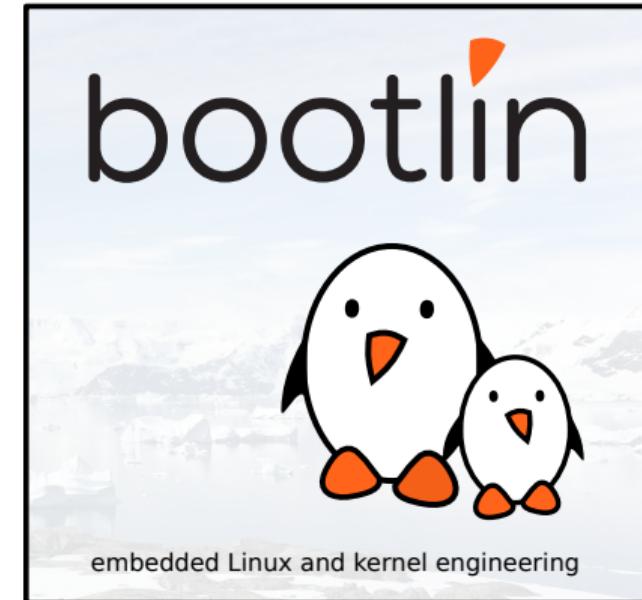



Packages features



Benefits

- ▶ Features can be built depending on the needs.
- ▶ This allows to avoid compiling all features in a software component when only a few are required.
- ▶ A good example is ConnMan: Bluetooth support is built only if there is Bluetooth on the target.
- ▶ The `PACKAGECONFIG` variable is used to configure the build on a per feature granularity, for packages.



- ▶ PACKAGECONFIG takes the list of features to enable.
- ▶ PACKAGECONFIG[feature] takes up to six arguments, separated by commas:
 1. Argument used by the configuration task if the feature is enabled (`EXTRA_OECONF`).
 2. Argument added to `EXTRA_OECONF` if the feature is disabled.
 3. Additional build dependency (`DEPENDS`), if enabled.
 4. Additional runtime dependency (`RDEPENDS`), if enabled.
 5. Additional runtime recommendations (`RRECOMMENDS`), if enabled.
 6. Any conflicting PACKAGECONFIG settings for this feature.
- ▶ Unused arguments can be omitted or left blank.



Example: from ConnMan

```
PACKAGECONFIG ??= "wifi openvpn"

PACKAGECONFIG[wifi] = "--enable-wifi,  
                      --disable-wifi,  
                      wpa-supplicant,  
                      wpa-supplicant"  
PACKAGECONFIG[bluez] = "--enable-bluetooth,  
                      --disable-bluetooth,  
                      bluez5,  
                      bluez5"  
PACKAGECONFIG[openvpn] = "--enable-openvpn,  
                        --disable-openvpn,  
                        ,  
                        openvpn"
```



Conditional features



Conditional features

- ▶ Some values can be set dynamically, thanks to a set of functions:
- ▶ `bb.utils.contains(variable, checkval, trueval, falseval, d)`: if `checkval` is found in `variable`, `trueval` is returned; otherwise `falseval` is used.
- ▶ `bb.utils.filter(variable, checkvalues, d)`: returns all the words in the `variable` that are present in the `checkvalues`.
- ▶ Example:

```
PACKAGECONFIG ??= "wispr iptables client\
    ${@bb.utils.filter('DISTRO_FEATURES', '3g systemd wifi', d)} \
    ${@bb.utils.contains('DISTRO_FEATURES', 'bluetooth', 'bluez', '', d)} \
"
```



Python tasks



Tasks in Python

- ▶ Tasks can be written in Python when using the keyword `python`.
- ▶ The `d` variable is accessible, and represents the BitBake datastore (where variables are stored).
- ▶ Two modules are automatically imported:
 - `bb`: to access BitBake's internal functions.
 - `os`: Python's operating system interfaces.
- ▶ You can import other modules using the keyword `import`.
- ▶ Anonymous Python functions are executed during parsing.



Accessing the datastore with Python

- ▶ The `d` variable is accessible within Python tasks.

`d.getVar("X", expand=False)` Returns the value of X.

`d.setVar("X", "value")` Set X.

`d.appendVar("X", "value")` Append value to X.

`d.prependVar("X", "value")` Prepend value to X.

`d.expand(expression)` Expand variables in expression.



Python task example

```
# Anonymous function
python __anonymous() {
    if d.getVar("FOO", True) == "example":
        d.setVar("BAR", "Hello, World.")
}

# Task
python do_settime() {
    import time

    d.setVar("TIME", time.strftime('%Y%m%d', time.gmtime()))
}
```



Variable flags



Variable flags

- ▶ *Variable flags* are used to store extra information on tasks and variables.
- ▶ They are used to control task functionalities.
- ▶ A number of these flags are already used by BitBake:
 - `dirs`: directories that should be created before the task runs. The last one becomes the work directory for the task.
 - `noexec`: disable the execution of the task.
 - `nostamp`: do not create a *stamp* file when running the task. The task will always be executed.
 - `doc`: task documentation displayed by *listtasks*.

```
do_settime[noexec] = "1"
do_compile[nostamp] = "1"
do_settime[doc] = "Set the current time in ${TIME}"
```



Root filesystem creation



Files and directories selection

- ▶ The FILES variable controls the list of files and directories to be placed into packages.
- ▶ It must be package specific (e.g. with `_${PN}`).
- ▶ In Poky, defaults to:

```
FILES_${PN} = \
    "${bindir}/* ${sbindir}/* ${libexecdir}/* ${libdir}/lib*${SOLIBS} \
    ${sysconfdir} ${sharedstatedir} ${localstatedir} \
    ${base_bindir}/* ${base_sbindir}/* \
    ${base_libdir}/*${SOLIBS} \
    ${base_prefix}/lib/udev/rules.d ${prefix}/lib/udev/rules.d \
    ${datadir}/${BPN} ${libdir}/${BPN}/* \
    ${datadir}/pixmaps ${datadir}/applications \
    ${datadir}/idl ${datadir}/omf ${datadir}/sounds \
    ${libdir}/bonobo/servers"
```

- ▶ To prevent configuration files to be overwritten during the Package Management System update process, use CONFFILES.



- ▶ Image generation overview:
 1. The rootfs is created using packages.
 2. One or more images files are created, depending on the `IMAGE_FSTYPES` value.
- ▶ The rootfs creation is specific to the `IMAGE_PKGTYPE` value. It should be defined in the image recipe, otherwise the first valid package type defined in `PACKAGE_CLASSES` is used.
- ▶ All the magic is done in `meta/classes/rootfs_${IMAGE_PKGTYPE}.bbclass`



Example: rootfs creation with .deb packages

```
rootfs_deb_do_rootfs () {  
    [...]  
  
    export INSTALL_ROOTFS_DEB="${IMAGE_ROOTFS}"  
  
    [...]  
  
    apt update  
    apt ${APT_ARGS} install ${package_to_install} \  
        --force-yes --allow-unauthenticated  
  
    [...]  
}
```



Splitting packages



Benefits

- ▶ Packages can be split.
- ▶ Useful when a single remote repository provides multiple binaries or libraries.
- ▶ The list of packages to provide is defined by the `PACKAGES` variable.
- ▶ The `FILES` variable is often used to split the output into packages.
- ▶ `PACKAGE_BEFORE_PN` allows to pick files normally included in the default package in another.
- ▶ `PACKAGES_DYNAMIC` allows to check dependencies with optional packages are satisfied.
- ▶ `ALLOW_EMPTY` allows to produce a package even if it is empty.



Example

- The kexec tools provides kexec and kdump:

```
require kexec-tools.inc
export LDFLAGS = "-L${STAGING_LIBDIR}"
EXTRA_OECONF = " --with-zlib=yes"

SRC_URI[md5sum] = \
    "b9f2a3ba0ba9c78625ee7a50532500d8"
SRC_URI[sha256sum] = "..."

PACKAGES += "kexec kdump"

FILES_kexec = "${sbindir}/kexec"
FILES_kdump = "${sbindir}/kdump"
```



Default packages

- ▶ By default several packages are produced automatically:

```
PACKAGES = "${PN}-src ${PN}-dbg ${PN}-staticdev ${PN}-dev \
${PN}-doc ${PN}-locale ${PACKAGE_BEFORE_PN} ${PN}"
```

- ▶ For each of these packages a FILES variable is defined in meta/conf/bitbake.conf:

```
FILES_${PN}-dev = \
"${includedir} ${FILESSOLIBSDEV} ${libdir}/*.la \
${libdir}/*.o ${libdir}/pkgconfig ${datadir}/pkgconfig \
${datadir}/aclocal ${base_libdir}/*.o \
${libdir}/${BPN}/*.la ${base_libdir}/*.la \
${libdir}/cmake ${datadir}/cmake"
FILES_${PN}-dbg = \
"/usr/lib/debug /usr/lib/debug-static \
/usr/src/debug"
```



Inspecting packages

oe-pkgdata-util is a tool that can help inspecting packages:

- ▶ Which package is shipping a file:

```
$ oe-pkgdata-util find-path /bin/busybox  
busybox: /bin/busybox
```

- ▶ Which files are shipped by a package:

```
$ oe-pkgdata-util list-pkg-files busybox  
busybox:  
  /bin/busybox  
  /bin/busybox.nosuid  
  /bin/busybox.suid  
  /bin/sh
```

- ▶ Which recipe is creating a package:

```
$ oe-pkgdata-util lookup-recipe kdump  
kexec-tools  
$ oe-pkgdata-util lookup-recipe libtinfo5  
ncurses
```



Application development workflow

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!





Recommended workflows

- ▶ Different development workflows are possible given the needs:
 - Low-level application development (bootloader, kernel).
 - Application development.
 - Temporary modifications on an external project (bug fixes, security fixes).
- ▶ Three workflows exists for theses needs: the `SDK`, `devtool` and `quilt`.



The Yocto Project SDK



- ▶ An SDK (Software Development Kit) is a set of tools allowing the development of applications for a given target (operating system, platform, environment...).
- ▶ It generally provides a set of tools including:
 - Compilers or cross-compilers.
 - Linkers.
 - Library headers.
 - Debuggers.
 - Custom utilities.



- ▶ The Poky reference system is used to generate images, by building many applications and doing a lot of configuration work.
 - When developing an application, we only care about the application itself.
 - We want to be able to develop, test and debug easily.
- ▶ The Yocto Project SDK is an application development SDK, which can be generated to provide a full environment compatible with the target.
- ▶ It includes a toolchain, libraries headers and all the needed tools.
- ▶ This SDK can be installed on any computer and is self-contained. The presence of Poky is not required for the SDK to fully work.



Available SDKs

- ▶ Two different SDKs can be generated:
 - A generic SDK, including:
 - A toolchain.
 - Common tools.
 - A collection of basic libraries.
 - An image-based SDK, including:
 - The generic SDK.
 - The sysroot matching the target root filesystem.
 - Its toolchain is self-contained (linked to an SDK embedded libc).
- ▶ The SDKs generated with Poky are distributed in the form of a shell script.
- ▶ Executing this script extracts the tools and sets up the environment.



The generic SDK

- ▶ Mainly used for low-level development, where only the toolchain is needed:
 - Bootloader development.
 - Kernel development.
- ▶ The recipe `meta-toolchain` generates this SDK:
 - `bitbake meta-toolchain`
- ▶ The generated script, containing all the tools for this SDK, is in:
 - `$BUILDDIR/tmp/deploy/sdk`
 - Example:
`poky-glibc-x86_64-meta-toolchain-cortexa8hf-neon-toolchain-2.5.sh`
- ▶ The SDK will be configured to be compatible with the specified MACHINE.



The image-based SDK

- ▶ Used to develop applications running on the target.
- ▶ One task is dedicated to the process. The task behavior can vary between the images.
 - populate_sdk
- ▶ To generate an SDK for core-image-minimal:
 - bitbake -c populate_sdk core-image-minimal
- ▶ The generated script, containing all the tools for this SDK, is in:
 - \$BUILDDIR/tmp/deploy/sdk
 - Example:
poky-glibc-x86_64-core-image-minimal-cortexa8hf-neon-toolchain-2.5.sh
- ▶ The SDK will be configured to be compatible with the specified MACHINE.



- ▶ Both SDKs are distributed as bash scripts.
- ▶ These scripts self extract themselves to install the toolchains and the files they provide.
- ▶ To install an SDK, retrieve the generated script and execute it.
 - The script asks where to install the SDK. Defaults to `/opt/poky/<version>`
 - Example: `/opt/poky/2.5`

```
$ ./poky-glibc-x86_64-meta-toolchain-cortexa8hf-neon-toolchain-2.5.sh
Poky (Yocto Project Reference Distro) SDK installer version 2.5
=====
Enter target directory for SDK (default: /opt/poky/2.5):
You are about to install the SDK to "/opt/poky/2.5". Proceed[Y/n]?
Extracting SDK.....done
Setting it up...done
SDK has been successfully set up and is ready to be used.
Each time you wish to use the SDK in a new shell session, you need to source
the environment setup script e.g.
$ . /opt/poky/2.5/environment-setup-cortexa8hf-neon-poky-linux-gnueabi
```



- ▶ To use the SDK, a script is available to set up the environment:

```
$ cd /opt/poky/2.5  
$ source ./environment-setup-cortexa8hf-neon-poky-linux-gnueabi
```

- ▶ The PATH is updated to take into account the binaries installed alongside the SDK.
- ▶ Environment variables are exported to help using the tools.



`environment-setup-cortexa8hf-neon-poky-linux-gnueabi` Exports environment variables.

`site-config-cortexa8hf-neon-poky-linux-gnueabi` Variables used during the toolchain creation

`sysroots` SDK binaries, headers and libraries. Contains one directory for the host and one for the target.

`version-cortexa8hf-neon-poky-linux-gnueabi` Version information.



SDK environment variables

CC Full path to the C compiler binary.

CFLAGS C flags, used by the C compiler.

CXX C++ compiler.

CXXFLAGS C++ flags, used by CPP

LD Linker.

LDFLAGS Link flags, used by the linker.

ARCH For kernel compilation.

CROSS_COMPILE For kernel compilation.

GDB SDK GNU Debugger.

OBJDUMP SDK objdump.

- ▶ To see the full list, open the environment script.



Examples

- ▶ To build an application for the target:

```
$ $CC -o example example.c
```

- ▶ The `LDFLAGS` variable is set to be used with the C compiler (`gcc`).
 - When building the Linux kernel, unset this variable.

```
$ unset LDFLAGS  
$ make menuconfig  
$ make
```



Devtool



Overview

- ▶ `Devtool` is a set of utilities to ease the integration and the development of OpenEmbedded recipes.
- ▶ It can be used to:
 - Generate a recipe for a given upstream application.
 - Modify an existing recipe and its associated sources.
 - Upgrade an existing recipe to use a newer upstream application.
- ▶ `Devtool` adds a new layer, automatically managed, in `$BUILDDIR/workspace/`.
- ▶ It then adds or appends recipes to this layer so that the recipes point to a local path for their sources. In `$BUILDDIR/workspace/sources/`.
 - Local sources are managed by git.
 - All modifications made locally should be committed.



There are three ways of creating a new devtool project:

- ▶ To create a new recipe: `devtool add <recipe> <fetchuri>`
 - Where `recipe` is the recipe's name.
 - `fetchuri` can be a local path or a remote *uri*.
- ▶ To modify the source for an existing recipe: `devtool modify <recipe>`
- ▶ To upgrade a given recipe: `devtool upgrade -V <version> <recipe>`
 - Where `version` is the new version of the upstream application.



Once a devtool project is started, commands can be issued:

- ▶ `devtool edit-recipe <recipe>`: edit recipe in a text editor (as defined by the `EDITOR` environment variable).
- ▶ `devtool build <recipe>`: build the given recipe.
- ▶ `devtool build-image <image>`: build image with the additional devtool recipes' packages.



- ▶ `devtool deploy-target <recipe> <target>`: upload the recipe's packages on target, which is a live running target with an SSH server running (`user@address`).
- ▶ `devtool update-recipe <recipe>`: generate patches from git commits made locally.
- ▶ `devtool reset <recipe>`: remove recipe from the control of devtool. Standard layers and remote sources are used again as usual.



Quilt



Overview

- ▶ Quilt is a utility to manage patches which can be used without having a clean source tree.
- ▶ It can be used to create patches for recipes already available in the build system.
- ▶ Be careful when using this workflow: the modifications won't persist across builds!



Using Quilt

1. Find the recipe working directory in `$BUILDDIR/tmp/work/`.
2. Create a new Quilt patch: `$ quilt new topic.patch`
3. Add files to this patch: `$ quilt add file0.c file1.c`
4. Make the modifications by editing the files.
5. Test the modifications: `$ bitbake -c compile -f recipe`
6. Generate the patch file: `$ quilt refresh`
7. Move the generated patch into the recipe's directory.



Practical lab - Create and use a Poky SDK



- ▶ Generate an SDK
- ▶ Compile an application for the target in the SDK




Runtime Package Management

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!

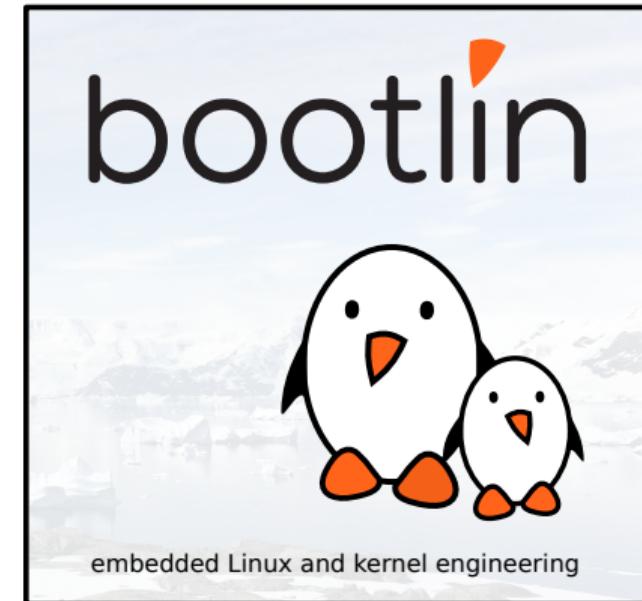



Introduction

- ▶ BitBake always builds packages selected in `IMAGE_INSTALL`.
- ▶ The packages are used to generate the root filesystem.
- ▶ It is also possible to update the system at runtime using these packages, for many use cases:
 - In-field security updates.
 - System updates over the wire.
 - System, packages or configuration customization at runtime.
 - Remote debugging.
- ▶ Using the Runtime Package Management is an optional feature.
- ▶ We'll use the IPK package format as an example in the following slides.



- ▶ First of all, you need a server to serve the packages to a private subnet or over the Internet. Packages are typically served over https or http.
- ▶ Specific tools are also required on the target, and must be shipped on the product. They should be included into the images generated by the build system.
- ▶ These tools will be specific to the package type used.
 - This is similar to Linux distributions: Debian is using .deb related tools (dpkg, apt...) while Fedora uses .rpm related ones (rpm, dnf).



Build configuration



Build configuration 1/2

- ▶ The PACKAGE_CLASSES variable controls which package format to use. More than one can be used.
- ▶ Valid values are package_rpm, package_deb, package_ipk.
- ▶ By default Poky uses the RPM format, while OpenEmbedded-Core uses the IPK one.
- ▶ Example:
 - PACKAGE_CLASSES = "package_ipk"
 - PACKAGE_CLASSES = "package_rpm package_deb"



To install the required tools on the target, there are two possible solutions:

- ▶ By adding package-management to the images features.
 - The required tool will be installed on the target.
 - The package database corresponding to the build will be installed as well.
- ▶ Or by manually adding the required tools in IMAGE_INSTALL. For example, to use the IPK format we need opkg.



Build considerations

- ▶ The Runtime Package Management uses package databases to store information about available packages and their version.
- ▶ Whenever a build generates a new package or modifies an existing one, the package database must be updated.
- ▶ `$ bitbake package-index`
- ▶ Be careful: BitBake does not properly schedule the `package-index` target. You must use this target alone to have a consistent package database.
 - `$ bitbake ninvaders package-index` won't necessarily generate an updated package database.



Package server configuration



Apache2 example setup

Apache2 HTTP setup for IPK packages. This should go in
/etc/apache2/sites-enabled/package-server.conf.

```
<VirtualHost *:80>
    ServerName packages.example.net

    DocumentRoot /path/to/build/tmp/deploy/ipk
    <Directory /path/to/build/tmp/deploy/ipk>
        Options +Indexes
        Options Indexes FollowSymLinks
        Order allow,deny
        allow from all
        AllowOverride None
        Require all granted
    </Directory>
</VirtualHost>
```



Target configuration



The IPK runtime management software

- ▶ The IPK runtime management software is `opkg`.
- ▶ It can be configured using configurations files ending in `.conf` in `/etc/opkg/`.
- ▶ This configuration helps `opkg` to find the package databases you want to use.
- ▶ For example, with our previously configured package server:

```
src/gz all http://packages.example.net/all
src/gz armv7a http://packages.example.net/armv7a
src/gz beaglebone http://packages.example.net/beaglebone
```

- ▶ This can be automatically generated by defining the `PACKAGE_FEED_URIS`, `PACKAGE_FEED_BASE_PATHS` and `PACKAGE_FEED_ARCHS` variables



- ▶ `opkg update`: fetch and update the package databases, from the remote package servers.
- ▶ `opkg list`: list available packages.
- ▶ `opkg upgrade`: upgrade all installed packages.
- ▶ `opkg upgrade <package>`: upgrade one package explicitly.
- ▶ `opkg install <package>`: install a specific package.



- ▶ To avoid upgrade issues when downloading packages from a remote package server using an unstable connection, you can first download the packages and then proceed with the upgrade.
- ▶ To do this we must use a cache, which can be defined in the `opkg` configuration with: `option cache /tmp/opkg-cache`.

```
# opkg update  
# opkg --download-only upgrade  
# opkg upgrade
```



Yocto Project Resources

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!






- ▶ <https://docs.yoctoproject.org/>
- ▶ Wiki: https://wiki.yoctoproject.org/wiki/Main_Page
- ▶ <https://layers.openembedded.org/>



Useful Reading (1)

Embedded Linux Development with Yocto Project - Second Edition, Nov 2017

- ▶ <https://www.packtpub.com/virtualization-and-cloud/embedded-linux-development-using-yocto-projects-second-edition>
- ▶ By Otavio Salvador and Daiane Angolini
- ▶ From basic to advanced usage, helps writing better, more flexible recipes. A good reference to jumpstart your Yocto Project development.

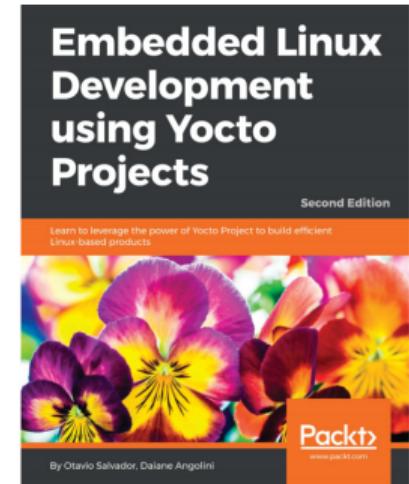



Useful Reading (2)

Embedded Linux Projects Using Yocto Project Cookbook - Second Edition, January 2018

- ▶ <https://www.packtpub.com/virtualization-and-cloud/embedded-linux-development-using-yocto-project-cookbook-second-edition>
- ▶ By Alex González
- ▶ A set of recipes that you can refer to and solve your immediate problems instead of reading it from cover to cover.

See our review: <https://bit.ly/1GgVmCB>






Last slides

Last slides

© Copyright 2004-2022, Bootlin.

Creative Commons BY-SA 3.0 license.

Corrections, suggestions, contributions and translations are welcome!

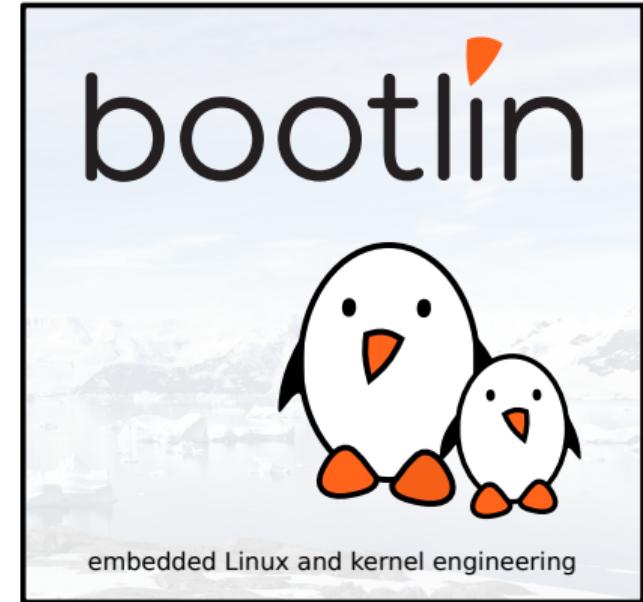



Thank you!

And may the Source be with you