


LECOC Test procedure

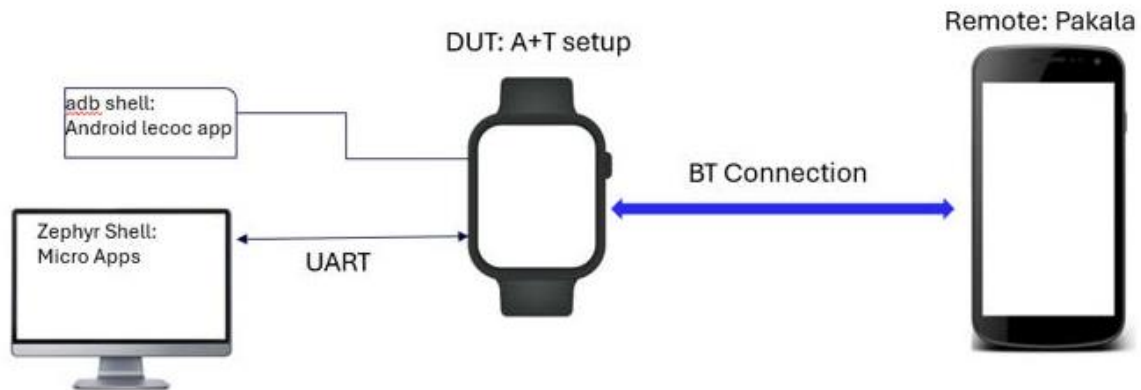

DUT: A+T setup

Remote: iPhone/Android Phone

DUT Test Apps Attached

Remote Test Apps

- Android LECOC Test App

Socket Name : **BtTestAppSocket**

Steps to use an Interactive Testapp:

a. Push the socketClient out file to "/system/bin" path of the hardware

```
adb push socketClient /system/bin
```

b. Install and start the interactive testapp (this will start the socket server in the testapp)

```
adb install -r wearos_ble_testapp.apk
```

c. give the below permissions and reboot

```
adb shell
```

```
#pm grant org.codeaurora.bluetooth.wearos_ble_testapp
```

```
android.permission.ACCESS_FINE_LOCATION
```

```
#pm grant org.codeaurora.bluetooth.wearos_ble_testapp
```

```
android.permission.ACCESS_COARSE_LOCATION
```

```
#pm grant org.codeaurora.bluetooth.wearos_ble_testapp
```

```
android.permission.BLUETOOTH_SCAN
```

```
#pm grant org.codeaurora.bluetooth.wearos_ble_testapp
```

```
android.permission.BLUETOOTH_CONNECT
```

```
adb reboot
```

d. Put the device into Test mode

```
adb shell am broadcast -a com.google.android.clockwork.action.TEST_MODE
```

e. Give the location permission from settings menu.

f. Start the application

```
adb shell am start -n org.codeaurora.bluetooth.wearos_ble_testapp/.MainActivity
```

Note - Make sure the app has necessary location permissions or set it explicitly to "Allow all the time".

g. Open an adb shell and go to "/system/bin" path on the hardware

```
adb shell
```

```
cd system/bin
```

h. Run the socketClient application

```
./socketClient
```

i. Now the socketClient will ask you to enter the socket name. Type the socket name of the server (ex: BtTestAppSocket) and press enter.

j. Now you should be able to see the main menu of the app, interact with the menu based on the data displayed

```

monaco:/ # socketClient
Socket Success
Enter Local Socket Name: BtTestAppSocket
Socket Connected

***** Bt Test App *****
Advertiser
Scanner
Throughput
GattClient
HoldWakeLock
ReleaseWakeLock
GattServer
GetConnectedDevices
Pair (Ex: Pair 11:22:33:44:55:66)
UnPair (Ex: UnPair 11:22:33:44:55:66)
Disconnect (Ex: Disconnect 11:22:33:44:55:66)
GetBondedDevices
Close

*****

GattClient

```

```

LECO
***** LE COC Menu *****
LeCoC_Connect (Ex : LeCoC_Connect DeviceAddress:73:B5:C0:E6:62:A4;psm:1;secure_flag:true)
LeCoC_Write (Ex : LeCoC_Write Data:500)
LeCoC_listen (Ex : LeCoC_listen secure_flag:true)
LeCoC_Offload_Connect (Ex : LeCoC_Offload_Connect DeviceAddress:73:B5:C0:E6:62:A4;psm:1
Encryption:false;Authentication:false;SockName:offload_socket;HubId:10
EndpointId:10;MaxPacketSize:100)
LeCoC_Offload_listen (Ex: LeCoC_Offload_listen Encryption:false;Authentication:false
SockName:offload_socket;HubId:10;EndpointId:10;MaxPacketSize:100)
ConnUpdate (Ex: ConnUpdate ConnIntervalMin:20;ConnIntervalMax:20;ConnSlaveLatency:0;ConnSupT0:180)
Tx (Ex: Tx Packet_Size:2000;Num_Packets:1000 )
LeCoC_Close (Ex : LeCoC_Close secure_flag:true)
Back
*****

```

To Stop the app:

```
adb shell am force-stop org.codeaurora.bluetooth.wearos_ble_testapp
```

To Uninstall app:

```
adb shell pm uninstall -k org.codeaurora.bluetooth.wearos_ble_testapp
```

Test Cases: Insecure connection

S. N O	Test Case API	Menu Option	test procedure
1	Client LeCoC_Offload_Connect	LeCoC_Offload_Connect DeviceAddress:73:B5:C0:E6:62:A4;psm:128;Encryption:false; Authentication:false;SockName:offload_socket;HubId:10; EndpointId:10;MaxPacketSize:100 Encryption:false; Authentication:false → then pairing will not take place. if any one of them is true then pairing takes place	In remote Device(Phone) : 1. Install and start the interactive testapp 2. Select Advertiser Menu 3. AdvStart TxPower:1;Legacy:flase 4. GetOwnAddrSet 0 5. Select LECOC Menu 6. give LeCoC_Offload_Listen 7. LeCoC_Offload_listen Encryption:false;Authentication:false;SockName:offload_socket; HubId:10;EndpointId:10;MaxPacketSize:100 8. This will lisenting at Channel:psm(value) 9. Use this psm value in the DUT for LeCoC_Connect in LECOC Menu. DUT (Watch) : 1. Select Scanner Menu 2. Give ScanStart Legacy:false;

S. N O	Test Case API	Menu Option	test procedure
			3. Select GattClient Menu 4. ConnectToBdaddr 22:22:AF:E8:C4:B8 5. Select LECOC Menu 6. LeCoC_Offload_Connect DeviceAddress:73:B5:C0: E6:62:A4;psm:128;Encry ption:false; Authentication:false;SockName: offload_socket;HubId:10; EndpointId:10;MaxPacketSize:10 0
2	Client LeCoC_Write		LECOC write on offloaded socket is not supported.
4	Server LeCoC_Offload_Listen	LeCoC_Offload_listen Encryption:false;Authenticatio n:false;SockName:offload_soc ket; HubId:10;EndpointId:10;MaxP acketSize:100	In remote Device(Phone) : 1. Install and start the interactive testapp 2. Select Scanner Menu 3. Give ScanStart Legacy:false; 4. Select GattClient Menu 5. ConnectToBdaddr 22:22:AF:E8:C4:B8 6. Select LECOC Menu

S. N O	Test Case API	Menu Option	test procedure
			7. LeCoC_Offload_Connect DeviceAddress:73:B5:C0: E6:62:A4;psm:128;Encry ption:false; Authentication:false;SockName: offload_socket;HubId:10; EndpointId:10;MaxPacketSize:10 0 DUT (Watch) : a. Select Advertiser Menu b. AdvStart TxPower:1;Legacy: flase c. GetOwnAddrSet 0 d. Select LECOC Menu e. give LeCoC_Offload_Li sten LeCoC_Offload_listen Encryption:false;Authentication: false;SockName:offload_socket; HubId:10;EndpointId:10;MaxPac ketSize:100

S. N O	Test Case API	Menu Option	test procedure
			This will lisenting at Channel:psm(value) f. Use this psm value in the DUT for LeCoC_Connect in LECOC Menu.
5	Server LeCoC_Wri te		LECOC write on offloaded socket is not supported.