


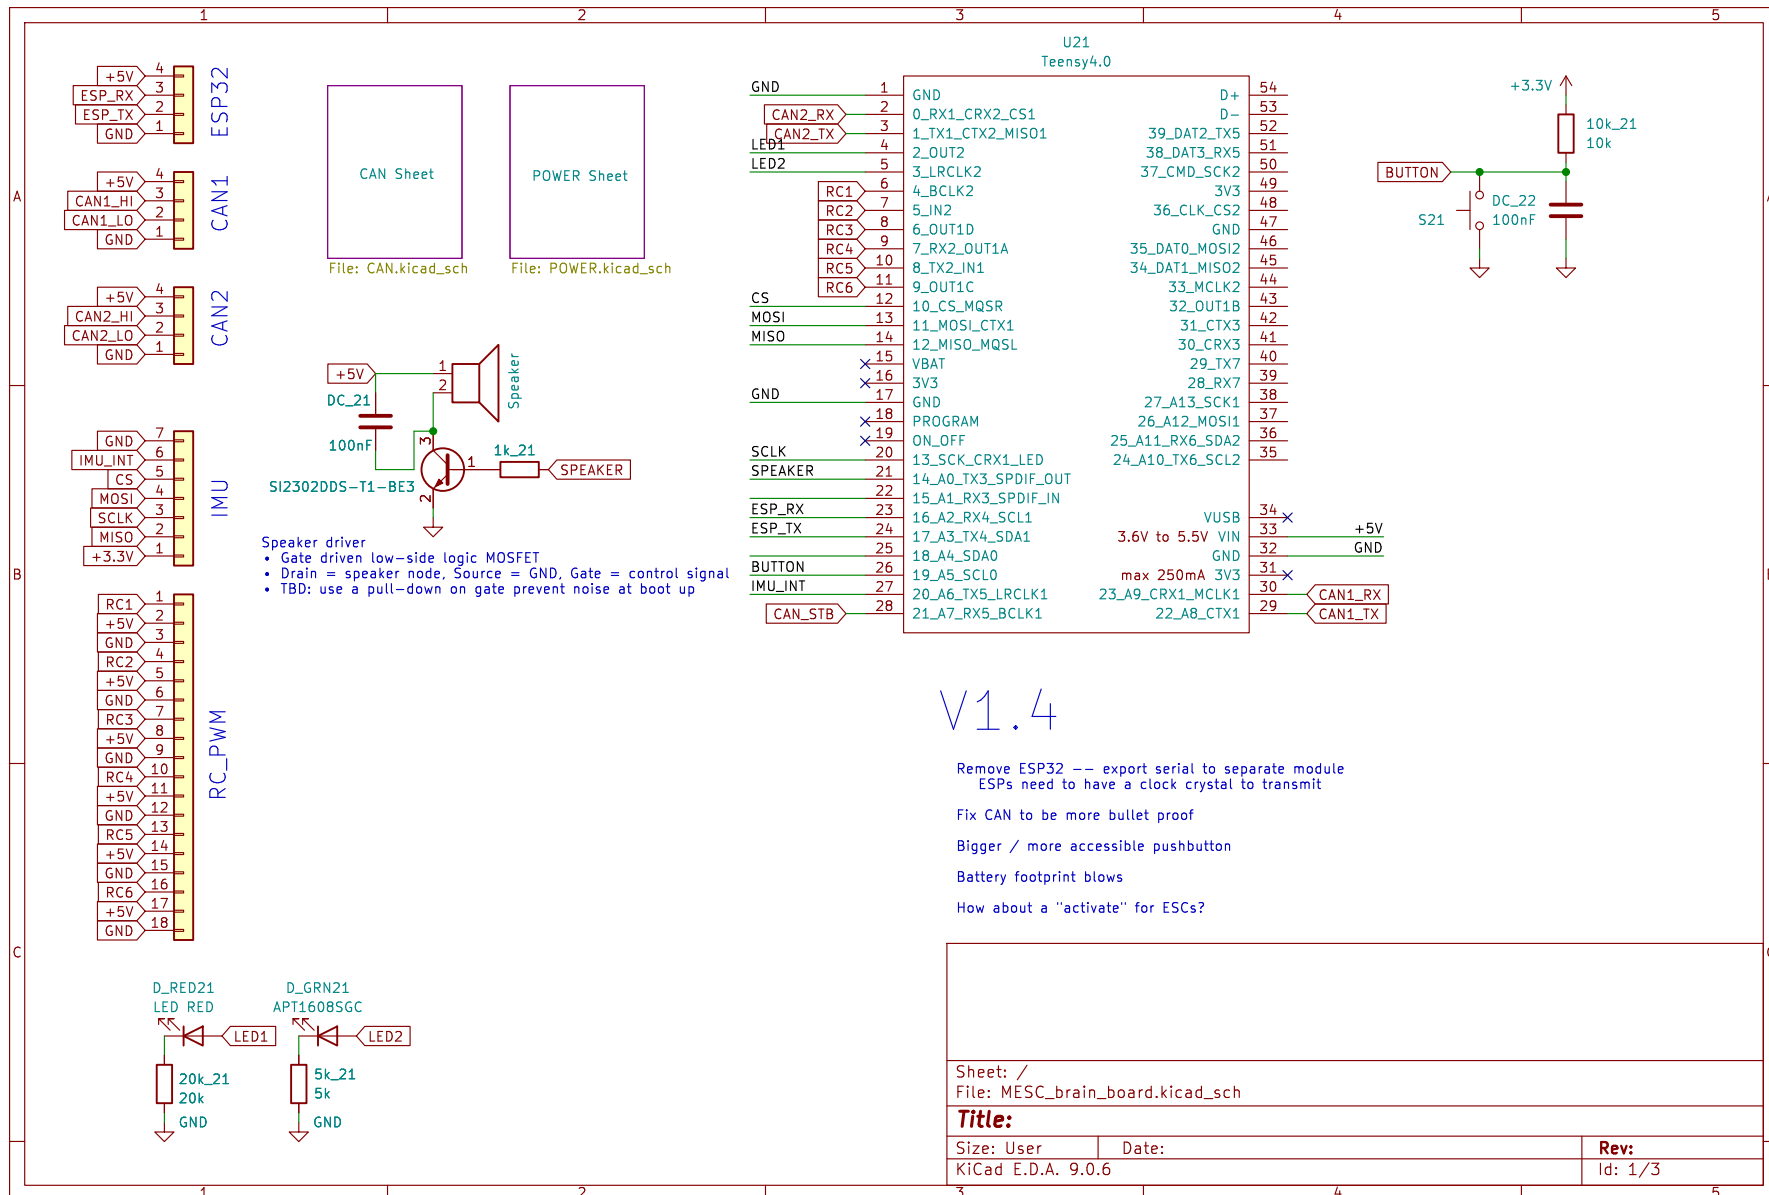


CAN NODE DESIGN NOTES – TEENSY 4.0 + TCAN334G

- 3.3 V CAN transceiver w/ standby (TCAN334G must be used)
- VCC = 3.3 V with local 0.1 μ F decoupling at device
- TXD pull-up to 3.3 V (10k) $\rightarrow$ recessive during MCU reset
- STB pull-up to 3.3 V (10k) $\rightarrow$ default standby; MCU drives LOW after FlexCAN init
- Direct MCU interface: TXD $\leftrightarrow$ CAN_TX, RXD $\leftrightarrow$ CAN_RX (no level shifting)
- VREF not used (leave NC)
- Split termination 2, 60 Ω termination only at physical bus ends
- CAN TVS (SM24CANB-02) at connector; hot plug protection

POWER UP SEQUENCE

- STB pulled HIGH $\rightarrow$ transceiver silent
- TXD pulled HIGH $\rightarrow$ recessive guaranteed
- Teensy boots
- FlexCAN init
- MCU drives STB LOW $\rightarrow$ clean join

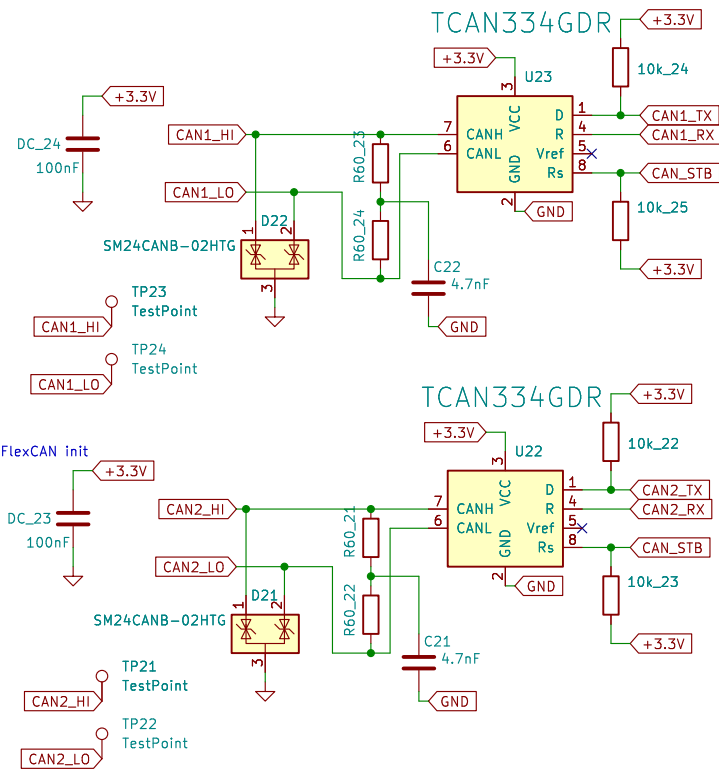

Sheet: /CAN Sheet/
File: CAN.kicad_sch


Title:

Size: A4 Date:

KiCad E.D.A. 9.0.6

Rev:

Id: 2/3

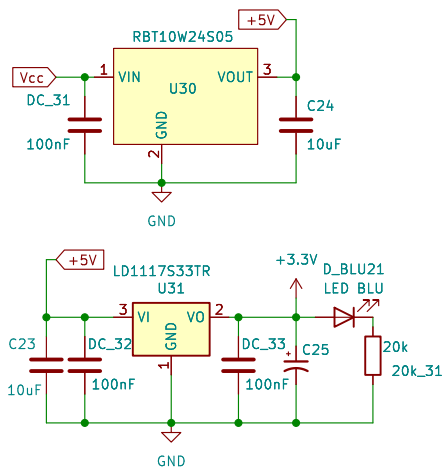

Sheet: /POWER Sheet/
File: POWER.kicad_sch

Title:

Size: A4

Date:

KiCad E.D.A. 9.0.6

Rev:

Id: 3/3