

Product Introduction

Jiffy75


Wireless Split Ergonomic Keyboard

The Jiffy75 from Jezailfunder is a fully wireless, split ergonomic keyboard featuring the following:

Wireless Split Design: A fully wireless split design, with both the left and right halves, as well as the host, all connected wirelessly.

Triple-Mode Connectivity: Simultaneously supports Bluetooth connection, USB connection, and 2.4Ghz receiver connection.

Advanced features: Support for macros, etc.

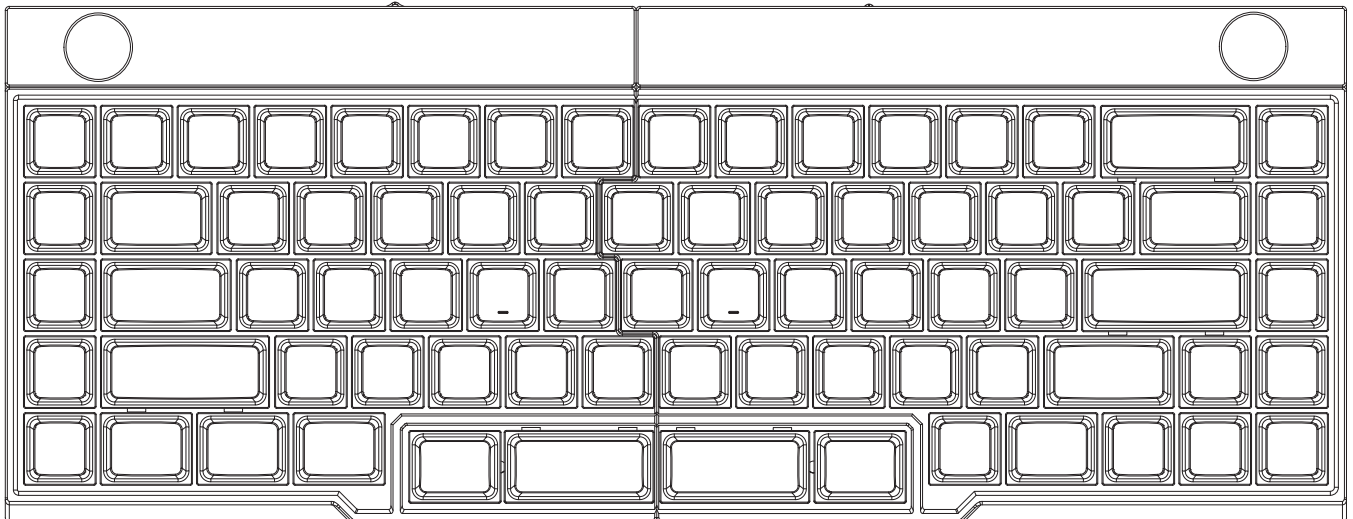


First-Time Use

Jiffy75 uses a truly wireless split design, so the left and right halves can be used without any cable connection between them

Power On

The power switch of the Jiffy75 is located on the top of the keyboard. Slide the switch to the right to power on the keyboard (green), and slide it to the left to power it off (red).

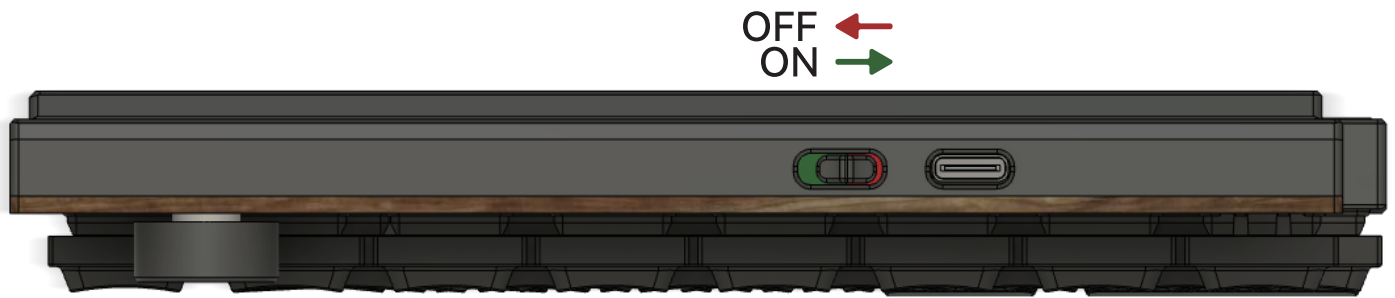

Jiffy75(LEFT)


L/R Auto Pairing

When both halves of the Jiffy75 are powered on, the pairing indicators on the left and right halves will flash blue while they pair with each other.

Once the pairing indicators stop flashing, L/R auto pairing is complete.

If the blue pairing indicators keep flashing for an extended period, restart both halves and wait for them to pair automatically again.

Once L/R pairing is complete, you can proceed to connect the keyboard to your device.

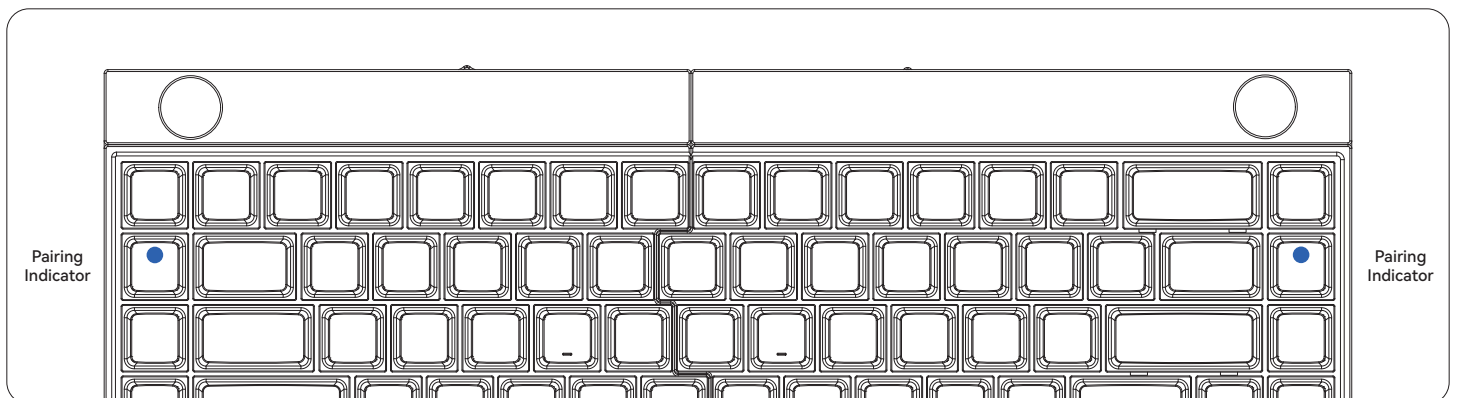

Indicator light 1

The Jiffy75 has a total of 6 indicator lights (4 on the left hand, 2 on the right hand). These lights are responsible for indicating the keyboard's Bluetooth channel status, receiver mode status, and battery level status.

Left-hand light zone :

Left light * 2.4G ⚡

The blue area indicates Bluetooth channel 1/2/3.

The blue channel will be indicated by a **blue light**, When The indicator light flashes slowly: searching for paired devices.

The indicator light flashes quickly: entering pairing mode to search for new devices.


The purple area indicates receiver mode and battery level:

Receiver mode will be indicated by a **purple light**, when The indicator light flashes slowly: searching for paired receiver.

The indicator light flashes quickly: entering pairing mode to search for a new receiver.

The above are the indicator lights for the 2.4G channel. This light will also display the keyboard's battery status.

When the battery low : flash **red light**
When charging : **flash green light**

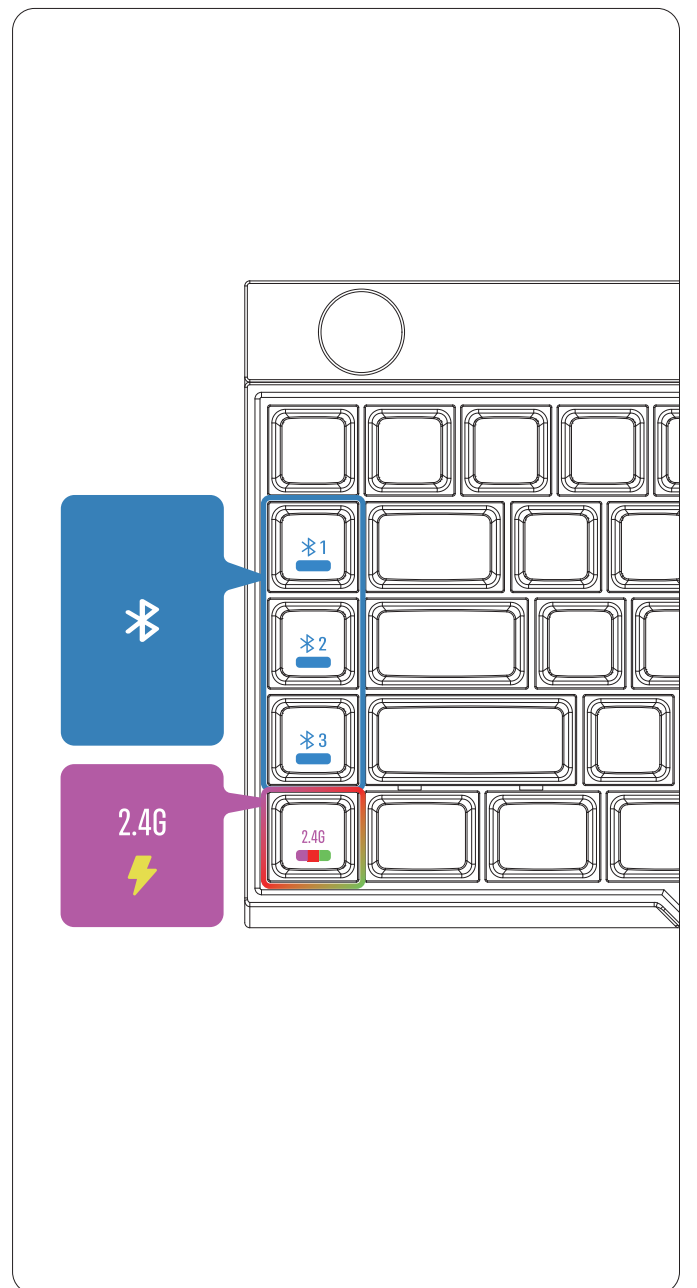

Indicator light 2

Right-hand light zone :

Right light ⇒ ⚡

The blue area indicates the connection status with the left hand.

The connection status with the left hand will be indicated by a blue light when


The indicator light flashes quickly: searching for the left keyboard.

The red area indicates the battery status of the right-hand keyboard.

When the battery low : flash red light

When charging : flash green light

When charging is complete : the green light remain solid

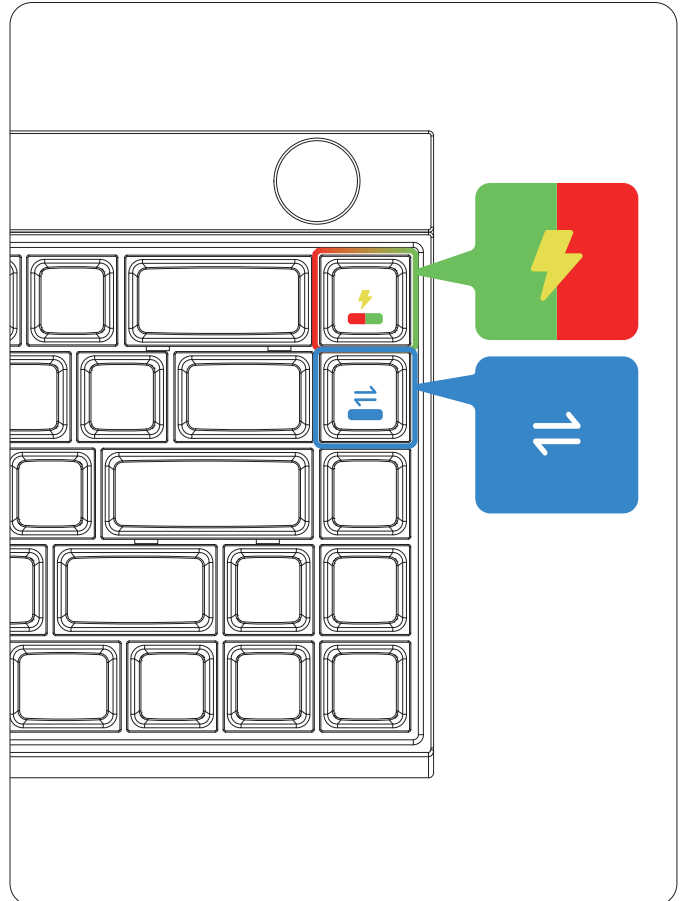


Remap key 1

Jiffy75 supports key remapping through JZFHUB in wired mode.

Steps for remapping keys:


1. Open the JZFHUB website: <https://www.jzfhub.com/>
2. Connect the Jiffy75 with a USB data cable (left half only).
3. Click the blue “Connect Device” button in the center of the page, then select Jiffy75 from the pop-up list to connect.

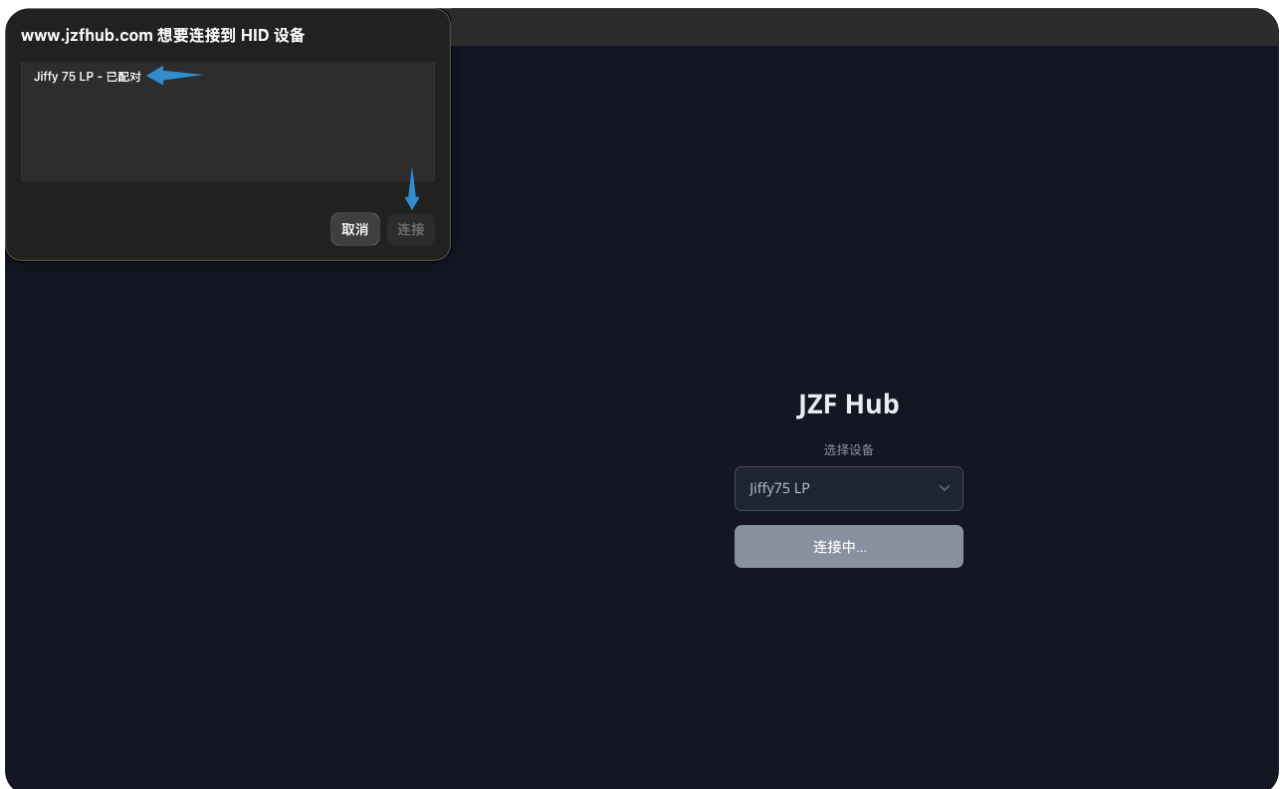

4. Once connected, you can start remapping keys.


Remap key 2

5. Click the key you want to modify. The selected key will turn blue. Then click the desired key value in the key value panel below to complete the remapping.

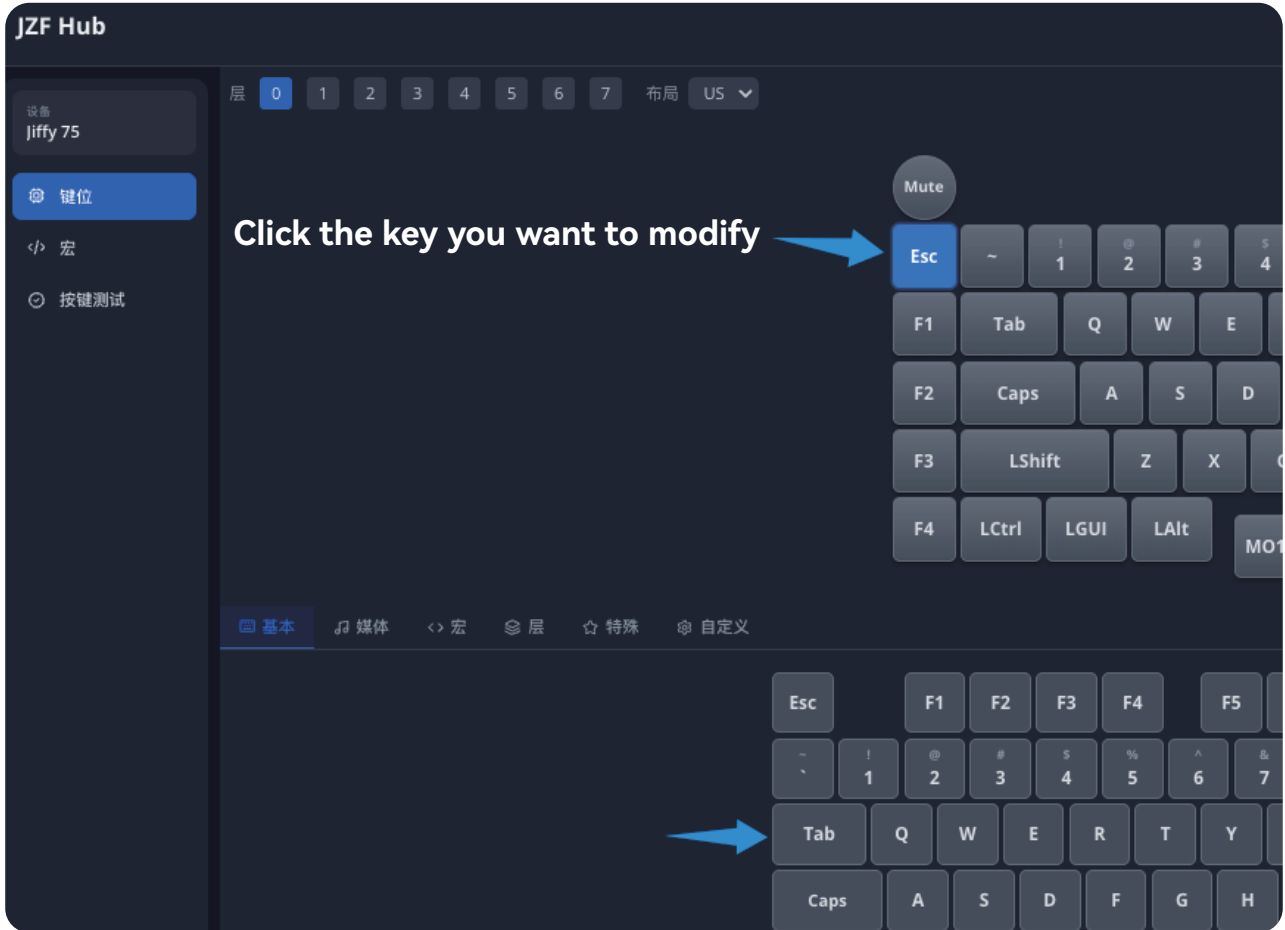

6. To back up a saved key layout, click the Save button on the right side of the page to export the current Jiffy75 layout file.

To import the backup file, click the Load button on the right side of the page and import the layout file.

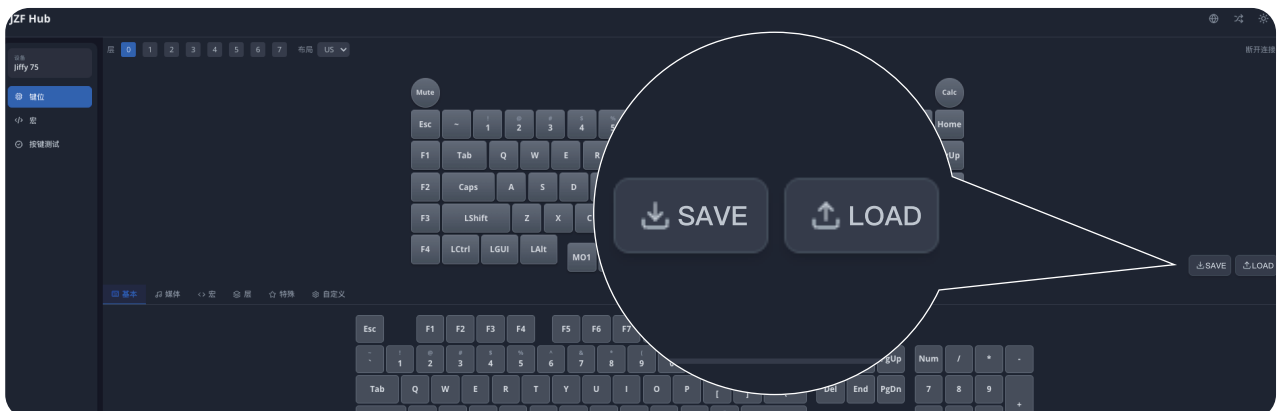


Switch Layer

Layer switching is a very useful feature for split keyboards. Mo is the most commonly used hold-to-switch-layer function. Changing the default Mo key to another key value may prevent the Jiffy75 from switching layers, which may also make it impossible to switch Bluetooth or other wireless channels.

How to Use Mo Layer Switching:

The Jiffy75 is set to Mo1 by default. Its function is to switch the current key layer to Layer 1 while the key is held down (the default layer is Layer 0).

When the keyboard is on Layer 1, pressing the 1! key will output F1.

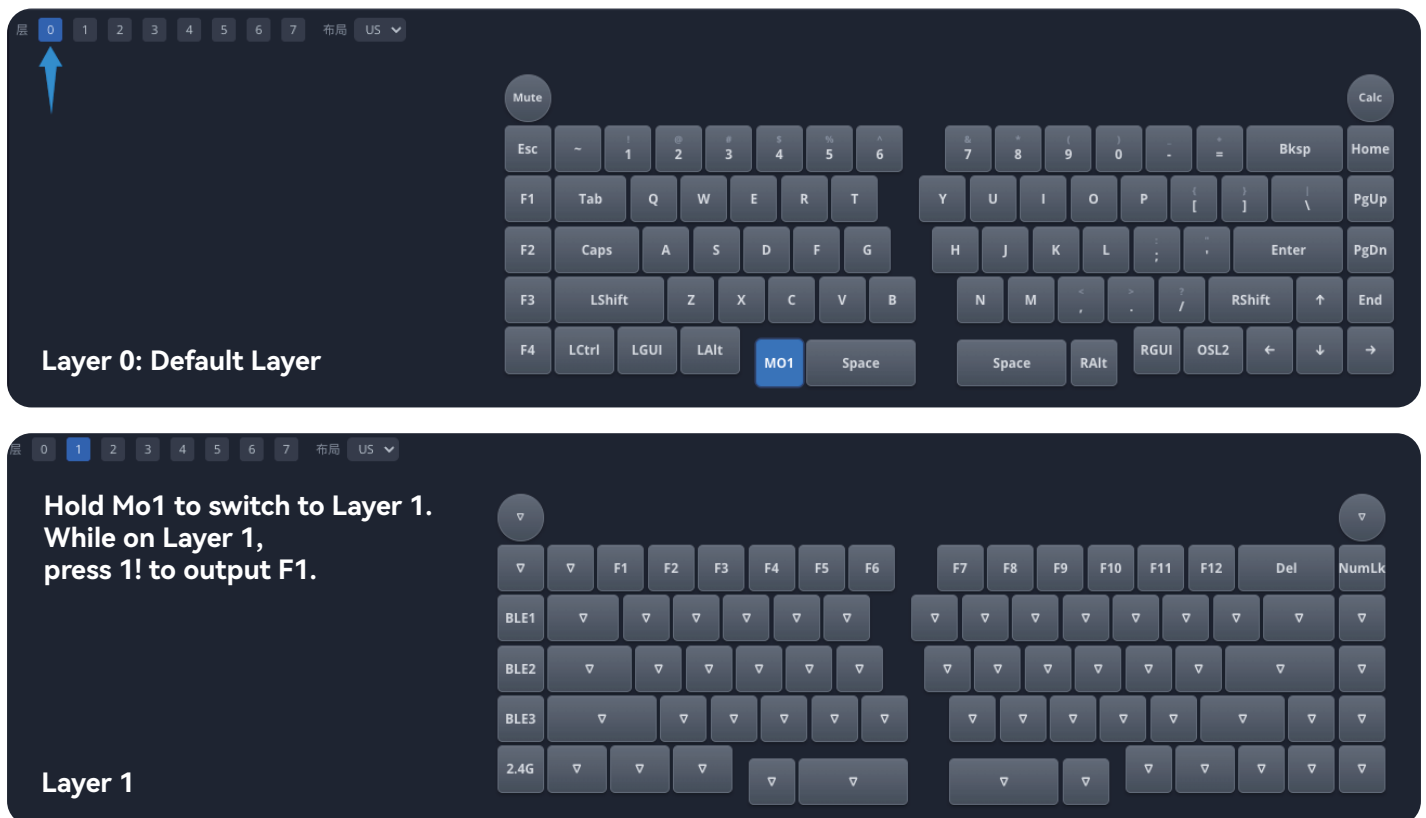

Connection Method

The Jiffy75 supports three connection modes for devices: 3-channel Bluetooth, 2.4G receiver, and wired mode.

Wired connection

Do not use high-power chargers for charging

Connect the left hand to a computer or other device via a USB cable for USB wired mode connection (the right hand and left hand always remain wirelessly connected).

Bluetooth connection

Short press the FN+F1/2/3 combination keys to switch to Bluetooth channel 1/2/3. After switching, it will search for already paired devices. Long press the combination keys to enter Bluetooth channel pairing mode, at which point the indicator light should flash rapidly.

2.4G receiver connection

Short press the Fn+F4 combination keys to switch to the 2.4G channel. After switching, it will search for already paired receivers. Long press will enter receiver pairing mode.

