170° hinge


Web code – click on the code or enter it in the Product Configurator: DQDI3Y

Planning

Hinge dimensions and gap calculation based on factory setting (mounting plate spacing = 0 or 9 mm)


Hinge and front protrusion at 90° opening angle

Overlay application

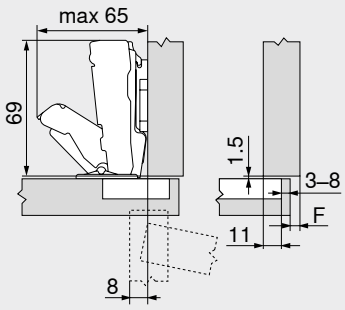


F Gap

Dual application

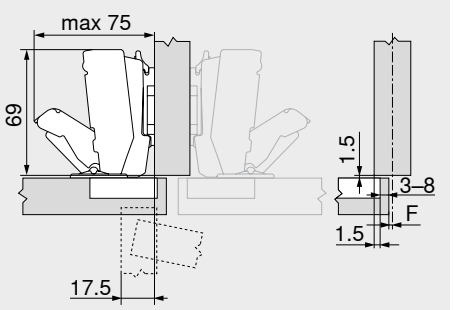

F Gap

Inset application

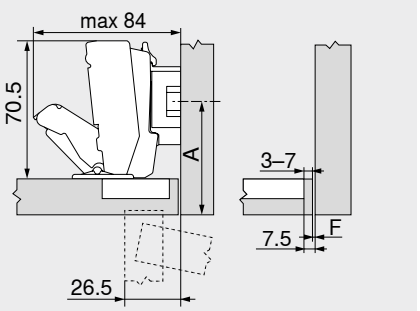

A Move back fixing position of mounting plate by front thickness FD + 1.5 mm

F Gap

Drilling distance TB

Front overlay FA (mm)

MD	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19
0										3	4	5	6	7	8
3							3	4	5	6	7	8			
6				3	4	5	6	7	8						
9	3	4	5	6	7	8									

MD Mounting plate spacing (mm)

Front overlay FA (mm)

MD	–4.5	–3.5	–2.5	–1.5	–0.5	0.5	1.5	2.5	3.5	4.5	5.5	6.5	7.5	8.5	9.5
0										3	4	5	6	7	8
3							3	4	5	6	7	8			
6				3	4	5	6	7	8						
9	3	4	5	6	7	8									

MD Mounting plate spacing (mm)

Front overlay FA (mm)

MD	–4.5	–3.5	–2.5	–1.5	–0.5
0					
3					
6					
9	3	4	5	6	7


MD Mounting plate spacing (mm)

Minimum gap F for fronts with a front radius (R = 1 mm) based on the factory setting

For front thicknesses FD up to 21 mm, no gap F is required

For front thickness FD in excess of 22 mm, a trial application is recommended

Adjustment

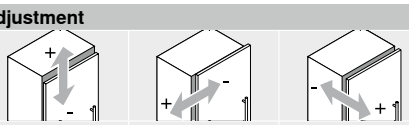


Max ±3.0 mm
See mounting plates


±2.0 mm

+3.0 mm
–2.0 mm


Screw-on

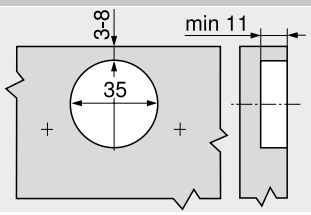

INSERTA | knock-in

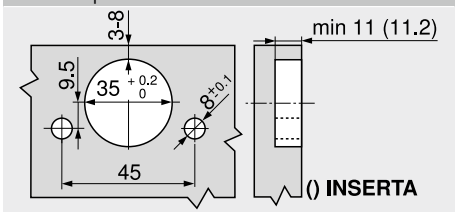

Hinge boss dimensions

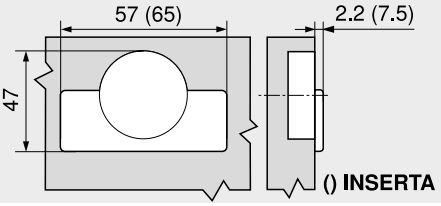

Reference pages

Safety information	727	More technical details	724
Overview	67		
Mounting plates	144		
Accessories – hinge arm cover cap	151		
Accessories	153		
BLUMOTION for doors	170		
TIP-ON for doors	184		
Mitred application – all 4 edges	80		
Blum services	616		

Assembly, removal and adjustment

Short URL
www.blum.com/a210