
PROOFER WIRING DIAGRAM — ALLIANCE J7239

Serial 50539A9603 — 120 VAC — 1500 W — 13.5 A — Black Bart's, Pagosa Springs

Bench-proved 2026-11-09. This sheet stays with the proofer.

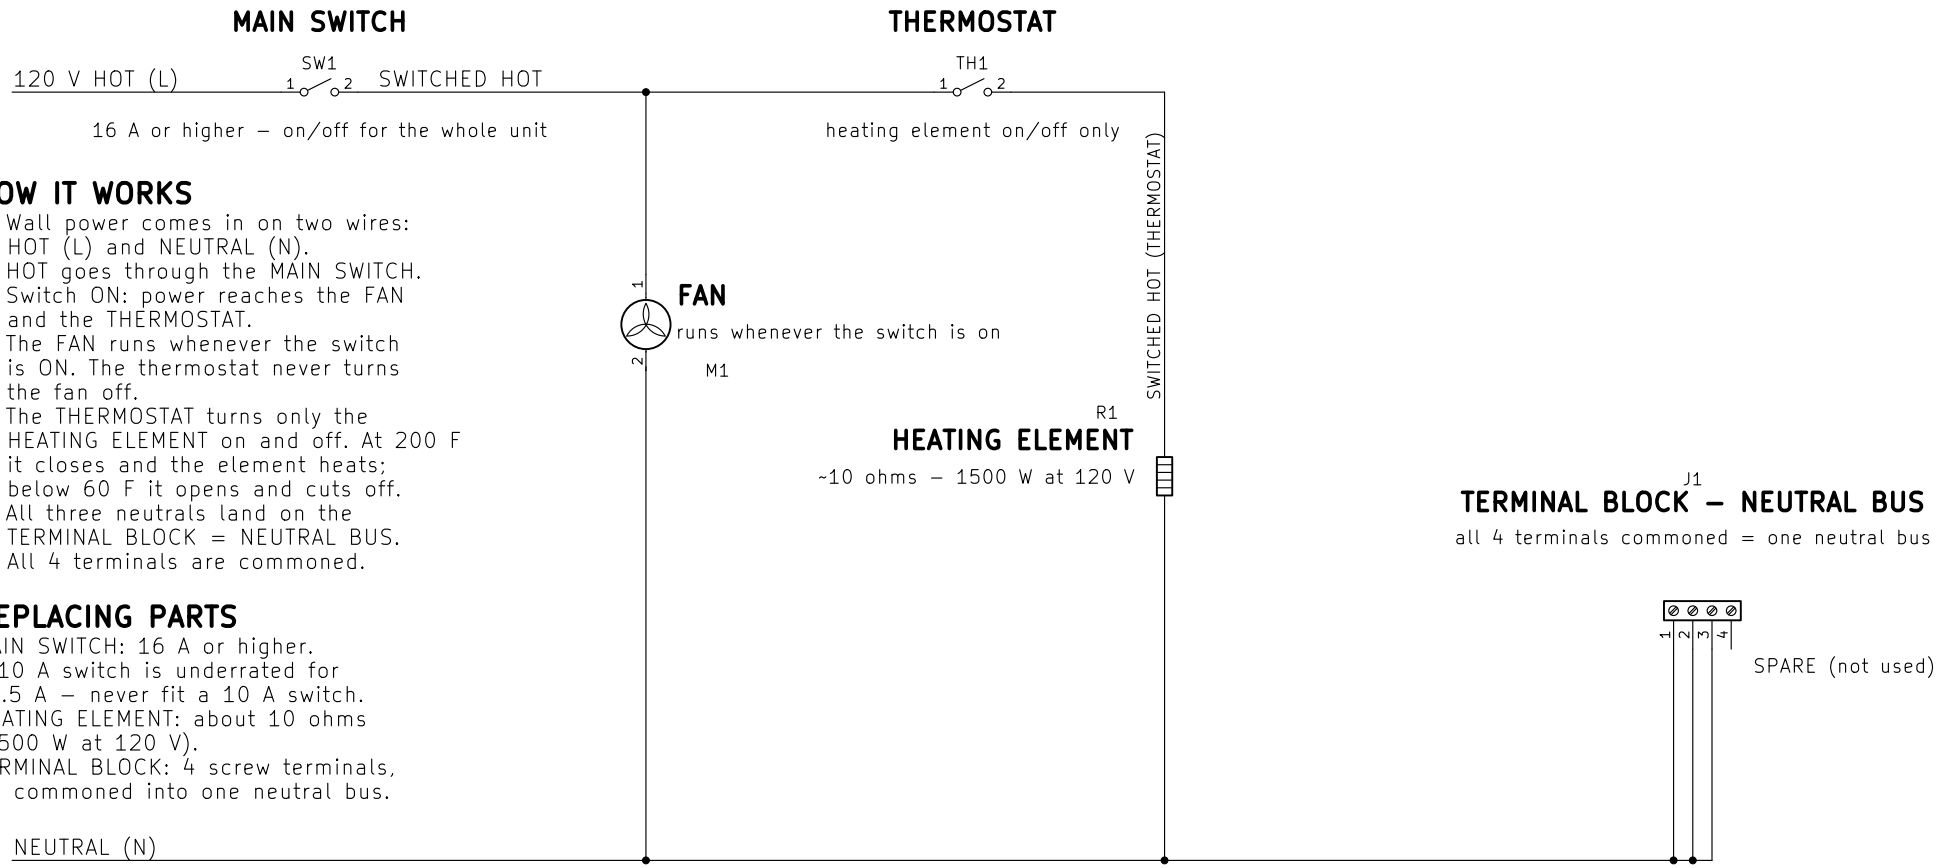

HOW IT WORKS

1. Wall power comes in on two wires: HOT (L) and NEUTRAL (N).
2. HOT goes through the MAIN SWITCH.
3. Switch ON: power reaches the FAN and the THERMOSTAT.
4. The FAN runs whenever the switch is ON. The thermostat never turns the fan off.
5. The THERMOSTAT turns only the HEATING ELEMENT on and off. At 200 F it closes and the element heats; below 60 F it opens and cuts off.
6. All three neutrals land on the TERMINAL BLOCK = NEUTRAL BUS. All 4 terminals are commoned.

REPLACING PARTS

MAIN SWITCH: 16 A or higher.
A 10 A switch is underrated for 13.5 A — never fit a 10 A switch.
HEATING ELEMENT: about 10 ohms (1500 W at 120 V).
TERMINAL BLOCK: 4 screw terminals, all commoned into one neutral bus.

120 VAC — 1500 W — 13.5 A — Black Bart's, Pagosa Springs		
Nordtronics		
Sheet: /		
File: j7239-wiring.kicad_sch		
Title: Proofer Wiring Diagram — Alliance J7239		
Size: A4	Date: 2026-11-09	**Rev: A**
KiCad E.D.A. 10.0.6		Id: 1/1