
1. TWO PLY SHEETS BECOME FOUR PANELS

Start with two 96 in x 48 in sheets, 0.4724 in thick. Keep every panel the full 96 in height.

2	12	204	36	4	8
ply sheets	vertical battens	ply-retaining nails	collar rails	diagonal braces	base-stop blocks


SHEET 1

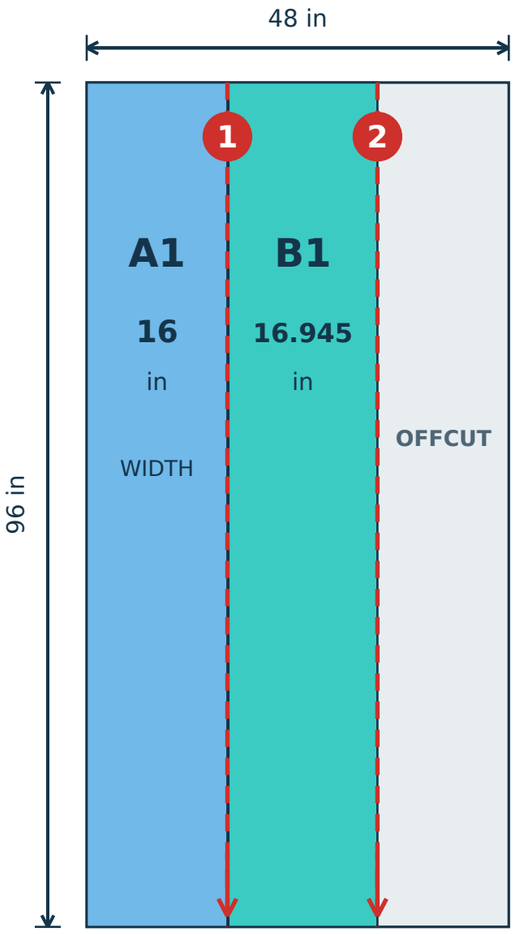

Red lines = full-length saw cuts.


Keep the saw blade on the waste side of each mark.

SHEET 2 - SAME CUTS

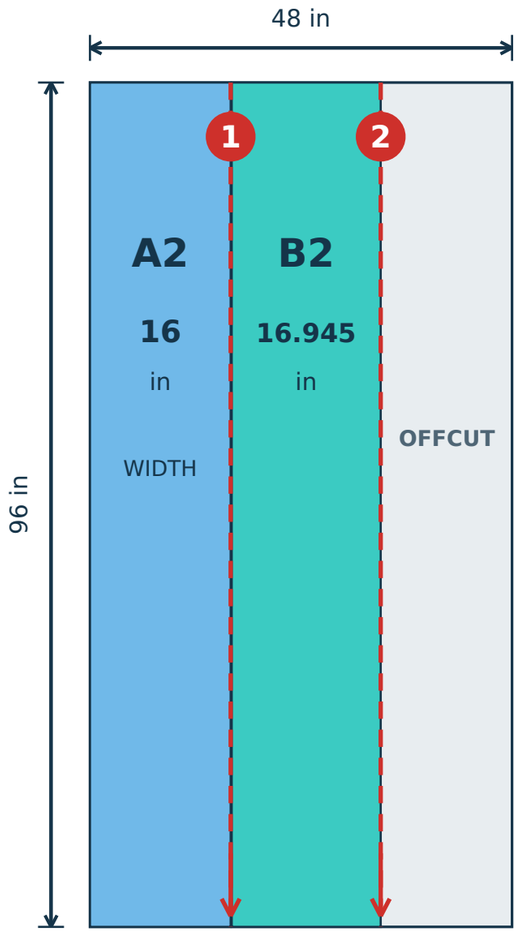

Red lines = full-length saw cuts.

YOU GET THESE 4 FACES

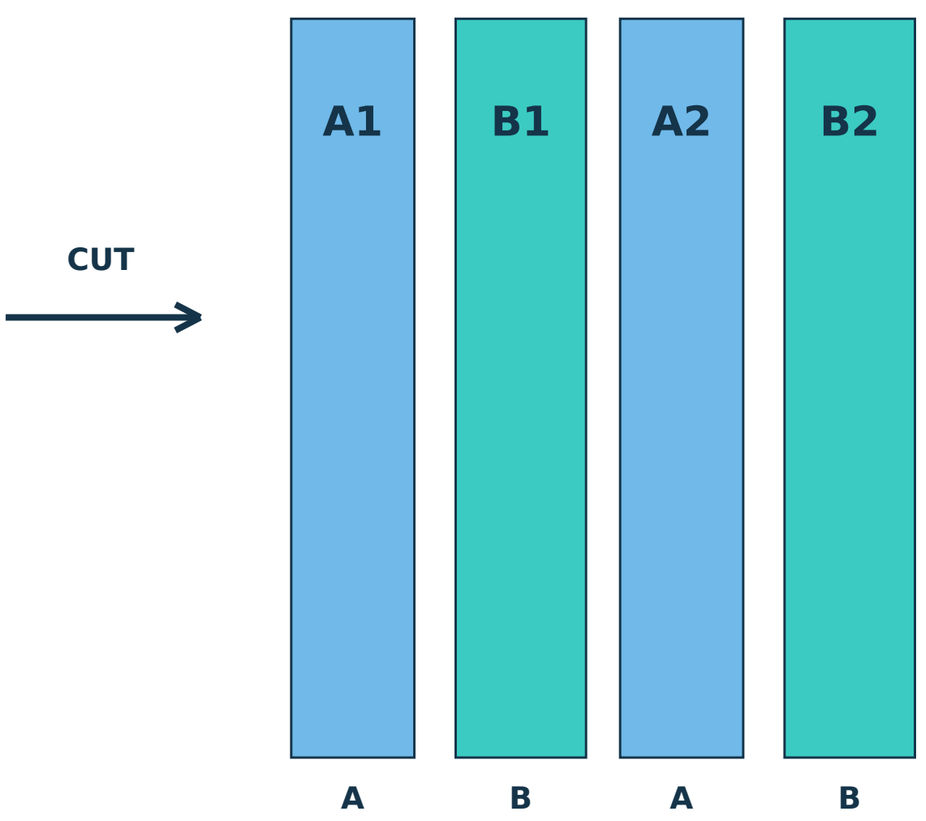

2 narrow A + 2 wider B

1. Measure 16 in from one edge; rip the full length.
2. From the fresh cut edge, measure 16.945 in; rip again.

Repeat on sheet 2. B covers both ply ends: B width = 16 + 2 x actual ply thickness (about 16.945 in).


2. ADD THREE BATTENS TO EACH FACE, THEN NAIL

12 full-height battens altogether. Timber section assumed actual 2 in x 3 in.

A. PUT BATTENS ON THE BACK


Keep the outer battens flush with both long edges.
Put the third batten exactly in the middle.

A panel x 2

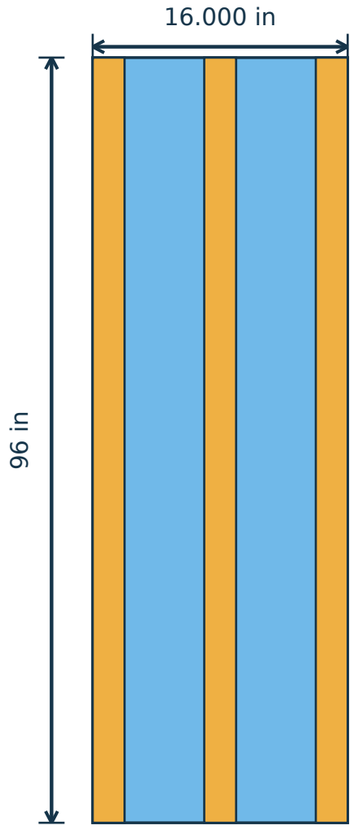

3 battens per panel

B panel x 2

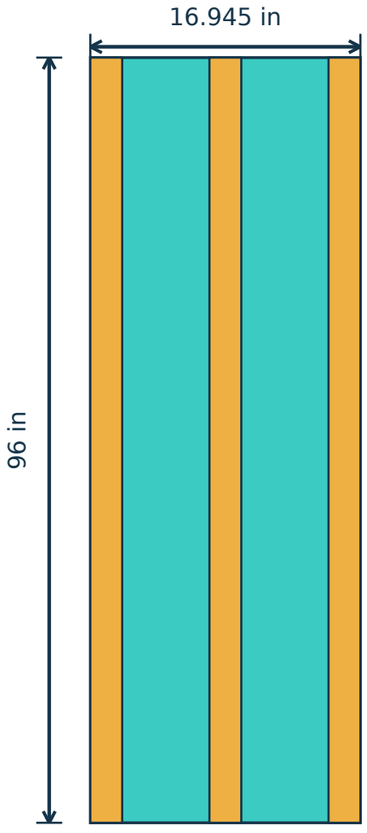


3 battens per panel

A centres: 1 / 8 / 15 in from left edge.
B centres: 1 / 8.472 / 15.945 in from left edge.


B. TURN OVER AND NAIL THE SMOOTH FACE

Front / nail side

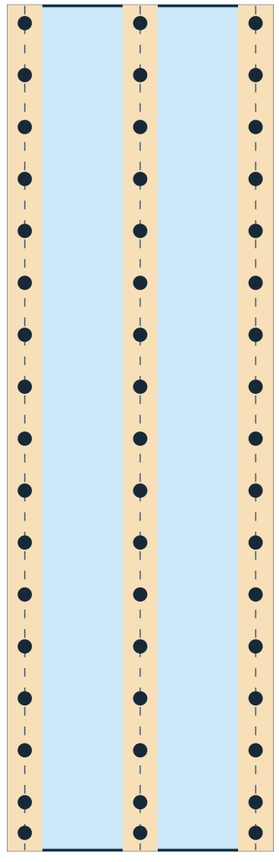

51 nails per face

NAIL CLOSE-UP

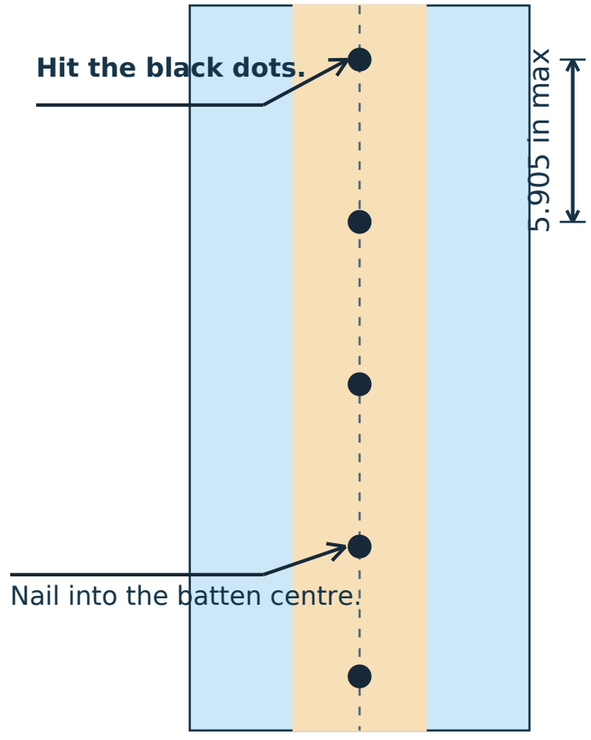


First / last nail: 1.969 in from panel ends.
Edge nail rows: 1 in from ply edges.

17 nails per line x 3 lines = 51

51 x 4 faces = 204 nails

SECTION: THE NAIL GOES THROUGH PLY INTO TIMBER

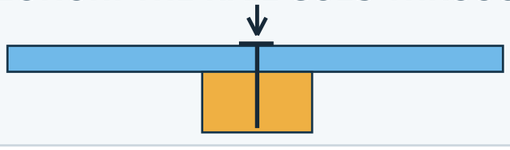


1.969 in nail: 0.4724 in ply + about 1.496 in into timber.

Keep the head flush. These nails hold the ply for handling;
collar joints and brace connections need separate structural fixings.


3. BRING THE FOUR FACES TOGETHER

Top view: A1 and A2 are opposite each other; B1 and B2 close the other two sides.

BEFORE CLOSING

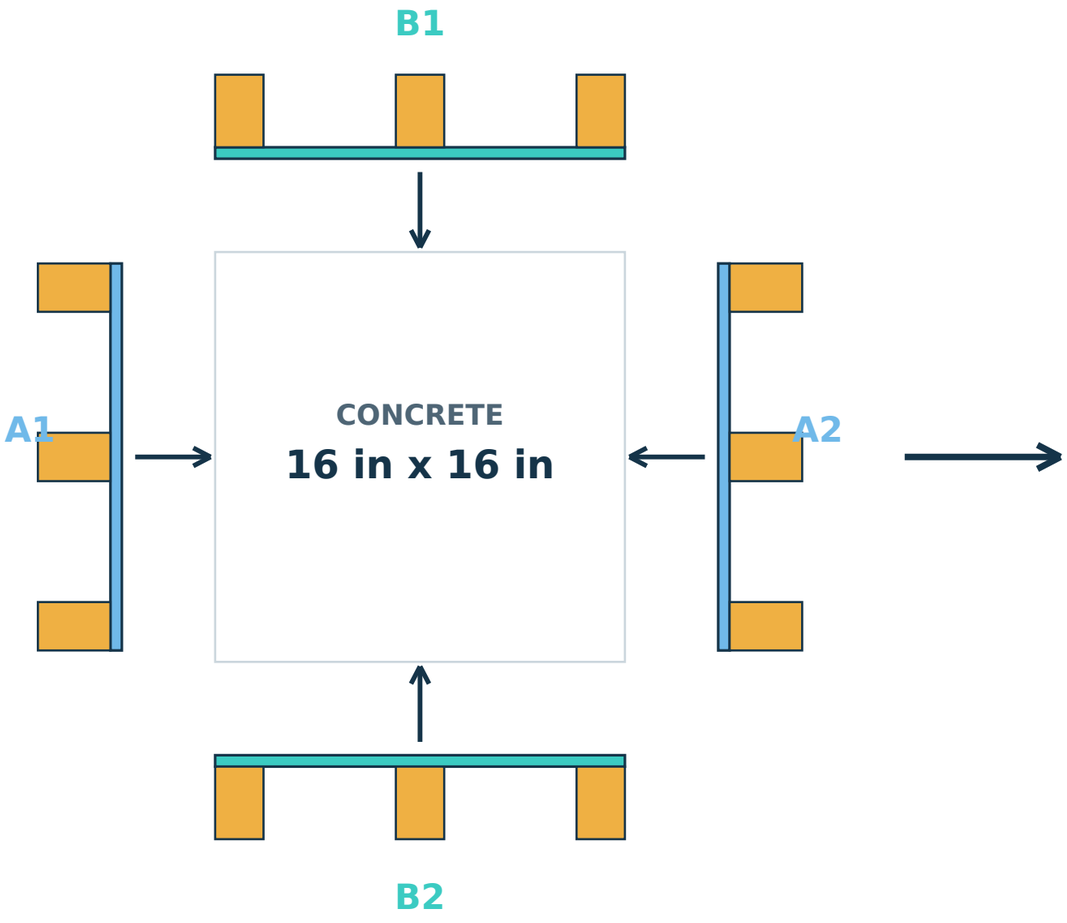

AFTER CLOSING - CHECK CLEAR SIZE

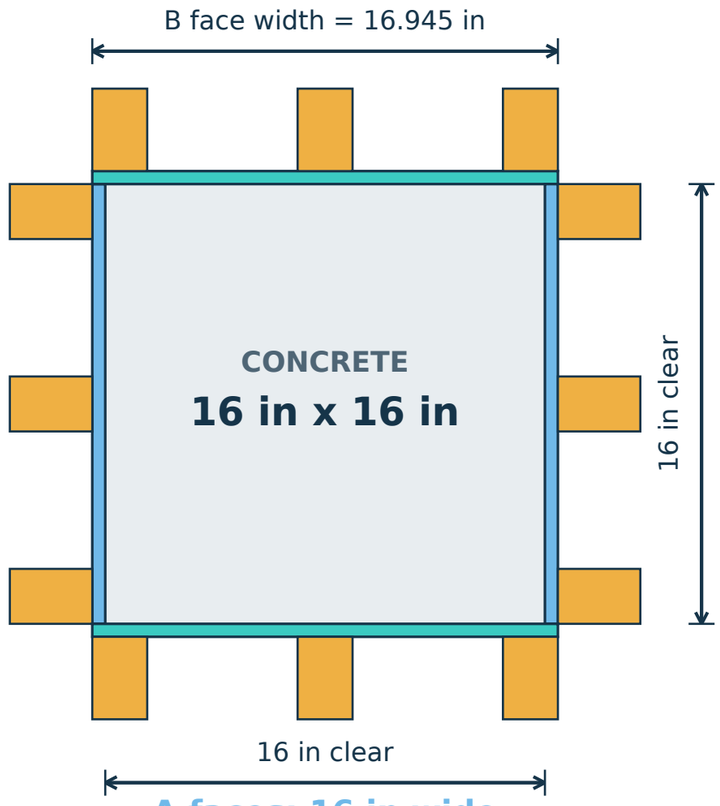

A faces: 16 in wide

B faces: 16.945 in wide


THE CORNER RULE

B covers the cut end of A. B is wider by about 0.945 in: one 0.4724 in plywood thickness at each end.

Do not make all four panels 16 in wide.

Seal the mating edges; keep the inside size 16 in.


ENLARGED CORNER

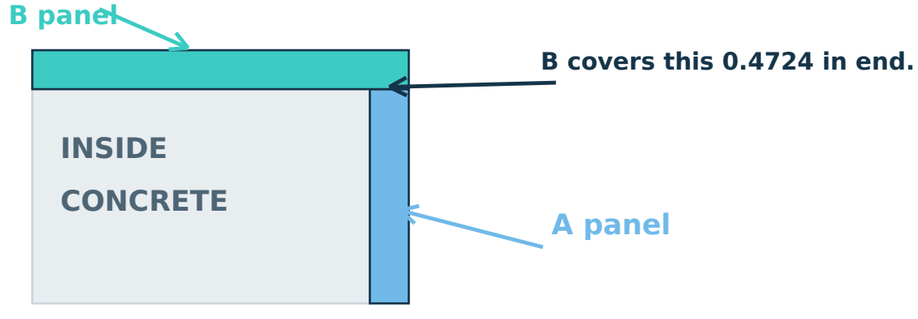

4. ADD COLLARS, BRACES AND BASE BLOCKS

This is the proposed support layout. The site engineer must detail the structural joints and anchors.


ASSEMBLED FORMWORK

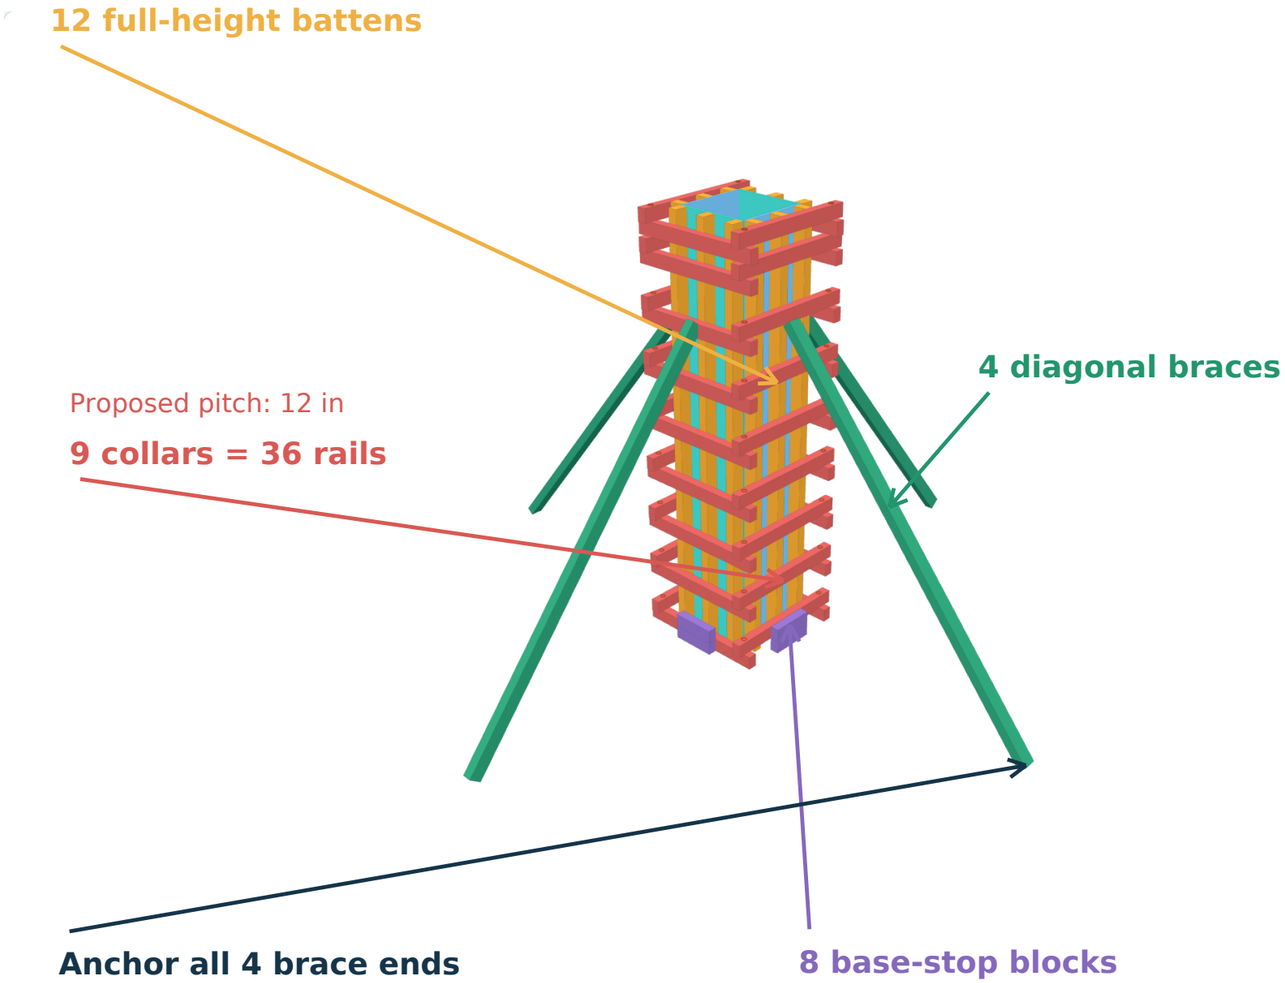

Brace heads: about 75 in high. Anchor points: about 74.803 in from the column centre.

CUT THE SUPPORT TIMBER


COLLARS: 36 rails, each 30 in

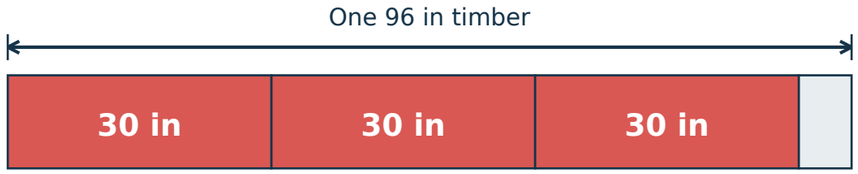

3 rails from each 96 in timber.

12 timbers x 3 rails = 36 rails.


BRACES: 4 pieces, about 96.884 in long

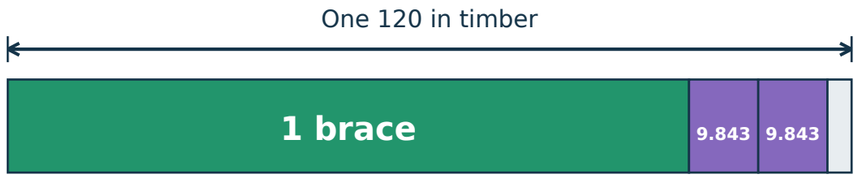

From each 120 in stock: 1 brace + 2 base blocks.

Repeat 4 times: 4 braces + 8 base blocks.

BASE: 2 blocks at each of the 4 faces

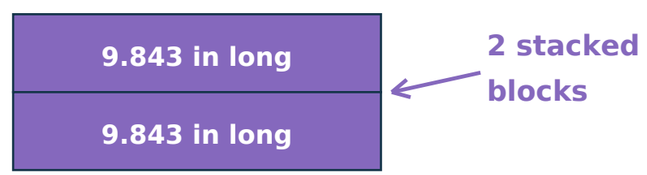

Fix the base stops positively to the support.

TIMBER CUTS: 12 studs + 36 rails + 4 braces + 8 blocks = 60 pieces.

Brace lengths shown are geometry only, before final joint allowances. Cutting examples allow for a 0.118 in saw kerf.

204 nails are for ply retention only. Collar corners, brace ends and base anchorage need a verified structural fixing detail.