
PARASMANI

tubes you can rely on

Installation Guide

2026

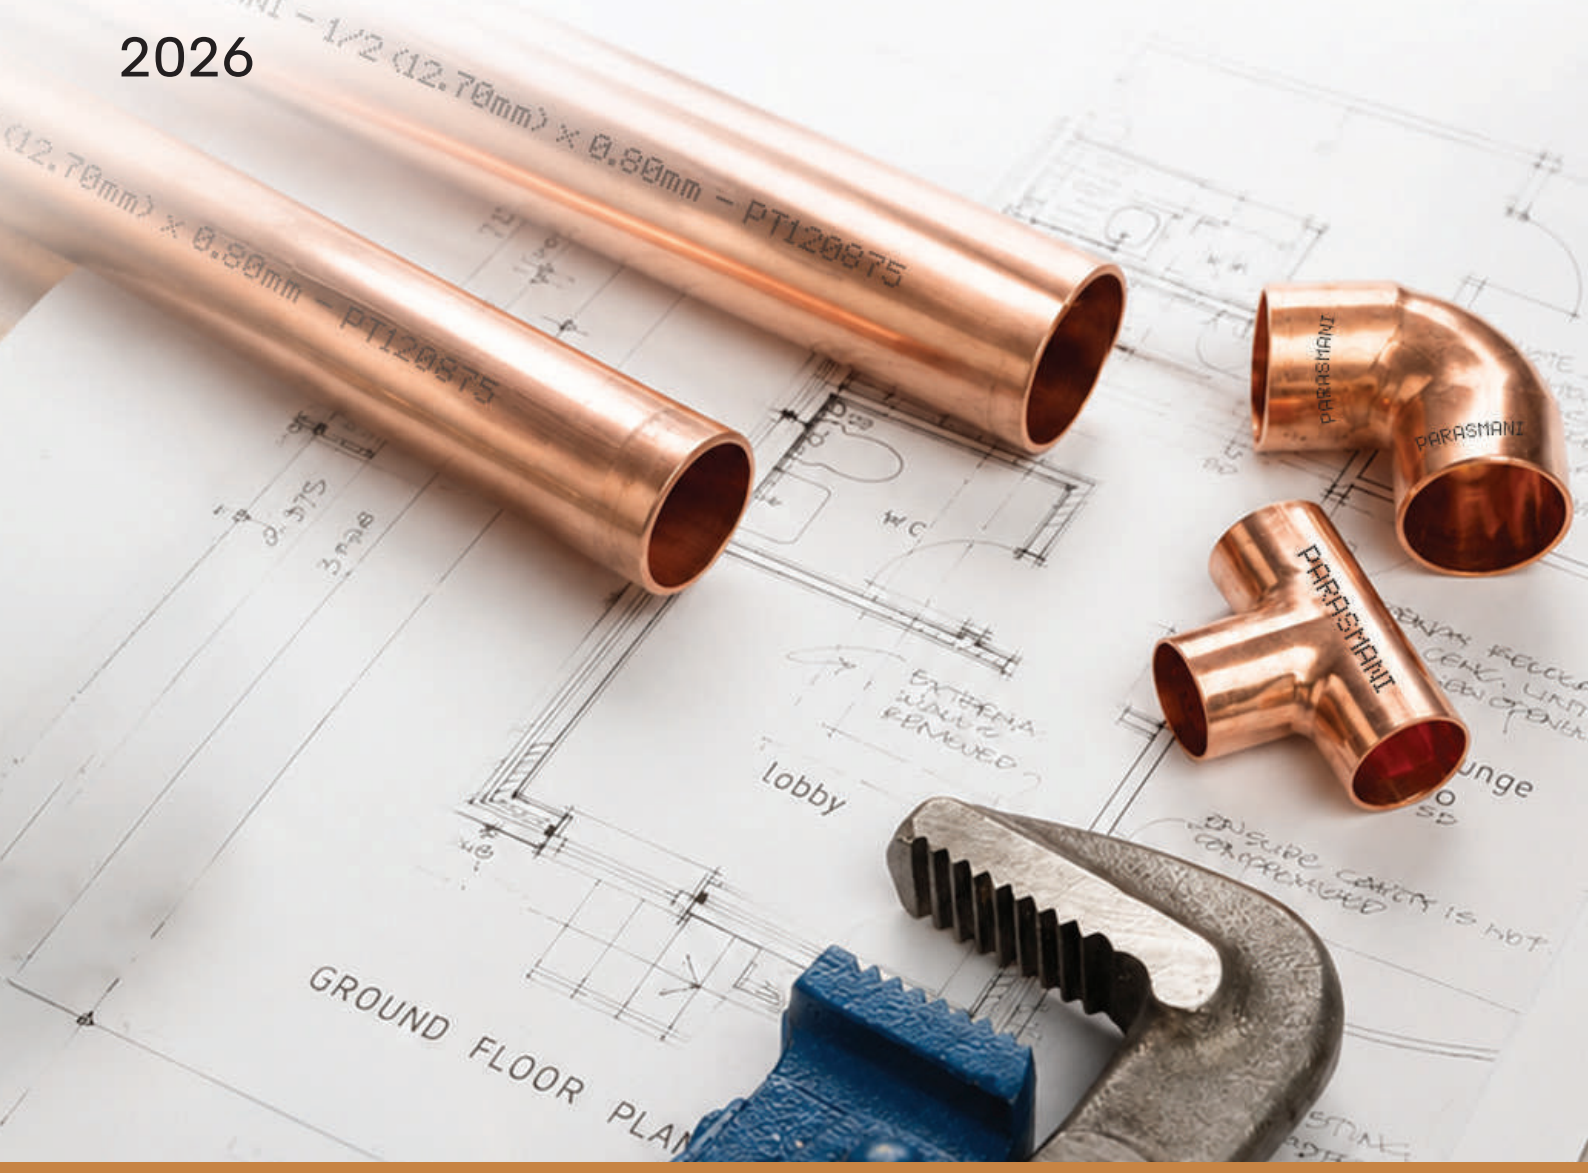

Copper Tubes

by Parasmani

MAKE IN INDIA

ISO 9001:2015

CE

Steps for Installation


BEFORE YOU START :

- Wear safety glasses and leather gloves
- Wear cotton clothing only (no synthetics)
- Keep a fan running for air circulation
- Keep cylinders upright and secured with a chain/strap
- Nitrogen through a regulator, never off the bare cylinder
- Keep water or a fire extinguisher within reach




01
Store It Right

- Under a roof, off the floor, caps on till you cut
- Away from cement, plaster and chemicals
- Coils flat, not on edge

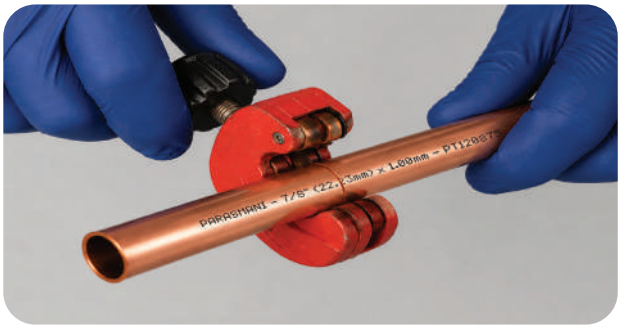

02
Cut It Square

- Tube cutter only, no hacksaw, no grinder
- Quarter turn at a time
- Point the end down, ream the inside burr

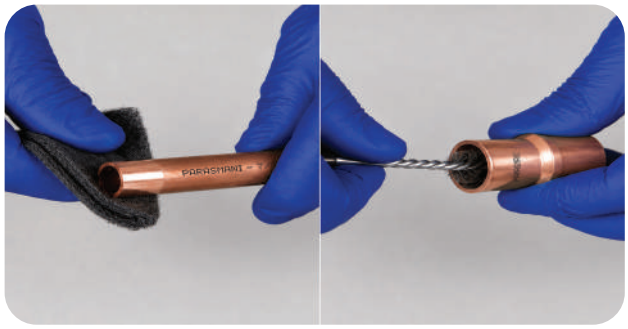


03
Clean It

- Rub the tube end bright with abrasive cloth
- Brush the socket inside
- No emery paper, no steel wool, no bare fingers after



04
Fit It

- Push the tube fully in till it touches the shoulder
- Turn it once to seat it
- Support the pipe so it cannot move while hot

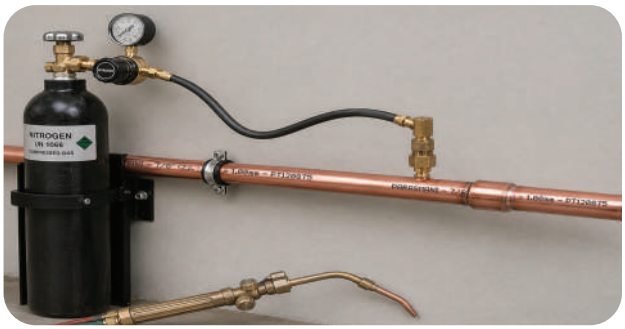


05
Start Nitrogen

- Through a regulator, very low flow a drift, not a blast
- Far end must stay open, or it blows the joint out
- On before the torch, off only when the joint is cool



06
Braze It

- Copper to copper: phos-copper rod, no flux.
- To brass or steel: silver rod with flux.
- Heat the copper till dull cherry red, flame always moving.
- Touch the rod to the joint, not the flame. Stop at one complete ring.

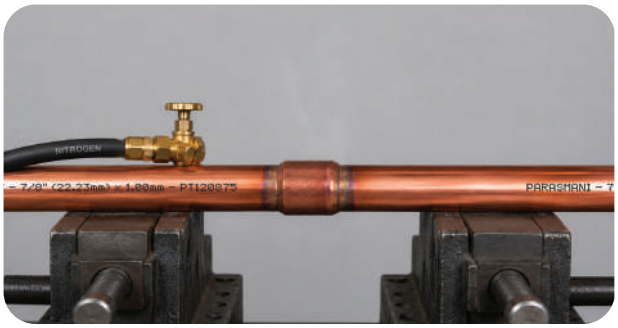


07
Let It Cool

- Still air, nitrogen still running.
- Never water, never a wet cloth.



08
Check Every Joint

- Complete ring, no pinholes, copper not grey and scaly.
- Bad joint? Cut it out. Never braze over it.
- Photograph anything that is going to be hidden.

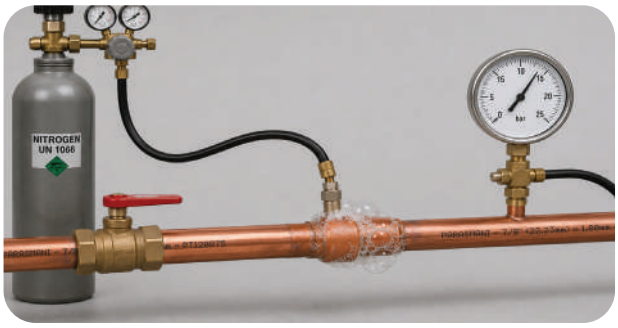

09
Pressure Test

- Nitrogen only. Isolate the compressor and valves first.
- Raise in three stages, hold 24 hours.
- Soap-water every joint. Note start and end temperature.



10

Vacuum and Close

- Below 500 microns on a micron gauge, hold steady.
- Rising then settling = moisture. Pull down again.
- Insulate after the test passes. Seal every seam.

NEVER DO THIS :

- Braze a line still under pressure or gas
- Purge or test with air or oxygen
- Use a phos-copper rod on steel
- Skip the nitrogen, black soot inside the pipe is what kills the compressor

Contact Us

Enquire today for bulk orders and technical specifications.

+91 98191 34044 / +91 81698 08254

5/2 & 6/1, GIDC, Umbergaon, Valsad, Gujarat - 396171, INDIA

sales@parasmanicopper.com

RoHS

ECO FRIENDLY

Parasmani · PTP K-Series

www.parasmanicopper.com