
Cyber Dawn on the stand-in controller: every Phase 1 connection on one sheet


A dot is a joint. A line that hops over another does not touch it. Thick = wire you solder or plug. Brass = the STEMMA QT chain. Dotted = later. Ground symbols all mean the stand-in's G / GND pins. Pins are grouped by job; the inset shows wh

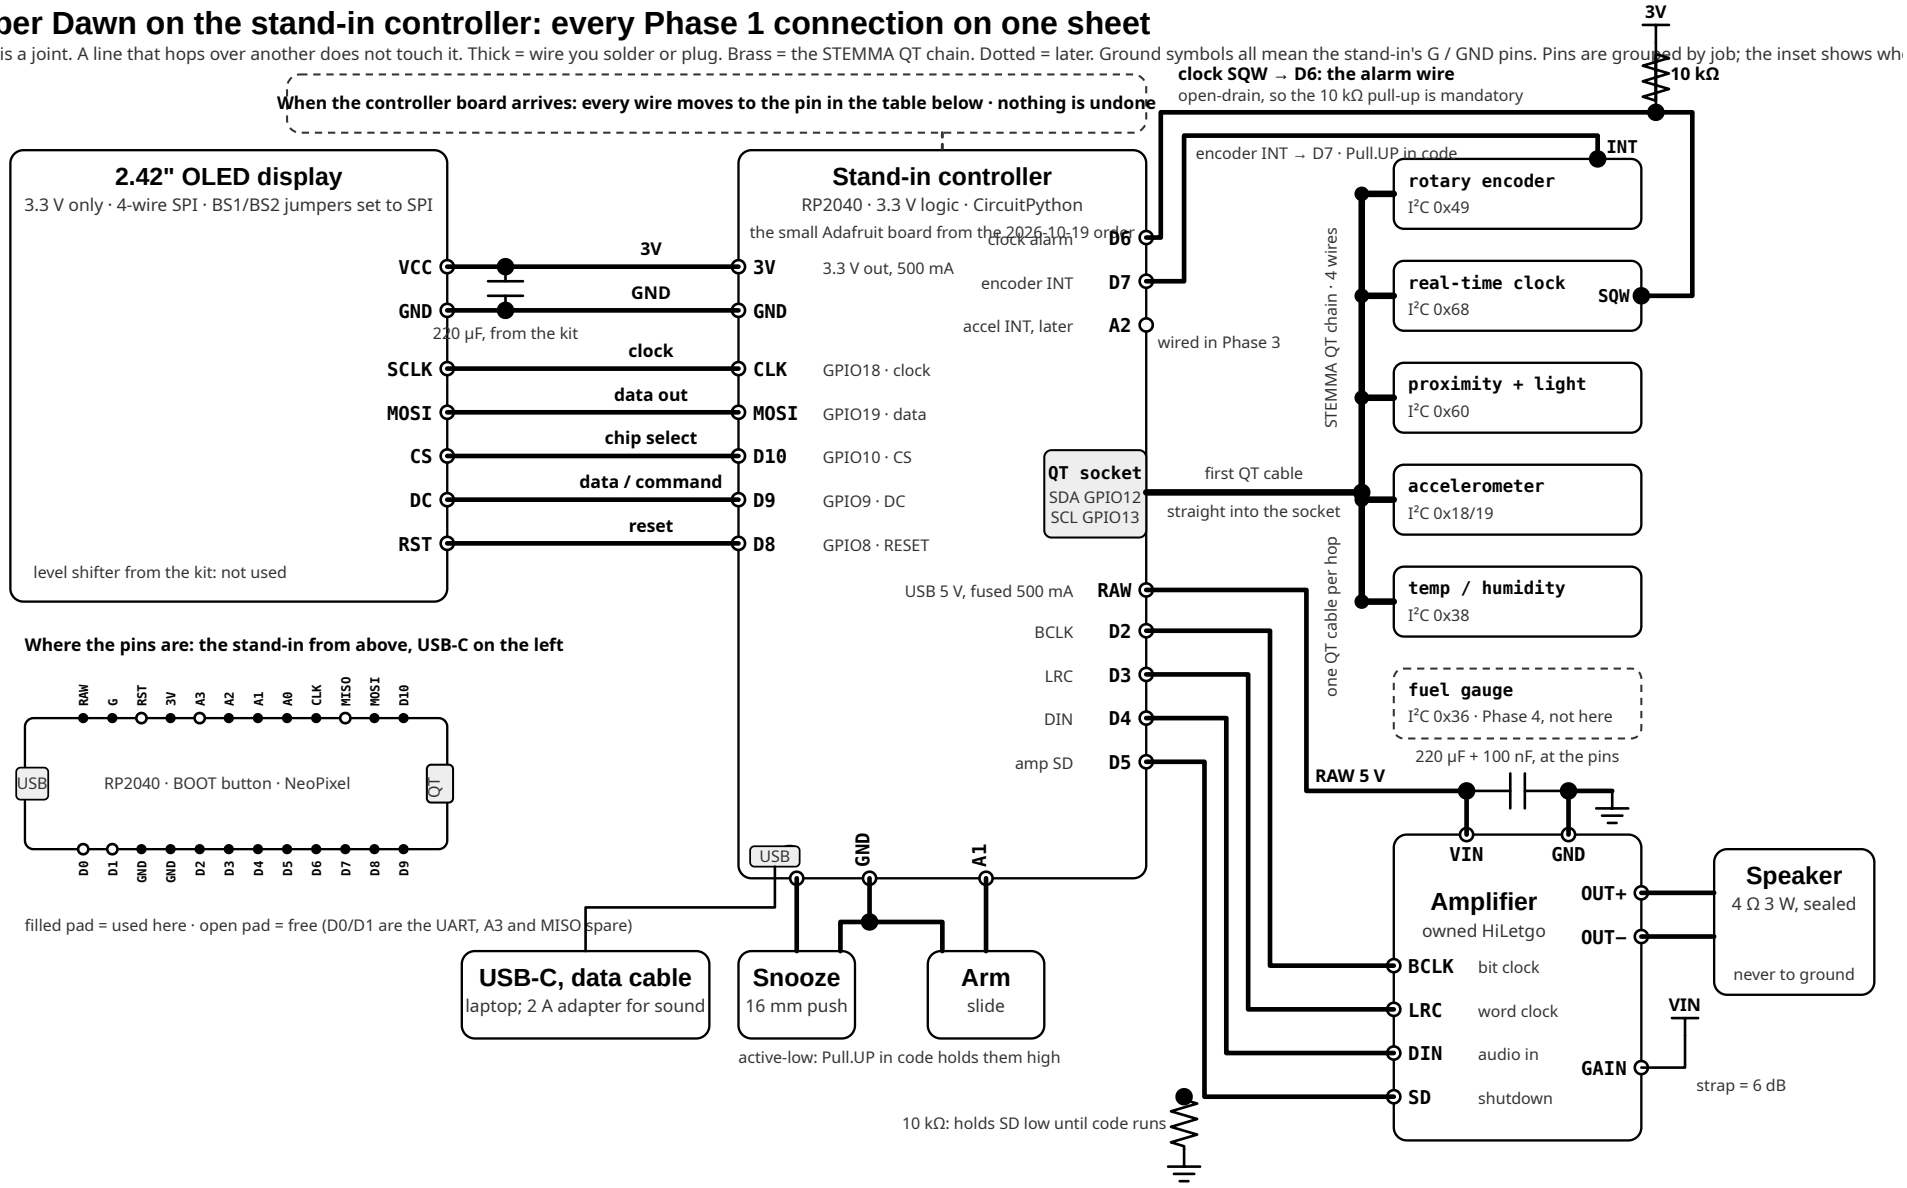

Pin facts from the board's Adafruit guide and its CircuitPython pins.c, read 2026-10-31. Not built. The pin audit and the line-clearance check in gen/wiring_standin.py pass.

The same wiring on an 830-point breadboard: where every pin and every wire end goes

Columns are numbered as on the board. The stand-in straddles the trench, columns 1-12: top-edge pins in row c, bottom-edge pins in row g.
Only the holes a wire ends in are real; the drawn path is a plan. Colour = job. A small square is a header pin (filled = used); a dot is a wire end.

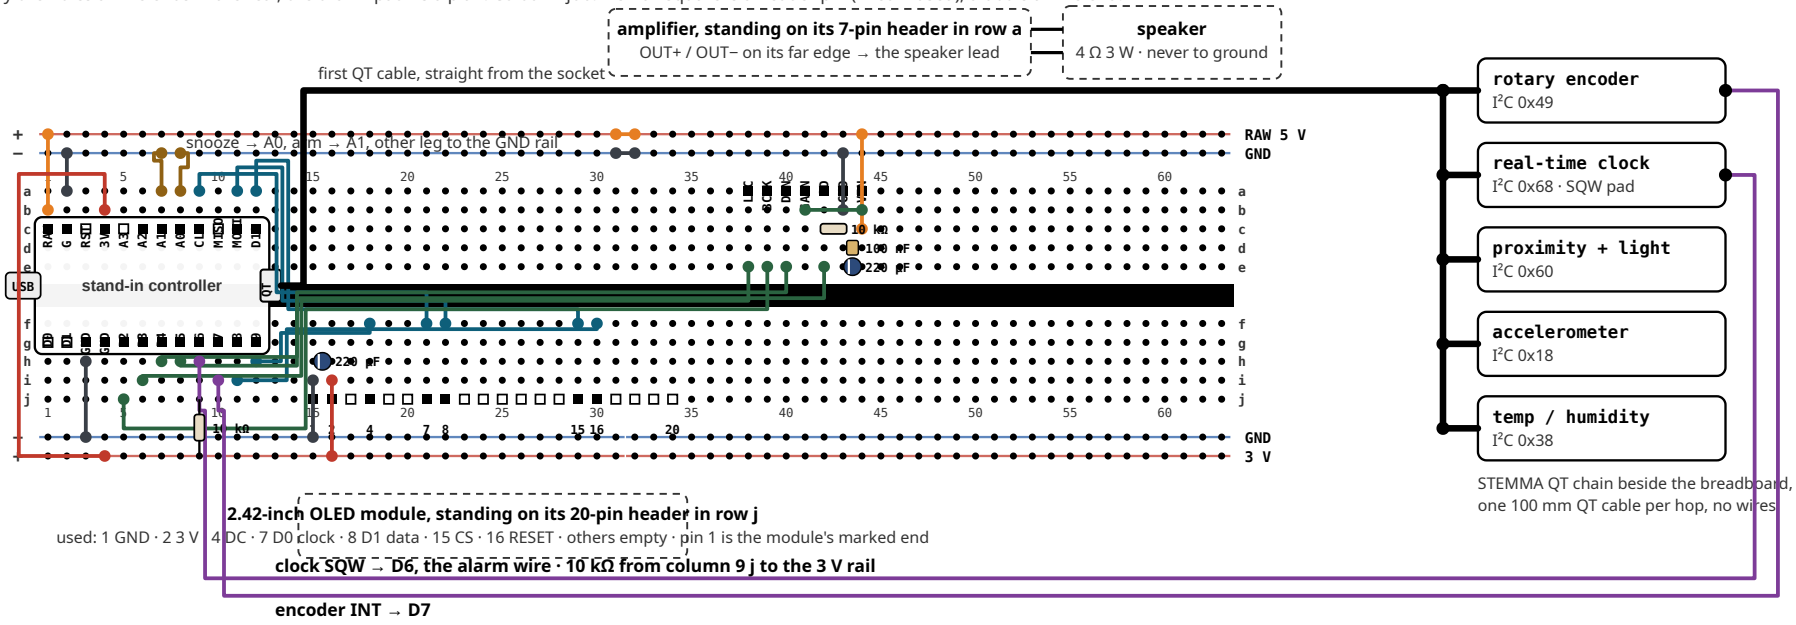

Rails: top pair = RAW 5 V and GND, bottom pair = 3 V and GND. The 3 V rail is fed by the one wire that goes around the USB end of the stand-in.
The two top rails are bridged across the board's middle split. The OLED's 220 µF sits at its pins 1-2; the amp's 220 µF + 100 nF across GND-VIN.