
BED FRAME


ASSEMBLY INSTRUCTIONS
MODEL NO.006

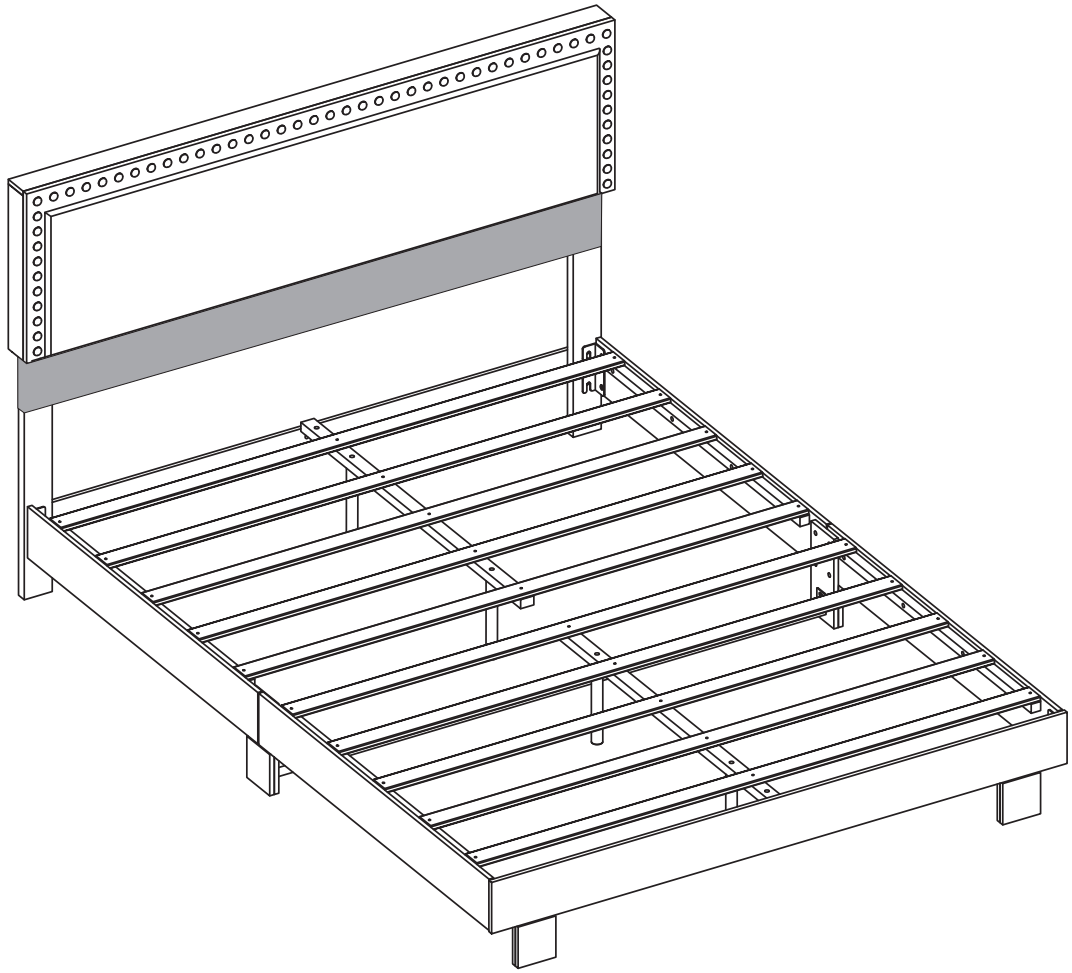

INSTALLATION VIDEO

Please scan QR code with iOS or Android phone camera,
click the link to play the installation video.
If QR code is damaged, please contact us to get installation video.
Ifno access for cell phone scanner, please try other APP.


006F/Q installation video

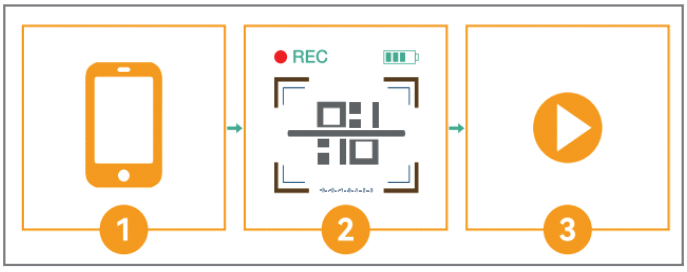


CAUTION:


- Please do not open the compress packaging until your sofa frame is completely assembled.
- Compress cushions or pillows need to fully fluffed within 72 hours for your perfect use.
- Please keep children away from plastic bag or any small pieces of stuff.
- After assembly is completed, don't forget to pat the back cushions and seat cushions, make them recovering better. And wait 72 hours for fully rebound.
- Cushions should be regularly maintained for perfect use.
- 2 people to install is recommend.
- 2 people to lift the sofa if you want to move it, do not push or pull directly
- You can assemble it with out packaging tools or home electric drill, as shown below, Electric Drill tool is not included.

Electric drill will improve your assembling efficiency.
You can use it if you have this tool, DO NOT overtight to prevent from damaging screws and slats/boards.

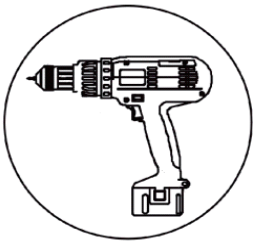

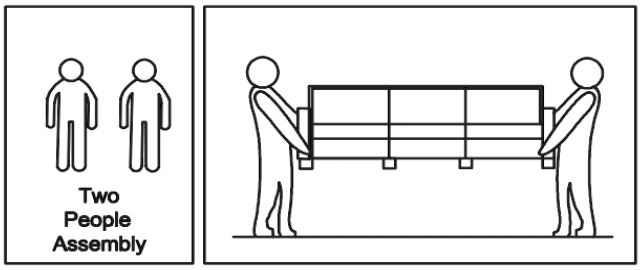


Components:

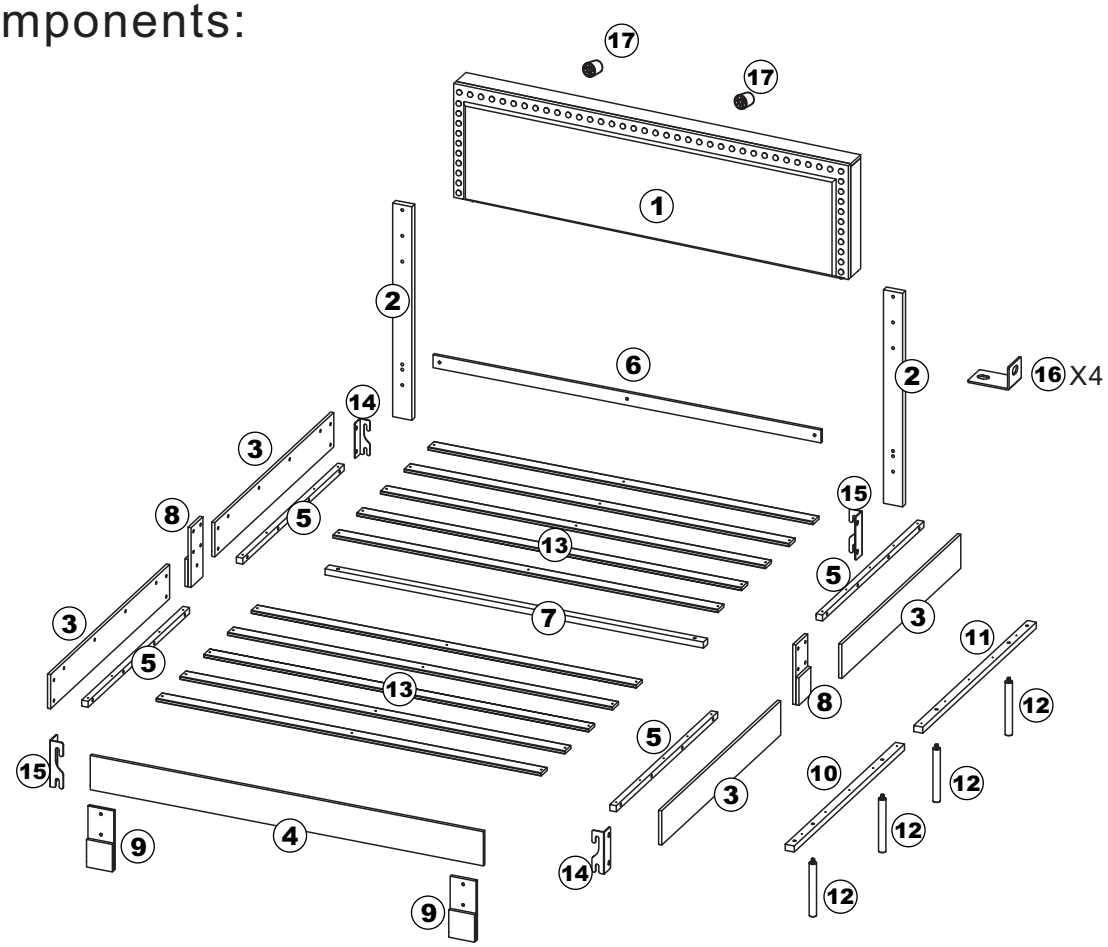


NOTE:Please do not completely tighten all the hardware until the entire assembly is complete!

ASSEMBLY TOOLS REQUIRED

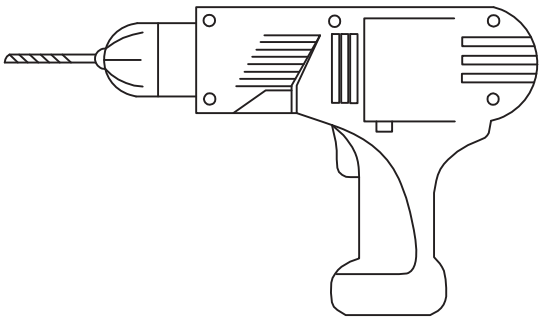



Electric Drill
(Not provide)

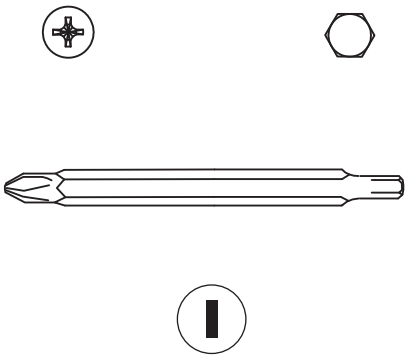


Bit
(Include in hardware bag)

Electric Drill tool is not included.
Electric drill will improve your assembling efficiency.
You can use it if you have this tool,
DO NOT over drill to provent from damaging screws and boards.

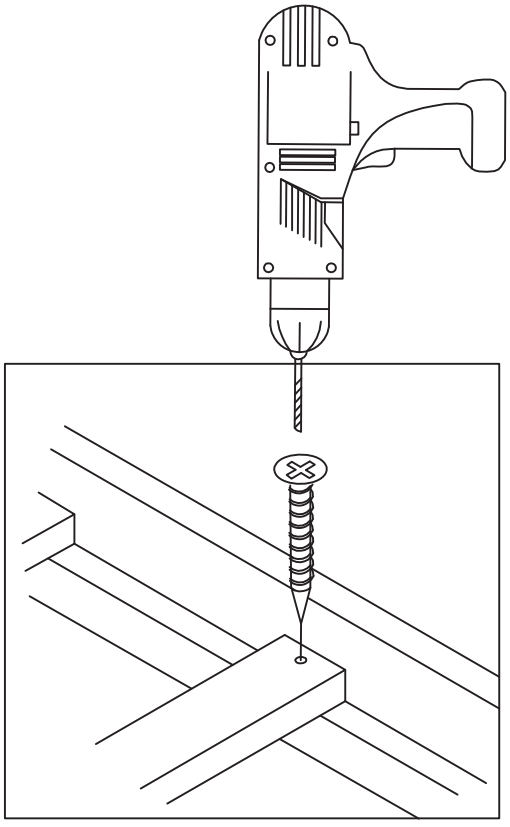


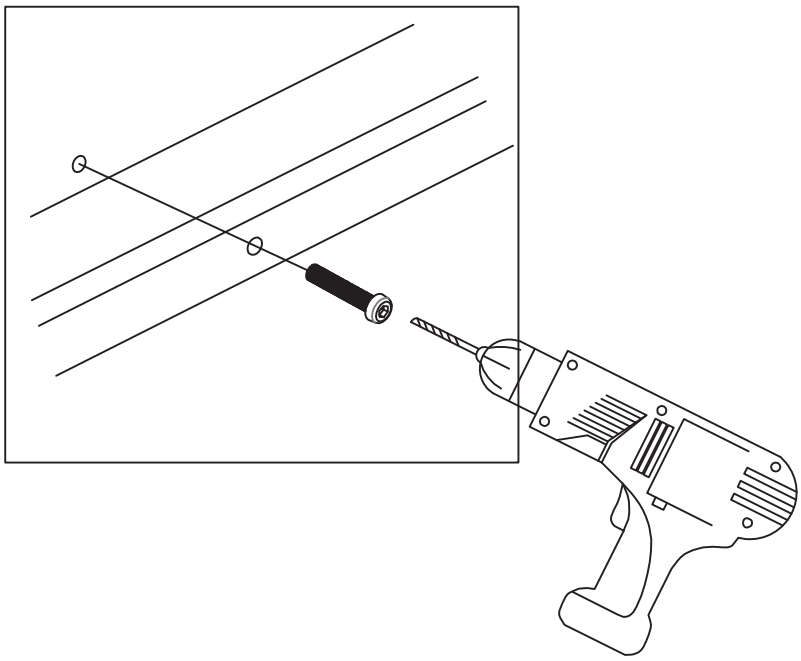


HARDWARE

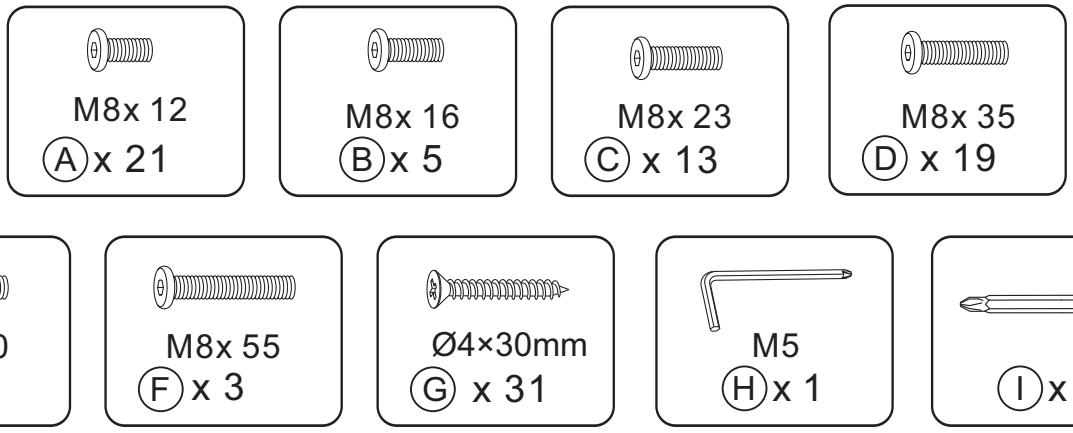

Step 1




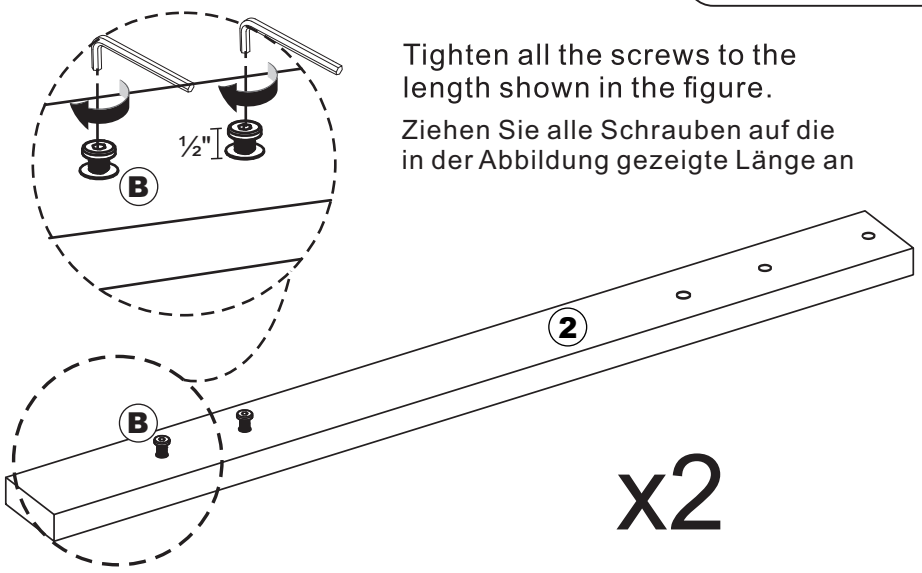


Tighten all the screws to the length shown in the figure.

Ziehen Sie alle Schrauben auf die in der Abbildung gezeigte Länge an


Step 2



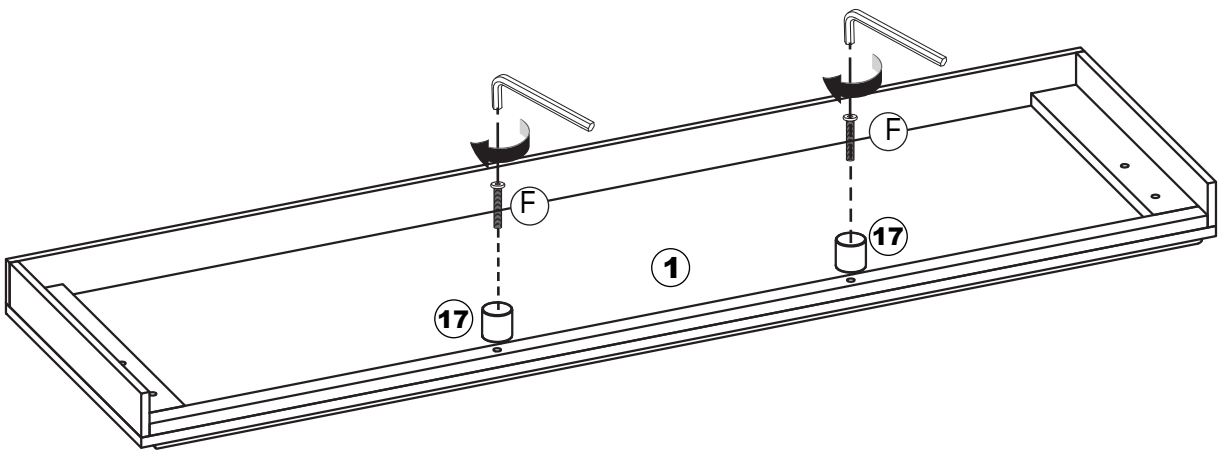


Step 3

E x4
M8X40

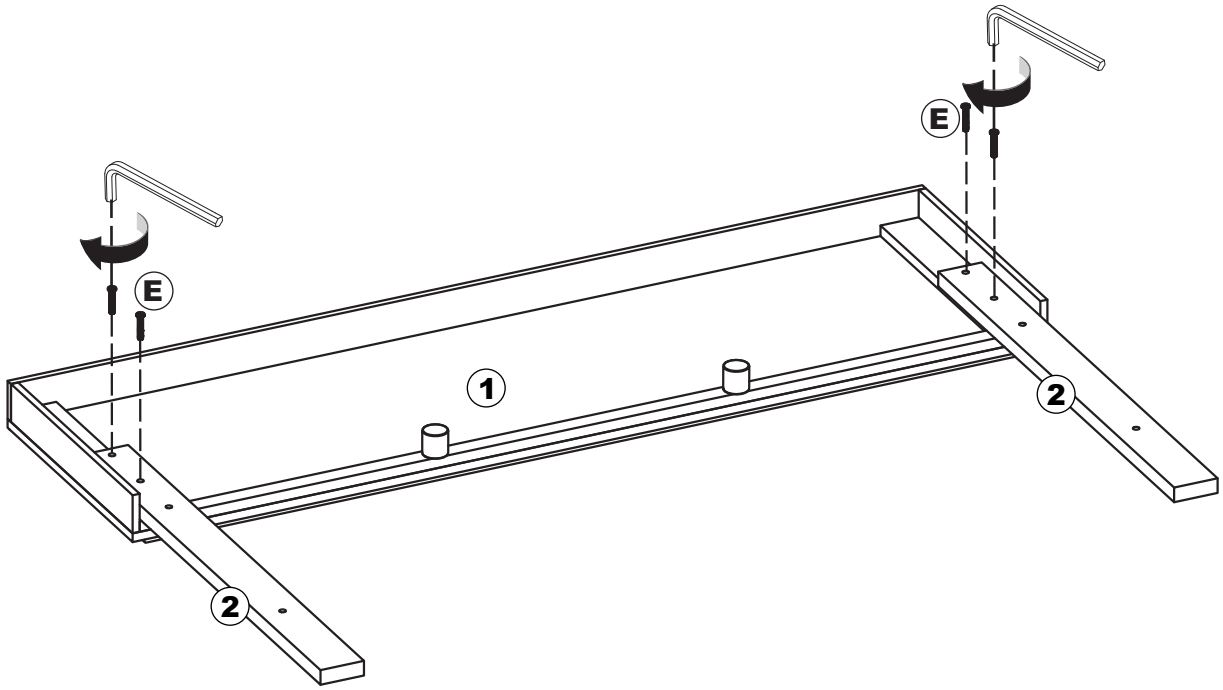


Step 4

D x2
M8X35

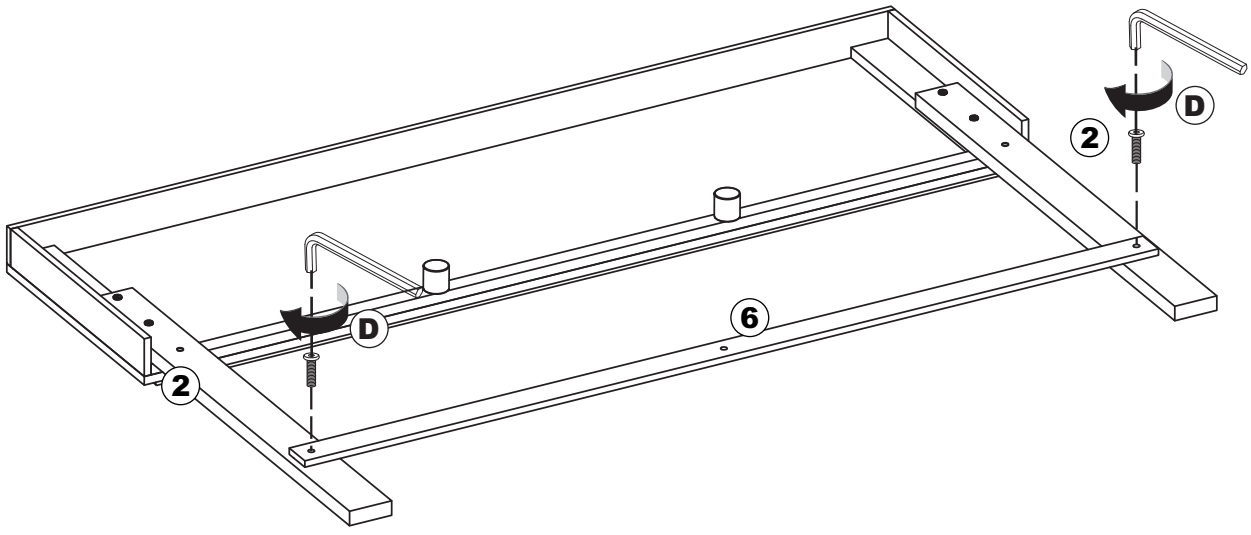


Step5

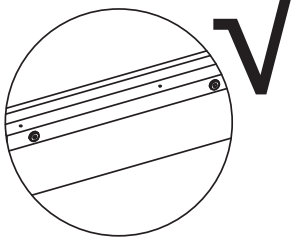


Please note that this lead hole is correct on top during installation


Bitte beachten Sie, dass dieses Bleilochoben während der Installation korrigieren

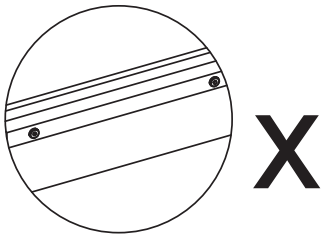


Please note during installation that this lead hole facing downwards is incorrect


Bitte beachten Sie bei der Installation, dass dieseBleiloch nach unten gerichtet ist falsch



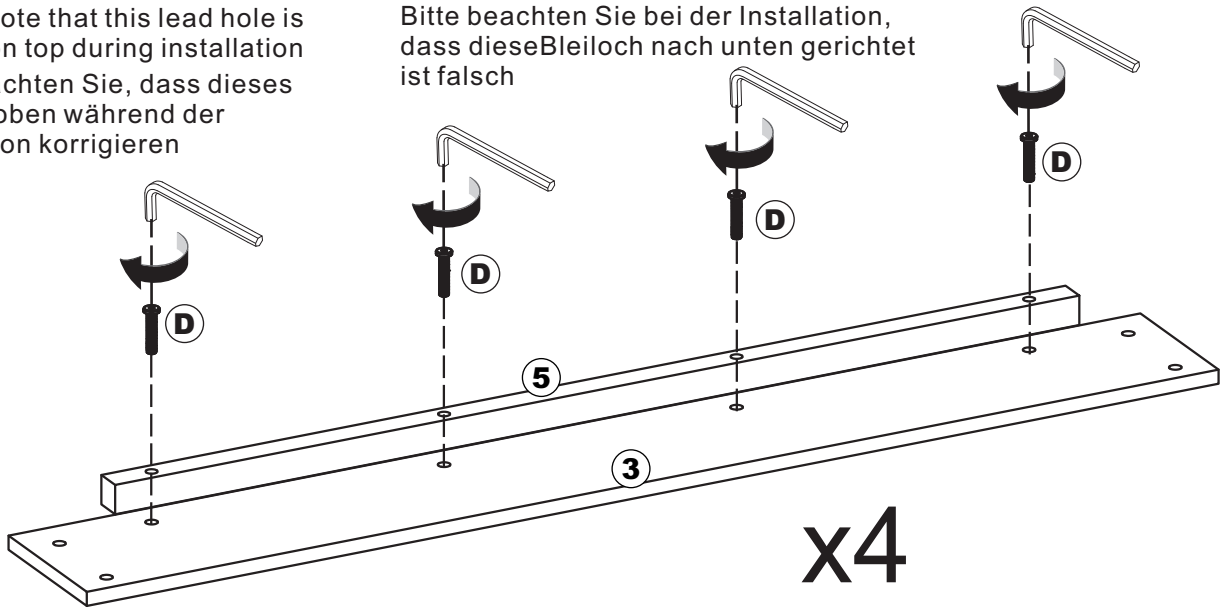

Step 6




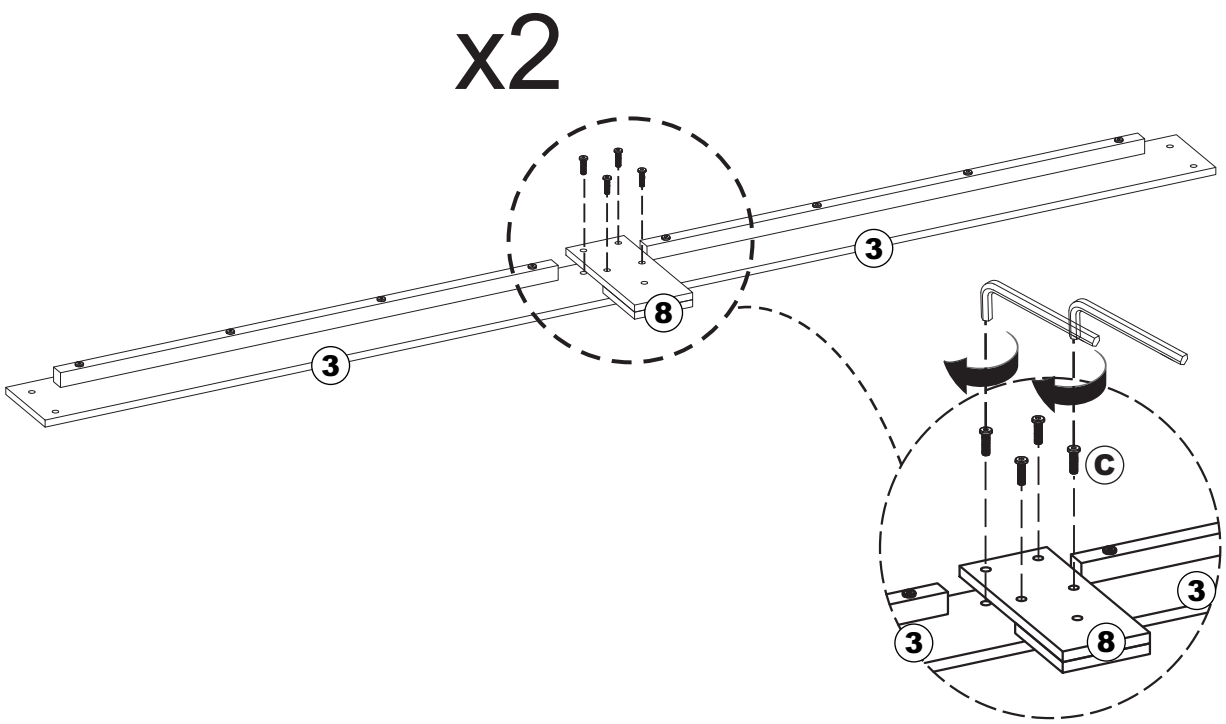


Step 7

A x8
M8X12

x2

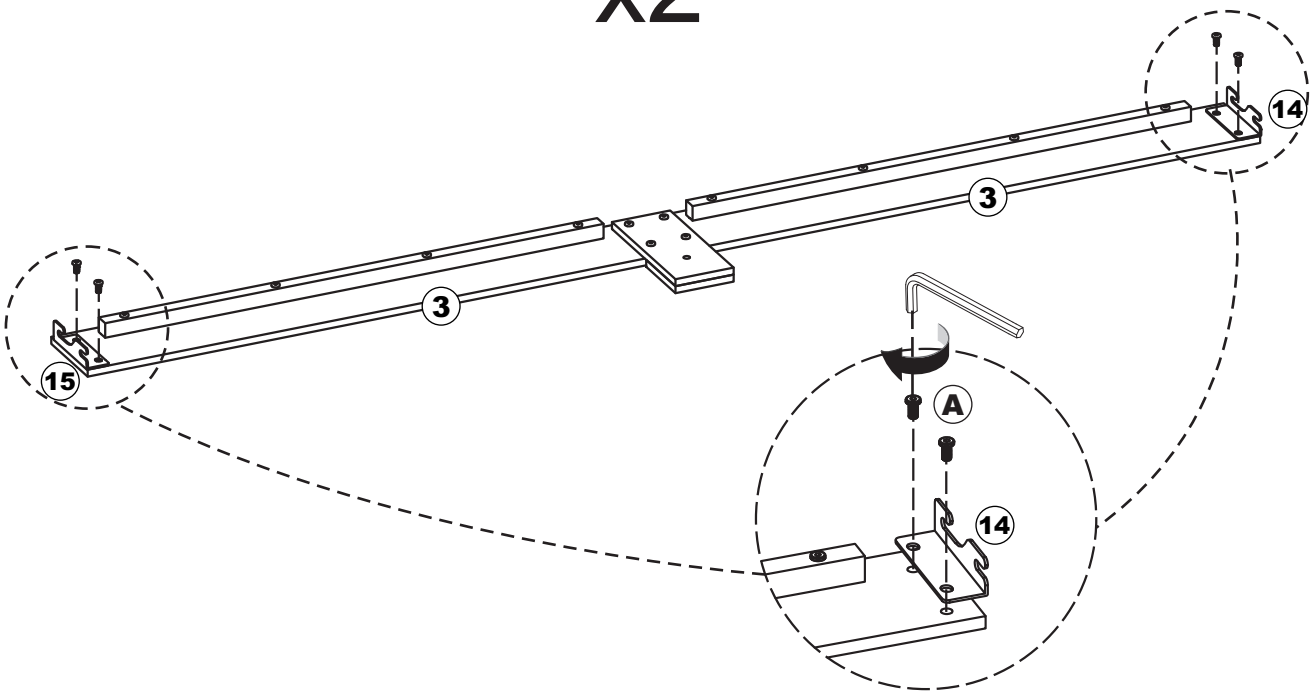


Step 8

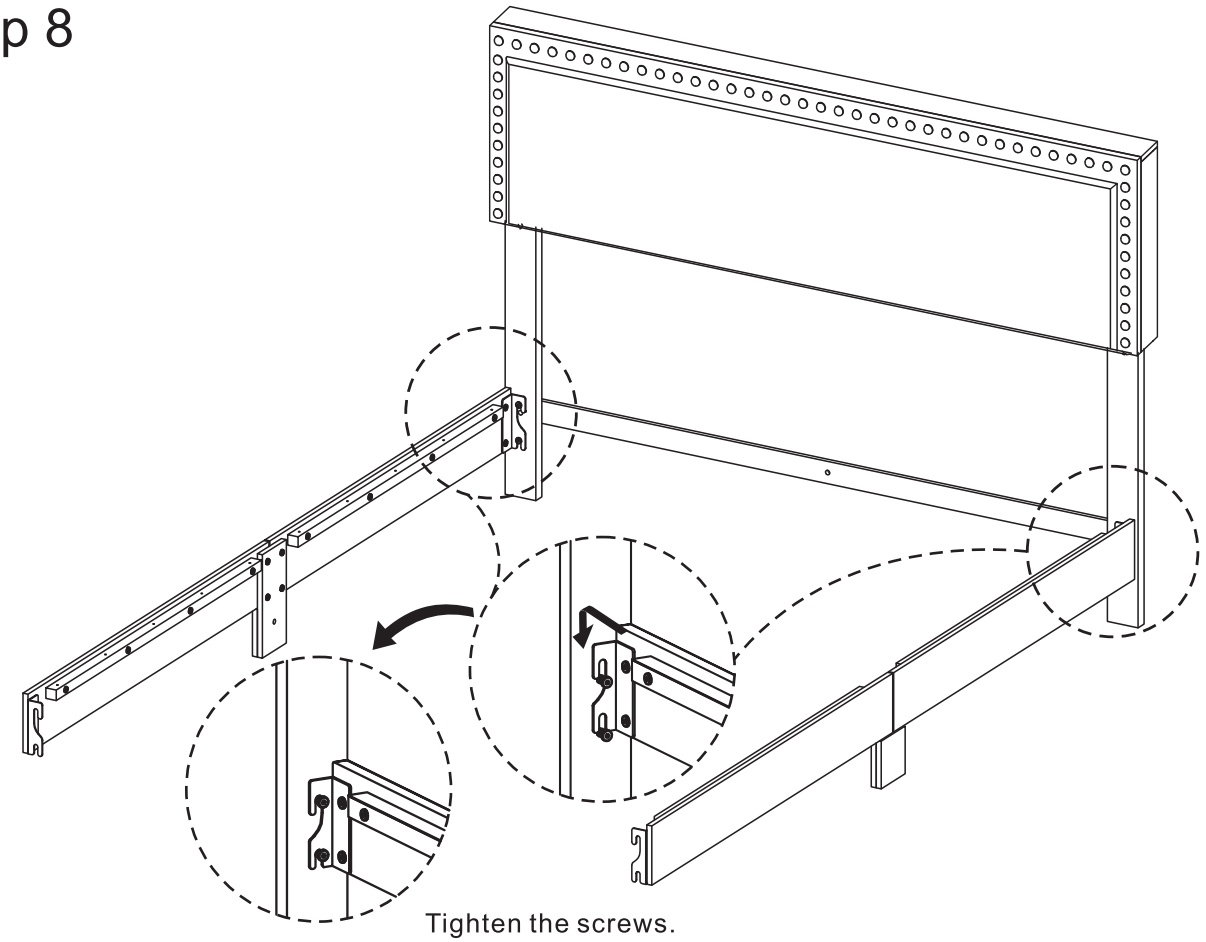

Tighten the screws.
Ziehen Sie die Schrauben an.


Step 9

Ⓐ x4
M8X12

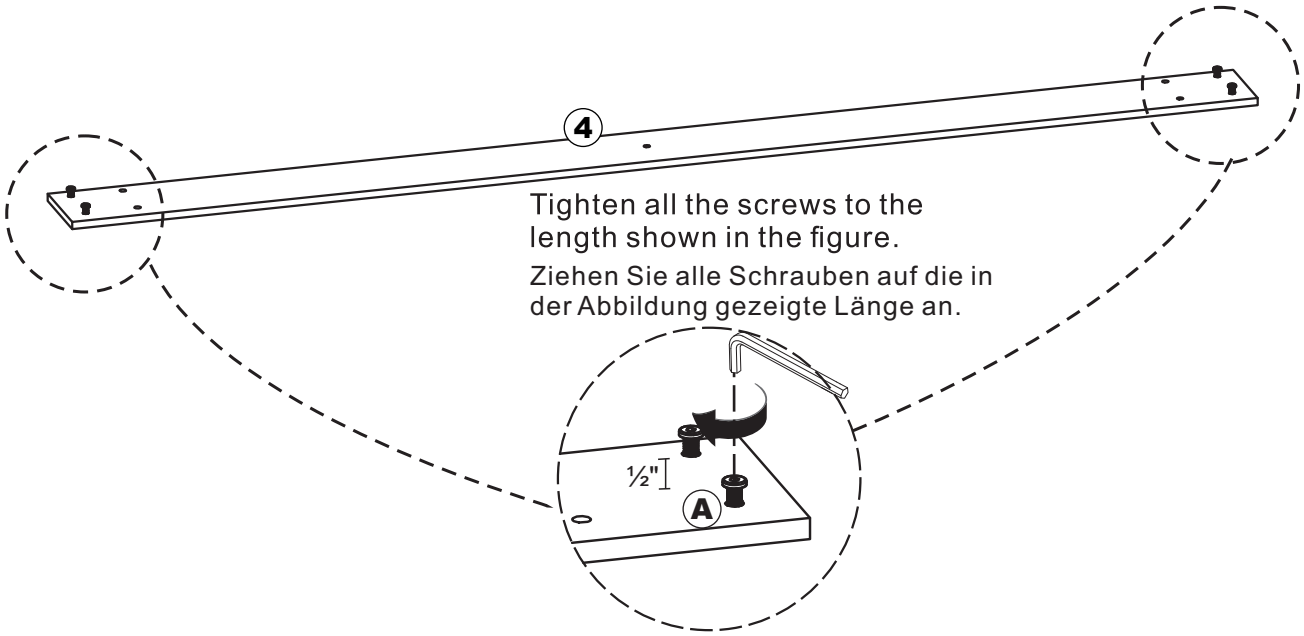


Step 10

Ⓒ x4
M8X23

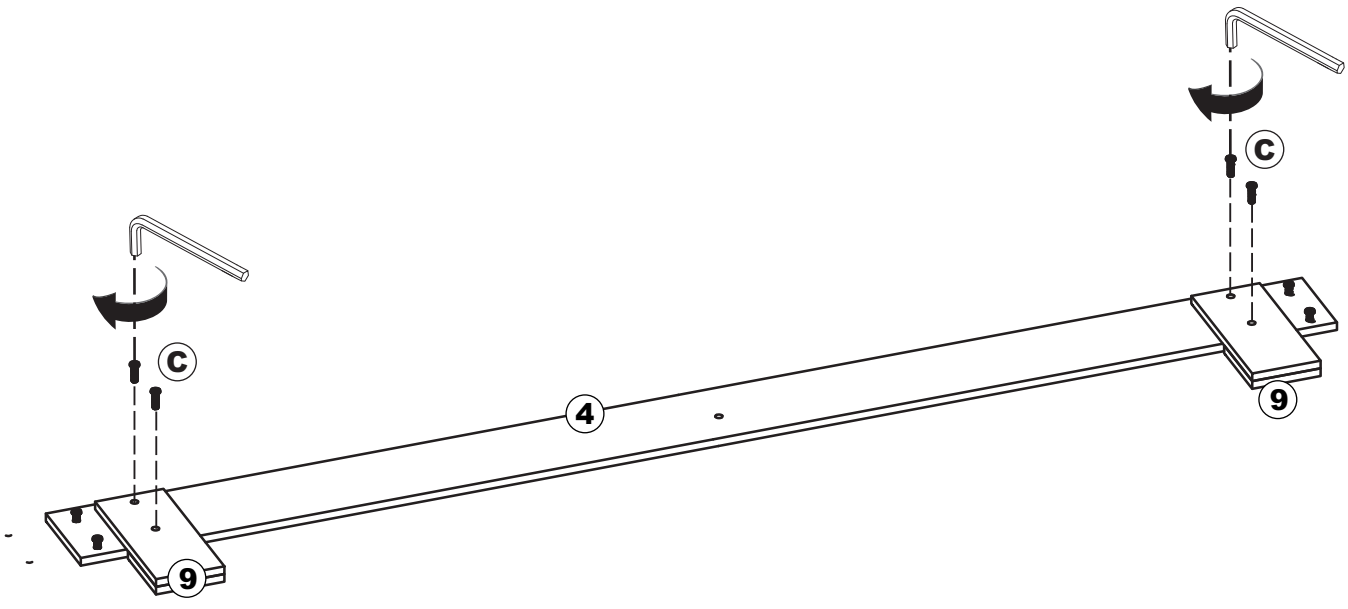



Step 11

Tighten the screws.
Ziehen Sie die Schrauben an.

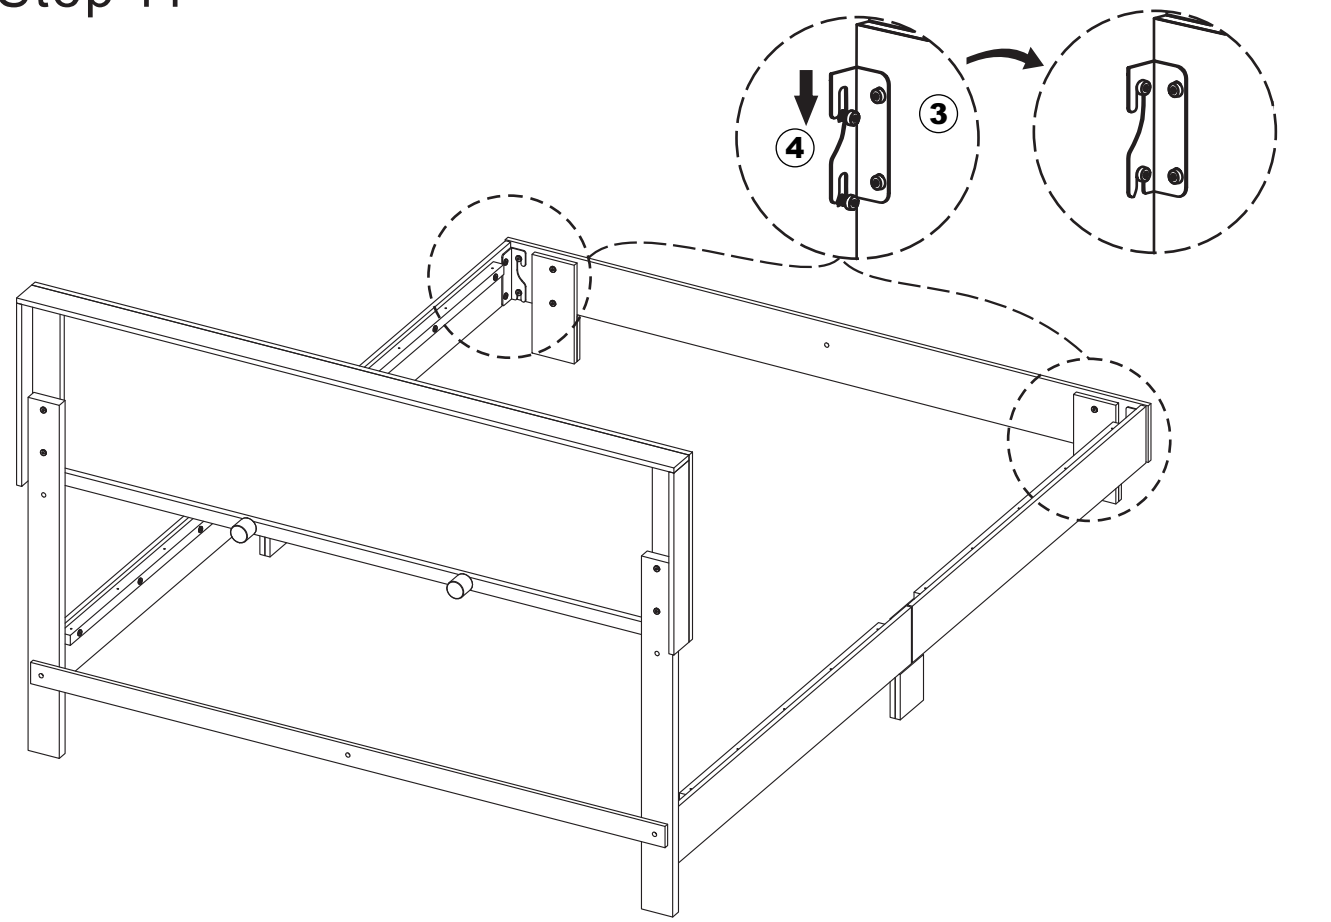


Step 12




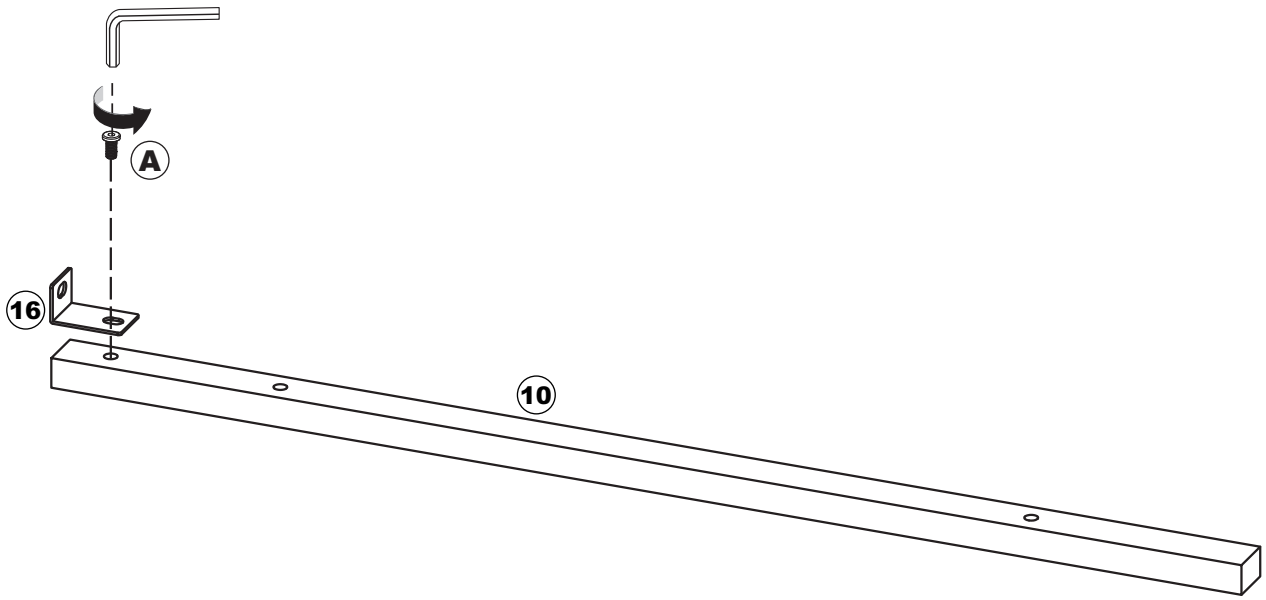


Step 13

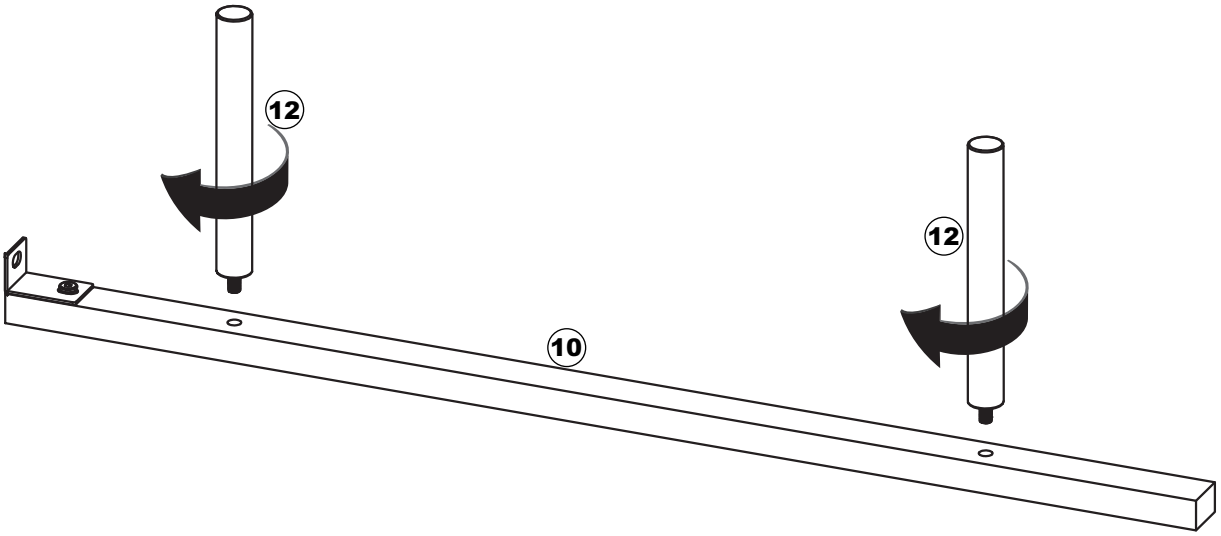


Step 14




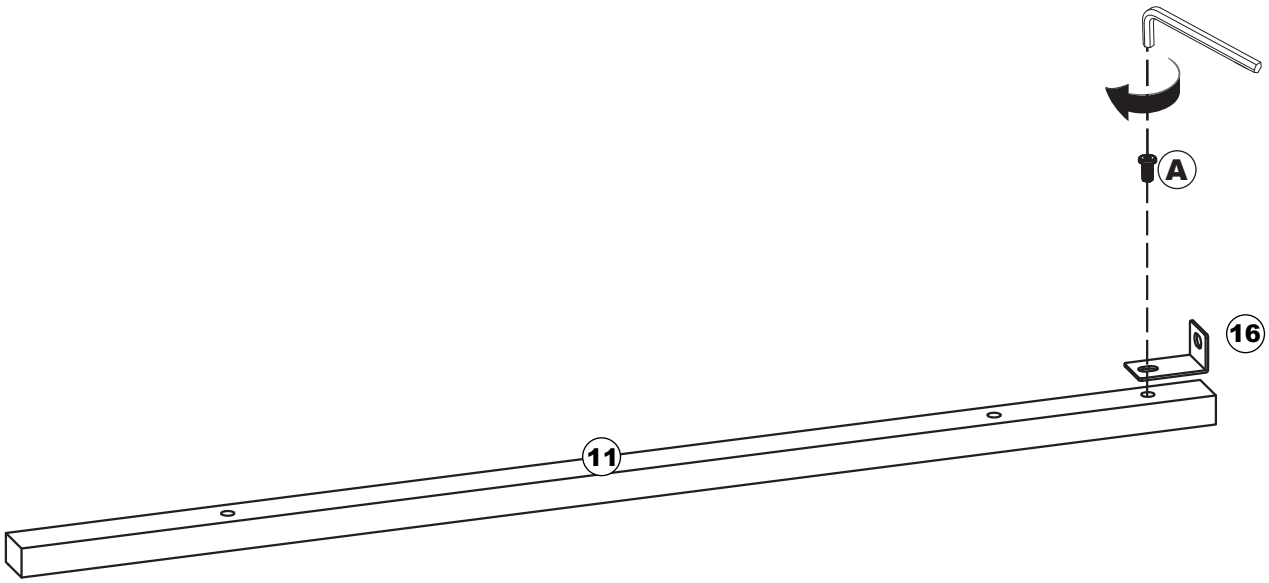


Step 15

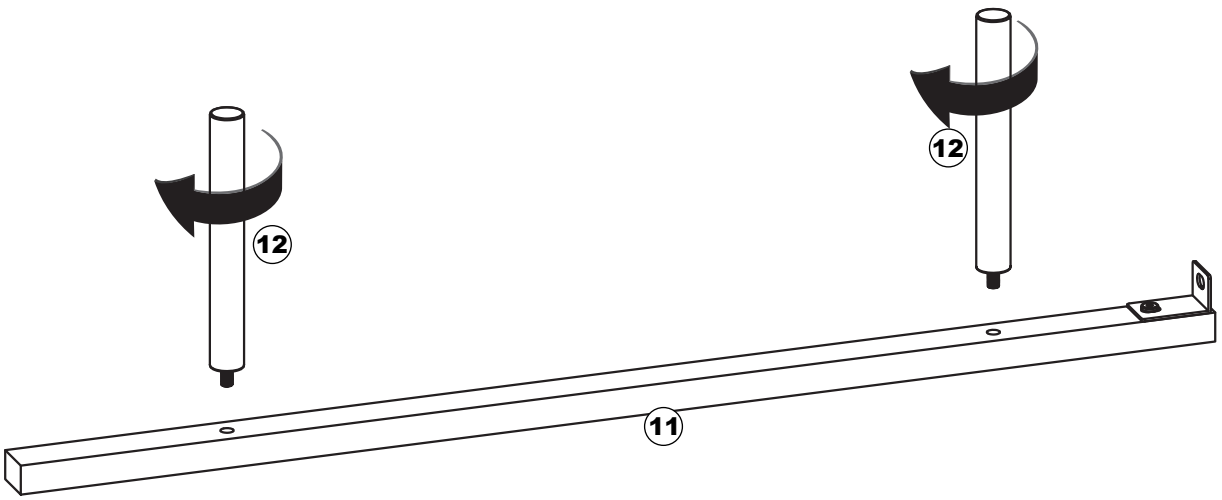


Step 16



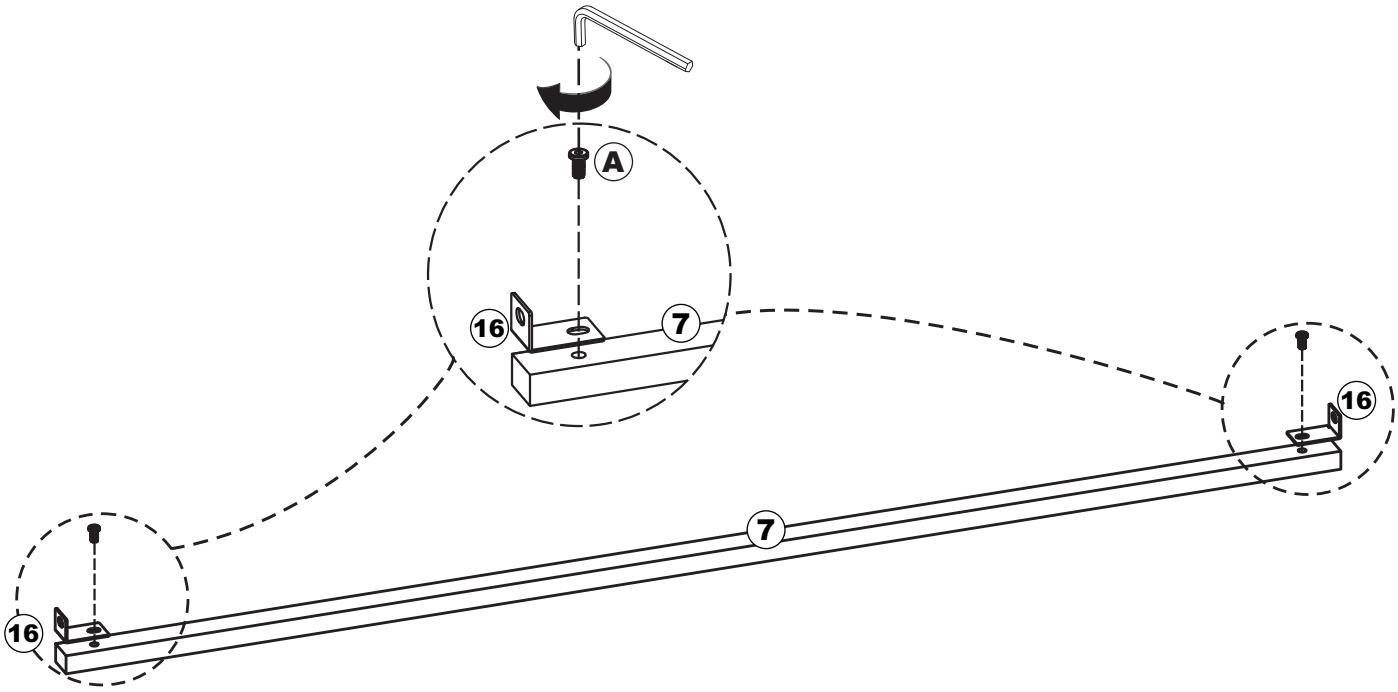


Step 17

A x2
M8X12

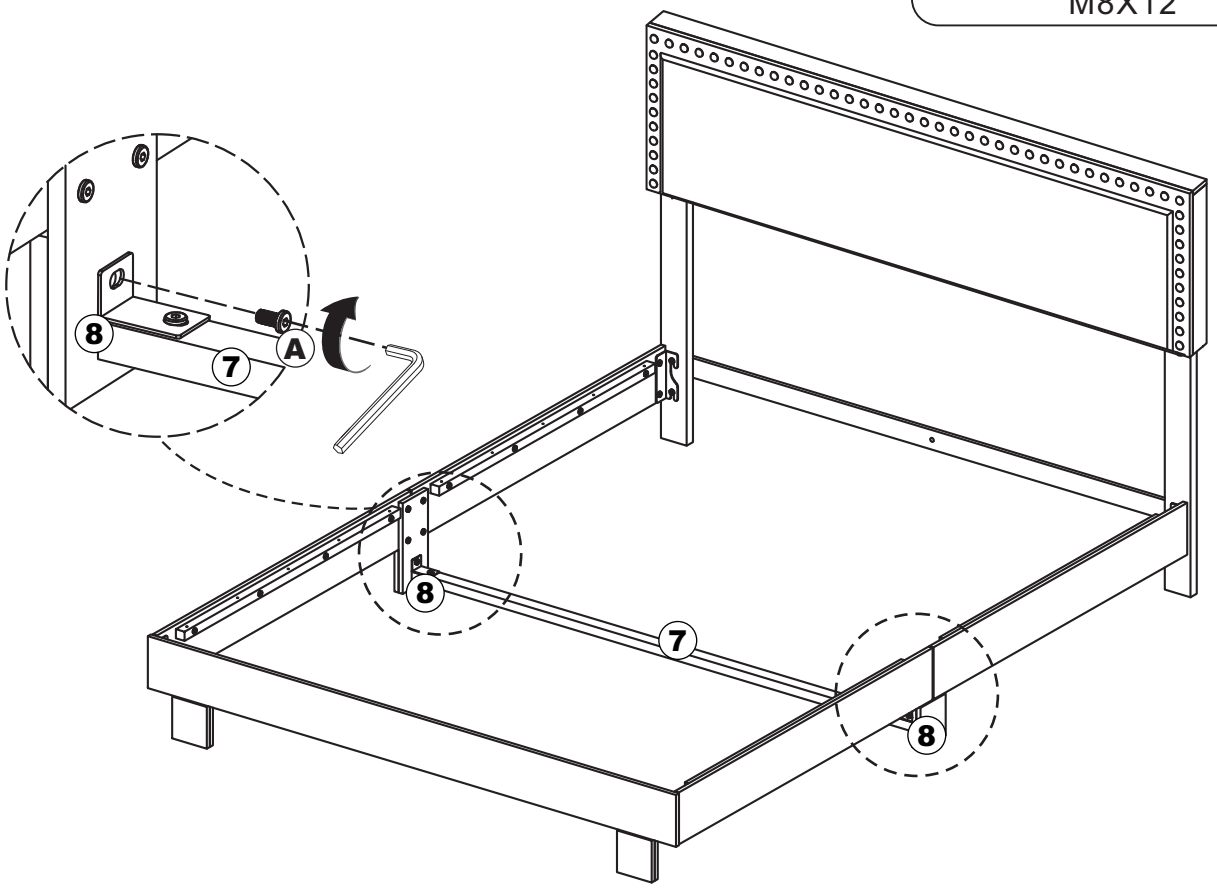


Step 18

A x2
M8X12

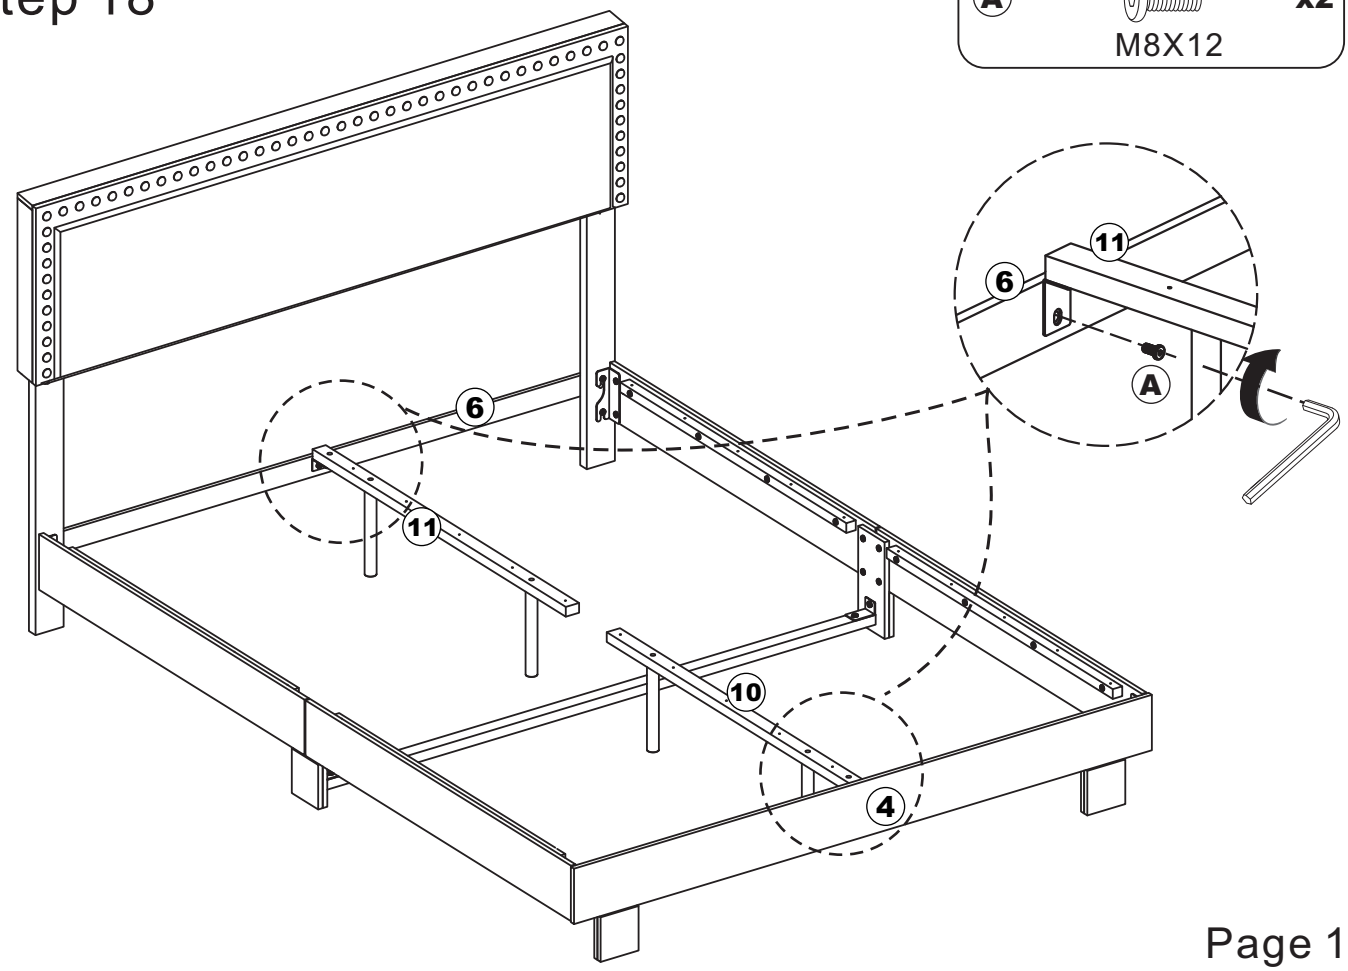


Step 19

G x6
Ø4×30mm

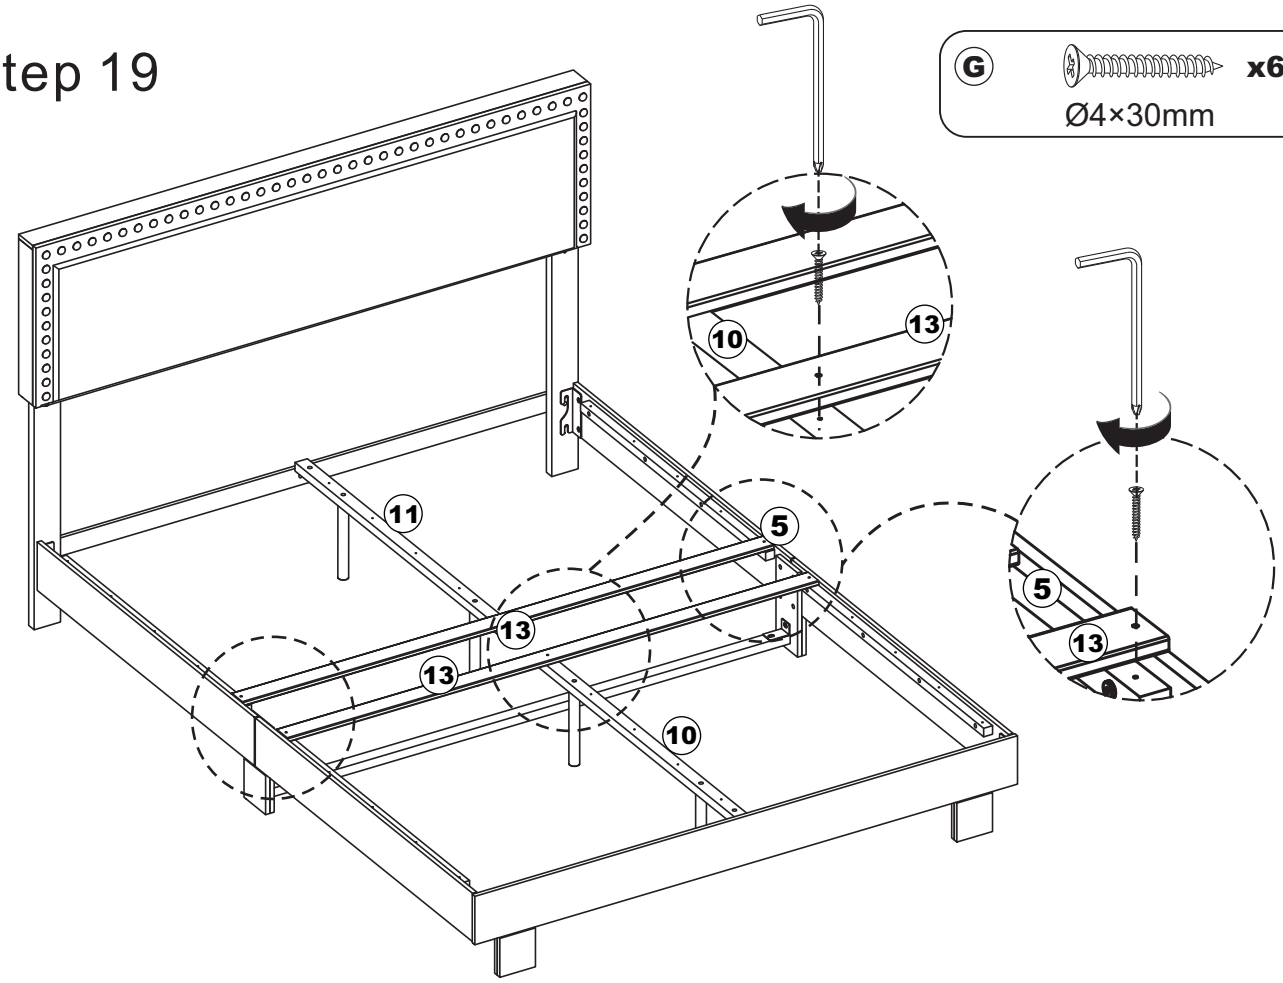


Step 20

G x24
Ø4×30mm

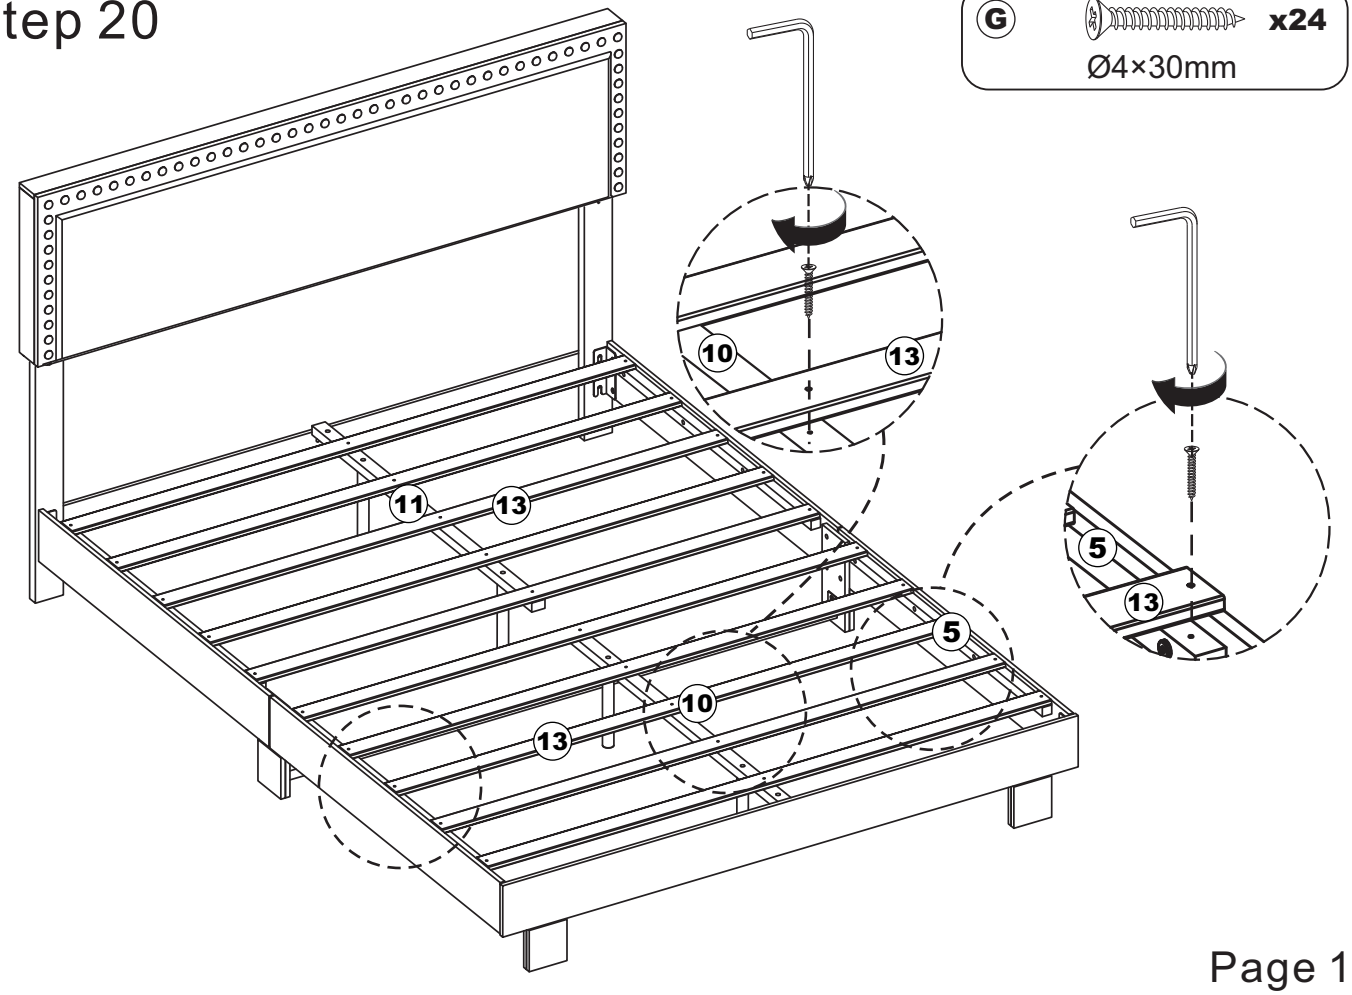

Step 21

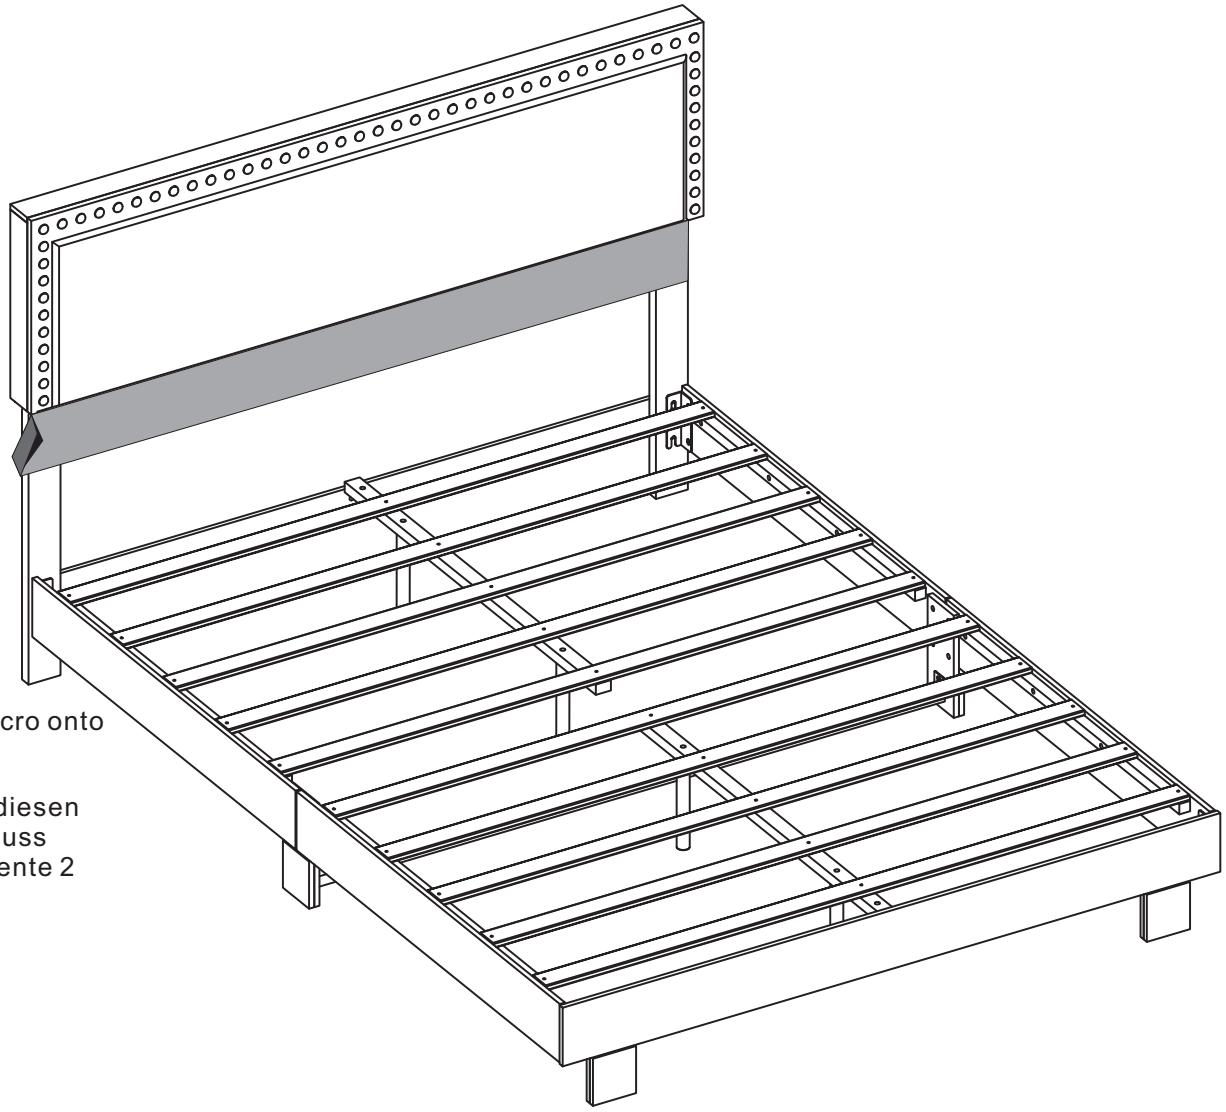

Stick this Velcro onto component 2

Kleben Sie diesen Klettverschluss aufKomponente 2