

FIG.1 LINE CIRCUIT

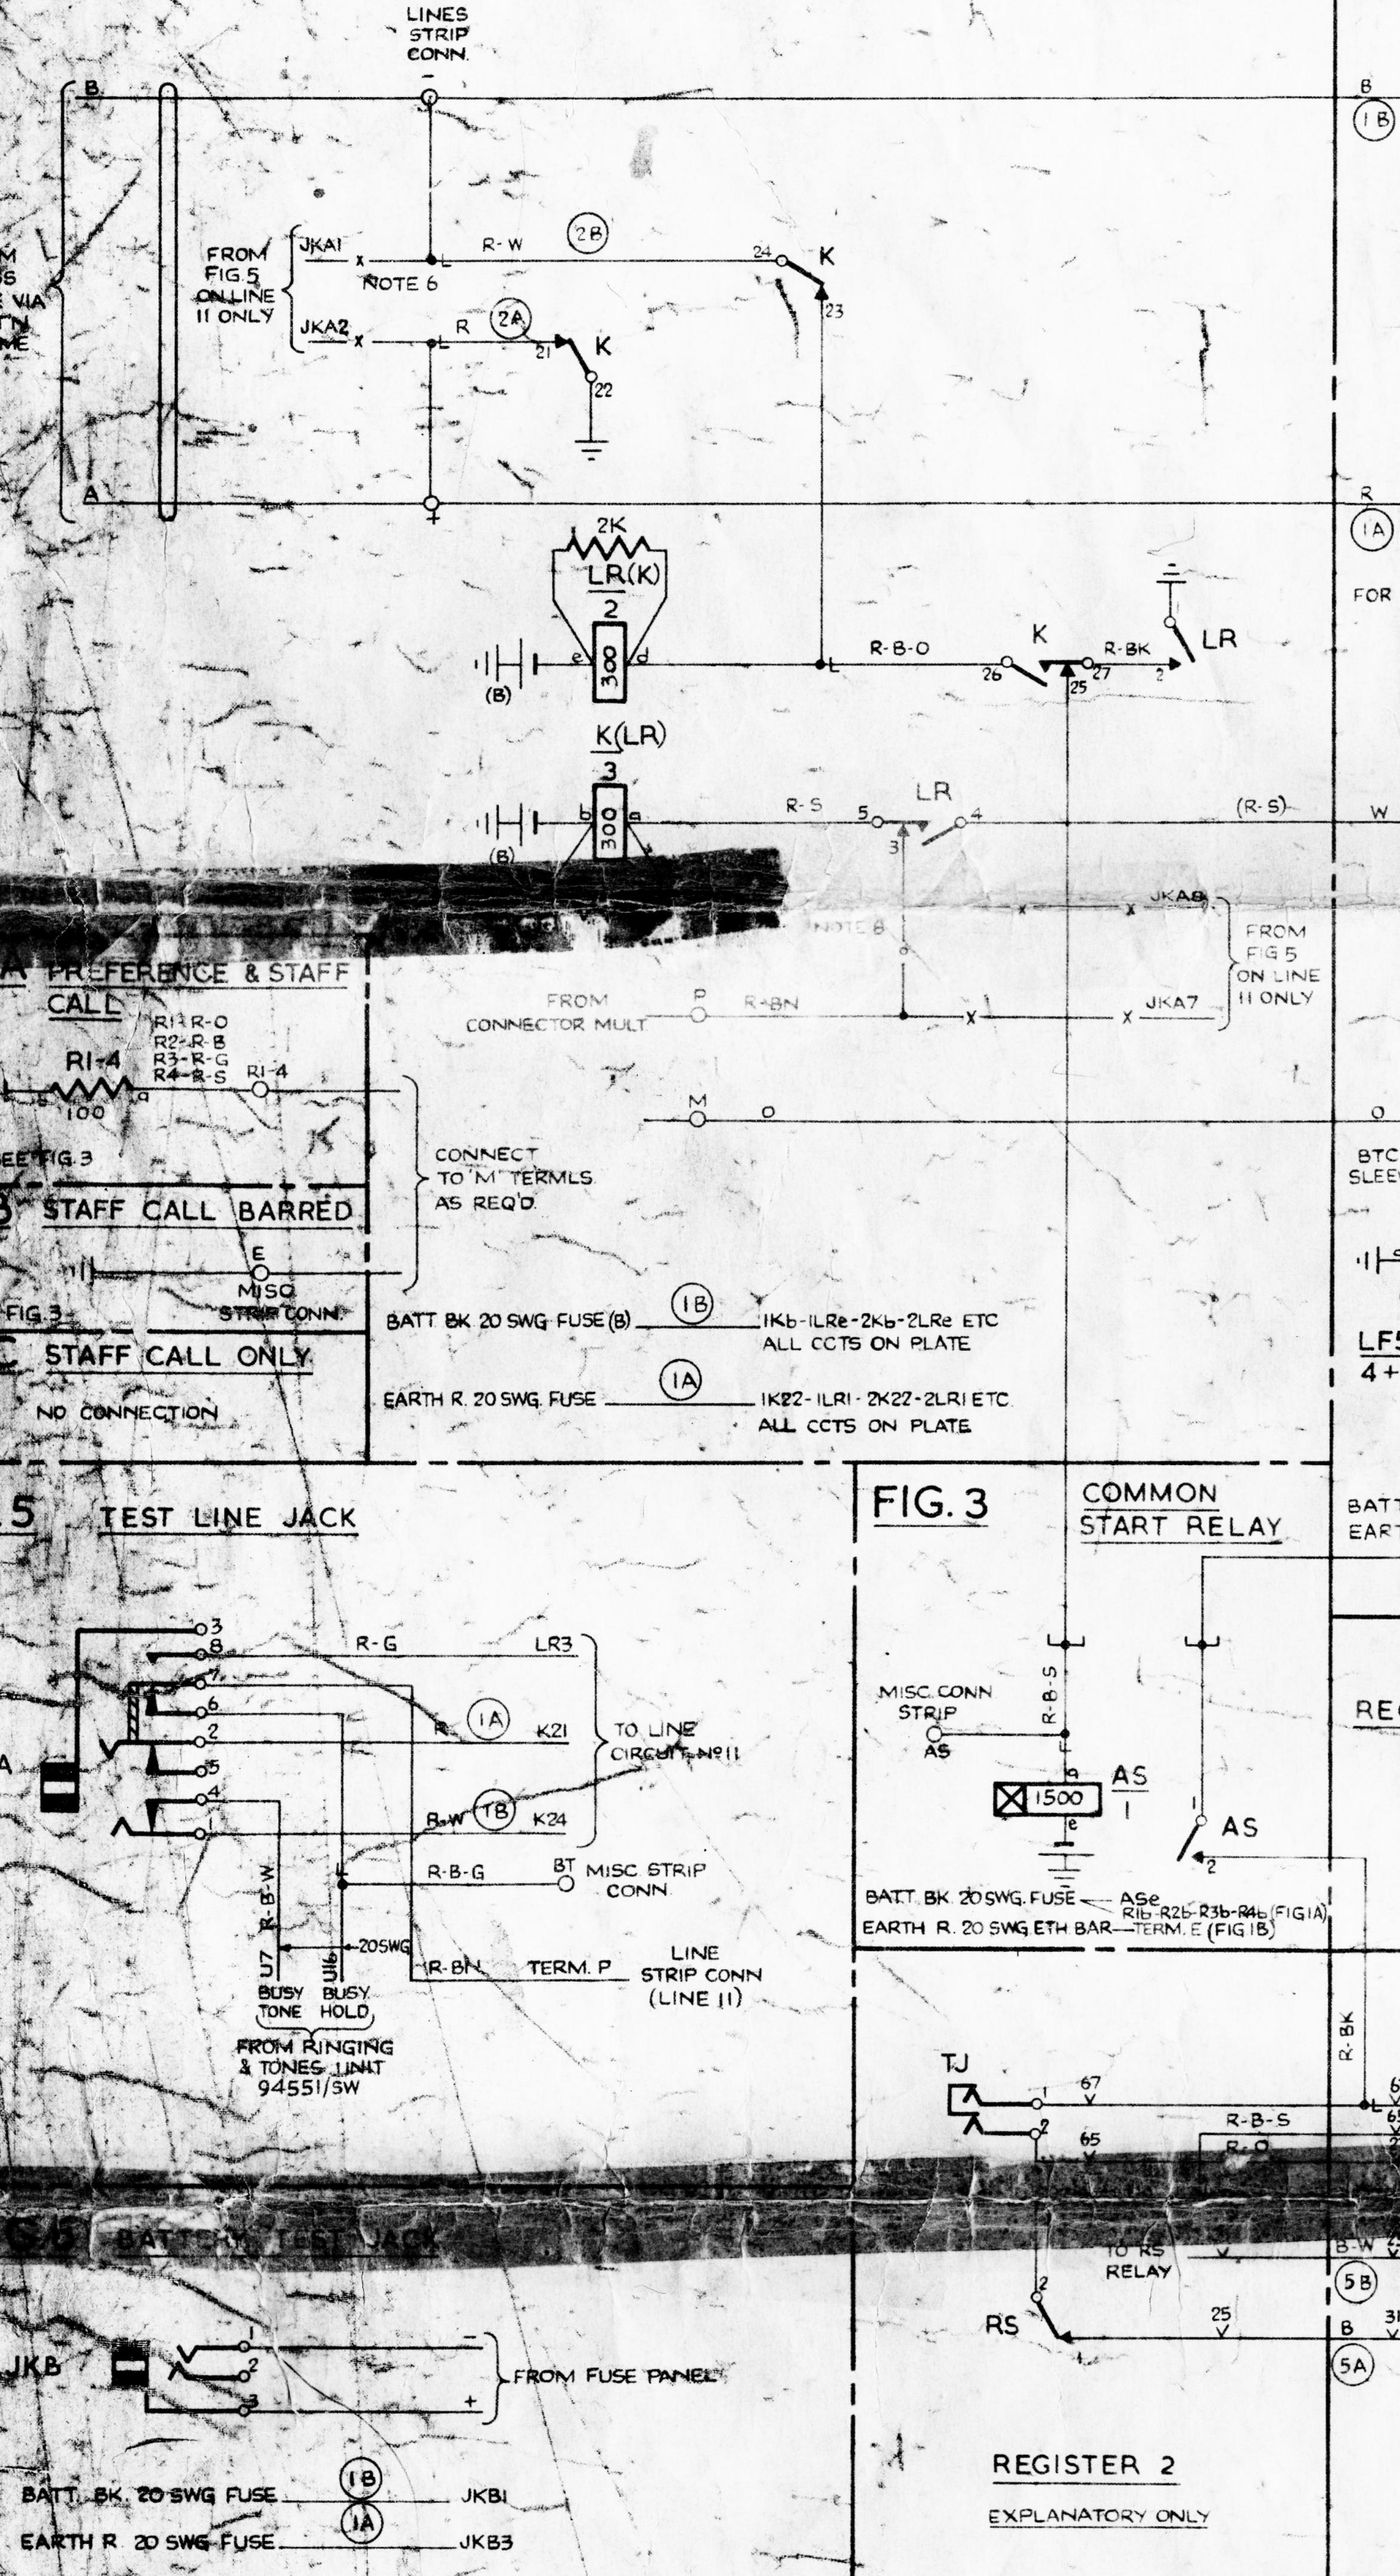
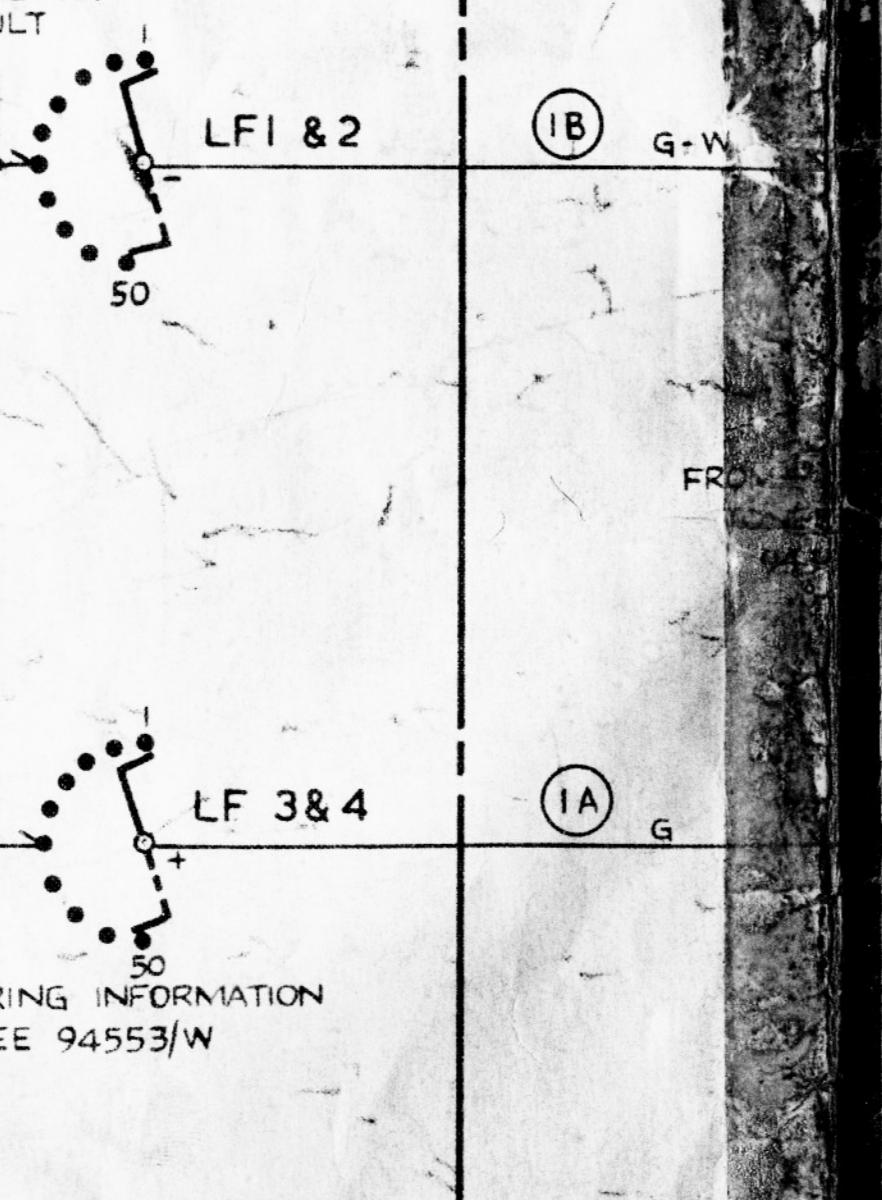
FIG.2B
LINE FINDER

FIG.2A CONNECTOR

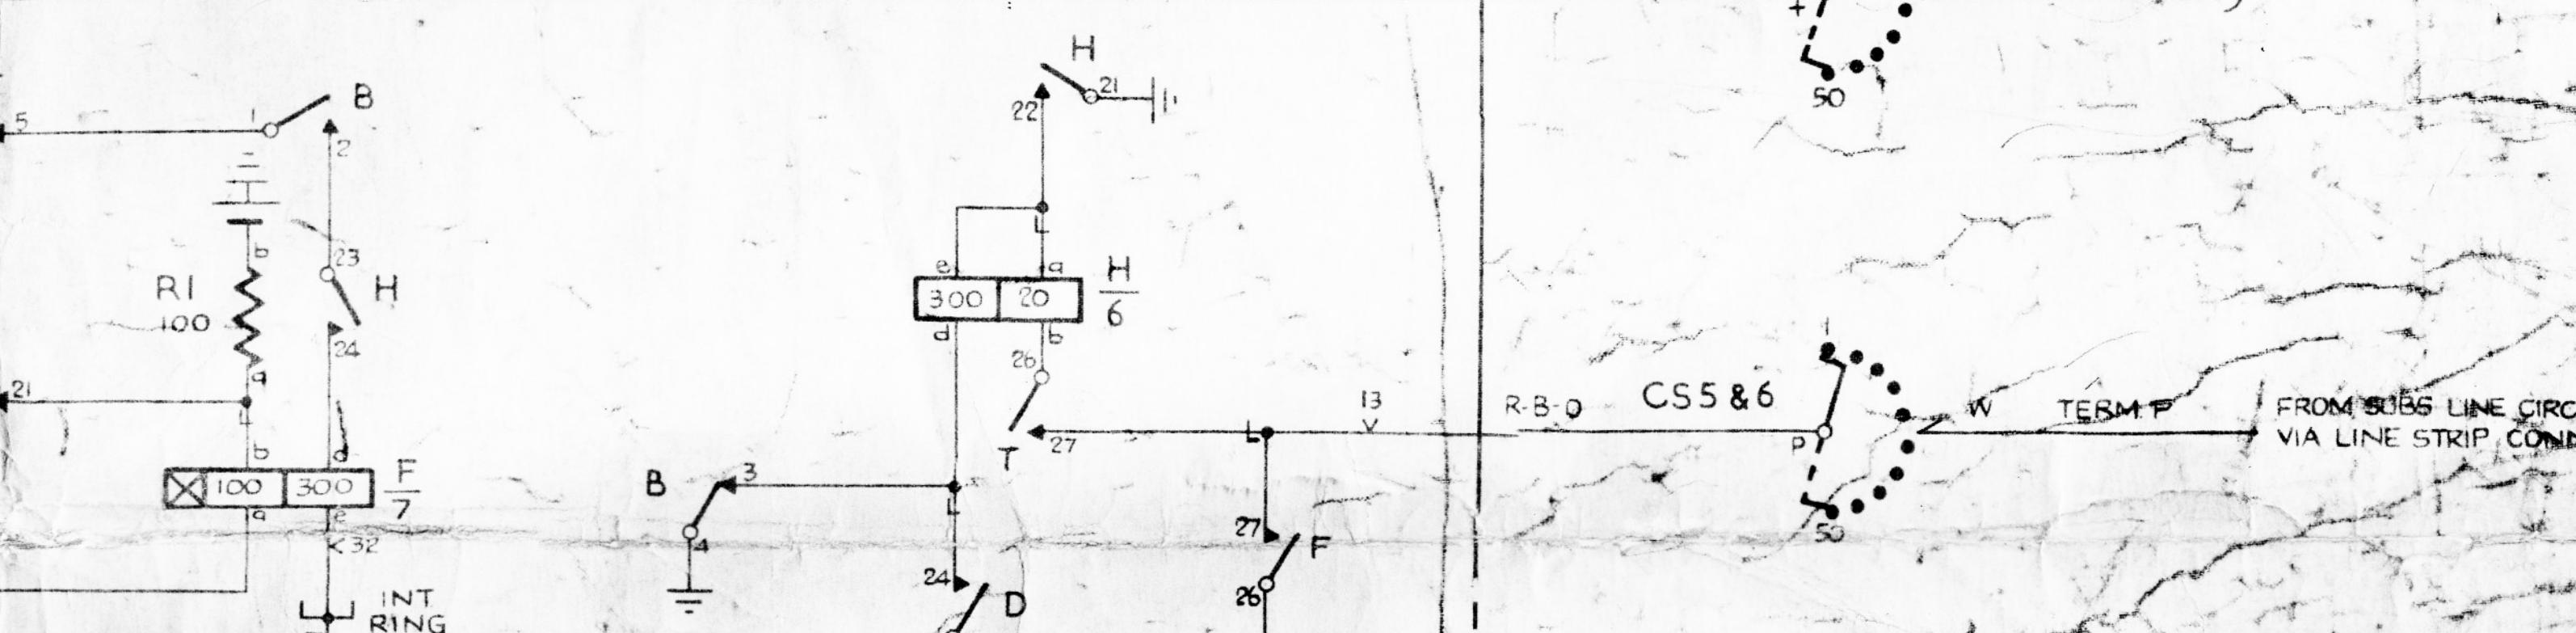
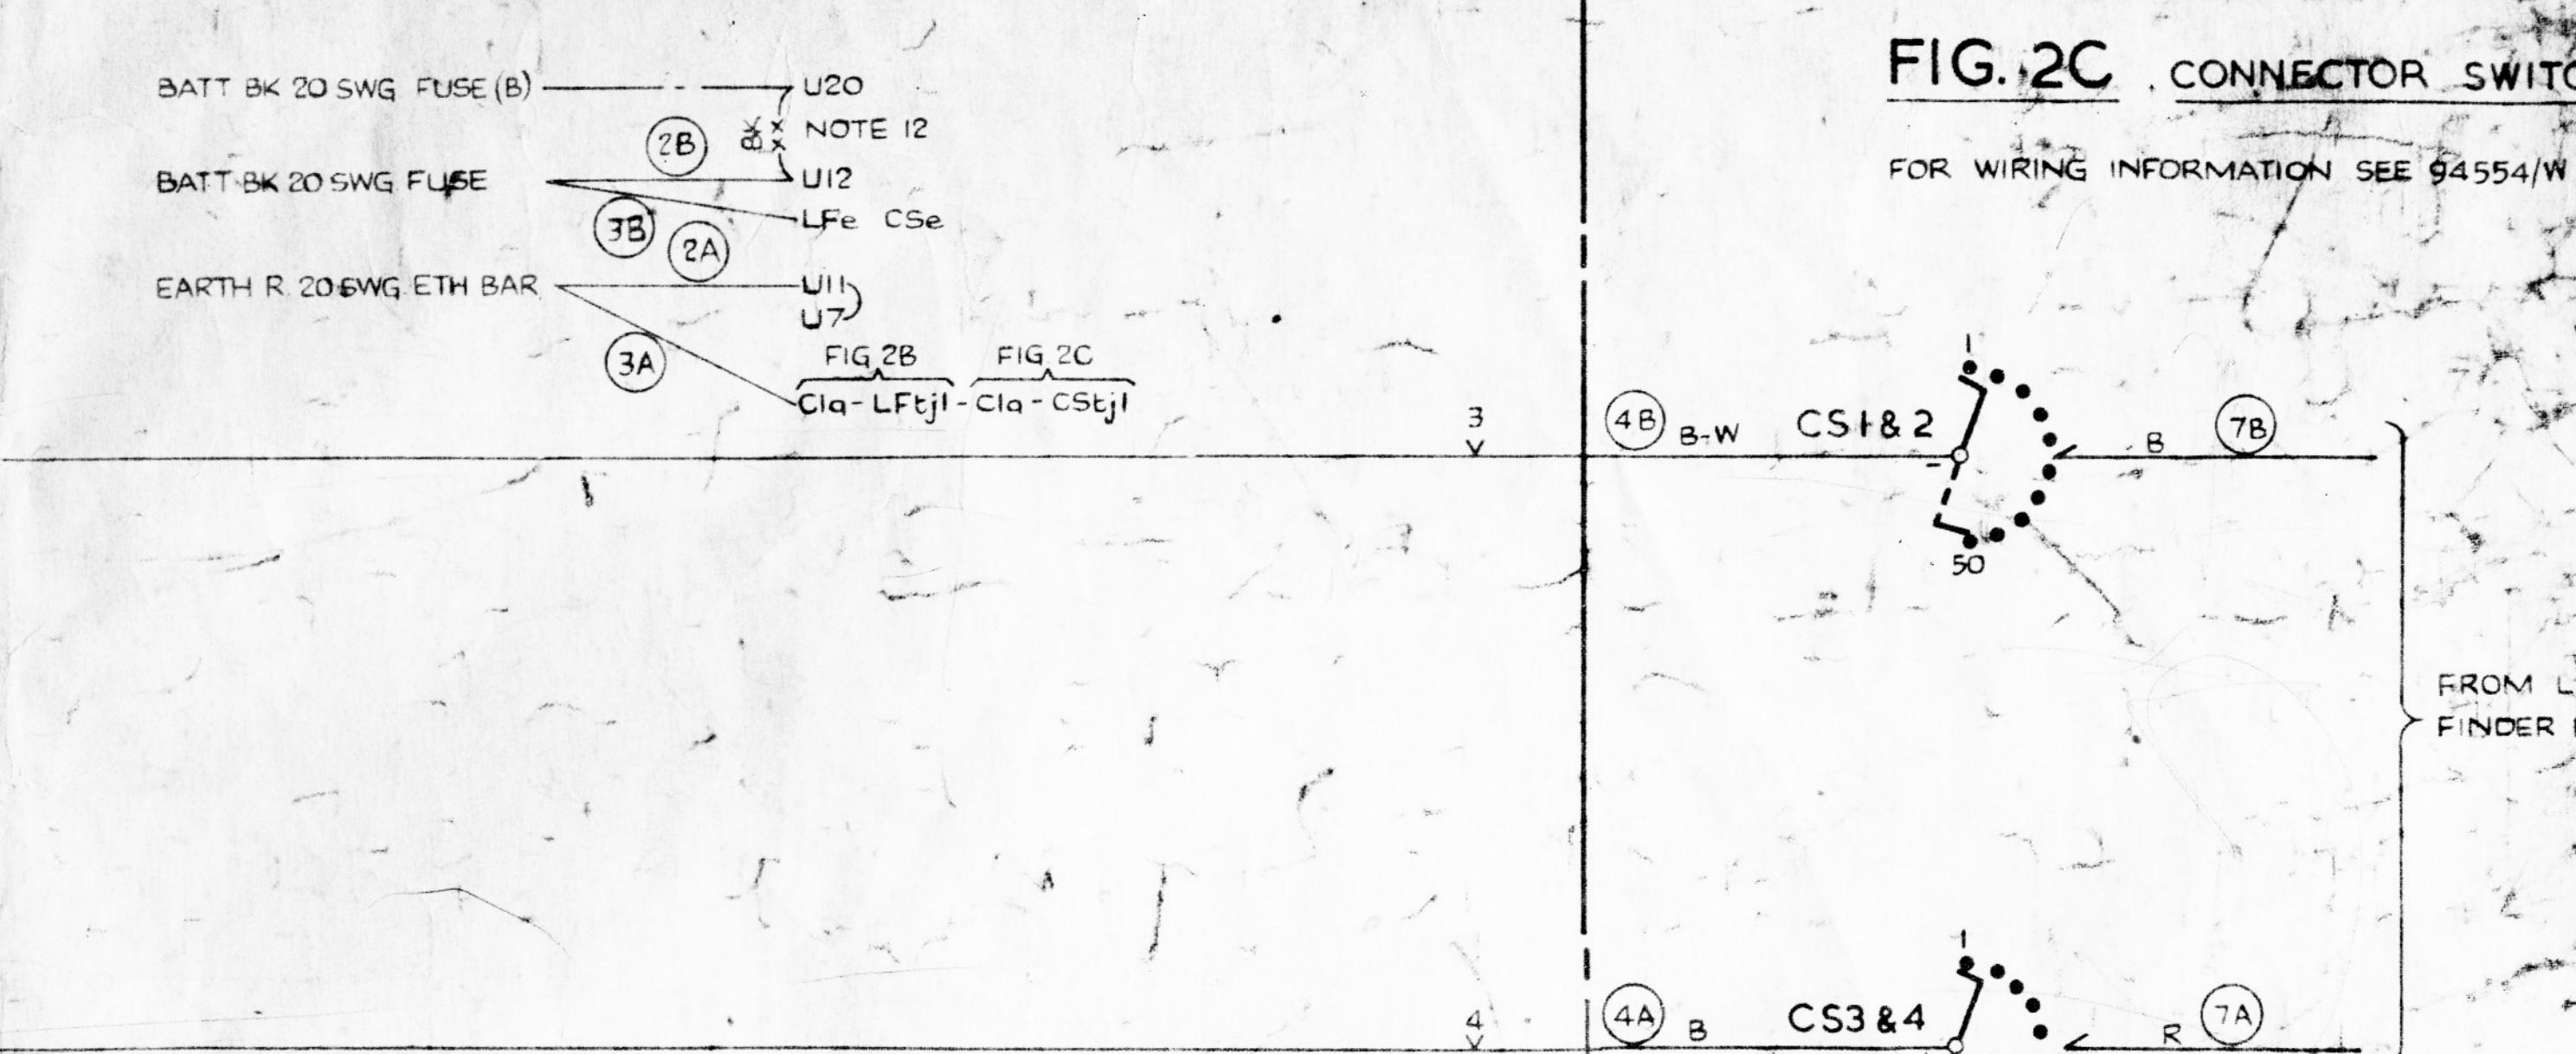
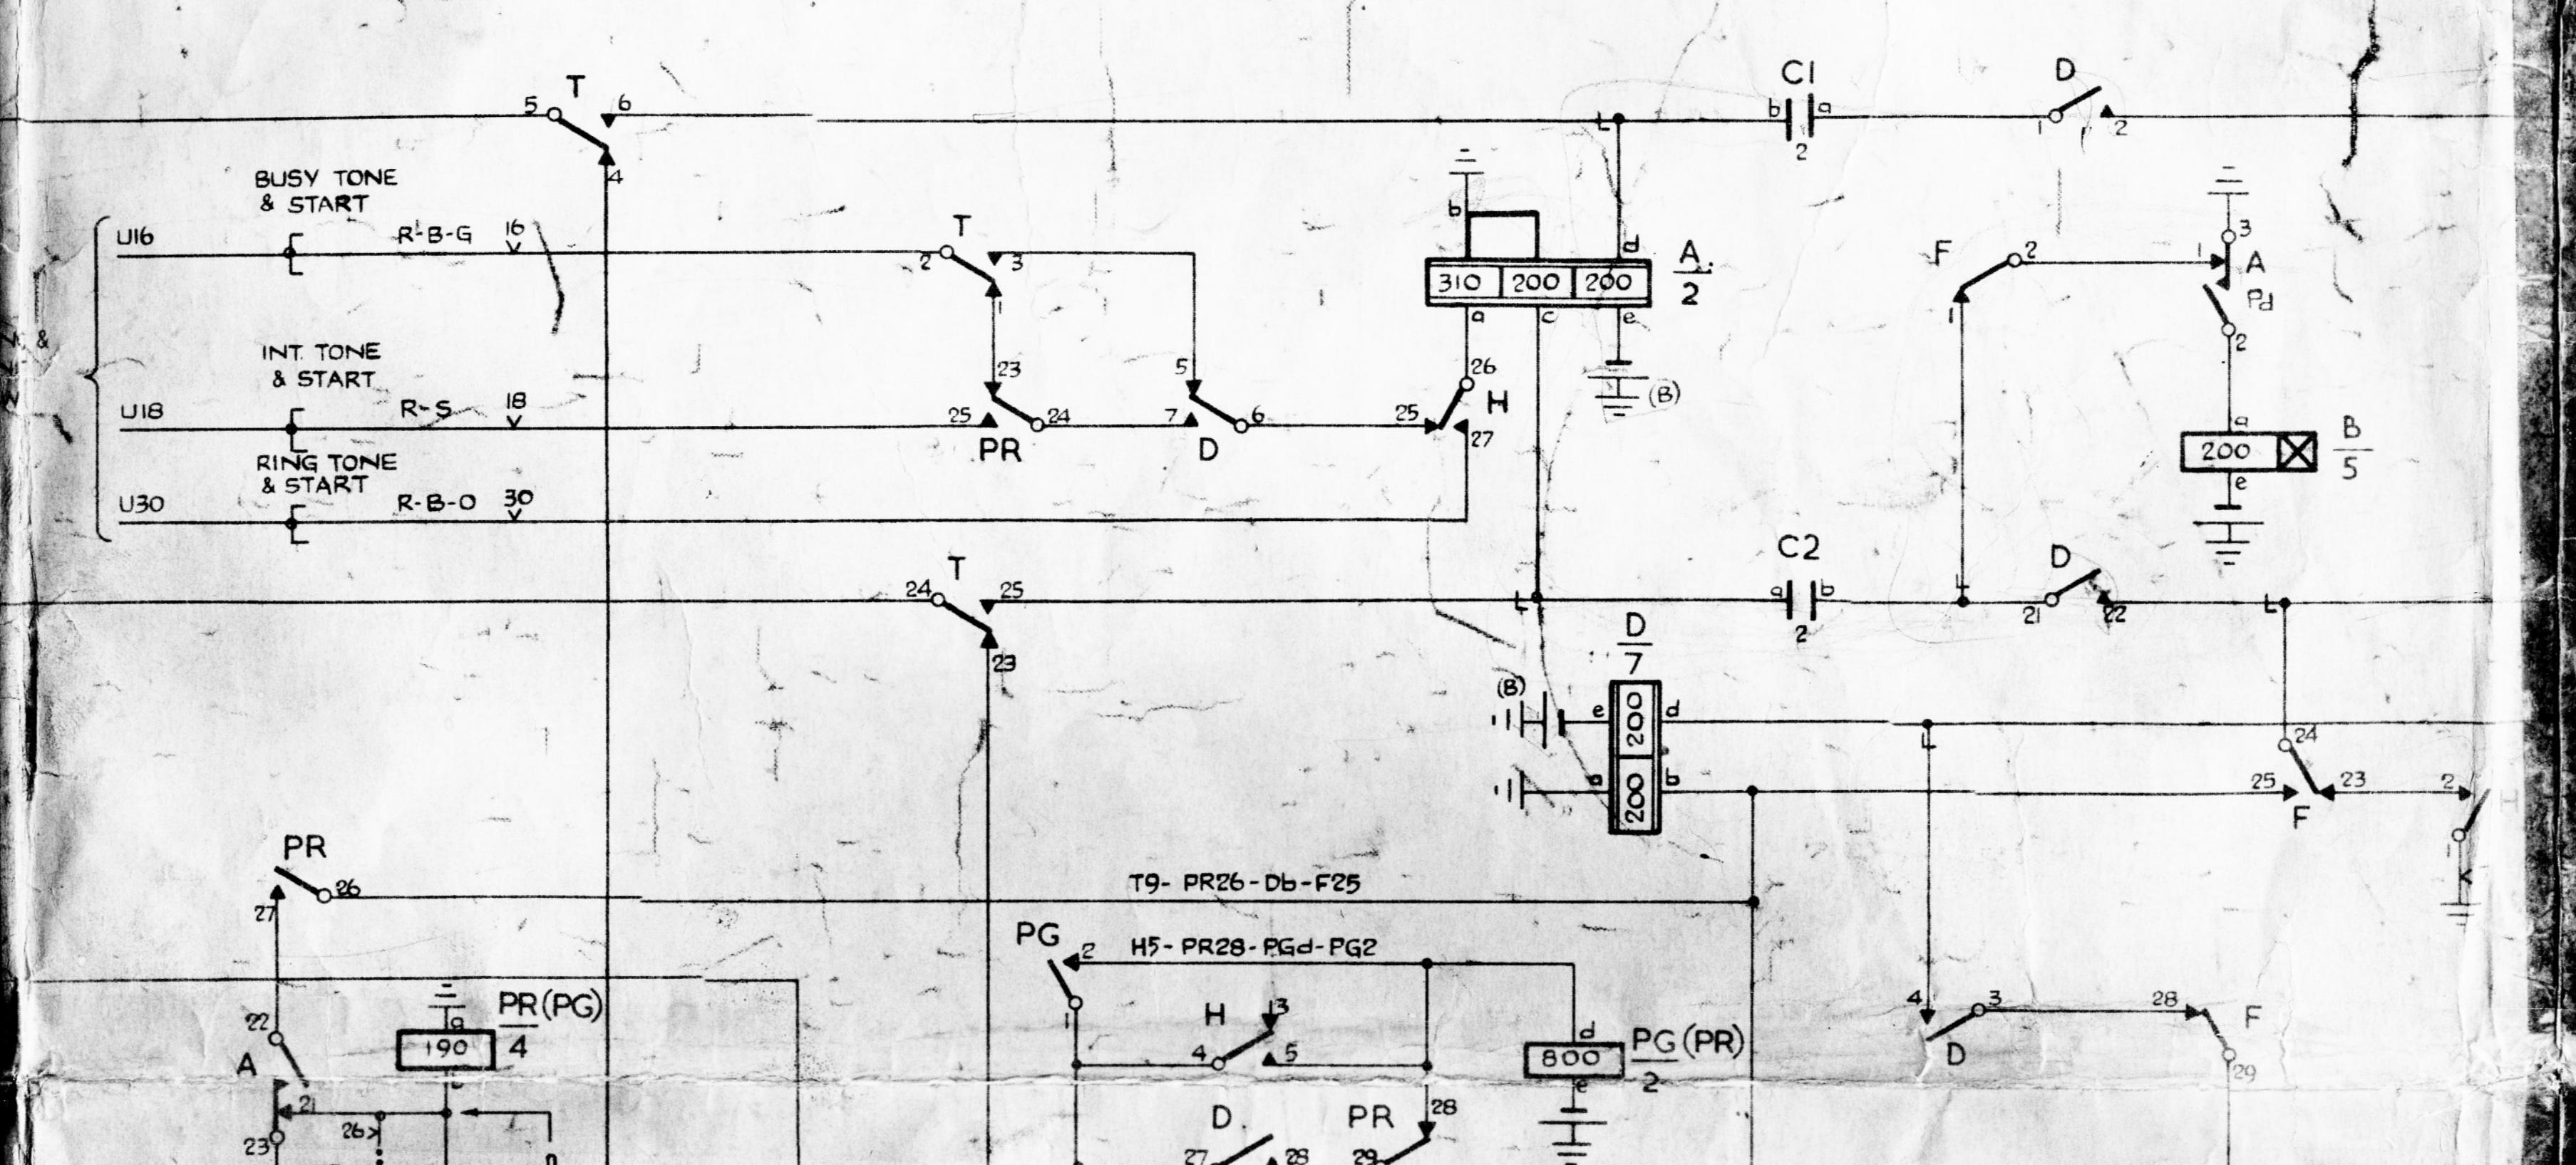


FIG.5 TEST LINE JACK

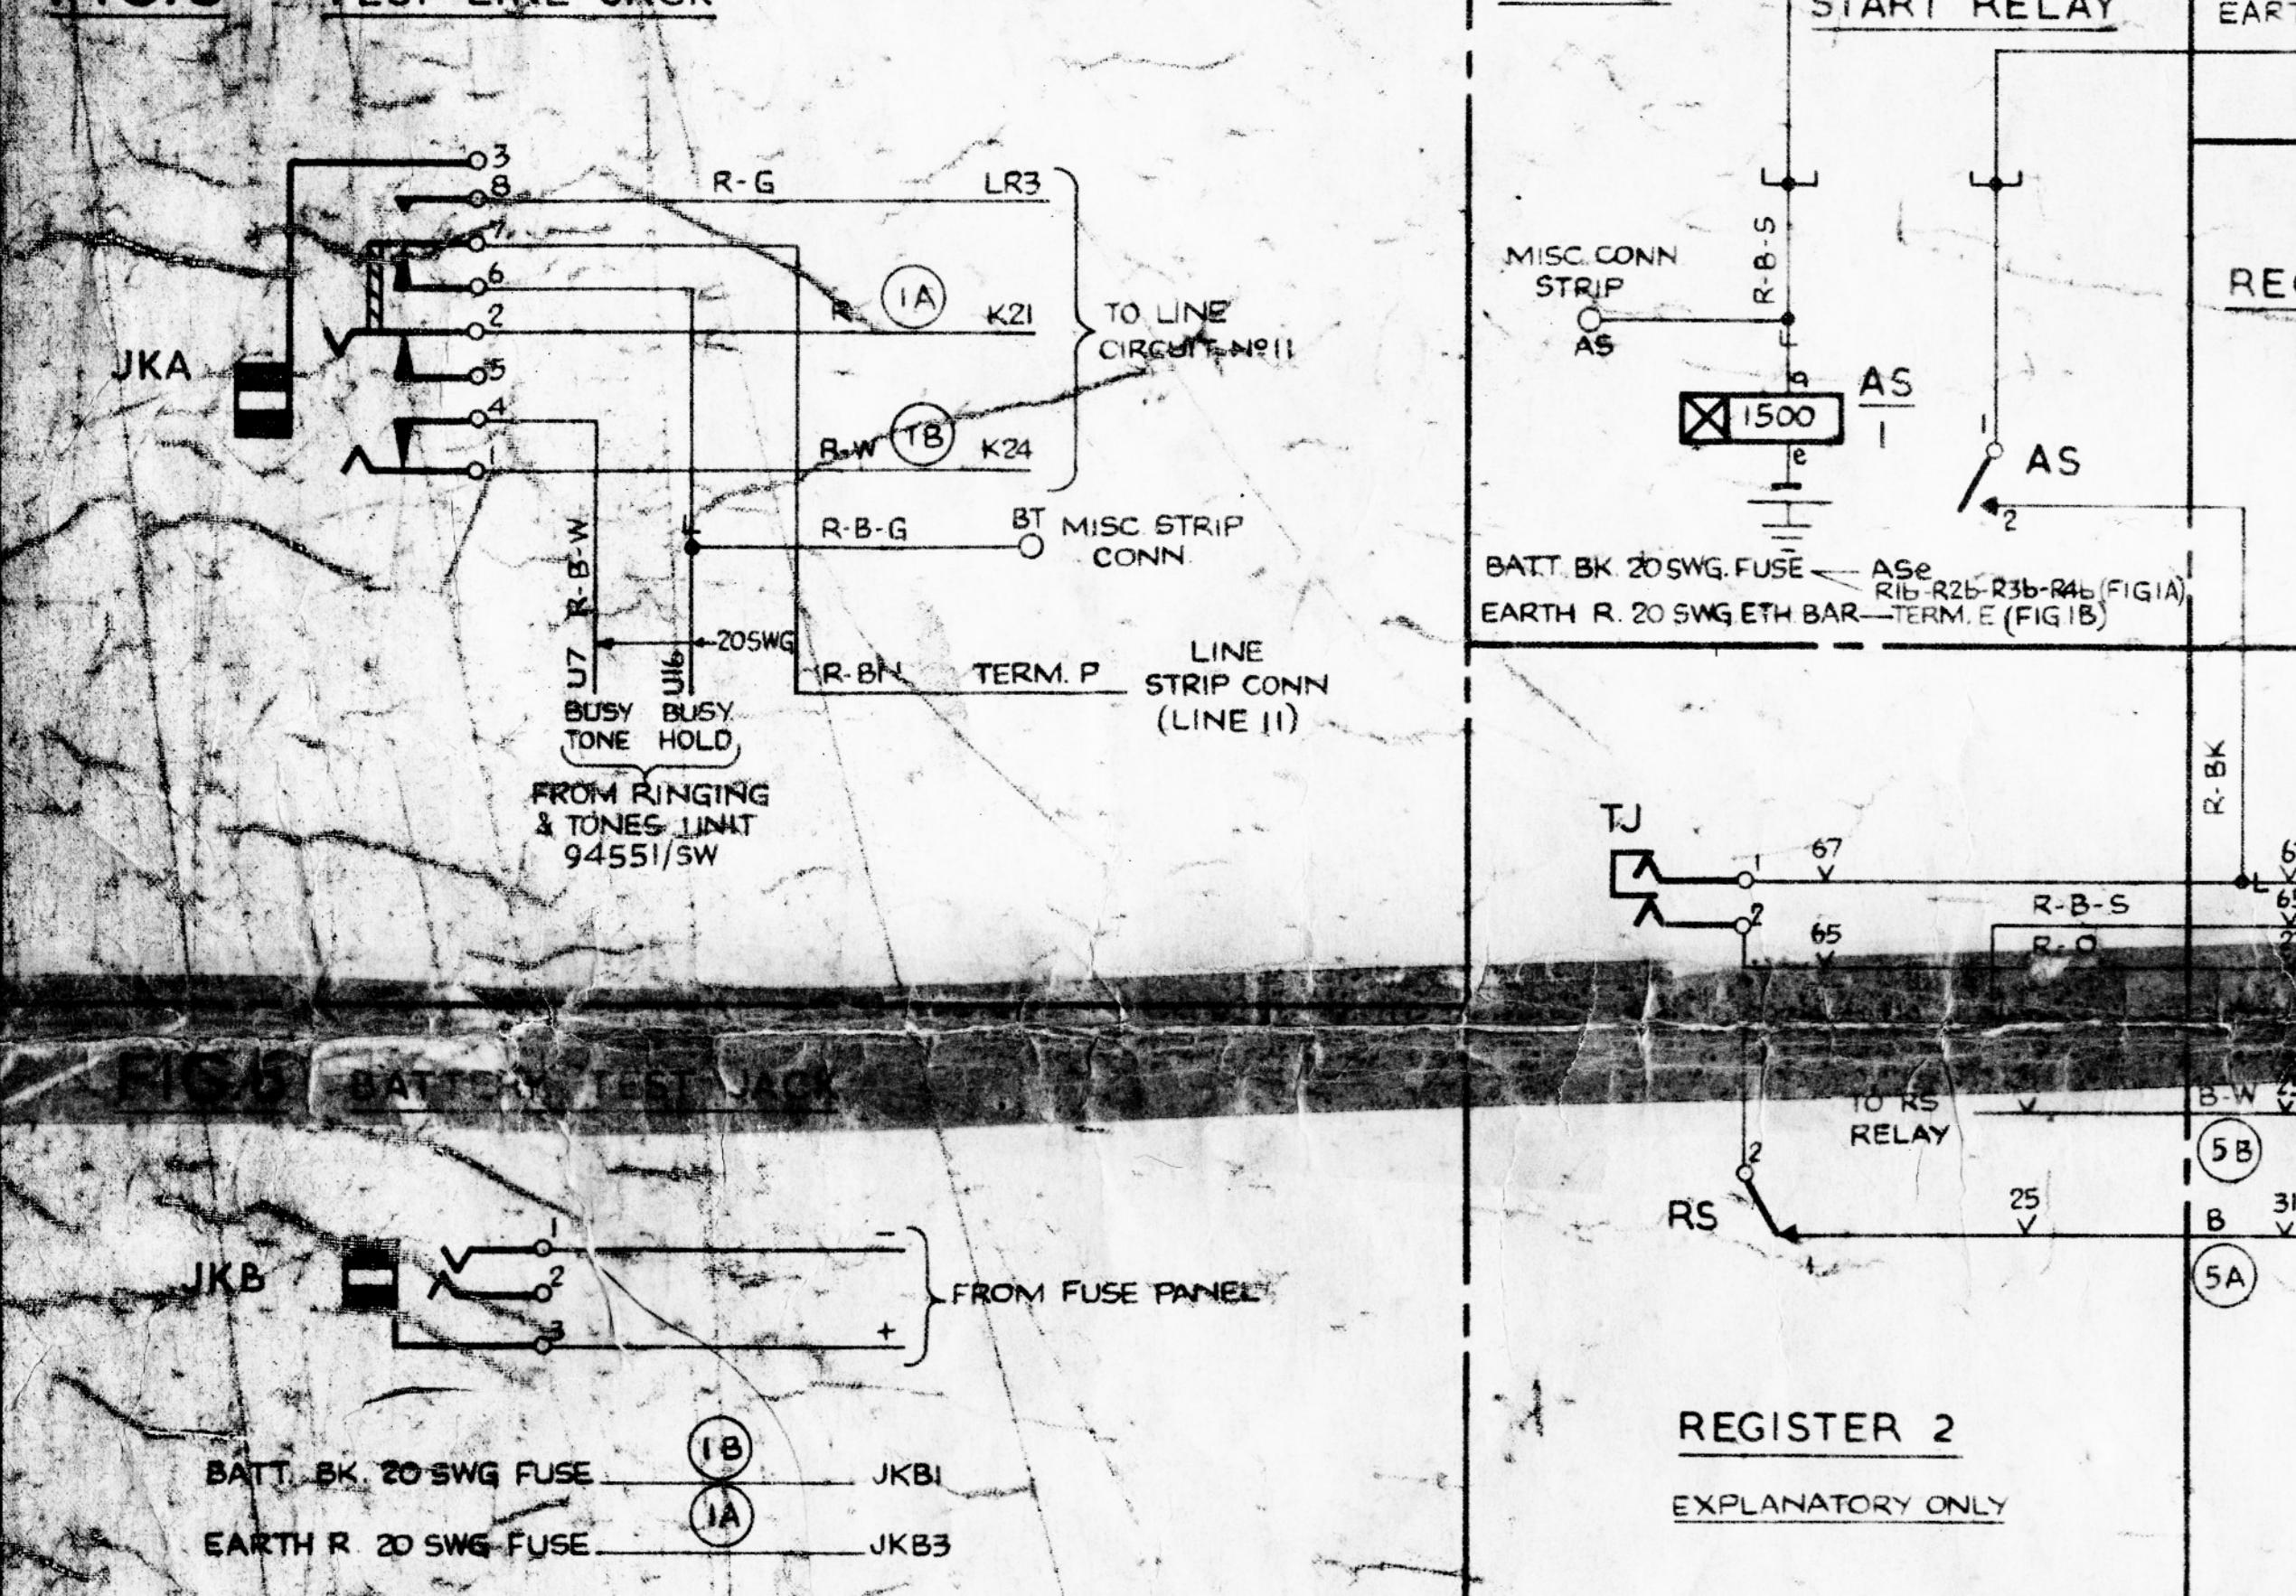


FIG.3 COMMON START RELAY



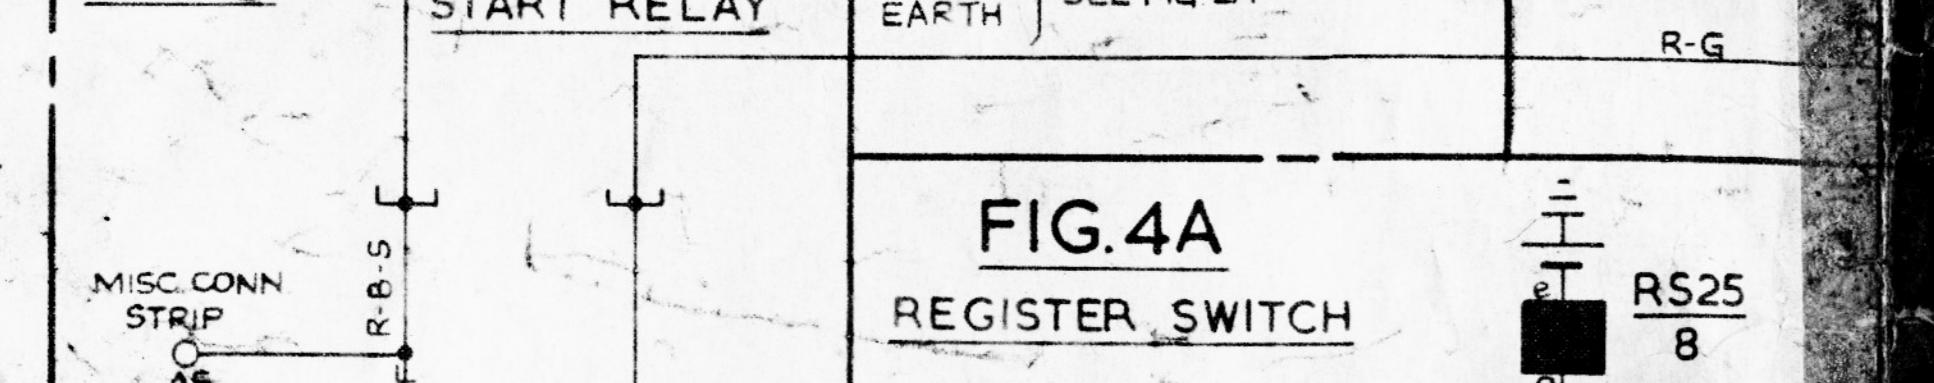


FIG.4A REGISTER SWITCH

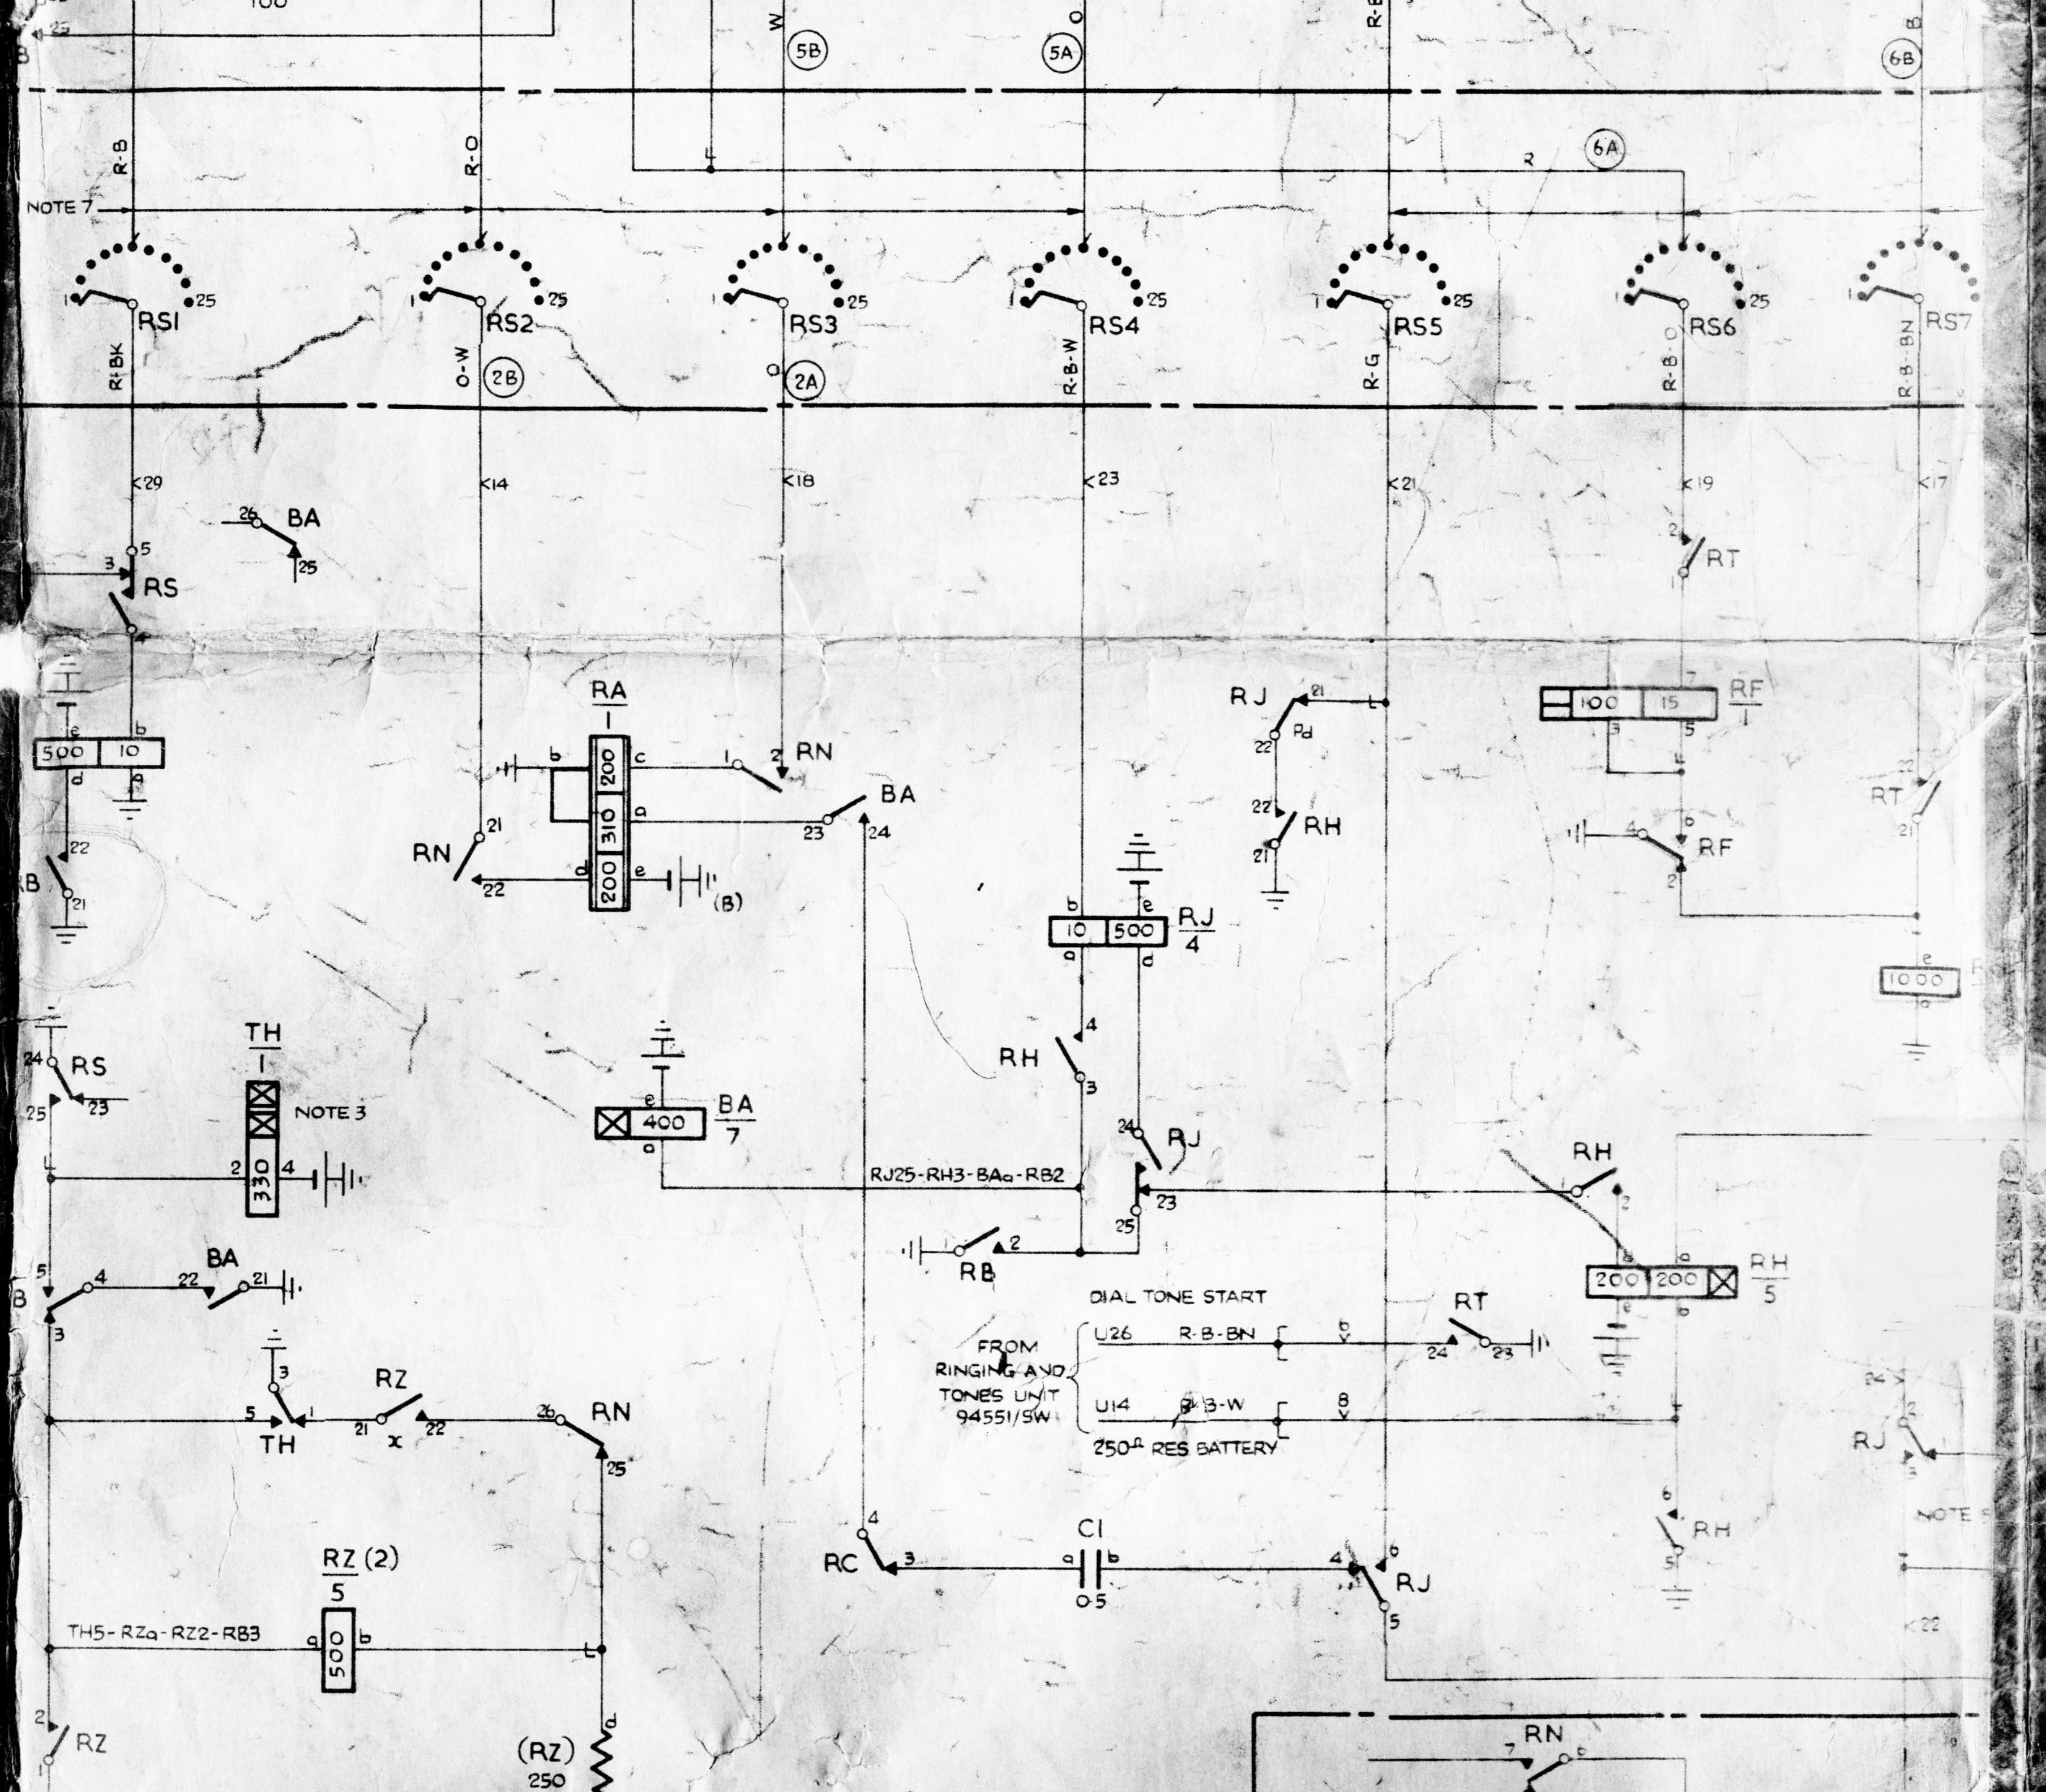

REGISTER 2 EXPLANATORY ONLY

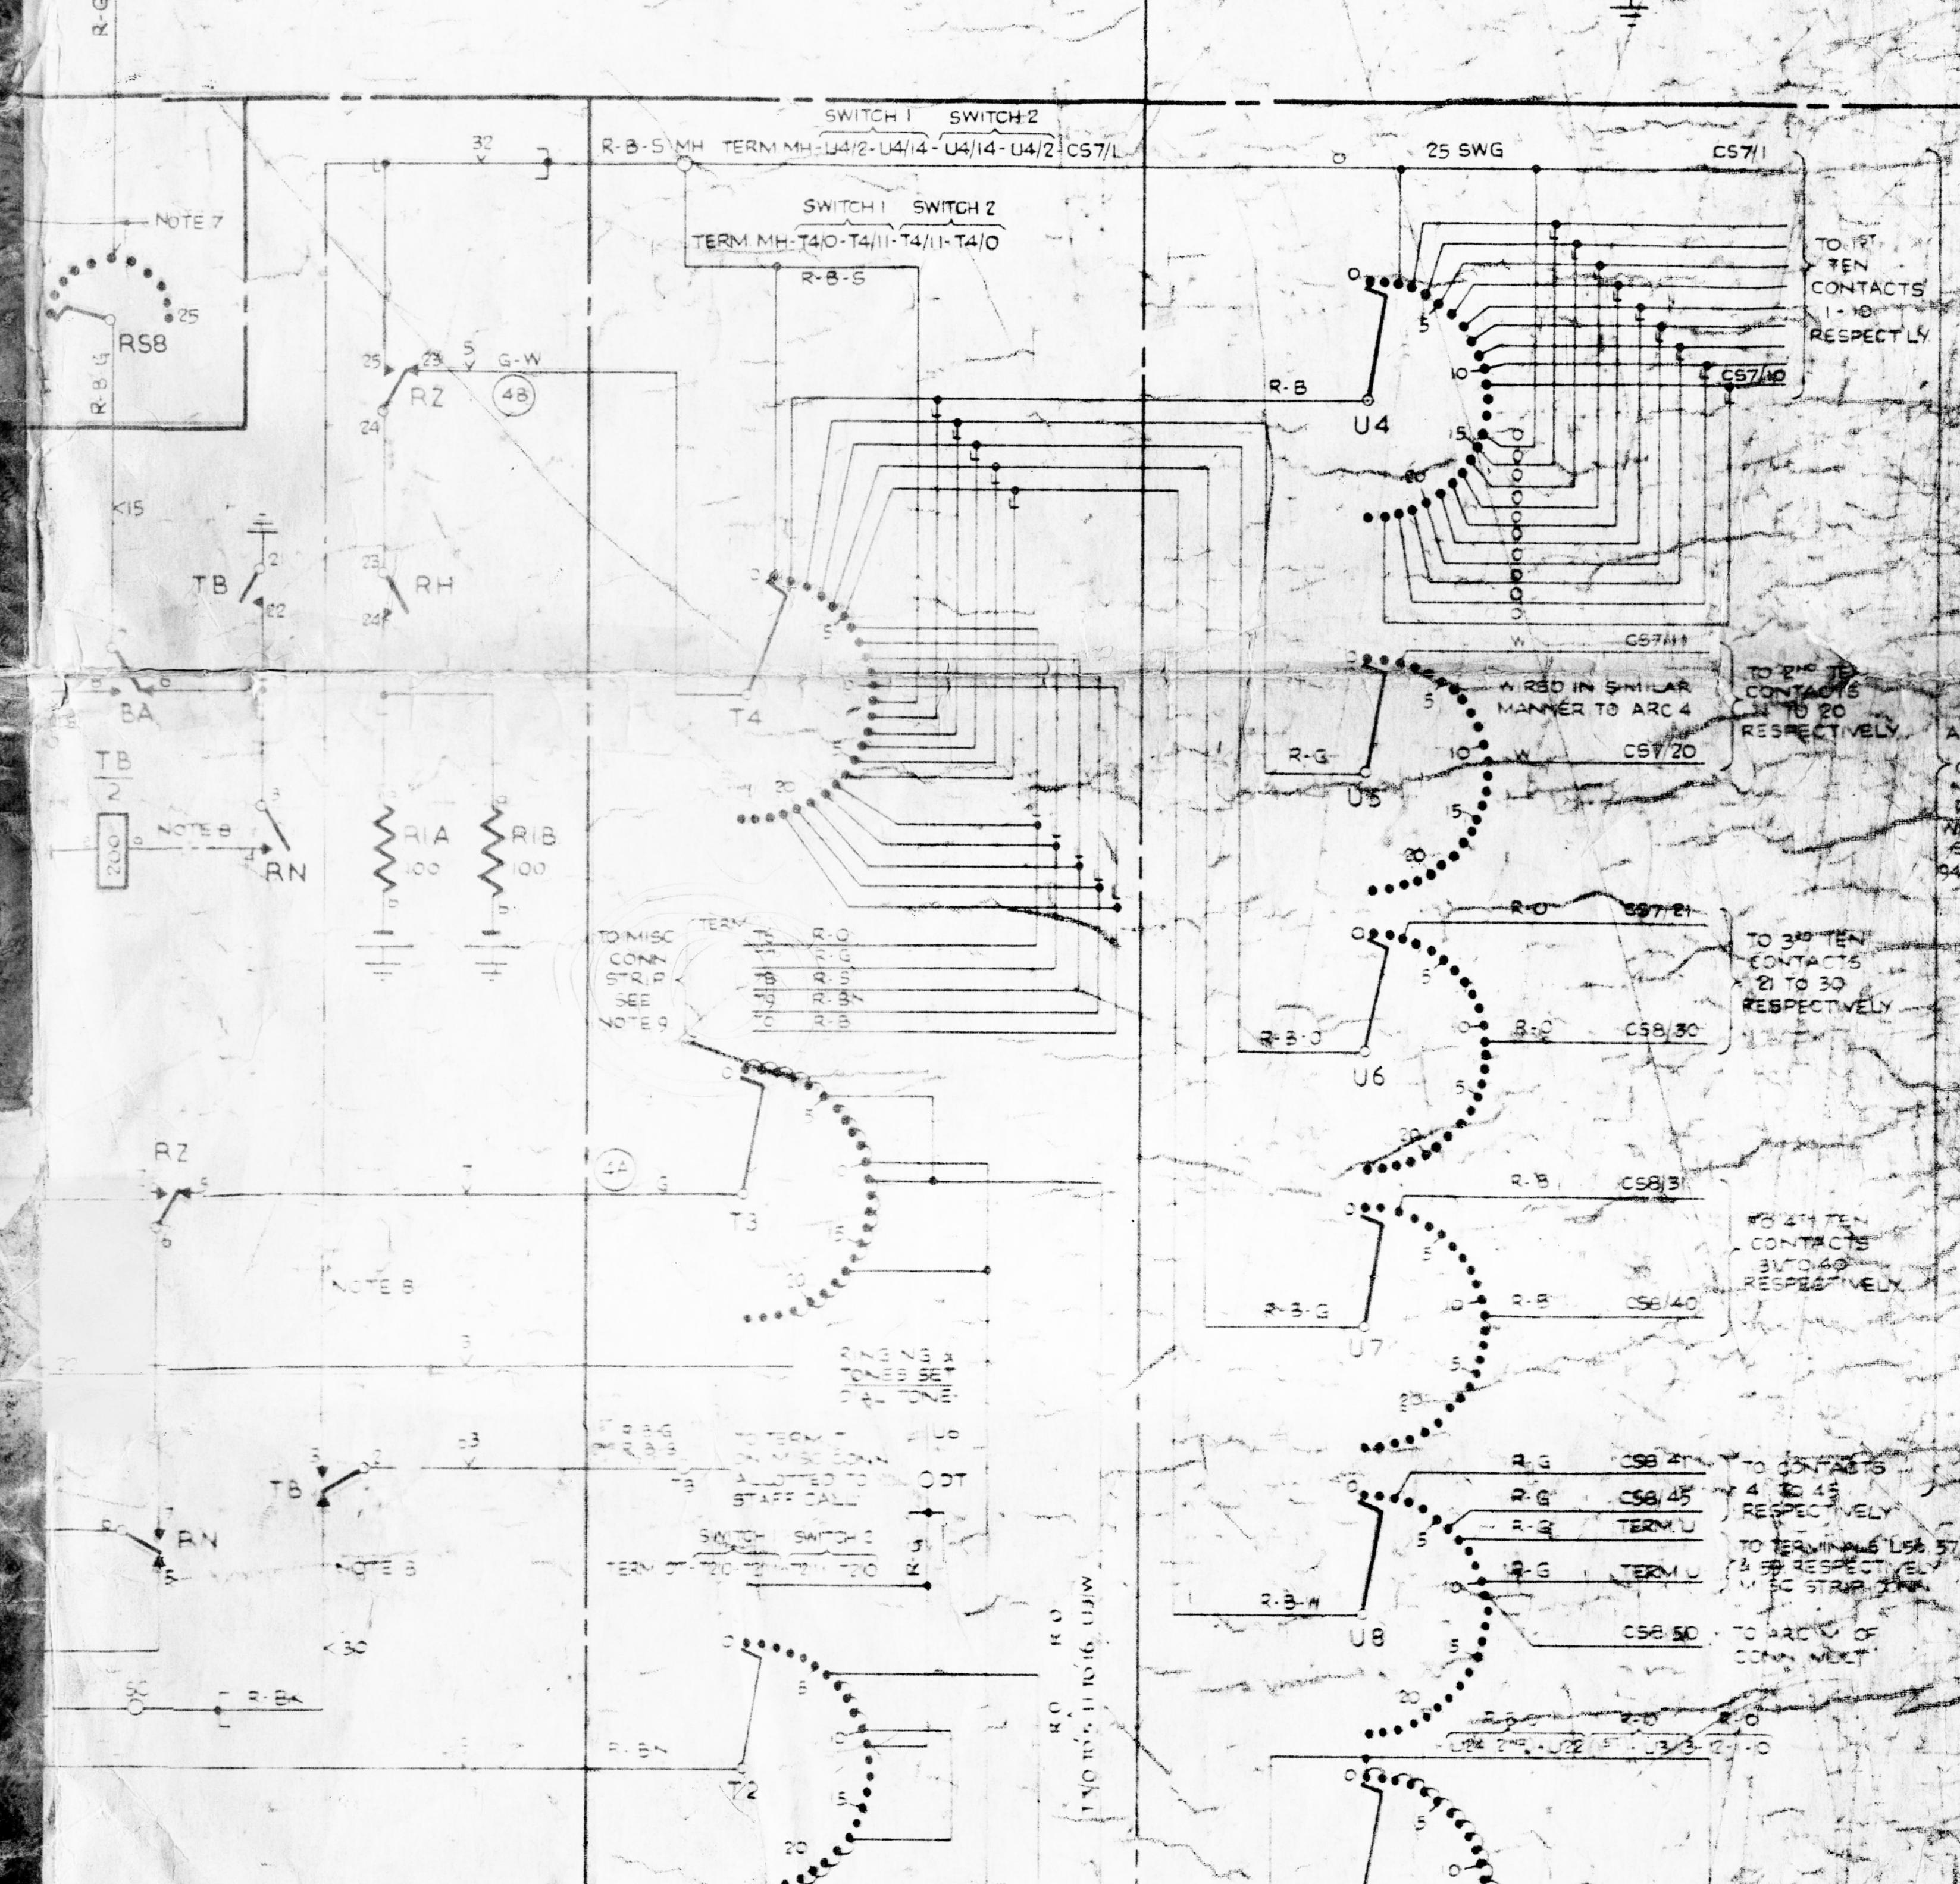

NOTES





- 1. FUSING: FIG.1 1.5A PER PLATE
FIG.2A 1.5A PER CCT
FIG.4 1.5A PER CCT
FIG.6 1.5A PER CCT
- 2. ALL WIRING TO BE 23 SWG UNLESS OTHERWISE SPECIFIED
BANK WIRING (MULTS & TAILS) TO BE 25 SWG STRAPPING OF ADJACENT CONTACTS TO BE IN 23 SWG BTC AND NON-ADJACENT IN 23 SWG BTC & SLEEVING
- 3. TH IS A THERMAL RELAY MOUNTED ON RA OPERATE TIME MIN 25 SECS MAX 40 SECS RELEASE TIME 10 SECS
- 4. PALLADIUM RELAY CONTACTS TO BE PLATINUM ON TROPICAL SWITCHBOARDS
- 5. U22-24 & U25-27 TO MAKE CONTACT WHEN RELAY SET IS REMOVED
- 6. DELETE CONNECTIONS SHOWN THUS -○- AND ADD CONNECTIONS SHOWN THUS -X-
- 7. CONNECT IN ACCORDANCE WITH TABLE NO. 7
- 8. WHEN RELAY TB IS NOT FITTED DELETE CONNECTIONS SHOWN THUS -○-
- 9. WHEN CONTACTS 5, 7, 8, 9 & 0 ARE NOT REQUIRED FOR SPECIAL FACILITIES T TERMINALS ARE STRAPPED TO MH TERMINAL U TERMINALS ARE STRAPPED TO M TERMINAL OF CORRESPONDING OUTLET
- 10. WHEN PF IS NOT FITTED DELETE CONNECTIONS SHOWN THUS -|-
- 11. NORMALLY WIRED FOR OPTIONAL PREFERENCE IS STRAP U22-26 NOT WIRED FOR AUTOMATIC PREFERENCE ADD STRAP SHOWN THUS -||-
- 12. (B) DENOTES SMOOTH SUPPLY WHEN SUPPLY IS SMOOTHED THROUGHOUT DELETE CONNECTIONS SHOWN THUS -○- & ADD CONNECTIONS SHOWN THUS -X-
- 13. COLOUR IN BRACKETS IS FOR LINES 56 TO 59

TABLE NO. 7		
CONNECTOR	R/S CONTACTS	WIRED
1	1 - 8 - 15	
2	2 - 9 - 16	
3	3 - 10 - 17	
4	4 - 11 - 18	
5	5 - 12 - 19	
6	6 - 13 - 20	
7	7 - 14 - 21	

BATT. BK. 20 SWG FUSE (3) - U20
BATT. BK. 20 SWG FUSE (1B) - U12
EARTH R. 20 SWG ETH BAR - U11

(Cl. 1-1) (FIG.4B)
(R.S. 1-1) (FIG.4A)
(U.1-1) (U.1-1) (FIG.4C)

BATT. U20-R20 R22-(T2B)-R23-SH-R24-B24-R25-R26-R27
BATT. U12-TH4-R25-R24-R25-R26-R27-(U20)-(R25)-R23-R24-R25
ETH U11-R23-R24-R25-R26-R27-(U20)-(R25)-R23-R24-R25

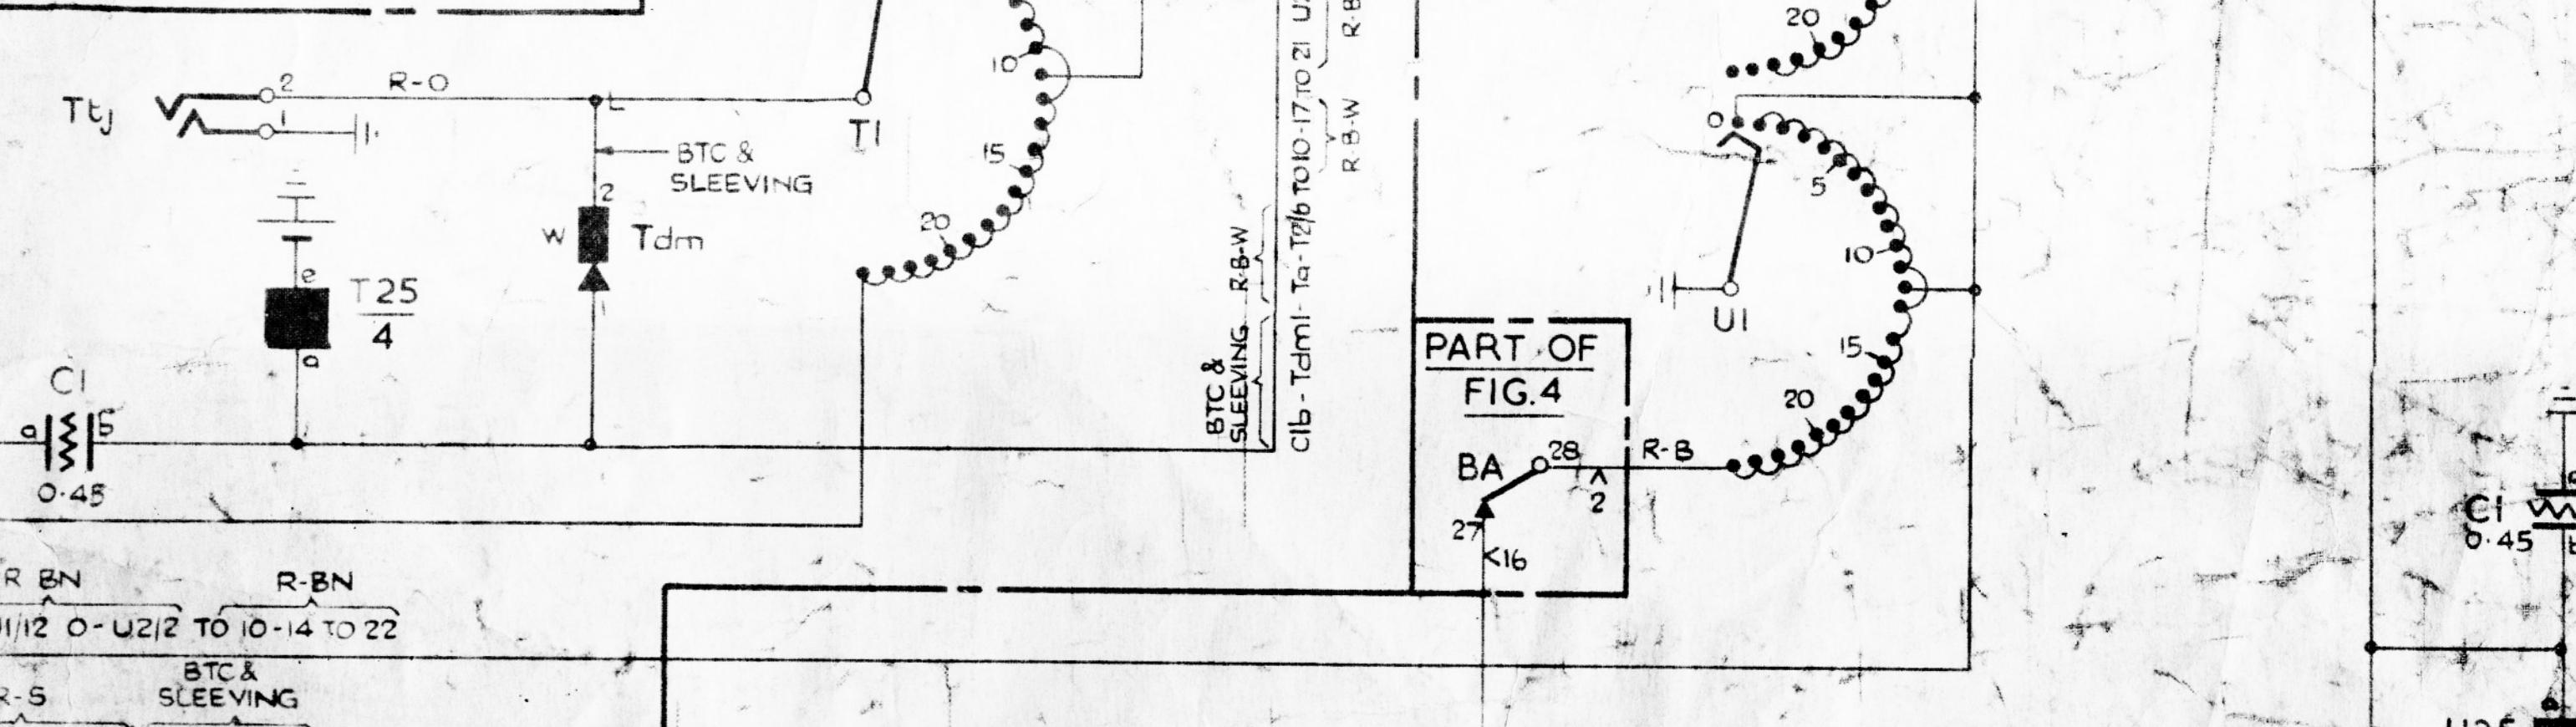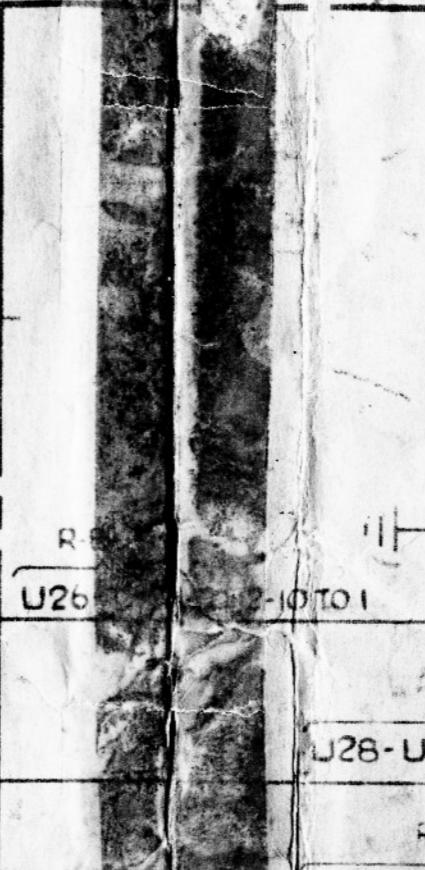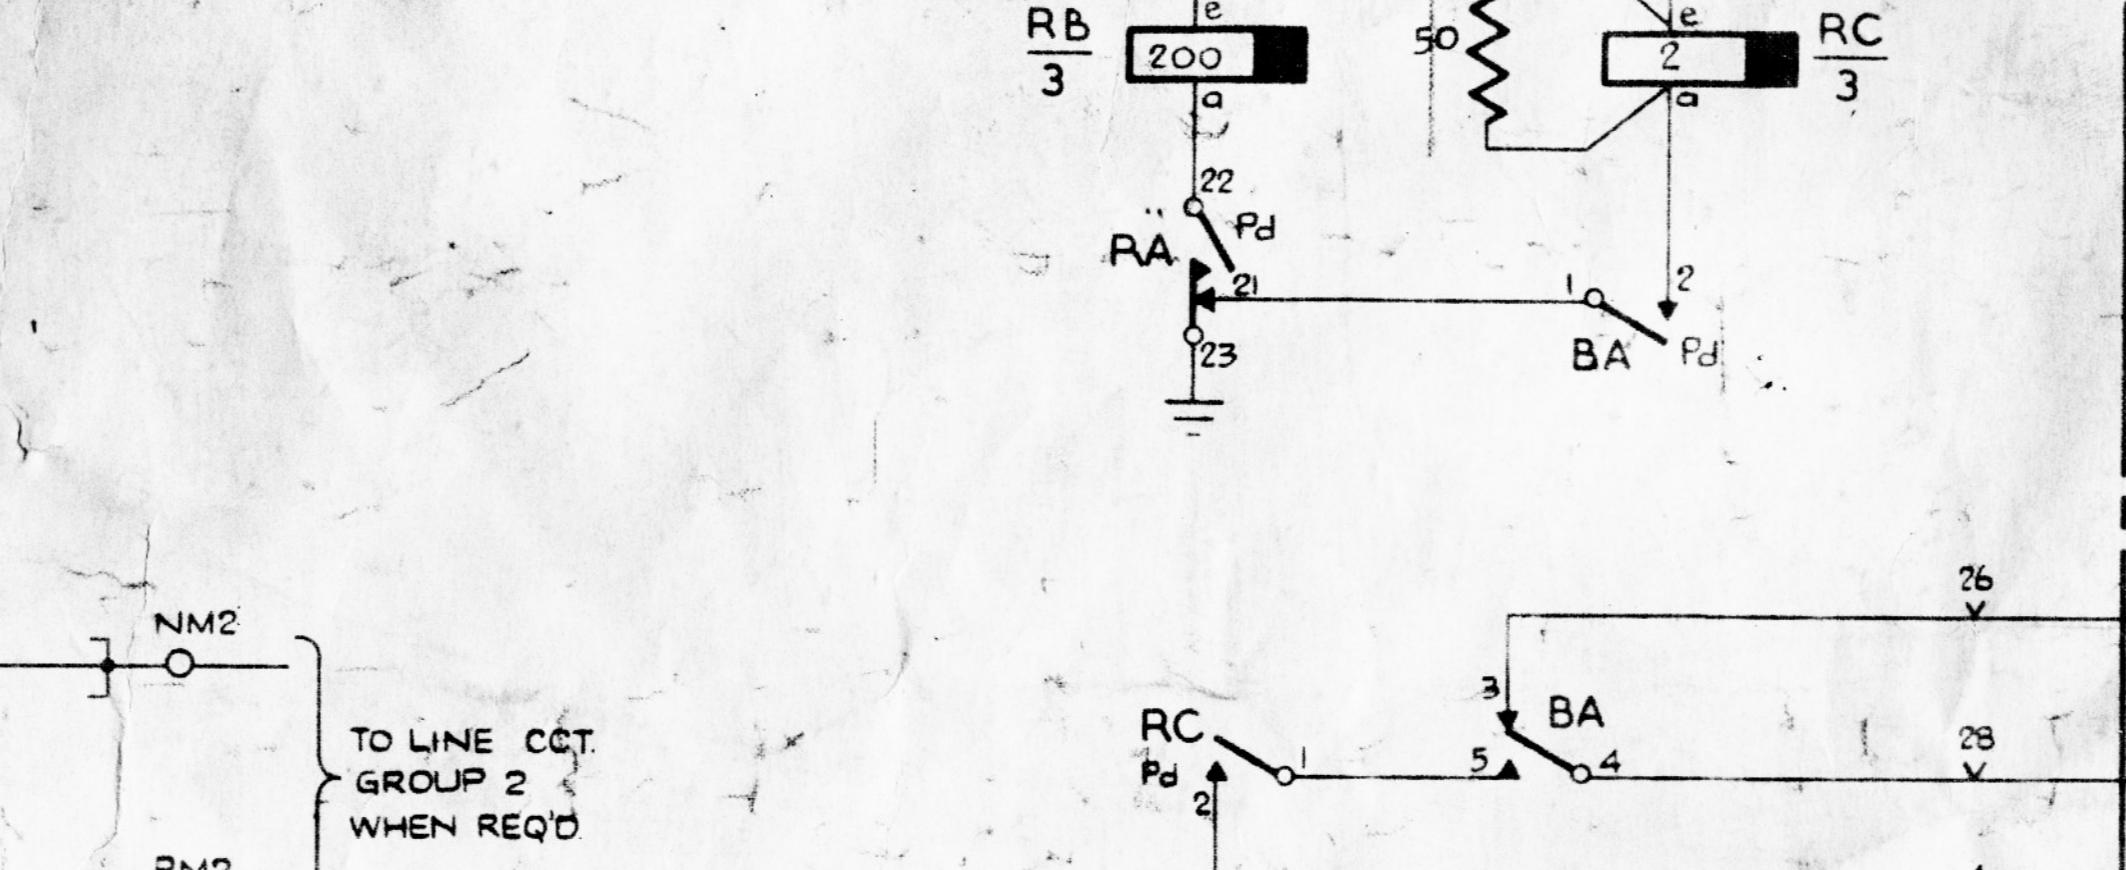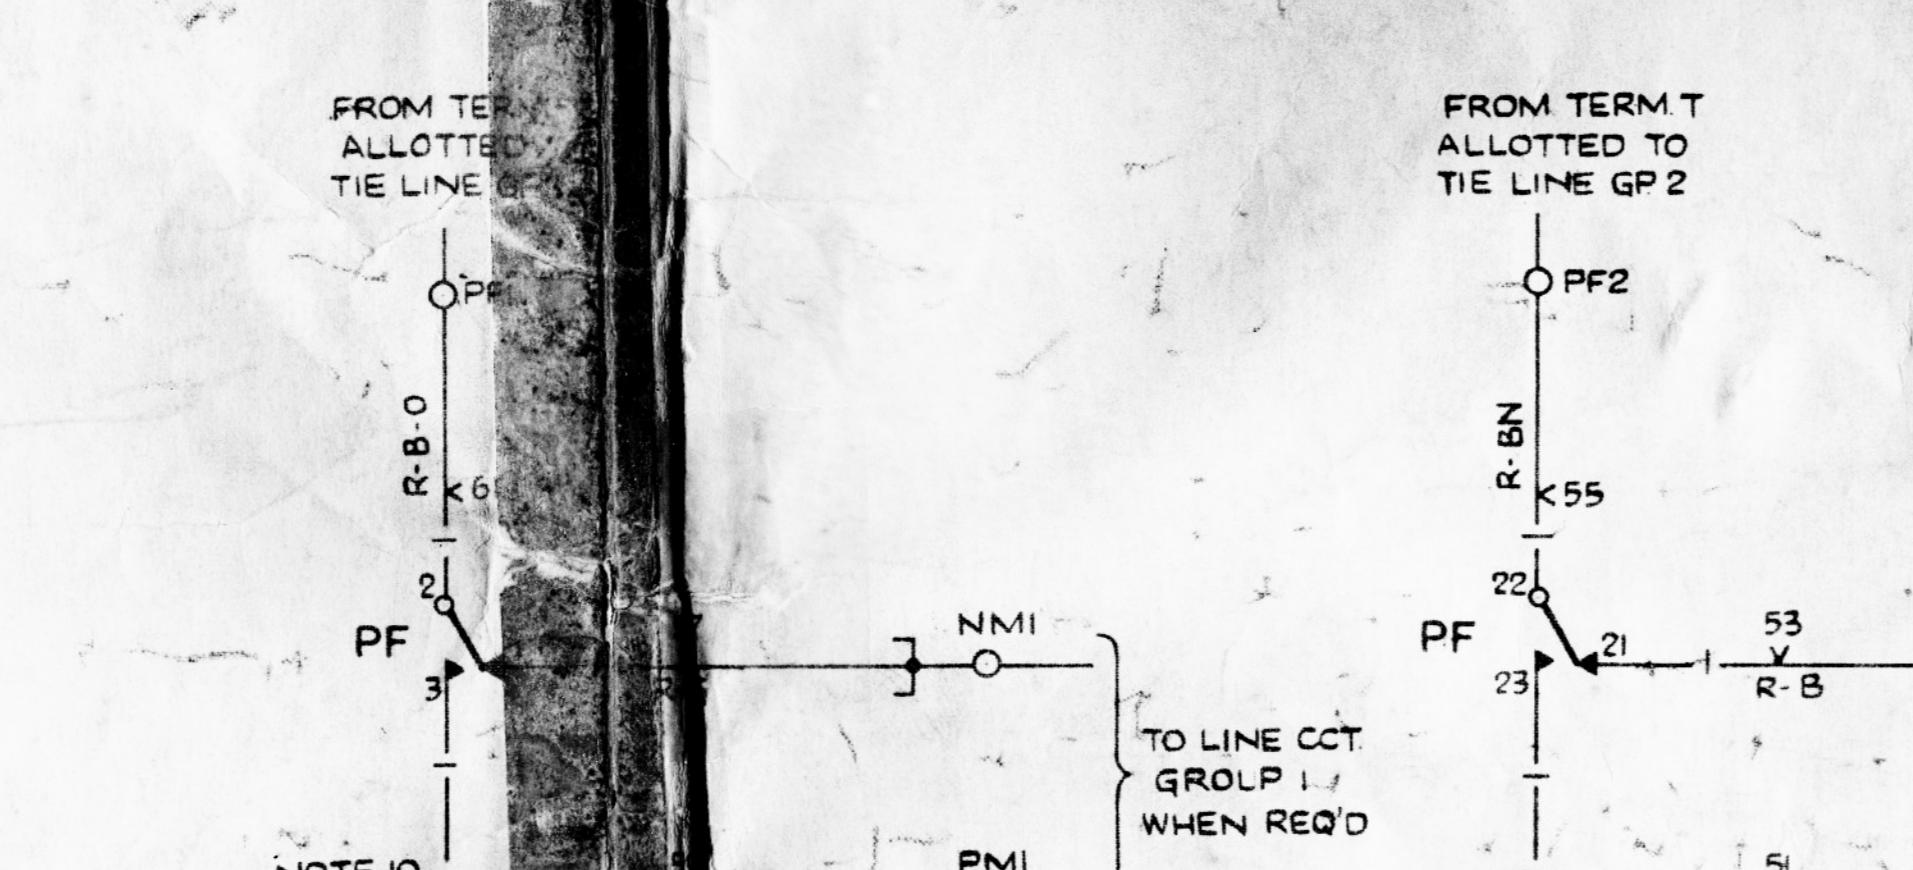

TENS SWITCH










BATT. EARTH - SEE FIG.4

FIG.4C UNIT SWITCH

BATT. EARTH - SEE FIG.4

FIG.2C CONNECTOR SWITCH

FOR WIRING INFORMATION SEE FIG.5/W

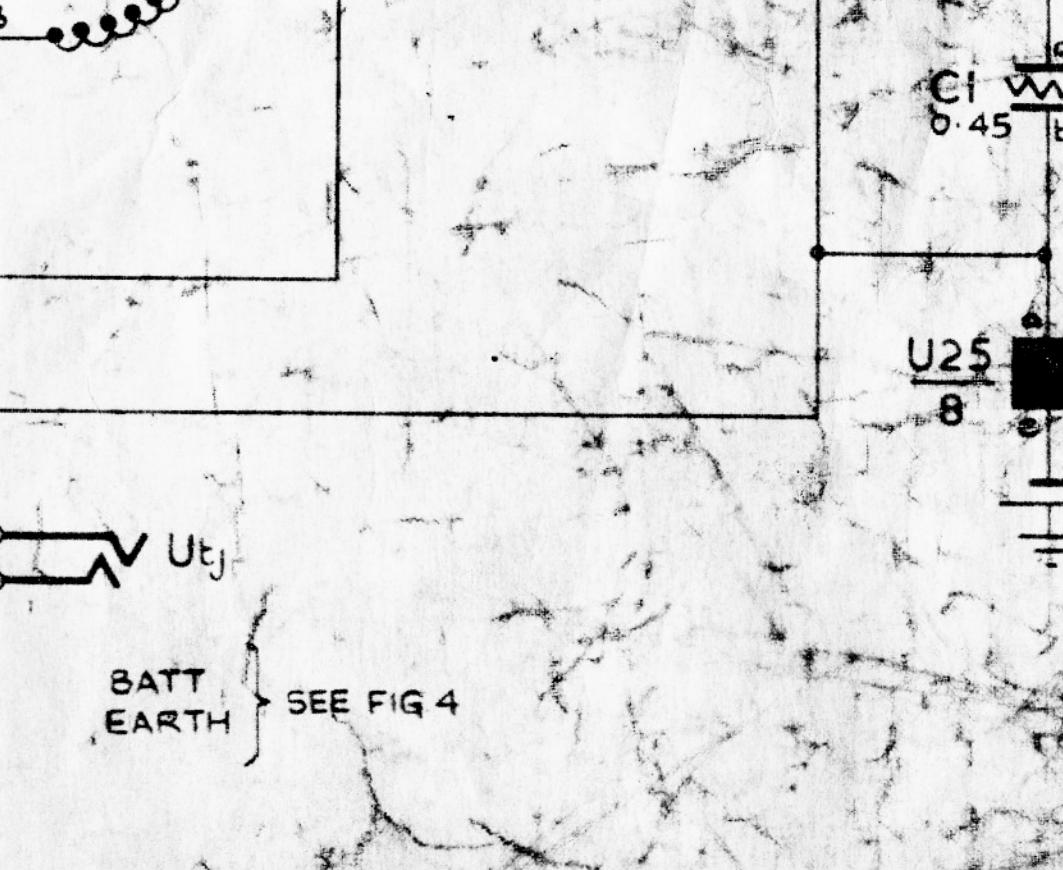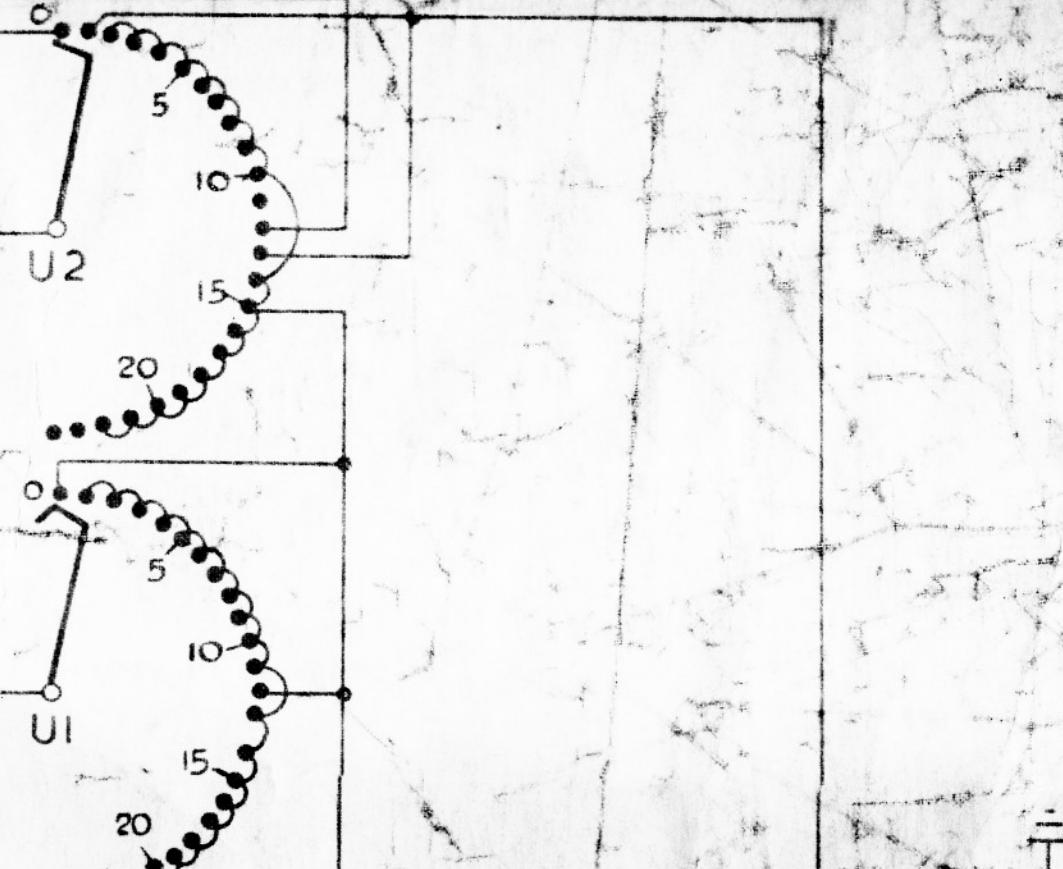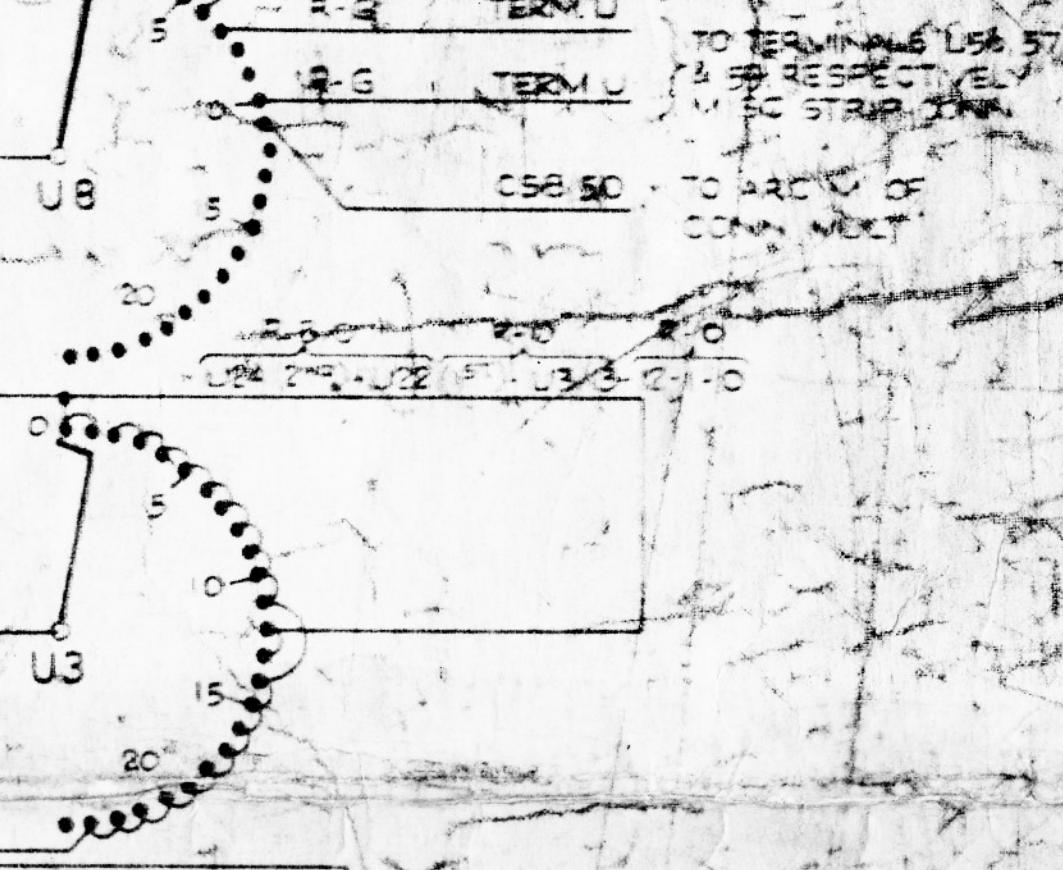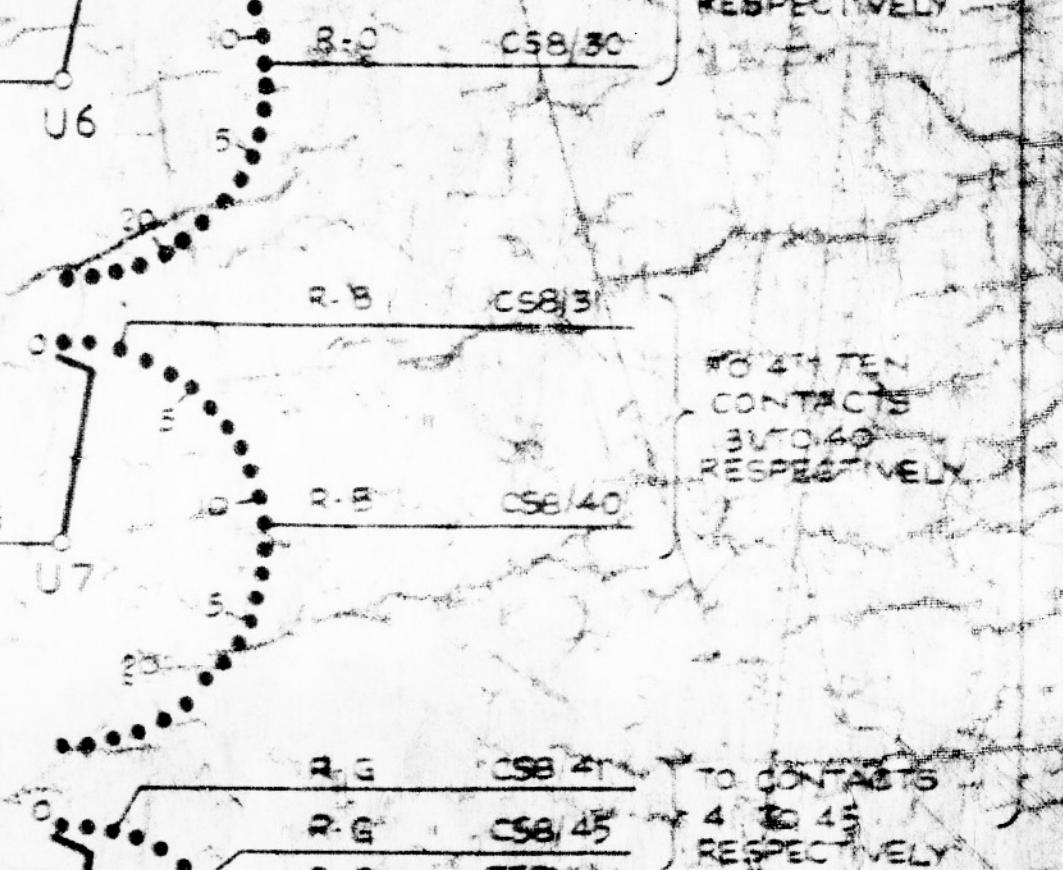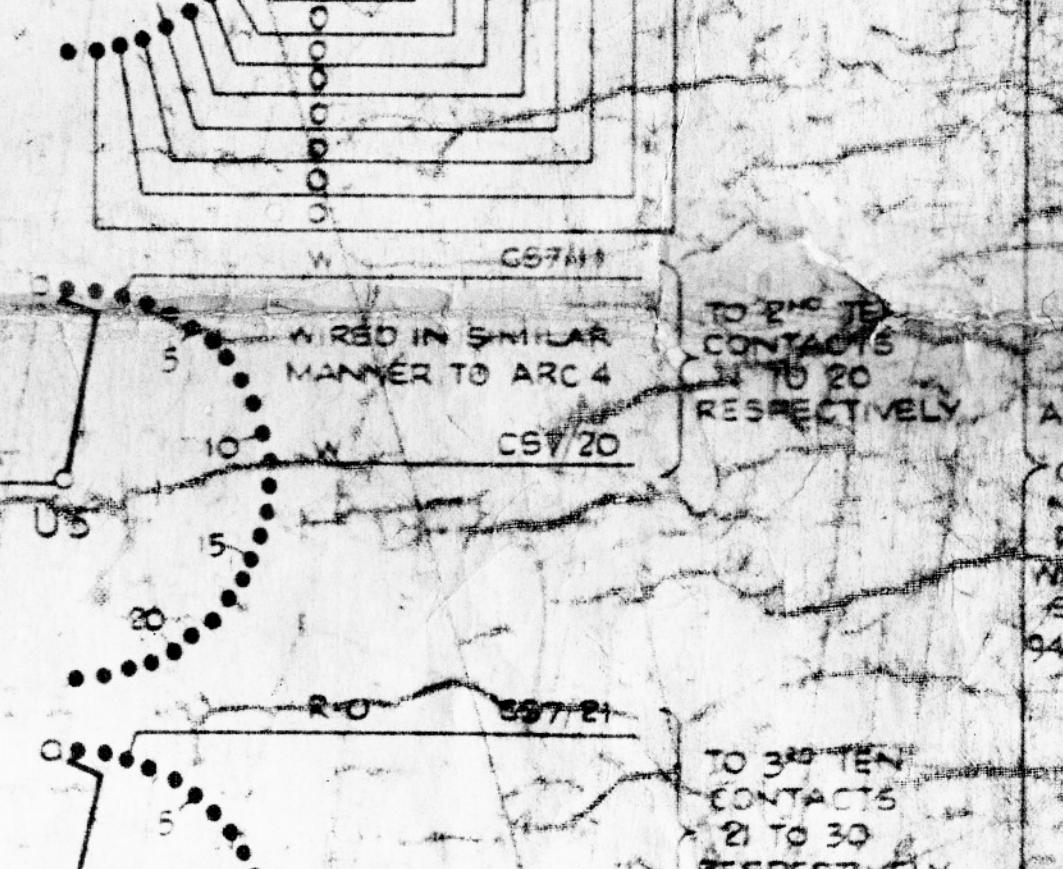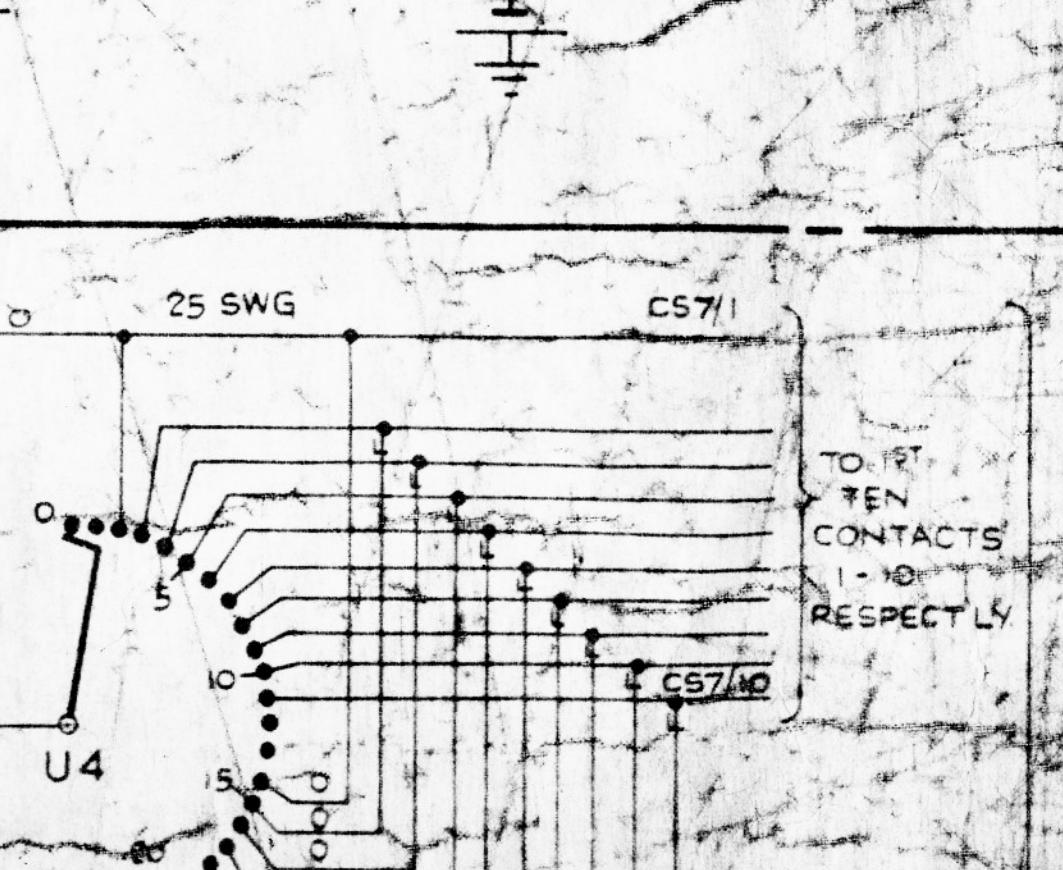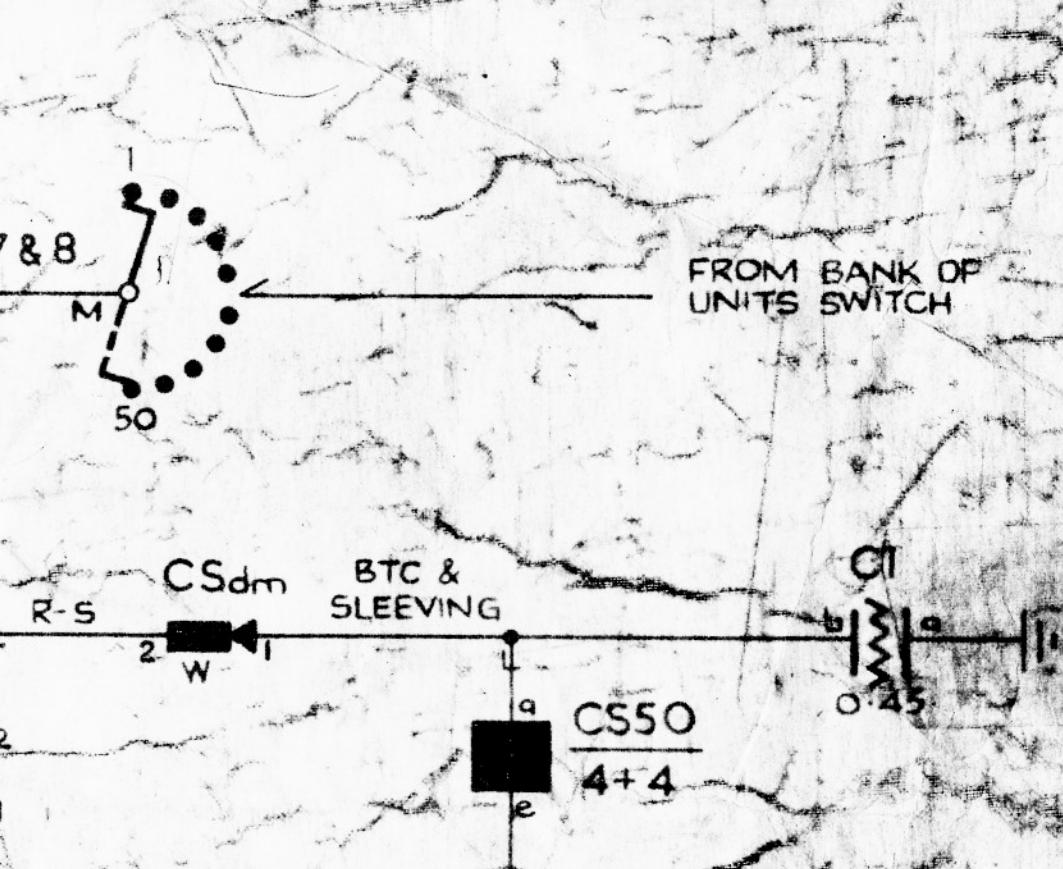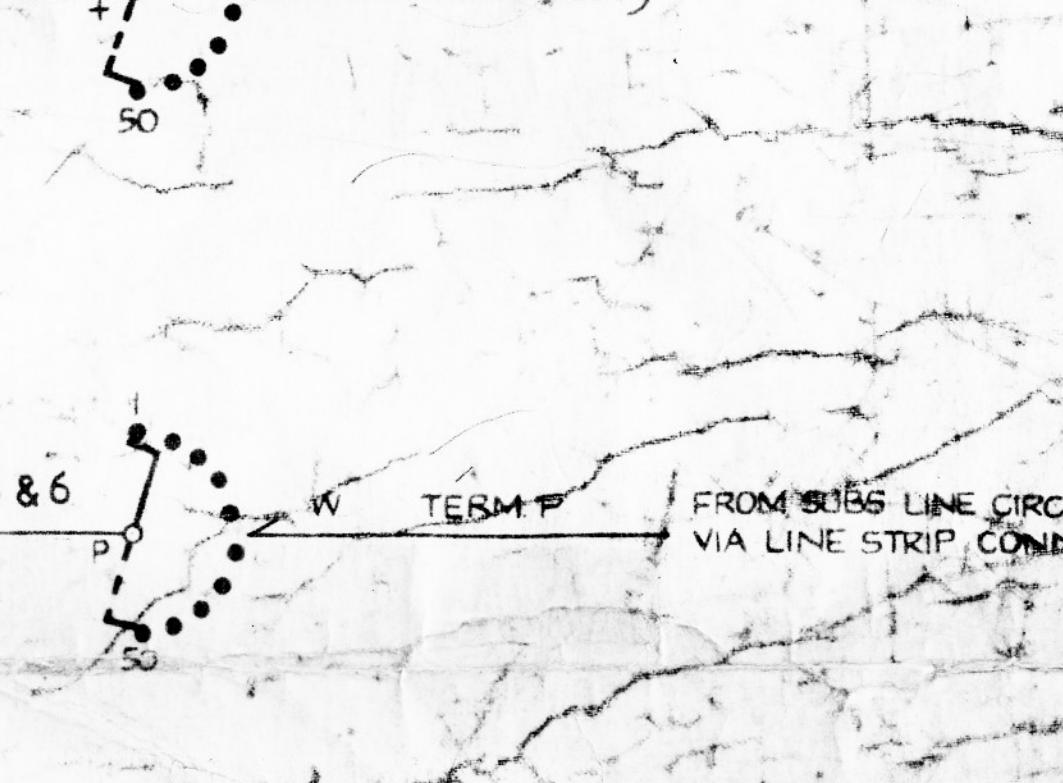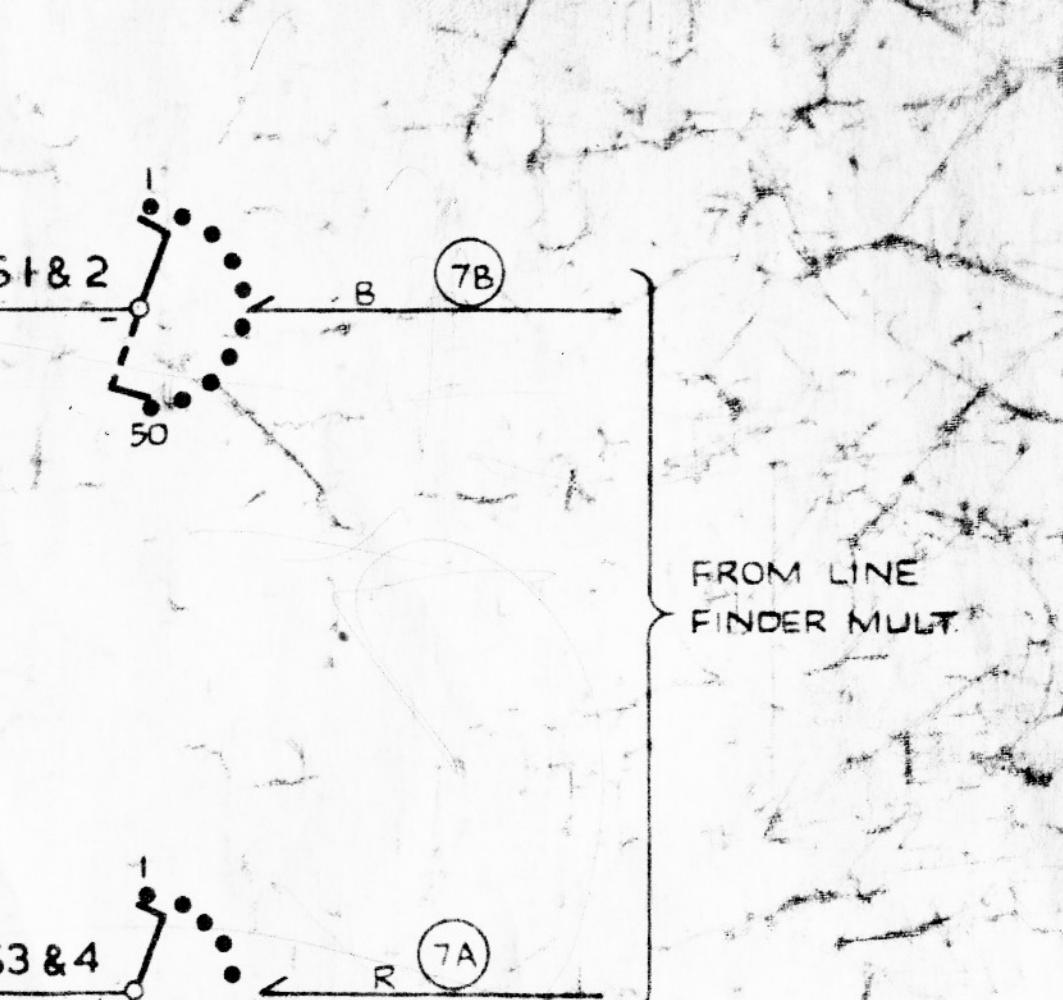

04550