

SHANMON388 BACKHOE LOADER

EXPLODED DRAWING



SHANDONG WEIMENG ENGINEERING MACHINER CO., LTD

ADD: Qingzhou Industrial Park, Weifang city, Shandong Pro. China.

TEL:0536-3818796

FAX: 0536-3818486

前 言

Shanmon388 轮式挖掘装载机零部件图册，是为了便于用户在使用、维修和保养等工作中的方便而编绘的，以供在使用过程中查阅及参考，也可帮助用户了解本机的结构和装配关系。发动机随机已有零部件图册，本书故未编出。

图册按各总成及结构布局绘制出了各零部件的图形及相互关系。凡不可拆卸的部件，一般只标出部件代号，不另列其组成零件。明细表采用中英文对照编译了名称、代号及数量。

随着技术更新和生产的不断发展，产品将不断改进，故本图册的内容会有部分不相一致，因此用户在订购零部件时，请指明车出厂日期和编号。

FOREWORD

This part list of Model shanmon388 backhoe loader is intent as a consultation reference for the customer to use the machine, and to help them repair and maintain the loaders. It can also help the users to be familiar with the construction and assembly relation of the machine. The engine has its own part list with it,so this book does not contain the engine part list.

The part list contains the part-drawings of deferent assem-blies,showing the shape of the parts as well as the assembling relation,The components which can not be taken apart(as the weldment or riveted assemblies) are Indicated only by their component numbers without the consisting part numbers.

目录 CONTENTS

图一	动臂组合.....	(1)
FIG1	LOADER BOOM MODULE.....	(1)
图二	快换六合一.....	(3)
FIG2	QUICK CHANGE SIX IN ONE.....	(3)
图三	快换装置.....	(5)
FIG3	CHANGE THE GEAR.....	(5)
图四	联板组合.....	(7)
FIG4	LINKAGE MODULE.....	(7)
图五	车架总成.....	(9)
FIG5	FRAME ASSEMBLY.....	(9)
图六	转向液压系统.....	(11)
FIG6	STEERING HYDRAULIC SYSTE.....	(11)
图七	工作液压系统.....	(13)
FIG7	WORKING DEVICE HYDRAULIC SYSTEM.....	(13)
图八	四合一斗液压系统.....	(15)
FIG8	FOUR-IN-ONE BUCKET HYDRAULIC SYSTEM.....	(15)
图九	快换液压系统.....	(17)
FIG9	CHANGE THE HYDRAULIC SYSTEM QUICKLY.....	(17)
图十	装载阀总成.....	(19)
FIG10	LOADER VALVE ASSEMBLY.....	(19)
图十一	转斗油缸.....	(21)
FIG11	TILTING CYLINDER ASSEMBLY.....	(21)
图十二	举升油缸.....	(23)
FIG12	LIFTING CYLINDER ASSEMBLY.....	(23)
图十三	手制动系统.....	(25)
FIG13	MANNEL BRAKE SYSTEM.....	(25)
图十四	行车制动系统.....	(27)
FIG14	DRIVING BRAKE SYSTEM.....	(27)
图十五	驱动桥管路系统.....	(29)
FIG15	DRIVE AXLE PIPE SYSTEM.....	(29)
图十六	传动系统.....	(31)
FIG16	TRANSMISION SYSTER.....	(31)
图十七	变速箱安装.....	(33)
FIG17	GEARBOX INSTALLATION.....	(33)
图十八	变速箱总成 01.....	(35)
FIG18	GEARBOX SSEMBLY01.....	(35)
图十九	变速箱总成 02.....	(37)
FIG19	GEARBOX SSEMBLY02.....	(37)
图二十	变速箱总成 03.....	(39)

FIG20	GEARBOX SSEMBLY03.....	(39)
图二十一	变速箱总成 04.....	(41)
FIG21	GEARBOX SSEMBLY04.....	(41)
图二十二	变速箱总成 05.....	(43)
FIG22	GEARBOX SSEMBLY05.....	(43)
图二十三	变速箱总成 06.....	(45)
FIG23	GEARBOX SSEMBLY06.....	(45)
图二十四	变速箱总成 07.....	(47)
FIG24	GEARBOX SSEMBLY07.....	(47)
图二十五	变速箱总成 08.....	(49)
FIG25	GEARBOX SSEMBLY08.....	(49)
图二十六	变速箱总成 09.....	(51)
FIG26	GEARBOX SSEMBLY09.....	(51)
图二十七	变速箱总成 10.....	(53)
FIG27	GEARBOX SSEMBLY10.....	(53)
图二十八	变速箱总成 11.....	(57)
FIG28	GEARBOX SSEMBLY11.....	(57)
图二十九	变速箱总成 12.....	(59)
FIG229	GEARBOX SSEMBLY12.....	(59)
图三十	前驱动桥总成.....	(61)
FIG30	FRONT AXLE ASSEMBLY.....	(61)
图三十一	前驱动桥总成 01.....	(63)
FIG31	FRONT AXLE ASSEMBLY01.....	(63)
图三十二	前驱动桥总成 02.....	(65)
FIG32	FRONT AXLE ASSEMBLY02.....	(65)
图三十三	前驱动桥总成 03.....	(67)
FIG33	FRONT AXLE ASSEMBLY03.....	(67)
图三十四	前驱动桥总成 04.....	(69)
FIG34	FRONT AXLE ASSEMBLY04.....	(69)
图三十五	前驱动桥总成 05.....	(71)
FIG35	FRONT AXLE ASSEMBLY05.....	(71)
图三十六	前驱动桥总成 06.....	(73)
FIG36	FRONT AXLE ASSEMBLY06.....	(73)
图三十七	前驱动桥总成 07.....	(75)
FIG37	FRONT AXLE ASSEMBLY07.....	(75)
图三十八	轮胎轮辋总成.....	(77)
FIG38	RIM AND TYRE ASSEMBLY.....	(77)
图三十九	后驱动桥总成.....	(79)
FIG39	REAR AXLE ASSY.....	(79)


图四十	后驱动桥总成 01	(81)
FIG40	REAR AXLE ASSY01	(81)
图四十一	后驱动桥总成 02	(83)
FIG41	REAR AXLE ASSY02	(83)
图四十二	后驱动桥总成 03	(85)
FIG42	REAR AXLE ASSY03	(85)
图四十三	后驱动桥总成 04	(87)
FIG43	REAR AXLE ASSY04	(87)
图四十四	后驱动桥总成 05	(89)
FIG44	REAR AXLE ASSY05	(89)
图四十五	后驱动桥总成 06	(91)
FIG45	REAR AXLE ASSY06	(91)
图四十六	后驱动桥总成 07	(93)
FIG46	REAR AXLE ASSY07	(93)
图四十七	后驱动桥总成 08	(95)
FIG47	REAR AXLE ASSY08	(95)
图四十八	后轮胎轮辋总成	(97)
FIG48	REAR RIM AND TYRE ASSEMBLY	(97)
图四十九	变速箱变矩器管路	(99)
FIG49	OIL PIPELINE OF CONVERTER GEARBOX	(99)
图五十	传动油散连接油路	(101)
FIG50	TRANSMISSION OIL COOLING OIL-WAY	(101)
图五十一	优先阀	(103)
FIG51	PRIORITY VALVE	(103)
图五十二	齿轮泵总成	(105)
FIG52	GEAR PUMP ASSEMBLY	(105)
图五十三	前、后传动轴	(107)
FIG53	FRONT\ REAR DRIVING SHAFT	(107)
图五十四	加油机构	(109)
FIG54	FUELERATOR MECHANISM	(109)
图五十五	驾驶室	(111)
FIG55	CAB CEILING	(111)
图五十六	驾驶室外装总成	(113)
FIG56	CAB OUTER INSTALL ASSEMBLY	(113)
图五十七	顶盖线路	(116)
FIG57	TOP COVER WIRING	(116)
图五十八	底盘线路	(118)
FIG58	CHASSIS WIRING	(118)
图五十九	仪表安装	(120)
FIG59	INSTRUMENT INSTALLATION	(120)
图六十	控制台线路	(122)

FIG60	CONSOLE LINE	(122)
图六十一	电瓶组系统	(124)
FIG61	BATTERY CASSES SYSTEM	(124)
图六十二	底盘液压系统	(126)
FIG62	CHASSIS HYDRAULIC SYSTEM	(126)
图六十三	挖掘液压系统	(131)
FIG63	EXCAVATE THE HYDRAULIC SYSTEM	(131)
图六十四	挖掘阀支架	(135)
FIG64	BACKHOE VALVE FRAME	(135)
图六十五	油缸及阀	(137)
FIG64	CYLINDER AND VALVE	(137)
图六十六	挖掘阀总成	(139)
FIG66	BACKHOE VALVE FRAME	(139)
图六十七	回转油缸	(142)
FIG67	SWING BYLINDER	(142)
图六十八	挖掘油缸	(144)
FIG68	BACKHOE CYLINDER	(144)
图六十九	斗杆油缸	(146)
FIG69	CROWD CYLINDER	(146)
图七十	大臂油缸	(148)
FIG70	BOOM CYLINDER	(148)
图七十一	支腿油缸	(150)
FIG71	SABILIZER CYLINDER	(150)
图七十二	夹紧油缸	(152)
FIG72	GRIPING CYLINDER	(152)
图七十三	伸缩油缸	(154)
FIG73	RETRACTABLE CYLINDER	(154)
图七十四	装载装置操纵机构	(156)
FIG74	GRIPING CYLINDER OPERATING MECHANISM OF WORKING DECICE	(156)
图七十五	挖掘装置操纵机构	(158)
FIG75	BOOM LOCK MECHANISM	(158)
图七十六	挖掘摆臂组合	(160)
FIG76	BACKHOE SWING ARM MODULE	(160)
图七十七	挖斗组合	(162)

FIG77 BACKHOE BUCKET MODULE..... (162)
图七十八 挖掘大臂组合..... (164)
FIG78 BACKHOE BOOM MODULE..... (164)
图七十九 伸缩斗杆组合..... (166)
FIG79 TELESCOPIC ROD..... (166)
图八十 伸缩臂座体组合..... (168)
FIG80 TELESCOPIC BOOM..... (168)
图八十一 摆动架总成..... (170)
FIG81 OSCILLATION FRAME ASSEMBLY..... (170)
图八十二 滑动架总成..... (172)
FIG82 SLIDE FRAME ASSEMBLY..... (172)
图八十三 滑架推拉座..... (174)
FIG83 SLIDING FRAME PUSH-PULL SEAT..... (174)
图八十四 柴油机装置..... (176)
FIG84 DIESEL ENGINE MOUNT..... (176)
图八十五 柴油箱总成..... (178)
FIG85 FUEL TANK ASSEMBLY..... (178)
图八十六 机油箱总成..... (180)
FIG86 ENGINE OIL TANK ASSEMBLY..... (180)
图八十七 发动机罩总成..... (182)
FIG87 ENGINE HOOD ASSEMBLY..... (182)
图八十八 变速操纵杆..... (184)
FIG88 CONTROL SYSTEM..... (184)
图八十九 空调系统..... (186)
FIG89 AIR CONDITION SYSTEM..... (186)
图九十 先导液压系统液压原理..... (188)
FIG90 PILOT HYDRAULIC SYSTEM..... (188)
图九十一 液压原理..... (192)
FIG91 Hydraulic principle..... (192)

动臂组合


LODER BOOM MOODULE

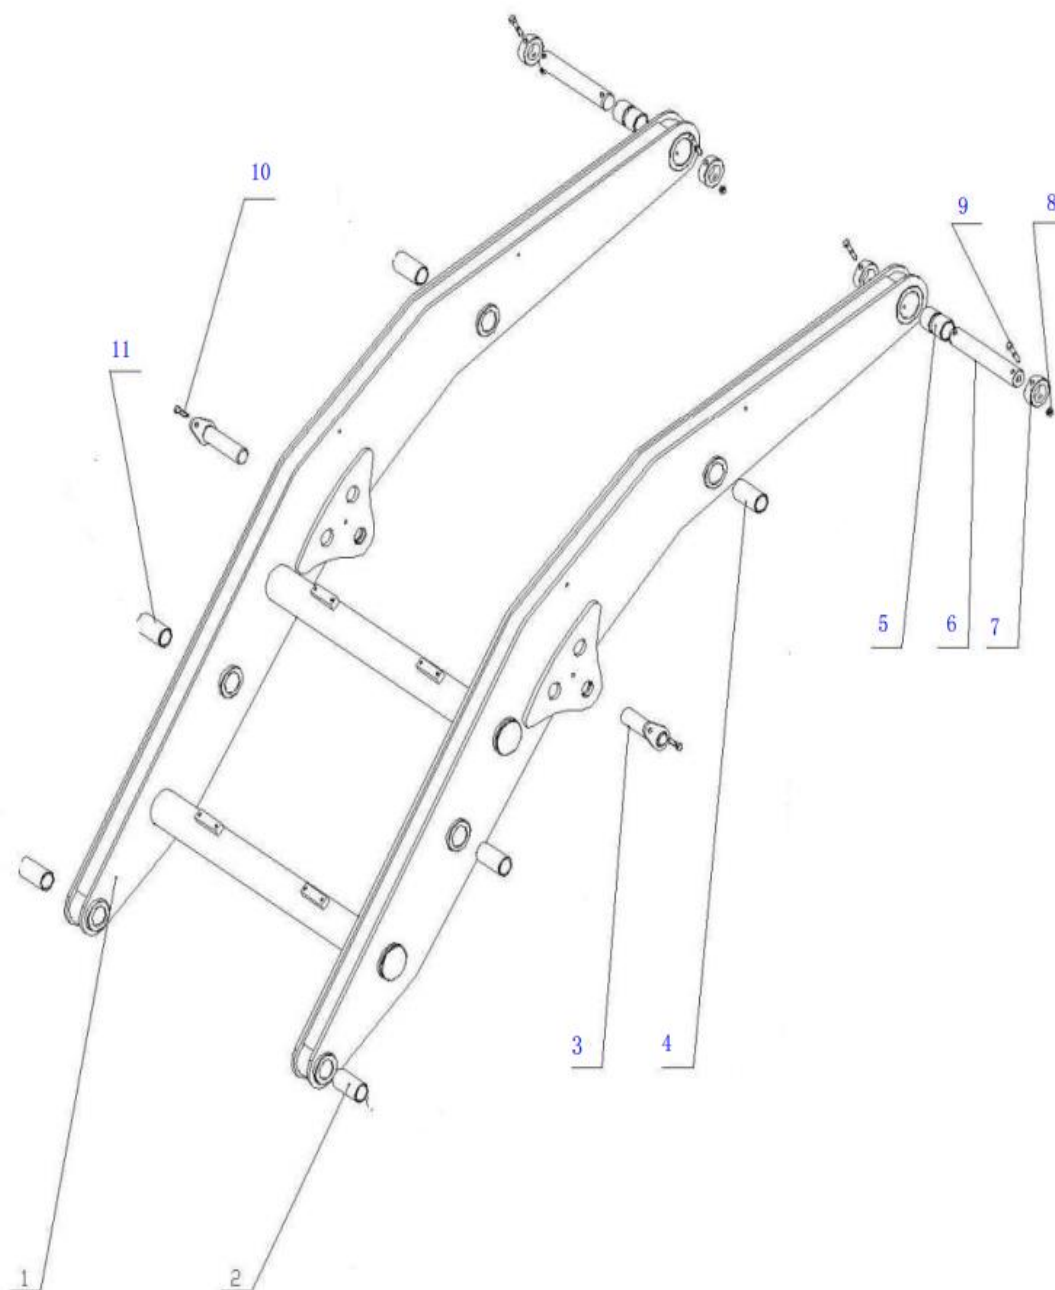

动臂组合 LODER BOOM MOODULE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z061010503	Boom	动臂	1	
2	Z062010900	Bushing	衬套	2	
3	Z062010910	Lifting cylinder front pin	举升缸前销轴	2	
4	Z062011060	Battery box	摇臂衬套	2	
5	Z062010880	Rear bushing of frame tie rod	车架拉杆后衬套	2	
6	Z061012150	Rear pin shaft of boom	动臂后销轴	2	
7	Z062010171	Block Circle	挡圈	2	
8	B190120303	Nylon lock nut	尼龙锁紧螺母	2	
9	B040611265	Bolt M12X65	螺 栓 M12X65	2	
10	B042521225	Bolt M12X25	螺 栓 M12X25	2	
11	Z062010900	Bushing	衬套	4	


快换六合一 QUICK CHANGE SIX IN ONE

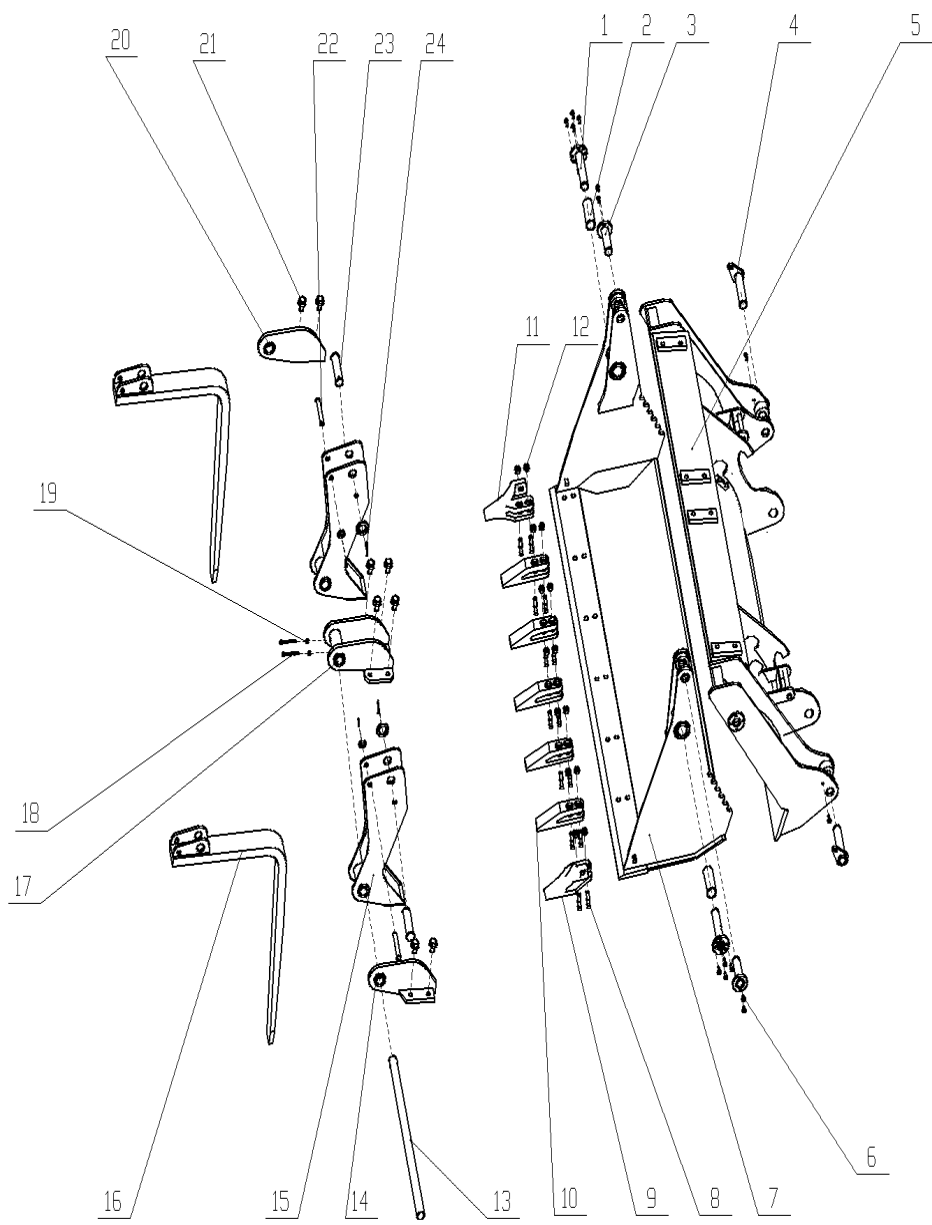

快换六合一 QUICK CHANGE SIX IN ONE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z061011590	Spindle Assembly	转轴总成	2	
2	Z061011620	Sleeve	轴套	2	
3	Z061011630	Pin shaft on cylinder	油缸上销轴	2	
4	Z061011560	Lower pin shaft of oil cylinder	油缸下销轴	2	
5	Z061011124	After four-in-one	四合一斗后	1	
6	B040910825	Bolt M8X25	螺栓 M8X25	14	
7	Z061011023	Four-in-one before	四合一斗前	1	
8	Z110010010	Bucket Tooth Bolt	斗齿螺栓	16	
9	Z110010800	Left Tooth	左边齿	1	
10	Z110010020	Bucket Teeth	斗齿	5	
11	Z110010800	Right Tooth	右边齿	1	
12	B050331614	Nut	螺母	16	
13	Z061011370	Pin	支架销轴	2	
14	Z061011330	Left support	左支座	1	
15	Z061011490	Fork stand	货叉支架	2	
16	Z061011440	Forks	货叉	2	
17	Z061011380	Shaft support	转轴支座	1	
18	B042520880	Bolt	六角法兰面螺栓	2	
19	B050210806	Nylon hexagon lock nut	锁紧螺母	2	
20	Z061011430	Right support	右支座	1	
21	B042521635	Bolt	六角法兰面螺栓	8	
22	Z061011480	Pin	定位销	2	
23	Z061011470	Pin	转销	2	
24	B080211063	Pin	开口销 6X60	2	


快换装置 CHANGE THE GEAR

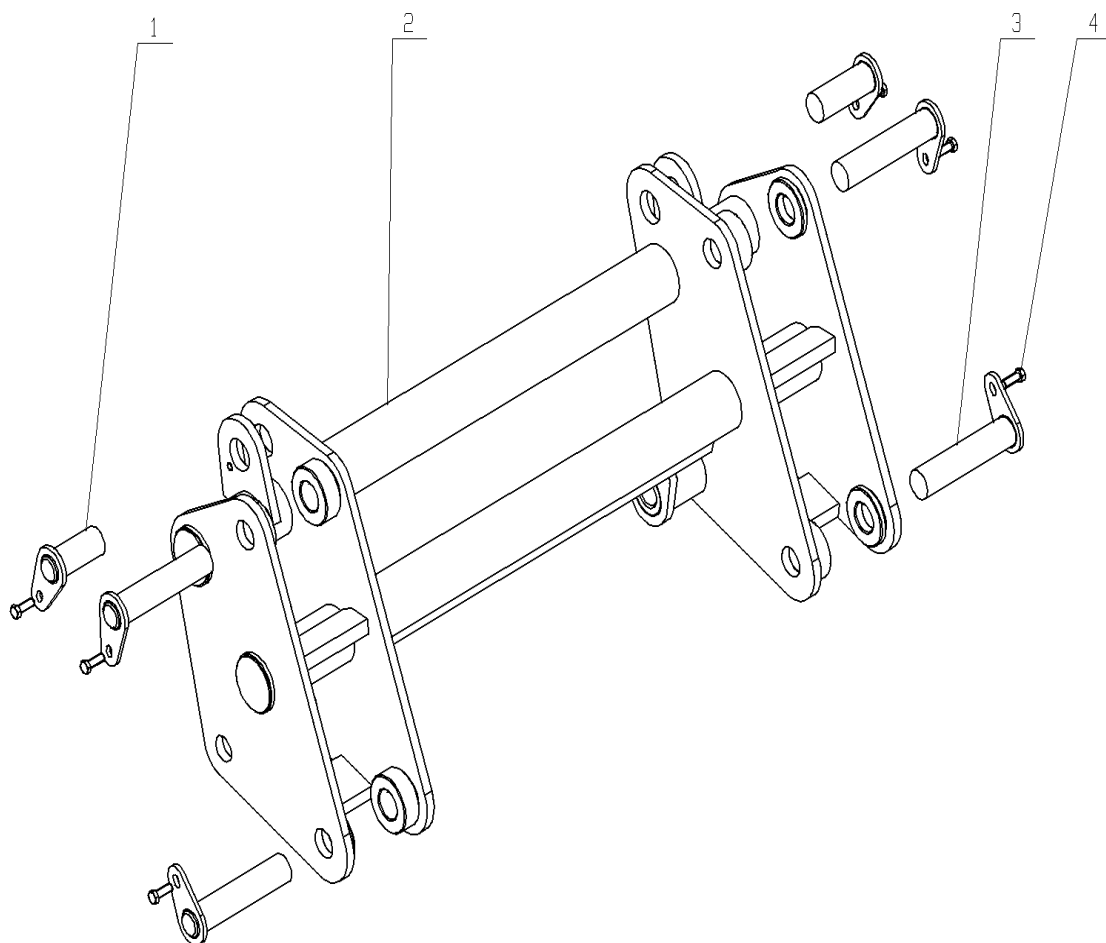

快换装置 CHANGE THE GEAR

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z220510250	Pin Assembly	销轴总成	2	
2	Z050700013	Change the gear	快换装置	1	
3	Z062011012	Bucket arm pin shaft	铲斗动臂销轴	4	
4	B042521225	Bolt M12X25	螺栓 M12×25	4	


联板组合 LINKAGE MODULE

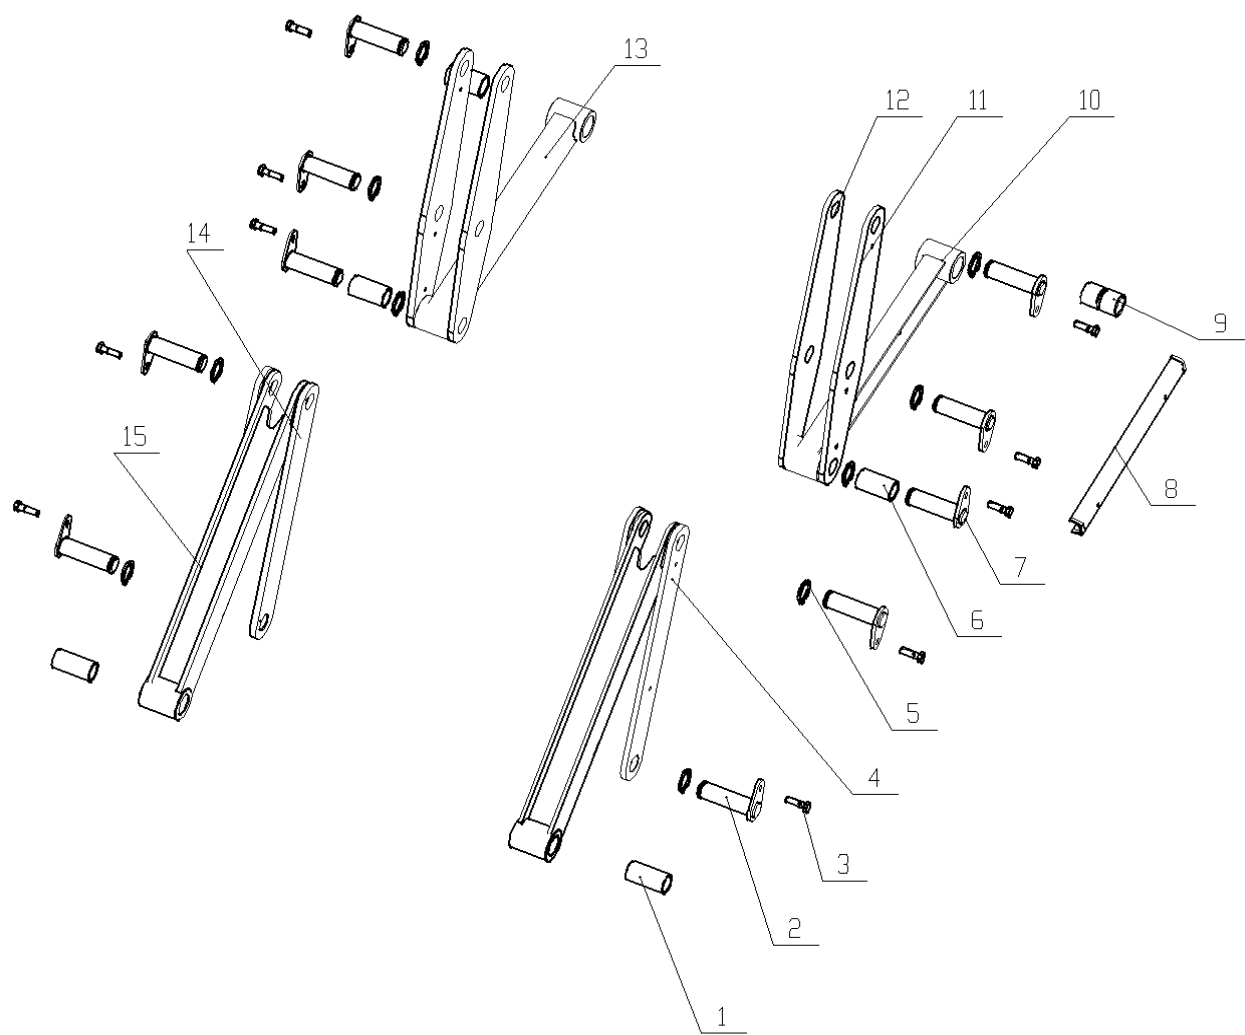

联板组合 LINKAGE MODULE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z062010900	ARM front bushing	动臂前衬套	2	
2	Z062010971	Pole pin assembly	撑杆销轴总成	2	
3	B042521225	Bolt M12×25	螺栓 M12×25	10	
4	Z062010475	External Strut	外撑杆板	2	
5	B070114502	Block Circle	挡圈	10	
6	Z062010870	Frame tie rod front bushing	车架拉杆前衬套	2	
7	Z062010940	Rocker arm pin shaft	摇臂销轴	6	
8	Z062020900	Lock Lever	锁止杆	1	
9	Z062010880	Rear bushing of frame tie rod	车架拉杆后衬套	2	
10	Z062010561	Left rear lever	左后拉杆	1	
11	Z062010512	External rocker arm	外摇臂	2	
12	Z062010542	Inner rocker arm	内摇臂	2	
13	Z062010560	Right back lever	右后拉杆	1	
14	Z062010495	External strut plate	内撑杆板	2	
15	Z062010405	Front lever	前拉杆	2	

车架体 CHASSIS

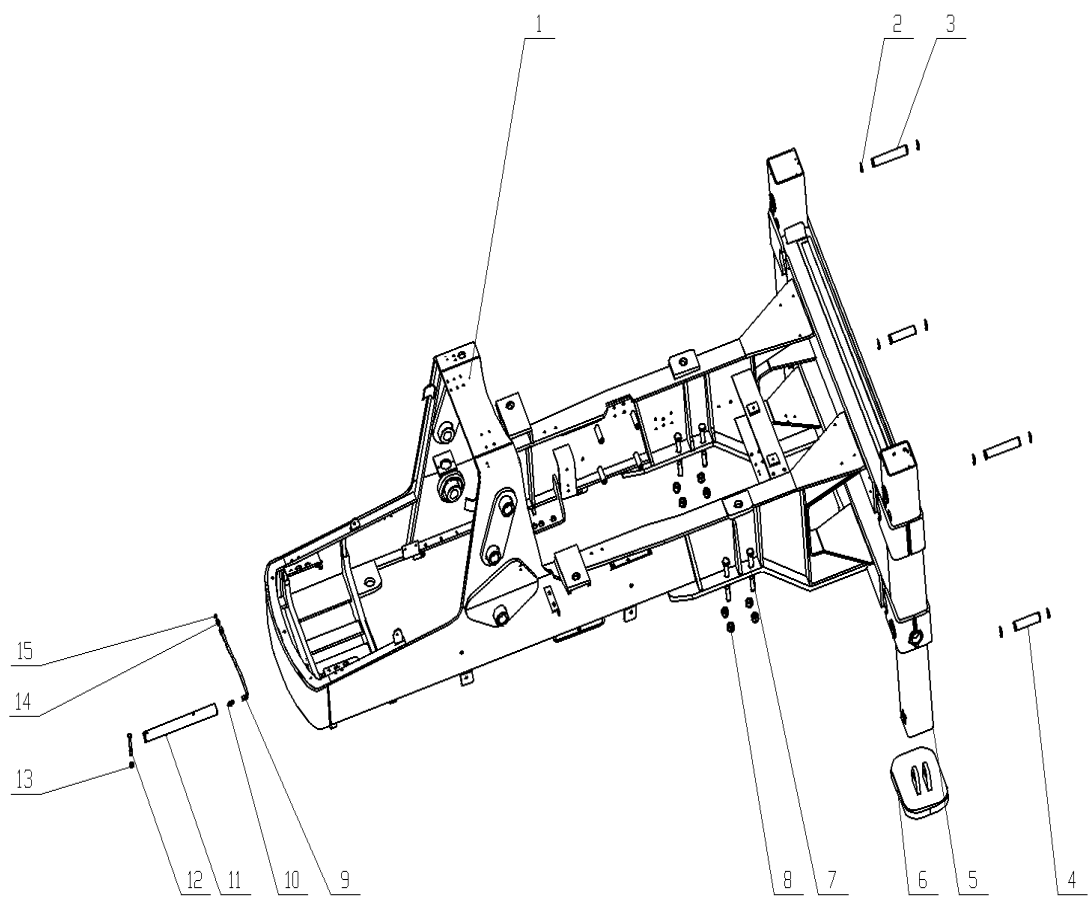


车架体 CHASSIS

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z063020016	Chassis	车架体	1	
2	B070114002	Retaining ring	挡圈(轴用)	8	
3	Z050030810	Pin shaft on outrigger cylinder	支腿缸上销轴	2	
4	Z050030671	Lower pin shaft of outrigger cylinder	支腿缸下销轴	2	
5	Z050030681	Move your legs	活动支腿	2	
6	Z050030610	Foot support	支脚	2	
7	B040810023	Bolt M24×240	螺栓 M24×240	8	
8	B050212722	Lock nut M24	锁紧螺母 M24	8	
9	Z062020530	Lubricating oil pipe	润滑油管	1	
10	QLWZG074-101404	Transition joint	直通接头	1	
11	B4616-16A000002	Pin	销轴	1	
12	B040811295	Bolt	螺栓 M12×90	1	
13	B050211210	Nut	锁紧螺母	1	
14	Z350021112	Transition joint	过渡接头	1	
15	B150101000	Lube Cups	油杯	1	

转向液压系统

STEERING HYDRAULIC SYSTEM

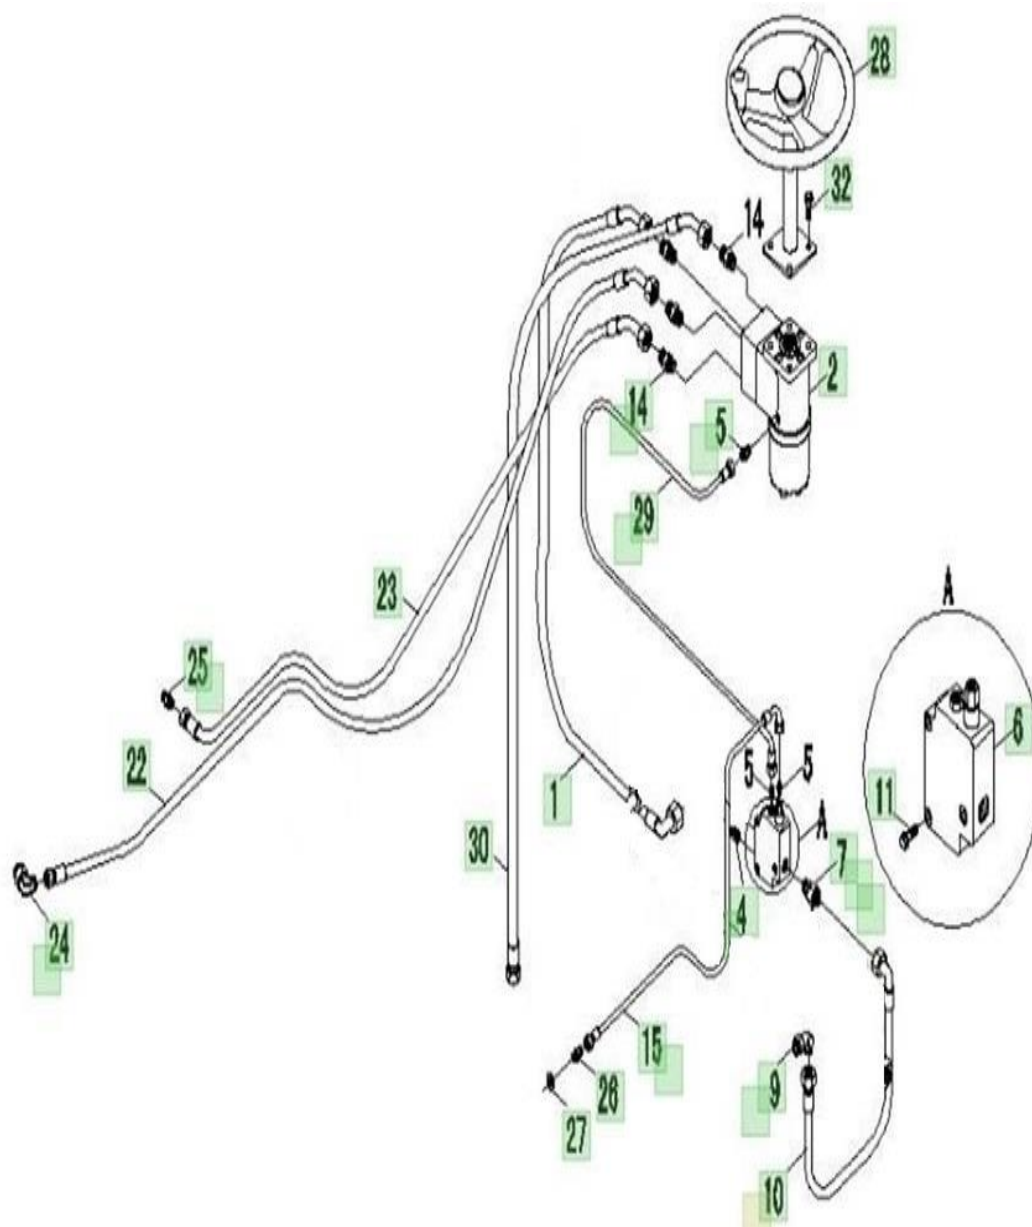


转向液压系统

STEERING HYDREULIC SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	Z062060030	OIL INLET PIPE OF STEERING GEAR	转向器进油管	1	
2	W090300000	STEERING GEAR	转向器	1	
4	Z062060490	CONNECTOR	接头	1	
5	QLWZG074-001412	STRAIGHT JOINT	直角组合接头	2	
6	W110000300	PRIORITY VALVE	优先阀	1	
7	QLWZG074-003027	STRAIGHT JOINT	直通接头	1	
9	QLWZG078-003030	RIGHT-ANGLE ADJUSTABLE CONNECTOR	直角可调接头	1	
10	Z062060420	OIL INLET PIPE	优先阀进油管	1	
11	GBT16674.1-M8X6	BOLT	六角法兰面螺栓	2	
14	Z180200230	STRAIGHT JOINT	直通接头	4	
15	Z060250261	OIL RETURN PIPE	优先阀回油管	1	
22	Z062060110	LEFT STEERING CYLINDER HOSE	左转向缸软管	1	
23	Z062060130	RIGHT STEERING CYLINDER HOSE	右转向缸软管	1	
24	QLWZG077-101606	RIGHT-ANGLE ADJUSTABLE CONNECTOR	直角可调接头	1	
25	W110251440	STRAIGHT JOINT	直通接头	1	
26	QLWZG078-001616	CONNECTOR	直角组合接头	1	
28	W090120000	STEERING GEAR ASSEMBLY	方向机总成	1	
29	Z062060150	LS HOSE OF STEERING GEAR	转向器LS软管	1	
30	Z062060210	OIL RETURN HOSE	转向器回油软管	1	
32	B040711025	BOLT M10X25	六角法兰面螺栓	4	

工作液压系统

WORKING DEVICE HYDRAUIC SYSTEM

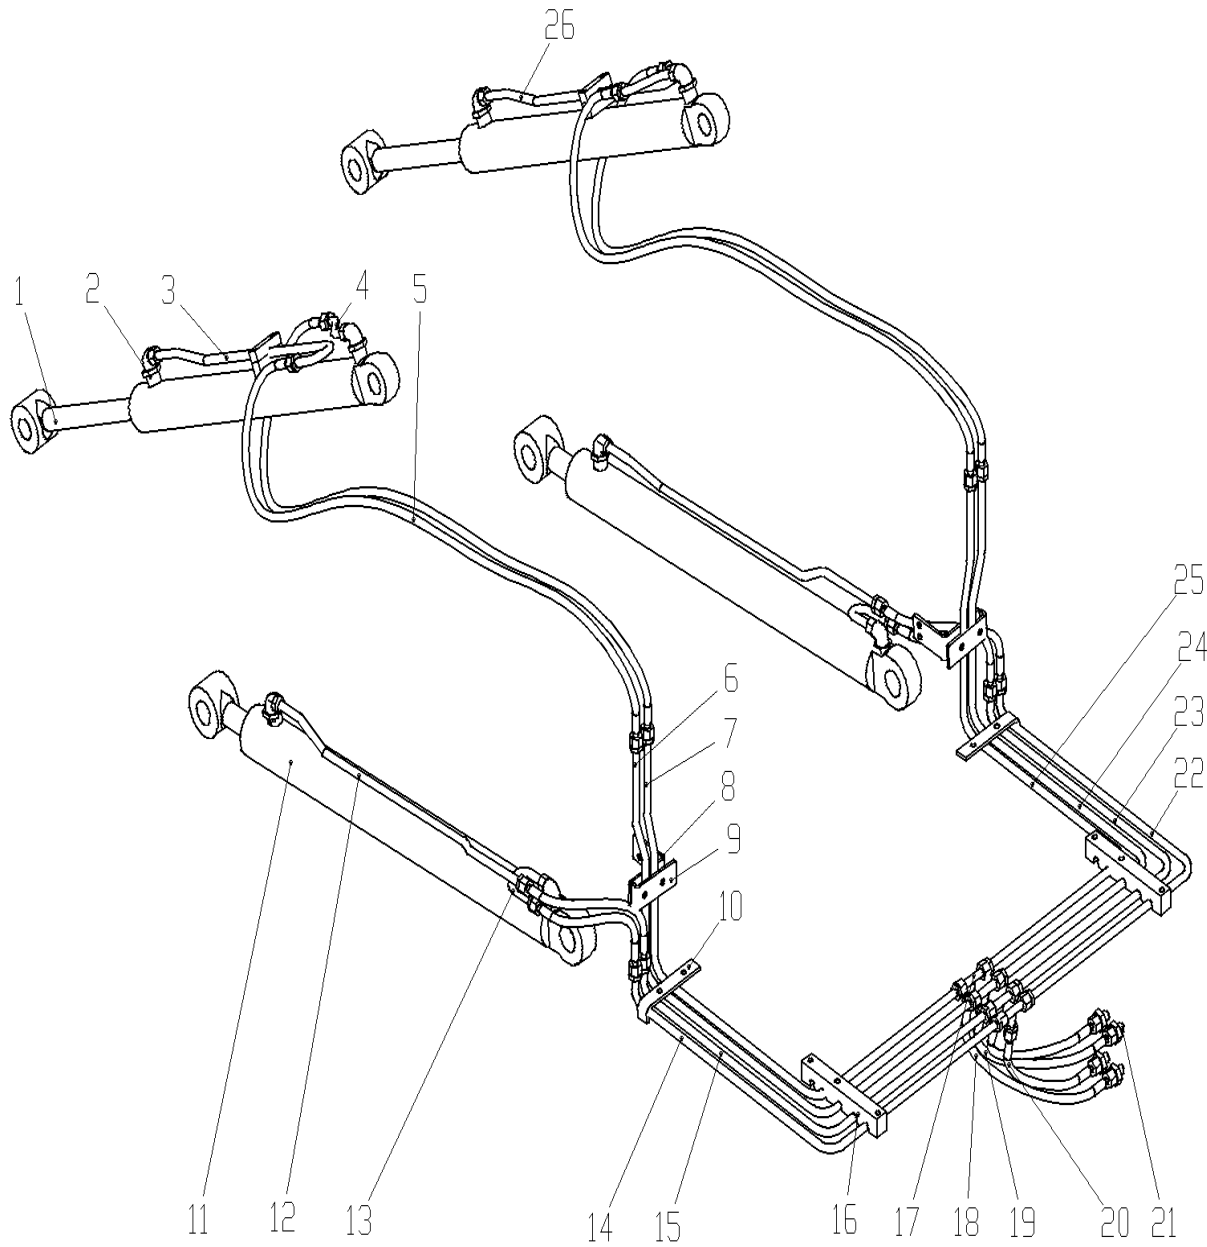


工作液压系统 WORKING DEVICE HYDRAUIC SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q' TY	
1	W053025035	Flip Bucket	装载转斗缸	2	
2	QLWZG077-002218	Right angle adjustable joint Left small lumen hard tube	直角可调接头	8	
3	Z062100601	Big cavity hard tube of	左翻斗缸小腔硬管	1	
4	Z062100550	dump cylinder Tubing	翻斗缸大腔硬管	2	
5	Z062101091	Bucket cylinder hose	转斗缸软管	4	
6	Z064100012	Oil feed pipe	左翻斗缸小腔进油管	1	
7	Z064100032	Oil feed pipe	左翻斗缸大腔进油管	1	
8	Z061100324	Stent	支架	2	
9	Z061100352	Pipe Card	管卡	2	
10	Z064100162	Pressure Plate	压板	2	
11	W053025025	Lifting cylinder	举升缸	2	
12	Z062100346	Oil feed pipe	举升缸小腔硬管	2	
13	Z062100305	Oil feed pipe	举升缸大腔硬管	2	
14	Z062100164	Oil feed pipe	左举升缸大腔硬管	1	
15	Z062100144	Oil feed pipe	左举升缸小腔硬管	1	
16	Z062100091	Pressure Plate	压板	2	
17	QLWZG079-202222	Three-way connector	三通接头	4	
18	Z062240010	Tubing	工作阀出油管 1	1	
19	Z062240050	Tubing	工作阀出油管 3	2	
20	Z064100180	Tubing	工作阀出油管 2	1	
21	Z020100200	Joint	接头	6	
22	Z064100144	Oil feed pipe	右举升缸大腔硬管	1	
23	Z064100124	Oil feed pipe	右举升缸小腔硬管	1	
24	Z064100052	Oil feed pipe	右翻斗缸小腔进油管	1	
25	Z064100072	Oil feed pipe	右翻斗缸大腔进油管	1	
26	Z062100571	Oil feed pipe	右翻斗缸小腔硬管	1	

四合一斗液压系统

FOUR-IN-ONE BUCKET HYDRAULIC SYSTEM

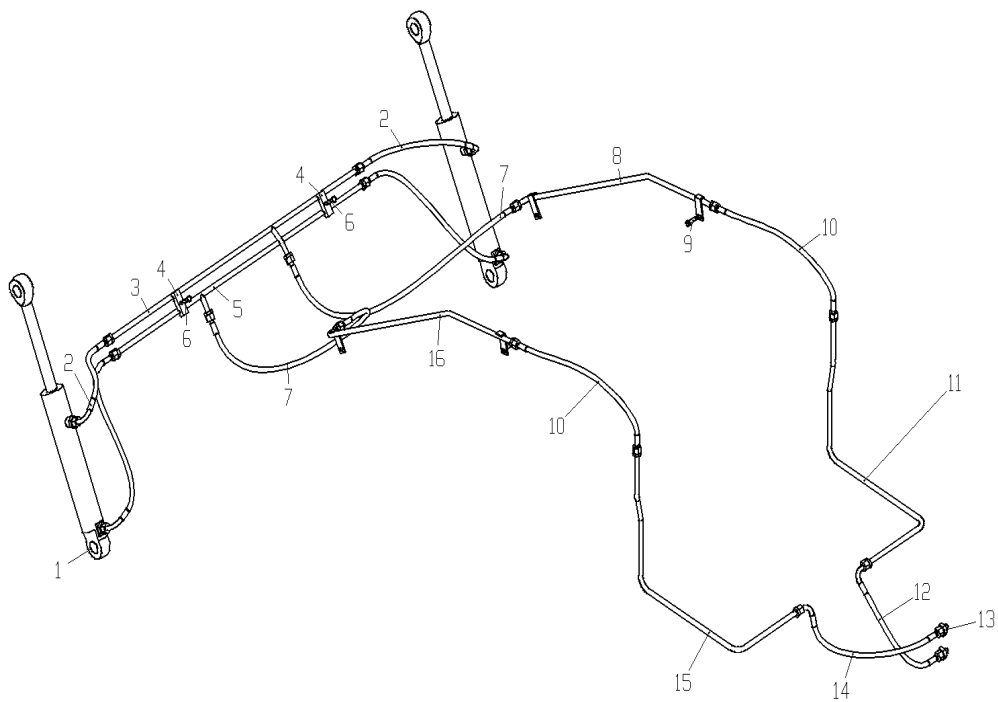


四合一斗液压系统

FOUR-IN-ONE BUCKET HYDRAULIC SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY
1	W053025360	FOUR-IN -ONE CYLINDER	四合一斗油缸	2
2	Z065100860	CYLINDER HOSE	油缸软管	4
3	Z050560132	Hard Tube I	硬管 I	1
4	Z050560150	PIPE CARD	管卡	2
5	B042521225	BOLT	螺栓	2
6	Z050560102	Hard Tube2	硬管 2	1
7	Z064100620	RIGHT ARM HARD TUBE	右动臂硬管	1
8	Z064100680	TUBE	三通进油管	2
9	B042521020	BOLT	螺栓	4
10	Z062380095	TUBE	动臂硬管进油管	2
11	Z064100300	THIED RIGHT HARD TUBE	第三联右侧硬管	1
12	Z020100200	JOINT	接头	2
13	Z064100340	TUBE	第三联 A 口出油管	1
14	Z061100380	TUBE	第三联 B 口出油管	1
15	Z064100320	THIED LEFT HARD TUBE	第三联左侧硬管	1
16	Z064100600	Left arm hard tube	左动臂硬管	1

快换液压系统

CHANGE THE HYDRAULIC SYSTEM QUICKLY

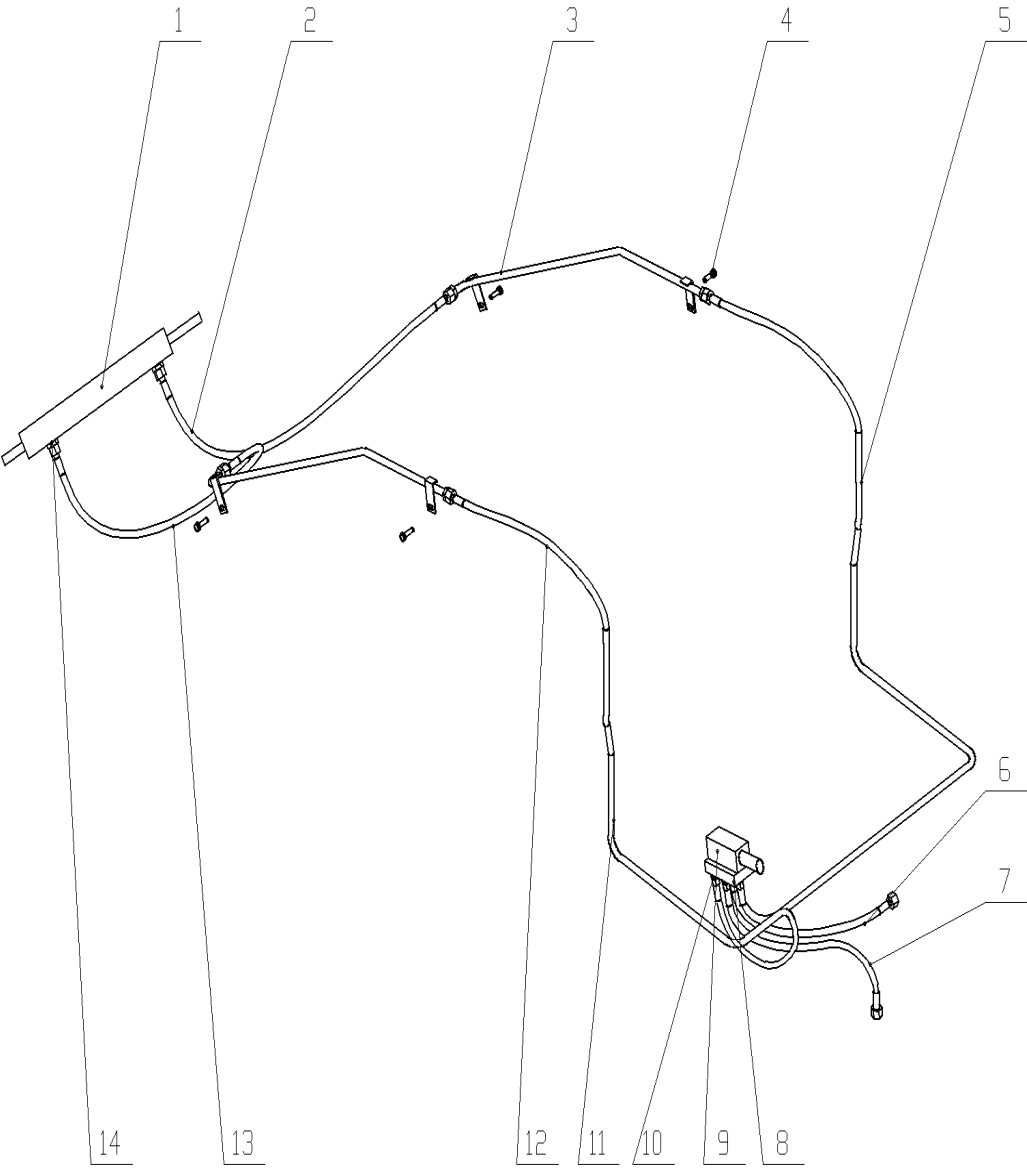


快换液压系统

CHANGE THE HYDRAULIC SYSTEM QUICKLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY
1	W055200000	Change the oil cylinder quickly	快换油缸（两头忙）	1
2	Z064100740	Change the right front tubing	快换右前油管	1
3	Z064100720	Quick change right arm hard tube	快换右动臂硬管	1
4	B040711020	Bolt M10×20	螺栓 M10×20	4
5	Z061100620	Solenoid valve B outlet pipe	电磁阀 B 口出油管	1
6	Z060250280	Tube	油管	1
7	Z061100280	Tube	油管	1
8	W070100250	Valve Plate	阀板	1
9	W072000000	Wet solenoid directional valve	湿式电磁换向阀	1
10	Z590190940	Joint	过渡接头	4
11	Z061100600	Solenoid valve a outlet pipe	电磁阀 A 口出油管	1
12	Z064100700	Quick change left arm hard tube	快换左动臂硬管	1
13	Z064100760	Change the left front tubing	快换左前油管	1
14	Z350730590	Jont	接头	2


装载阀 LOAD VALVE

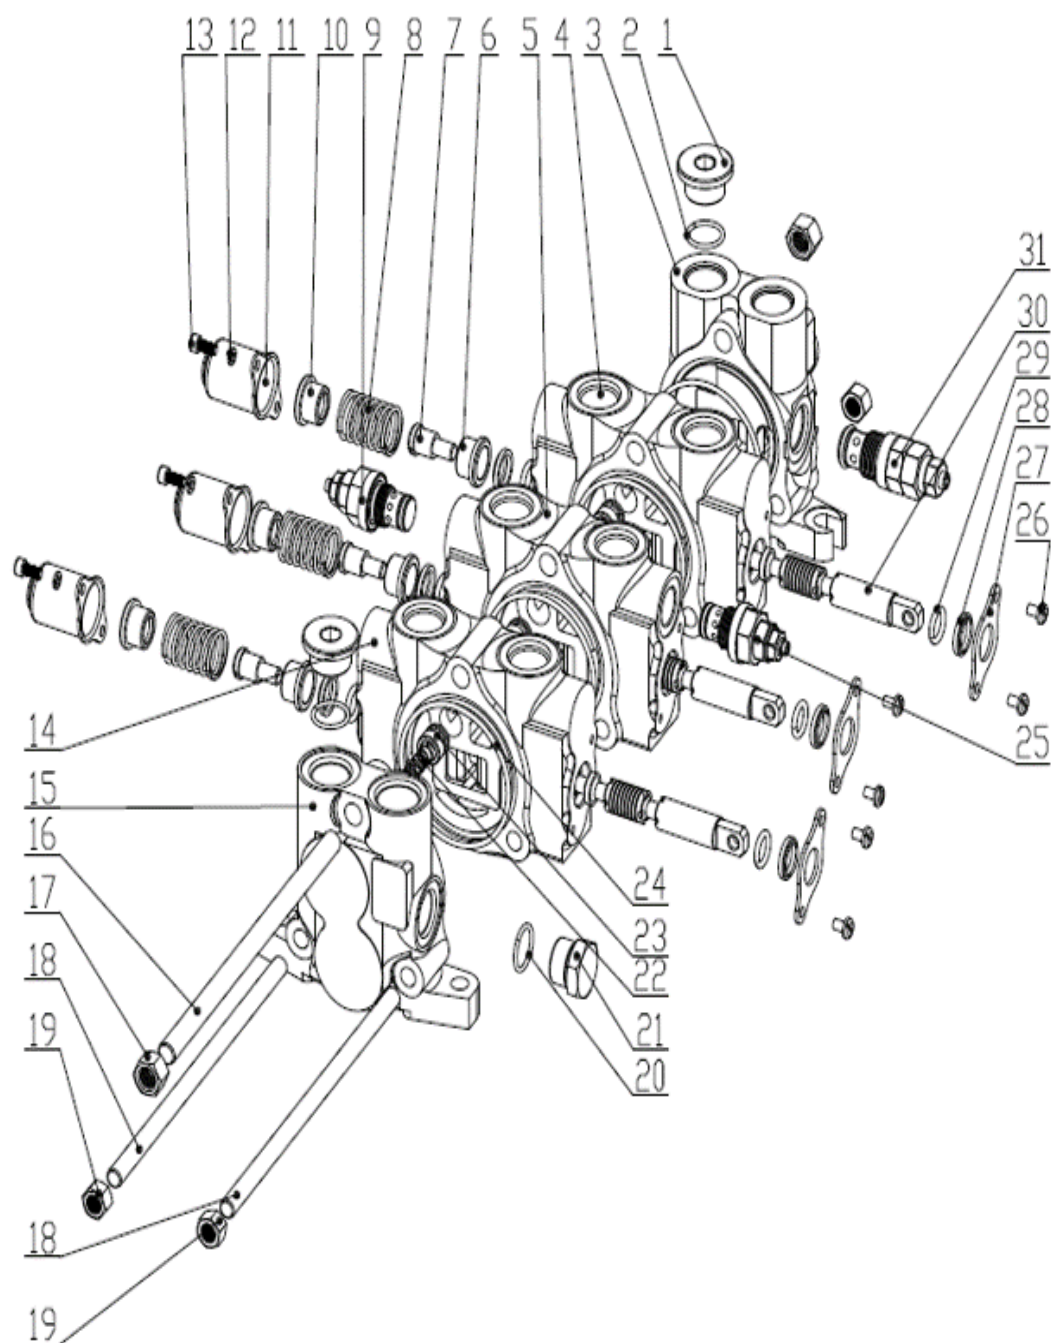

装载阀 LOAD VALVE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W070400009-1	Screw plug	螺塞	3	
2	ISO6149/26.6x2.9	C-ring 26.6X2.9	O 型圈/26.6x2.9	3	
3	W070400009-2	Inlet valve body	进油阀体	1	
4	W070400009-3	Valve Body	阀体	1	
5	W070400009-4	Valve Body	阀体	1	
6	W070400009-5	Spring seat	弹簧座	3	
7	W070400009-18	Setting screw	定位螺钉	3	
8	W070400009-22	Spring	弹簧	3	
9	W070400009-6	Secondary Relief Valve	二次溢流阀	1	
10	W070400009-7	Spring seat	弹簧座	3	
11	W070400009-8	Positioning end cap	定位端盖	3	
12	B060110602	PAD/6	弹垫/6	6	
13	B010410614	Hexagon Screw/M6X14	内六角螺钉/M6x14	6	
14	W070400009-9	Valve Body	阀体	1	
15	W070400009-10	Return valve body	回油阀体	1	
16	W070400009-19	Double headed bolt	双头螺栓 /M14x1.5x269	1	
17	B050411412	Nut M14X1.5	螺母/M14x1.5	2	
18	W070400009-20	Stud Bolt /M12X1.25X269	双头螺栓 /M12x1.25x269	2	
19	B050410001	Nut M12X1.25	螺母/M12x1.25	4	
20	B160120236	O-ring 23.6X2.65	O 型圈/23.6x2.65	1	
21	W070400009-11	Screw plug	螺塞	1	
22	W070400009-12	Spring	弹簧	3	
23	W070400009-13	Check Valve	单向阀	3	
24	B160110875	O-ring 87.5X3.55	O 型圈/87.5x3.55	4	
25	W070400009-14	Secondary Relief Valve	二次溢流阀	1	
26	B010710610	Half Round head screw	半圆头螺钉/M6x10	6	
27	W070400009-15	Backing Plate	垫板	6	
28	W070400009-21	Nylon retaining ring	尼龙挡圈/25x3.2	6	
29	B160121185	O-ring	O 型圈 18.64x3.53	6	
30	W070400009-16	Type 0 stem	O 型阀杆	3	
31	W070400009-17	Main Relief Valve	主溢流阀	1	


转斗油缸 TILT CYLINDER

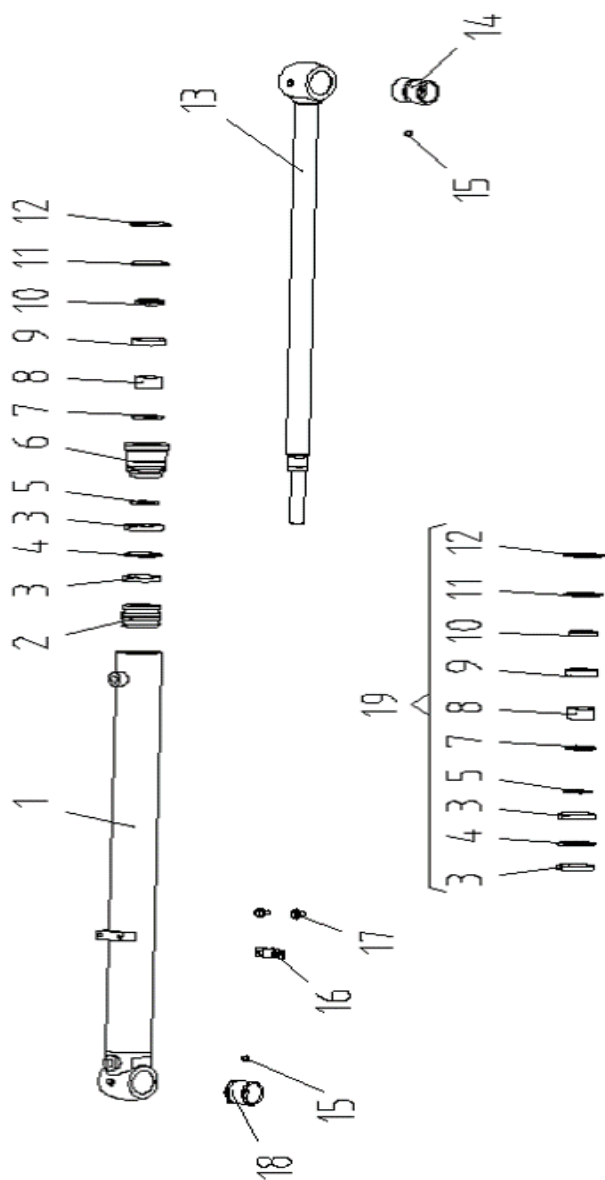

转斗油缸 TILT CYLINDER

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W053025035-1	Cylinder block	缸体	1	
2	W053025035-4	Piston	活塞	1	
6	W053025035-7	Guide sleeve	导向套	1	
13	W053025035-6	Piston rod	活塞杆	1	
14	W053025035-10	Rod bushing	杆衬套	1	
15	B150101000	Oil Cup M10 * 1	油杯 M10*1	2	
16	W053025650-8	Pipe Clip	管夹	1	
17	B042521015	Hexagon flange bolts M10 * 15	六角法兰面螺栓 M10*15	2	
18	B120524028	Joint Bearing	关节轴承 GE40ES	1	
19	W053025036	Sealed package	密封包	1	
3	W053025035-11	Support rings	支撑环 ZD70A	2	
4	W053025035-3	Glen Circle	格莱圈	1	
5	B160121260	O-ring	O 型圈 26X3.1	1	
7	B160130720	O-ring	O 型圈 70X3.1	1	
8	W053025035-12	Support rings	支撑环 ZD40A	1	
9	W053025035-13		SGP 阶梯封	1	
10	W053025035-14		GAY 密封圈	1	
11	B160140751	O-ring	O 型圈 75X3.1	1	
12	W053025035-8		防尘圈 CK-40	1	


举升油缸 LIFT CYLINDER

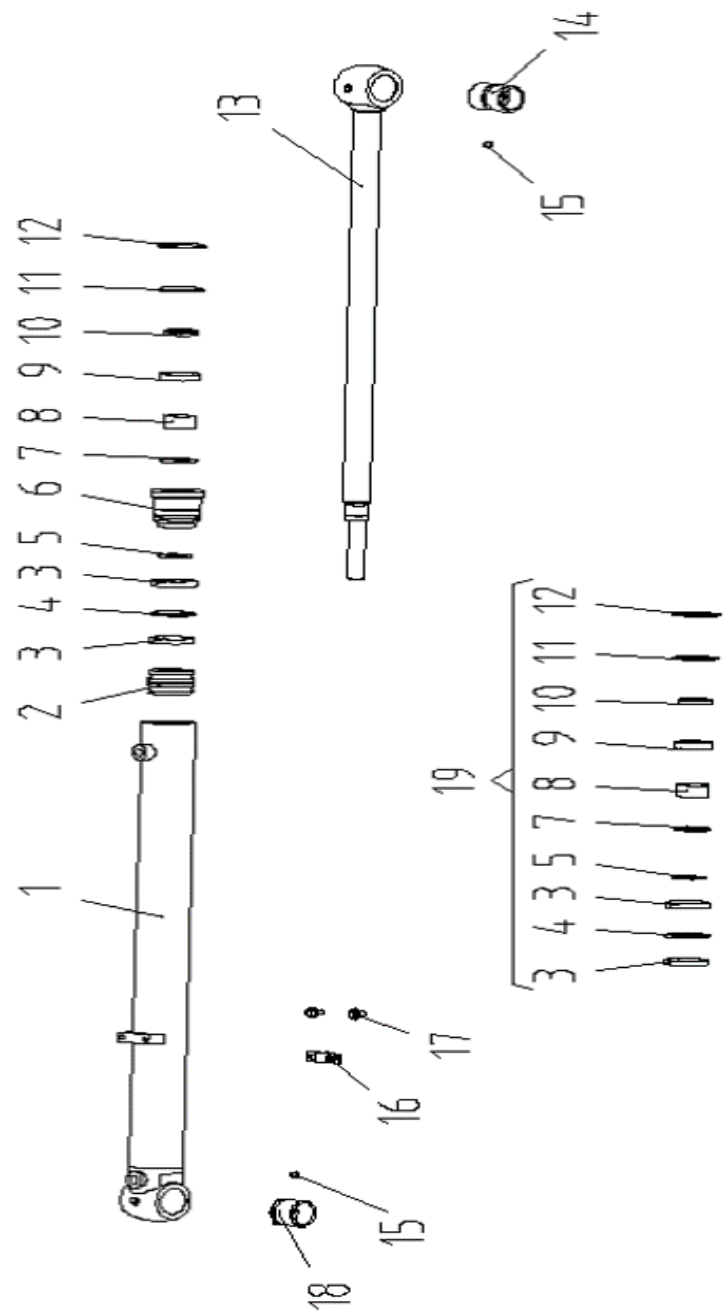

举升油缸 LIFT CYLINDER

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W053025025-3	Cylinder block	缸体	1	
2	W053025025-4	Piston	活塞	1	
6	W053025025-5	Guide sleeve	导向套	1	
13	W053025025-7	Piston rod	活塞杆	1	
14	W053025025-6	Rod bushing	杆衬套	1	
15	B150101000	Oil Cup M10 * 1	油杯 M10*1	2	
16	W053025650-8	Pipe Clip	管夹	1	
17	B042521015	Hexagon flange bolts M10 * 15	六角法兰面螺栓 M10*15	2	
18	B120525035	Joint Bearing	关节轴承 GE50ES	1	
19	W053025026	Sealed package	密封包	1	
3	W053025025-1	Support rings	支撑环 ZD80A	2	
4	W053025025-2	Glen Circle	格莱圈	1	
5	B160130502	O-ring	O 型圈 50X3.1	1	
7	B160130831	O-ring	O 型圈 80X3.1	1	
8	W053025025-8	Support rings	支撑环 ZD45A	1	
9	W053025025-9		SGP 阶梯封	1	
10	W053025025-10		GAY 密封圈	1	
11	B160130850	O-ring	O 型圈 85X3.1	1	
12	W053025025-11		防尘圈 CK-45	1	

手制动系统 MANUEL BRAKE SYSTEM

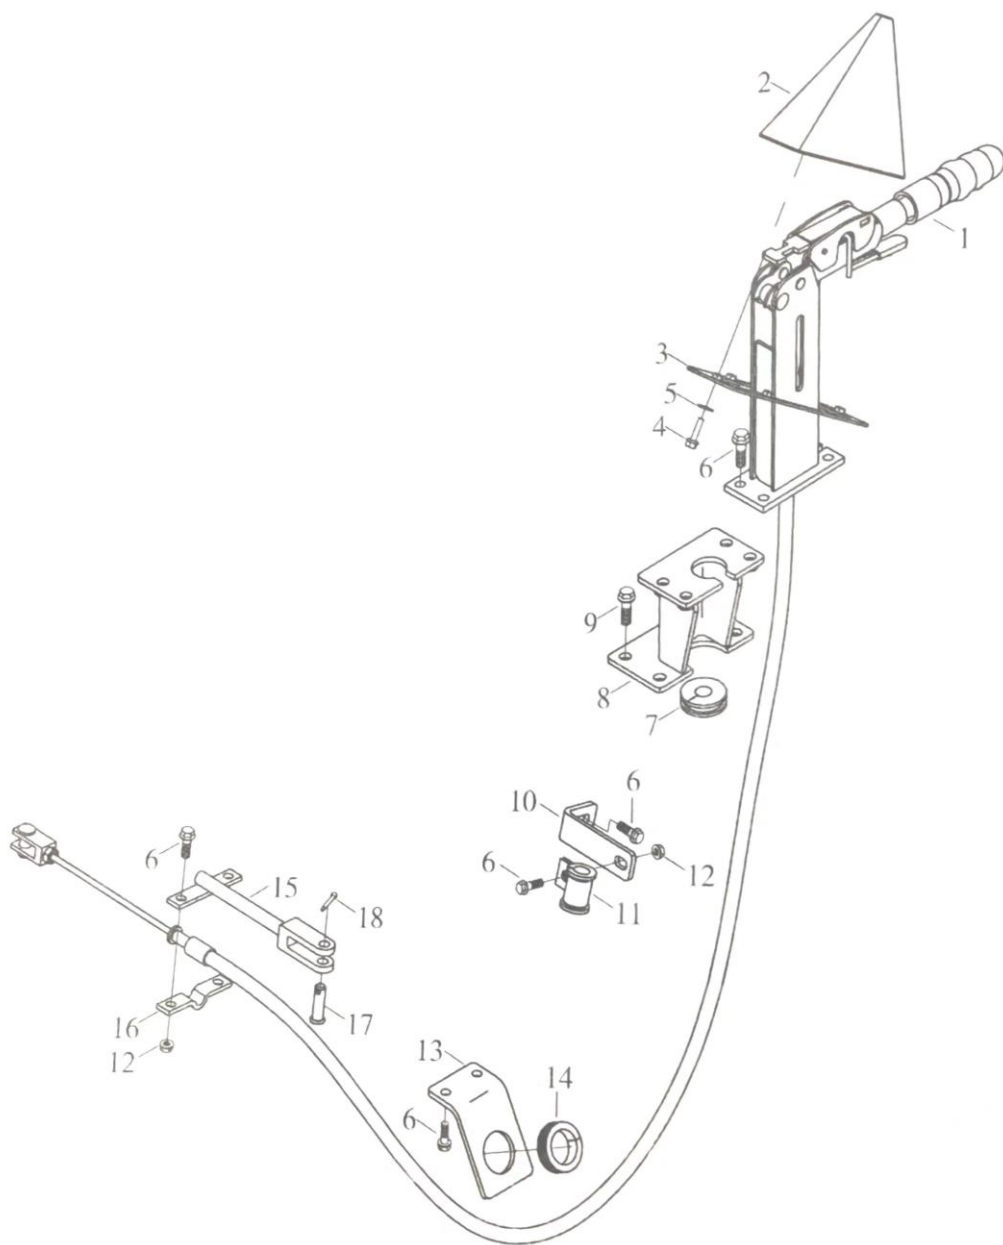


手制动系统 MANNEL BRAKE SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q' TY	备注 Remark
1	B4610-29A010000	Parking brake control mechanism	停车制动操纵机构	1	
2	B4616-29A000002	Dust cover	防尘罩	1	
3	B4616-29A080000	Pressure Plate	压板	1	
4	B042520520	Bolt M5X20	六角法兰面螺栓	4	
5	B060310501	Washer	大垫圈	4	
6	B042520820	Bolt M8X20	六角法兰面螺栓	10	
7	B4616-29A000003	Jacket	护套	1	
8	B4616-29A020000	Operate the bracket	操纵支架	1	
9	B042521020	Bolt M10X20	六角法兰面螺栓	4	
10	Z062110010	Fixing plate	固定板	1	
11	Z062110020	Pipe Clip	管夹	1	
12	B052420808	Hexagon flange nut M8	六角法兰面螺母	3	
13	B4616-29A000005	Bends	弯板	1	
14	B4616-29A000004	Jacket	护套	1	
15	Z062110050	Pull rod weldment	拉杆焊合	1	
16	Z062110060	Fixing plate	固定板	1	
17	B080331034	Pivot	销轴	1	
18	B080210012	Split pin 3.2X20	开口销	1	

行车制动系统(一)


DRIVING BRAKE SYSTEM(ONE)

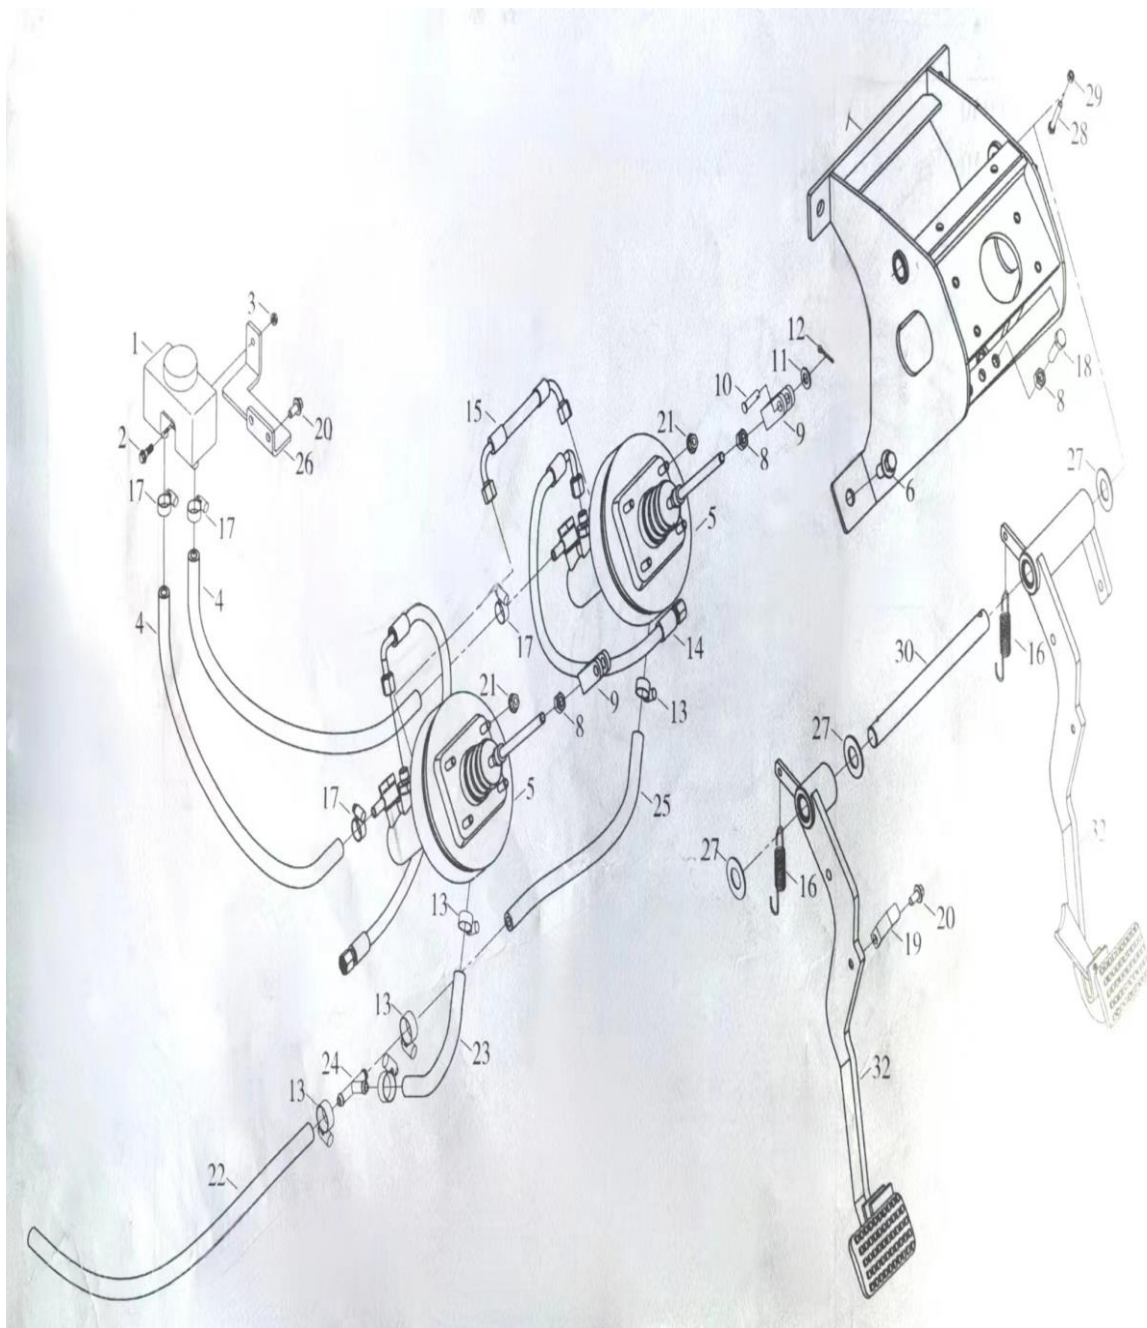

行车制动系统 RIVING BRAKE SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B4616-36A010001	Brake oil cup	制动油杯	1	
2	B042520612	Bolt M6X12	六角法兰面螺栓	1	
3	B052420606	Nut M6	六角法兰面螺母	1	
4	B4616-36A000015	Booster oil inlet pipe	助力器进油管	2	
5	B4616-36A010000	Vacuum booster	真空助力器	2	
6	B042521225	Bolt M12X25	六角法兰面螺栓	4	
7	B4616-36A040000	Brake lrestle	制动支架	1	
8	B050361008	Nut M10	1 型六角螺母	4	
9	W013300720	Conneeting fork	连接叉	2	
10	B080331038	Pivol B10X35	销轴	2	
11	B060411002	Flat washer 10	平垫圈	2	
12	B080210013	Split pin 3.2X3	开口销	2	
13	B190110250	Hoop	喉箍	6	
15	B4616-36A050000	Booster connecting pipe	助力器连接管	1	
16	B4616-36A000010	Return spring	回位弹簧	2	
17	B190110200	Hoop	喉箍	4	
18	B042521035	Hex bolt M10X35	六角头螺栓	2	
19	B4616-36A000005	Contact pad	触板	1	
20	B042520816	Hex flange bolt M8X16	六角法兰面螺栓	3	
21	B052420808	Hex flange nut M8	六角法兰面螺母	8	
22	B4619-36A000001	Vacuun pipe	真空管	1	
23	B4616-36A000009	Vacuum pipe	真空管	1	
24	B4616-36A000003	Tee	三通	1	
25	B4616-36A000008	Vaeuumn pipe	真空管	1	
26	B4618-36A000008	Brake oil cup bracket	制动油杯支座	1	
27	B060411002	Pad	垫	3	
28	B040910640	Hex bol M6X40	六角头螺栓	1	
29	B050360605	Type l hex nut	1 型六角螺母	1	
30	B4616-36A000001	Brake pivot	制动销轴	1	
31	B4616-36A030000	Right brake pedal	右制动踏板	1	
32	B4616-36A020000	Left brake pedal	左制动踏板	1	


驱动桥管路系统 DRIVE AXLE PIPE SYSTEM

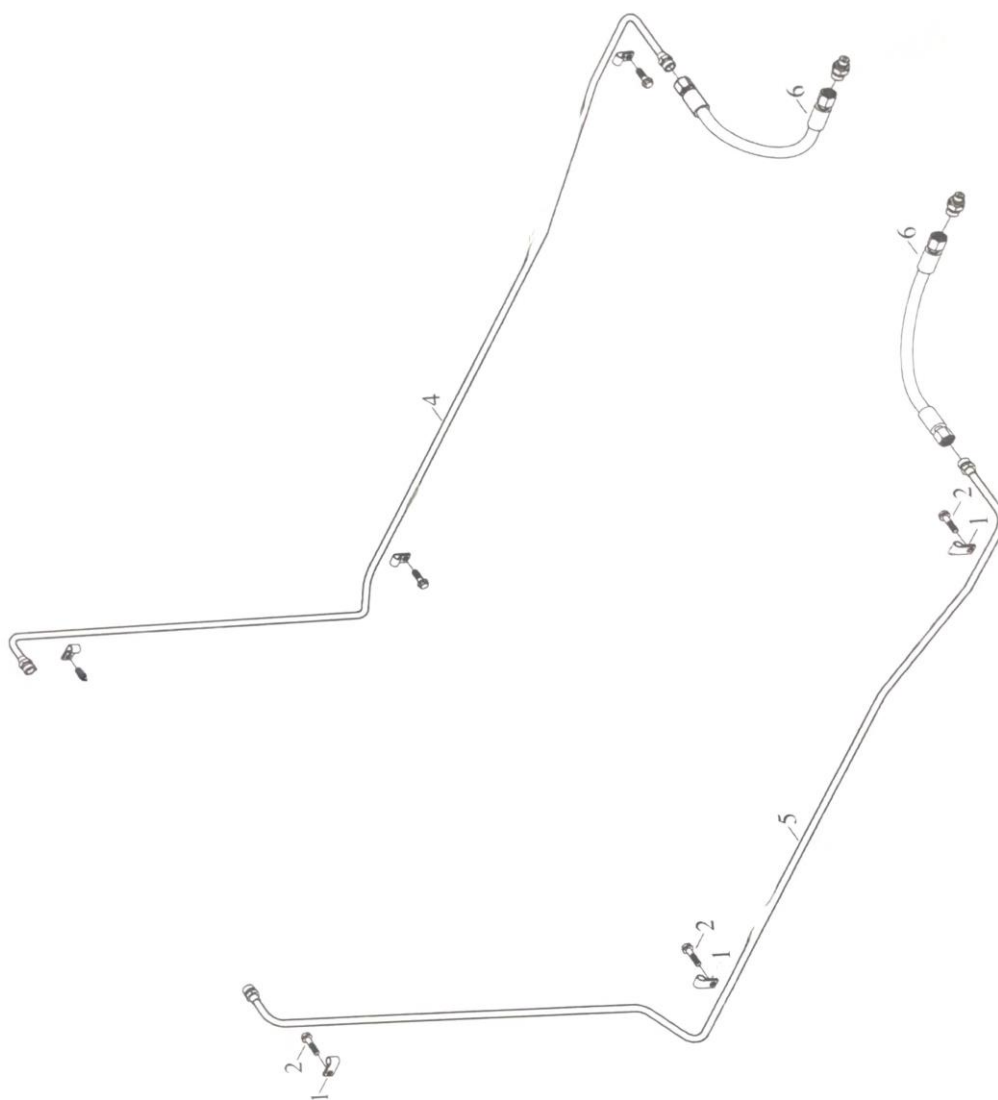

驱动桥管路系统 DRIVE AXLE PIPE SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	9F560-37A000001	CLIP	管夹	6	
2	B042521025	BOLT M10X25	六角法兰面螺栓	6	
3	QLWZG074-101404	STRAIGHT JOINT	直通过接头	2	
4	B4619-37A010000	AXLE RIGHT BRAKE PIPE	桥右制动管	2	
5	B4619-37A020000	AXLE LEFT BRAKE PIPE	桥左制动管	1	
6	Z062130010	BRAKE OIL PIPE	制动油管	2	


传动系统 TRNSMISSION SYSTEM

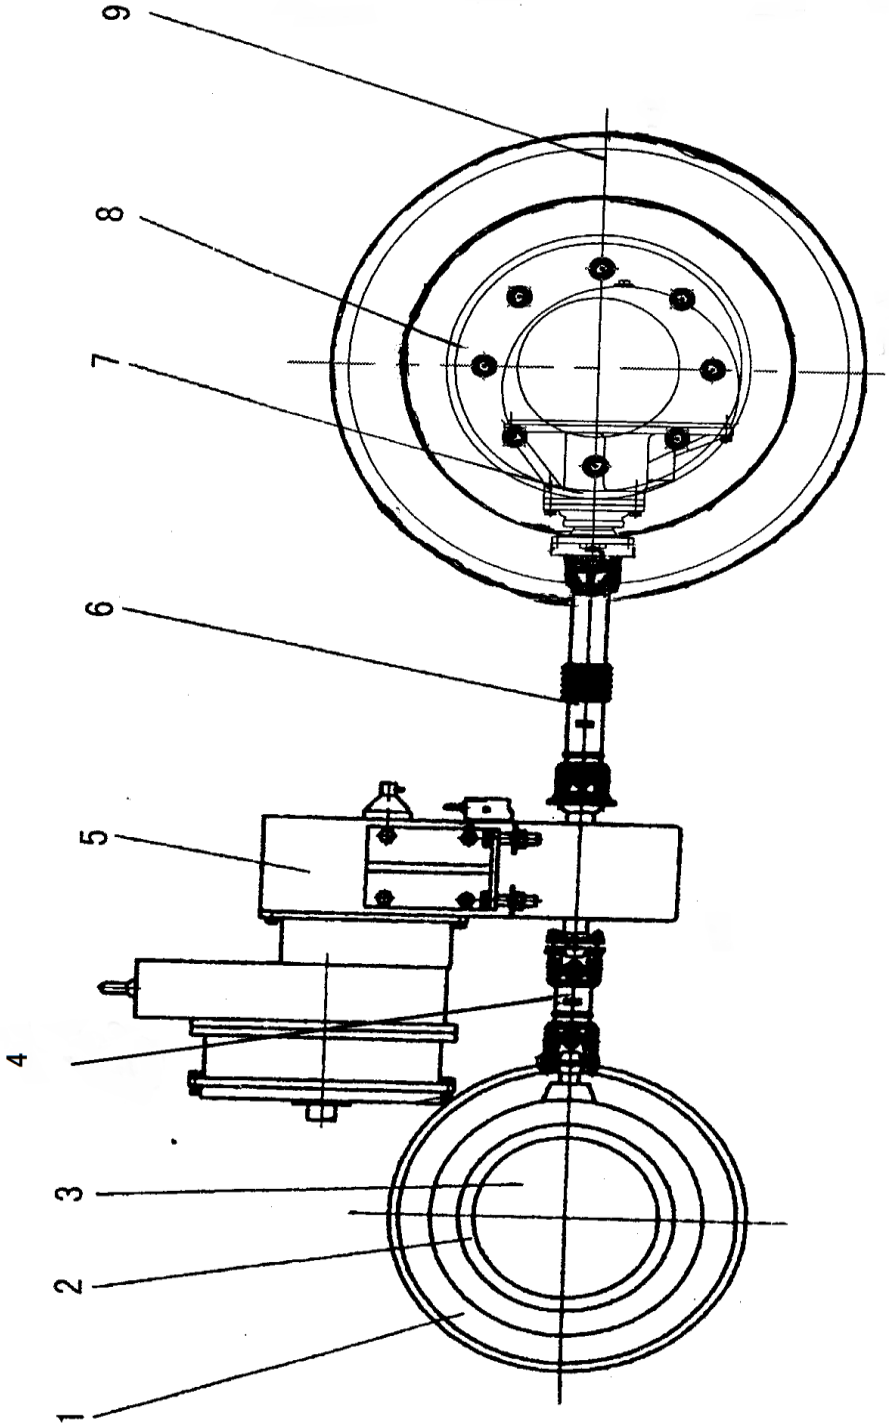

传动系统 TRNSMISSION SYSTEM

序号 ITEM	零件号 PART NO.		Part Name	数量 Q'TY	备注 Remark
1	W110001640	轮胎	RIM ASSY	2	
2	W110600230	轮辋组件	TIRE ASSY	2	
3	W043600000	前驱动桥	FRONT AXLE ASSY	1	
4	B4610-25A010000	前传动轴	FRONT ORIVING SHAFT	1	
5	W032200000	变速箱	TRANS MISSION ASSY		
6	B4610-25A020000	后传动轴	REAR DRIVING SHAFT	1	
7	W043700000	后驱动桥	REAR AXCLE ASSY	1	
8	W110600260	后桥轮辋	REAR TIRE ASSY	2	
9	W110001660	后桥轮胎	RIM ASSY	2	


变速箱安装 GEARBOX INSTALLATION

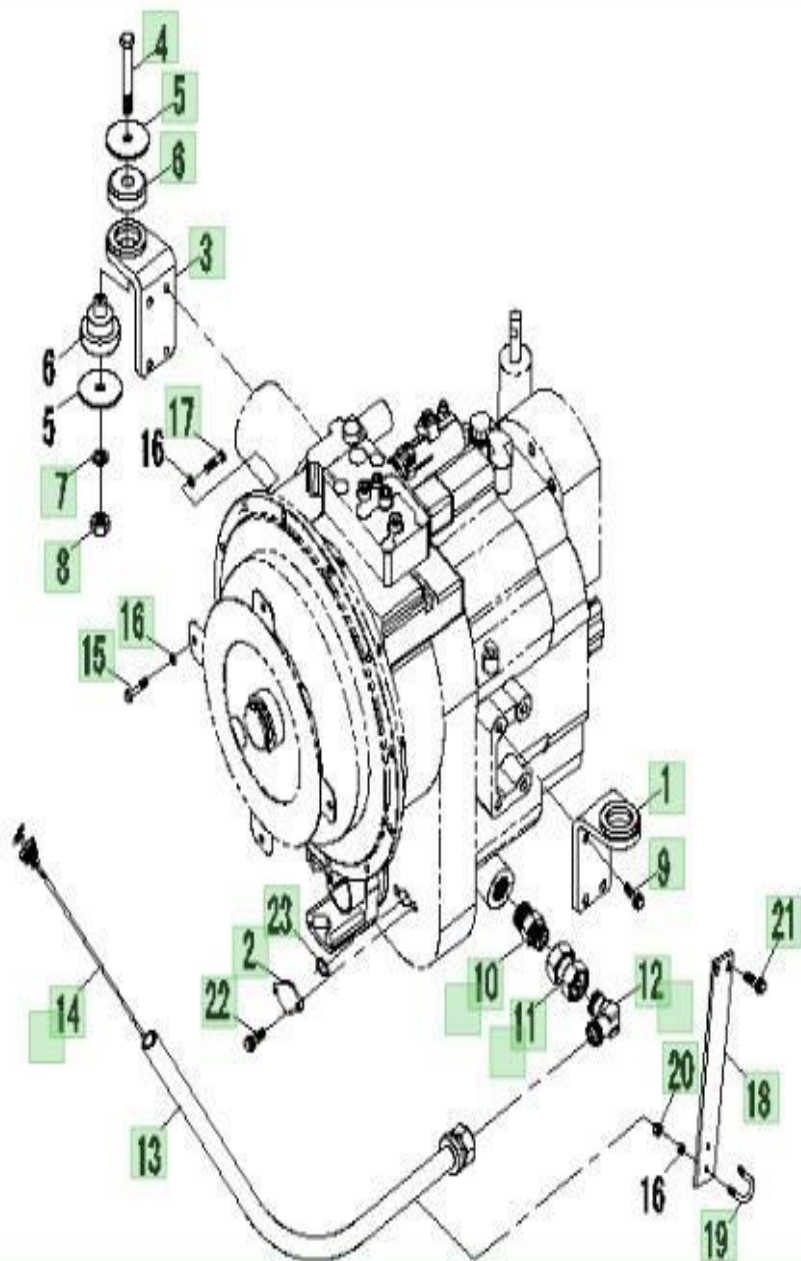

变速箱安装 GEARBOX INSTALLATION

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z062150010	LEFT SUPPORT FRAME	左支撑架	1	
2	B4616-23A000002	COVER PLATE	盖板	1	
3	Z062150040	RIGHT SUPPORT FRAME	右支撑架	1	
4	B040916120	BOLT -M16X1.5	六角头螺栓	2	
5	Z062150110	WASHER	垫片	4	
6	B4610-01A020000	SHOCK ABSORBER	减震器	2	
7	B060411603	WASHER 16	垫圈	2	
8	B060211614	I -HEXAGON LOCKING NUT	六角锁紧螺母	2	
9	B042521235	BOLT M12X35	六角法兰面螺栓	8	
10.	QLWZG074-003630	STRAIGHT JOINT	直通接头	1	
11	QLWZG086-03636	RIGHT-ANGLE JOINT	直通组合接头	1	
12	QLWZG078-103636	ANGLE COUPLING	直角接头	1	
13	B4619-23A010001	OIL FILLING TUBE ASSEMBLY	加油管总成	1	
14	Z062150100	DIPSTICK ASSEMBLY	油尺总成	1	
15	B042521055	BOLT M10X55	六角头螺栓	4	
16	B060111003	WASHER	标准型弹簧垫圈	18	
17	B042521030	BOLT M10X30	六角头螺栓	12	
18	Z062150070	FIX PLATE	加油管固定板	1	
19	Z593190130	U-BOLT	U形螺栓	1	
20	B052421010	NUT M10	螺母	2	
21	B042521225	BOLT M12X25	六角法兰螺栓	2	
22	B042520816	BOLT M8X16	六角法兰面螺栓	2	
23	B160110350	O-SEAL RING 35.5X3.55	O形橡胶密封圈	1	


变速箱总成 GEAR BOX ASSEMBLY 01

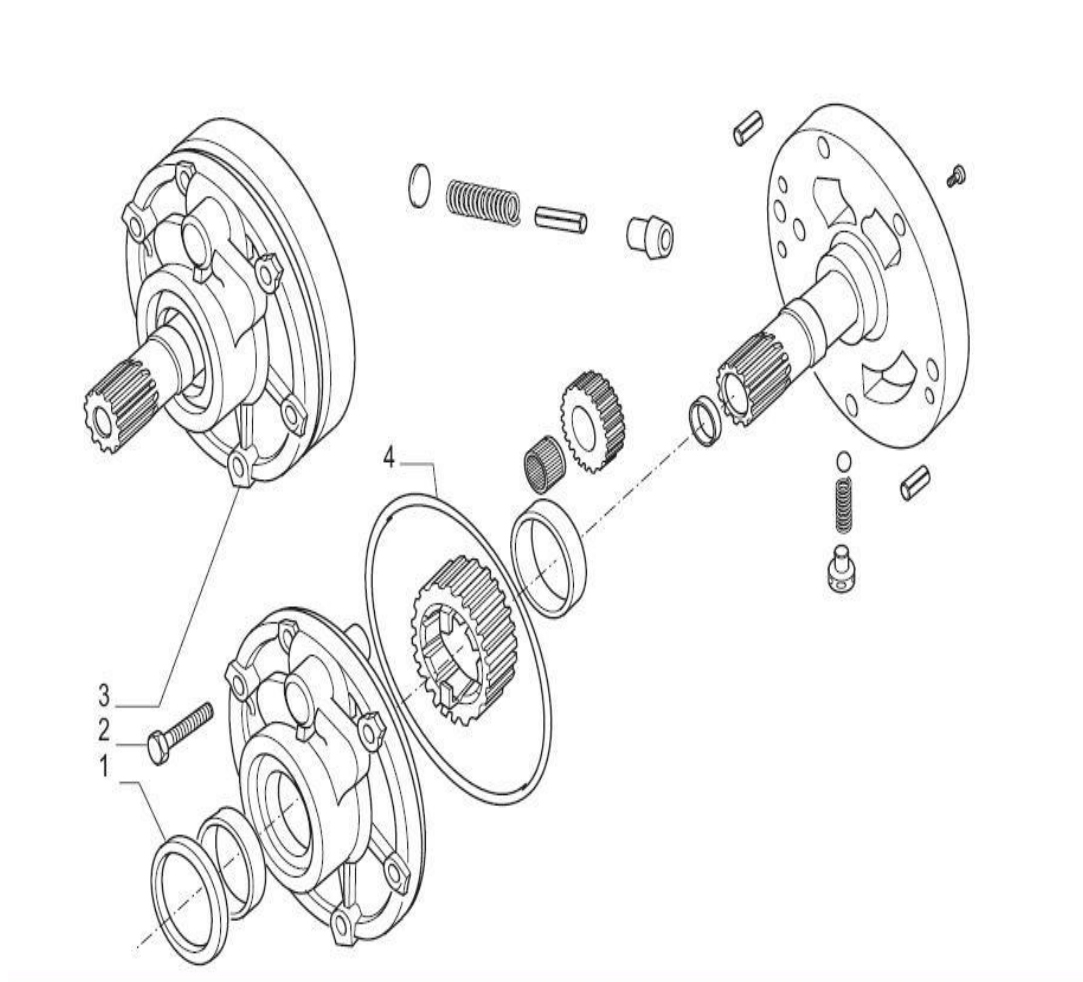

变速箱总成 GEAR BOX ASSEMBLY 01

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W03220012	OIL SEAL	油封	1	
2	B042520816	BOLT M8X6	螺 栓 M8X6	1	
3	W032200013	PUMP ASSEMBLY	油泵总成	6	
4	W032200188	O-RING	O 型圈	1	


变速箱总成 GEAR BOX ASSEMBLY 02

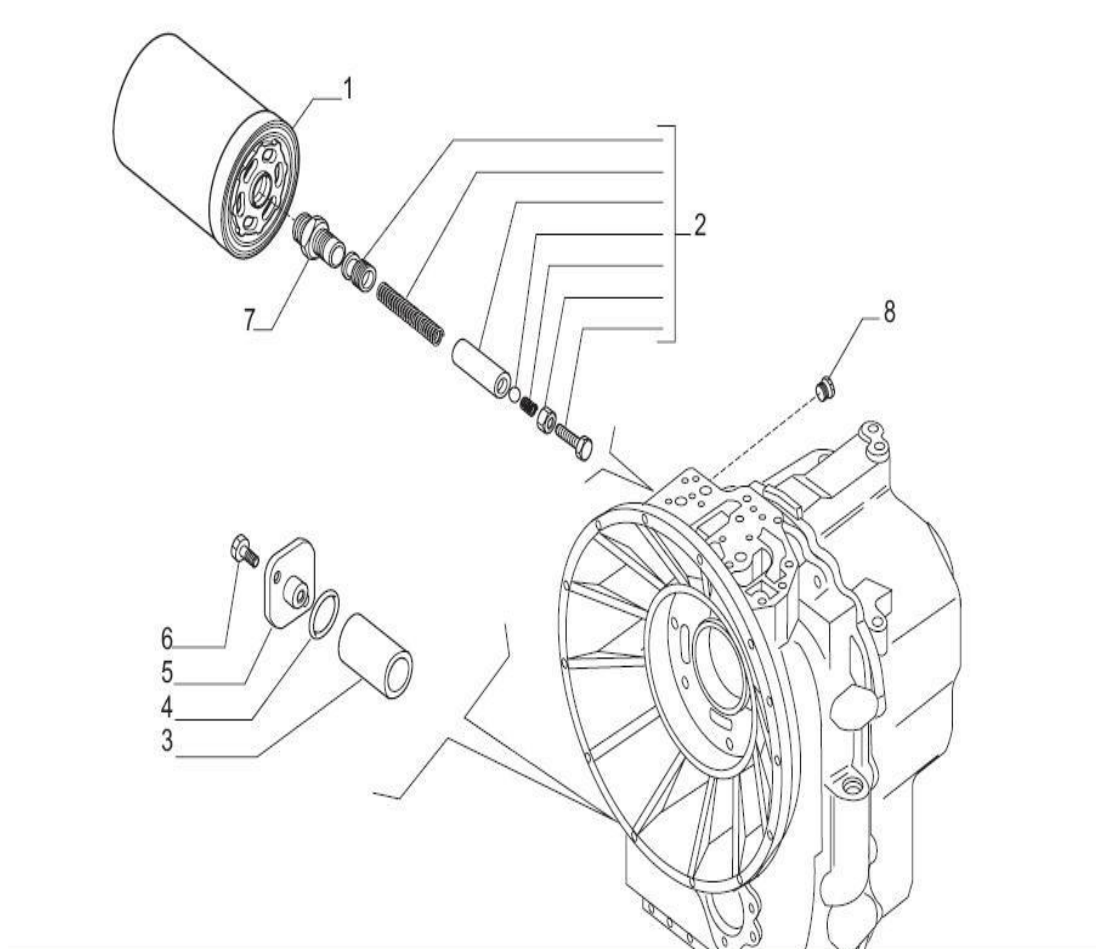

变速箱总成 GEAR BOX ASSEMBLY 02

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W032200014	OIL FILTER	滤芯	1	
2	W032200015	VALVE KIT	滤芯座	1	
3	W032200016	OIL FILTER	滤芯	1	
4	W032200189	O-RING	O 型圈	1	
5	W032200017	COVER	盖	1	
6	W032200018	BOLT M8X18	螺 栓 M8X18	2	
7	W032200187	CONNECTING BOLT	连接螺栓	1	
8	W032200039	PLUG	堵塞	1	


变速箱总成 GEAR BOX ASSEMBLY 03

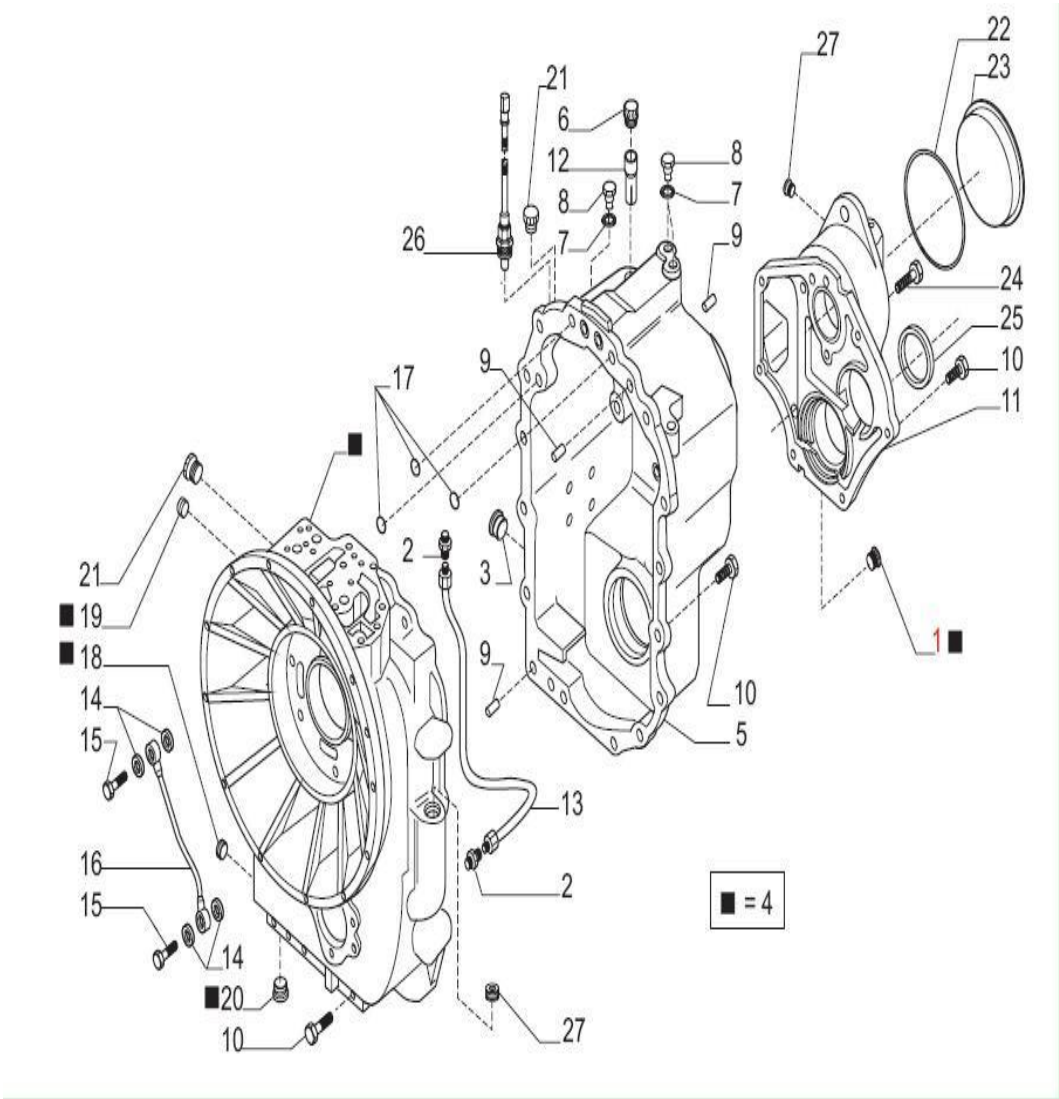

变速箱总成 GEAR BOX ASSEMBLY 03

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W032200019	PLUG	堵塞	1	
2	W032200190	CONNECTING BOLT	连接螺栓	2	
3	W032200020	SCREW PLUG	螺塞	1	
4	W032200021	FRONT HOUSING KIT	前室盖组件	1	
5	W032200022	REAR HOUSING	后室	1	
6	W032200023	BREATHER	呼吸器	1	
7	W032200024	COPPER WASHER 10X14X1.5	铜垫圈 10X14X1.5	3	
8	W032200025	PLUG	堵塞	3	
9	W032200026	PIN D10X25	销 D10X25	3	
10	B040611030	BOLT M10X30	螺栓 M10X30	22	
11	W032200027	COVER	盖	1	
12	W032200028	BREATHER PIPE	呼吸管	1	
13	W032200029	PIPE	油管	1	
14	W032200030	COPPER WASHER	铜垫圈	4	
15	W032200191	BOLT M14X1.5	螺 栓 M14X1.5	2	
16	W032200031	LUBRICATING OIL PIPE	润滑油管	1	
17	W032200192	O-RING	O 型圈	3	
18	W032200032	RIVET	铆钉	1	
19	W032200033	PLUG M14X1、5	堵塞 M14X1、5	1	
20	W032200034	PLUG	堵塞	1	
21	W032200035	PLUG 7/8	堵 塞 7/8	2	
22	W032200193	O-RING	O 型圈	1	
23	W032200036	PLUG D127.5	堵 塞 D127.5	1	
23	W032200036	PLUG D127.5	堵 塞 D127.5	1	
24	B040911045	BOLT M10X45	螺栓 M10X45	2	
25	W032200037	OIL SEAL RING	油封密封圈	1	
26	W032200038	Thermostat	调温器	1	
27	W032200039	Plug 9/16	堵塞	1	


变速箱总成 GEAR BOX ASSEMBLY 04

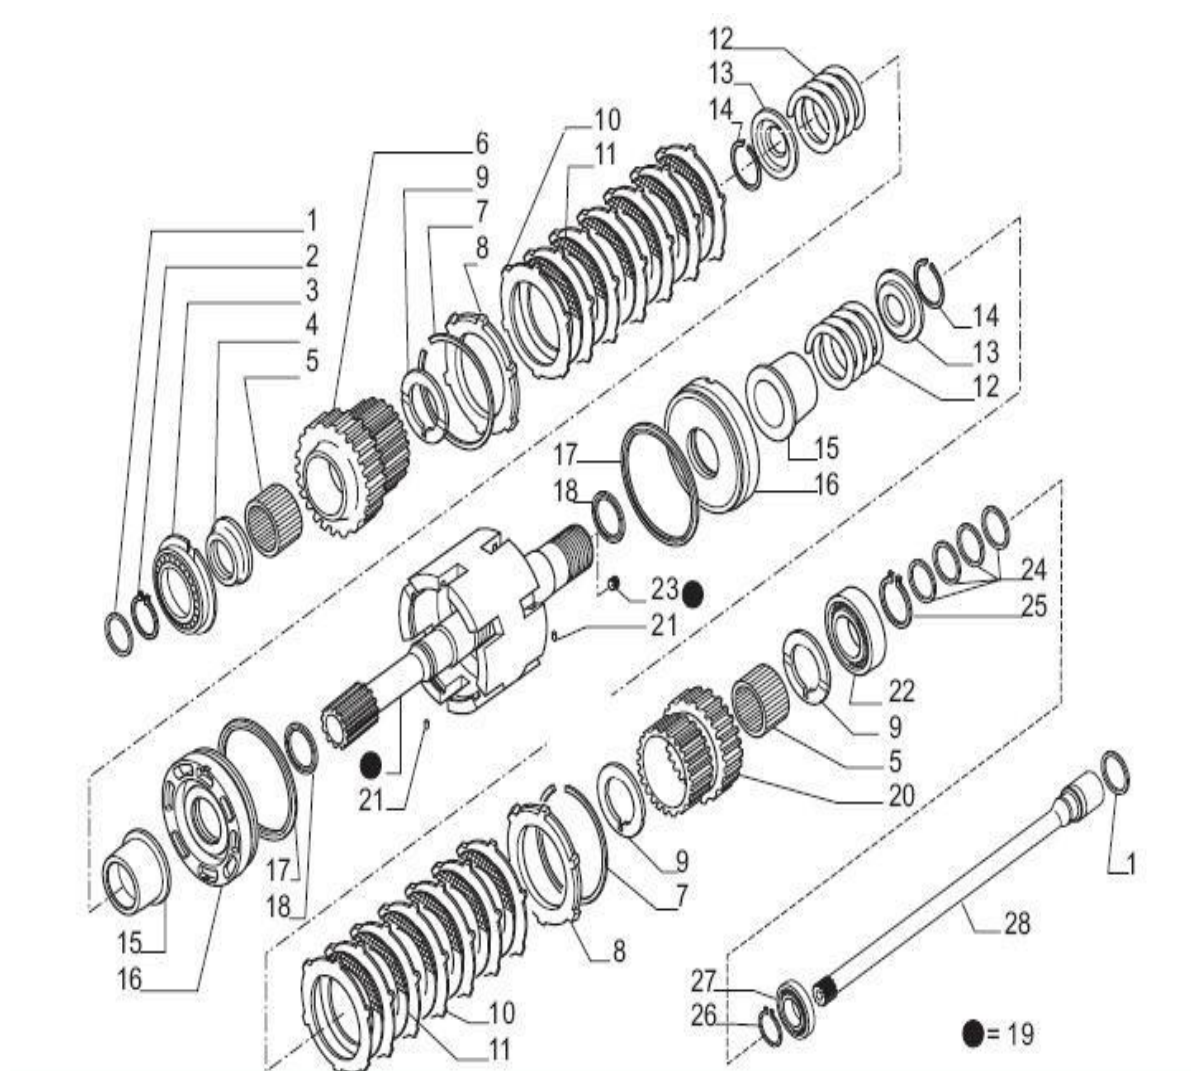

变速箱总成 GEAR BOX ASSEMBLY 04

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W032200040	SNAP RING D45	密封圈 D45	2	
2	W032200058	SNAP RING D45	密封圈 D45	2	
3	W032200041	BEARING	轴承	1	
4	W032200042	SPACER 68X45X105	隔 环 68X45X105	1	
5	W032200043	NEEDLE BEARING BUSH	中间轴衬套	2	
6	W032200044	GEAR Z29	齿 轮 Z29	2	
7	W032200045	LOCKRING	锁圈	2	
8	W032200046	CLUTCH PLATE LOCKRING	离合器锁圈	2	
9	W032200047	THRUST WASHER 60X50X4	止推垫圈 60X50X4	3	
10	W032200048	CLUTCH DRIVE PLATE	离合器被动板	14	
11	W032200049	CLUTCH PLATE	离合器板	12	
12	W032200050	SPRING	弹簧	2	
13	W032200051	LOCK-SPRING COVER	锁圈盖板	2	
14	W032200052	LOCKRING	锁圈	2	
15	W032200053	CLUTCH SLEEVE	离合器衬套	2	
16	W032200054	CLUTCH PISTON	离合器活塞	2	
16	W032200054	CLUTCH PISTON	离合器活塞	2	
17	W032200055	SEALING RING	密封垫圈	2	
18	W032200056	SEAL RING D55	密封垫圈 D55	2	
19	W032200057	INNER SHAFT KIT	内轴组件	1	
20	W032200059	GEAR Z29	齿 轮 Z29	1	
21	W032200060	SPLIT PIN D3X8	开口销 D3X8	2	
22	W032200061	BEARING	轴承	1	
23	W032200062	RIVET D6X5、84	铆钉 D6X5、84	1	
24	W032200063	SEAL RING D50	密封垫圈 D50	4	
25	W032200064	SEAL RING D50	密封垫圈 D50	1	
26	W032200065	ANAP RING D30	密封垫圈 D30	1	
26	W032200066	ANAP RING D30	密封垫圈 D30	1	
27	W032200067	BEARING	轴承	1	
28	W032200068	OUTPUT SHAFT	输出轴	1	


变速箱总成 GEAR BOX ASSEMBLY 05

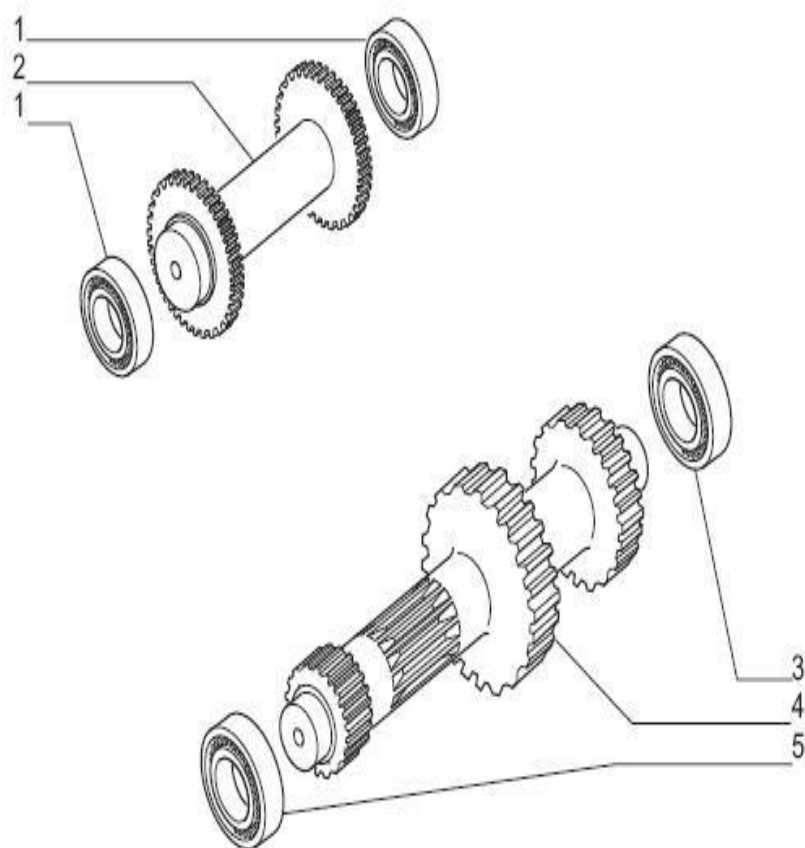

变速箱总成 GEAR BOX ASSEMBLY 05

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W032200069	BEARING	轴承	2	
2	W032200070	REVERSE SHAFT	后输出轴	1	
3	W032200071	BEARING	轴承	1	
4	W032200072	PRIMARY SHAFT	主轴	1	
5	W032200073	BEARING	轴承	1	


变速箱总成 GEAR BOX ASSEMBLY 06

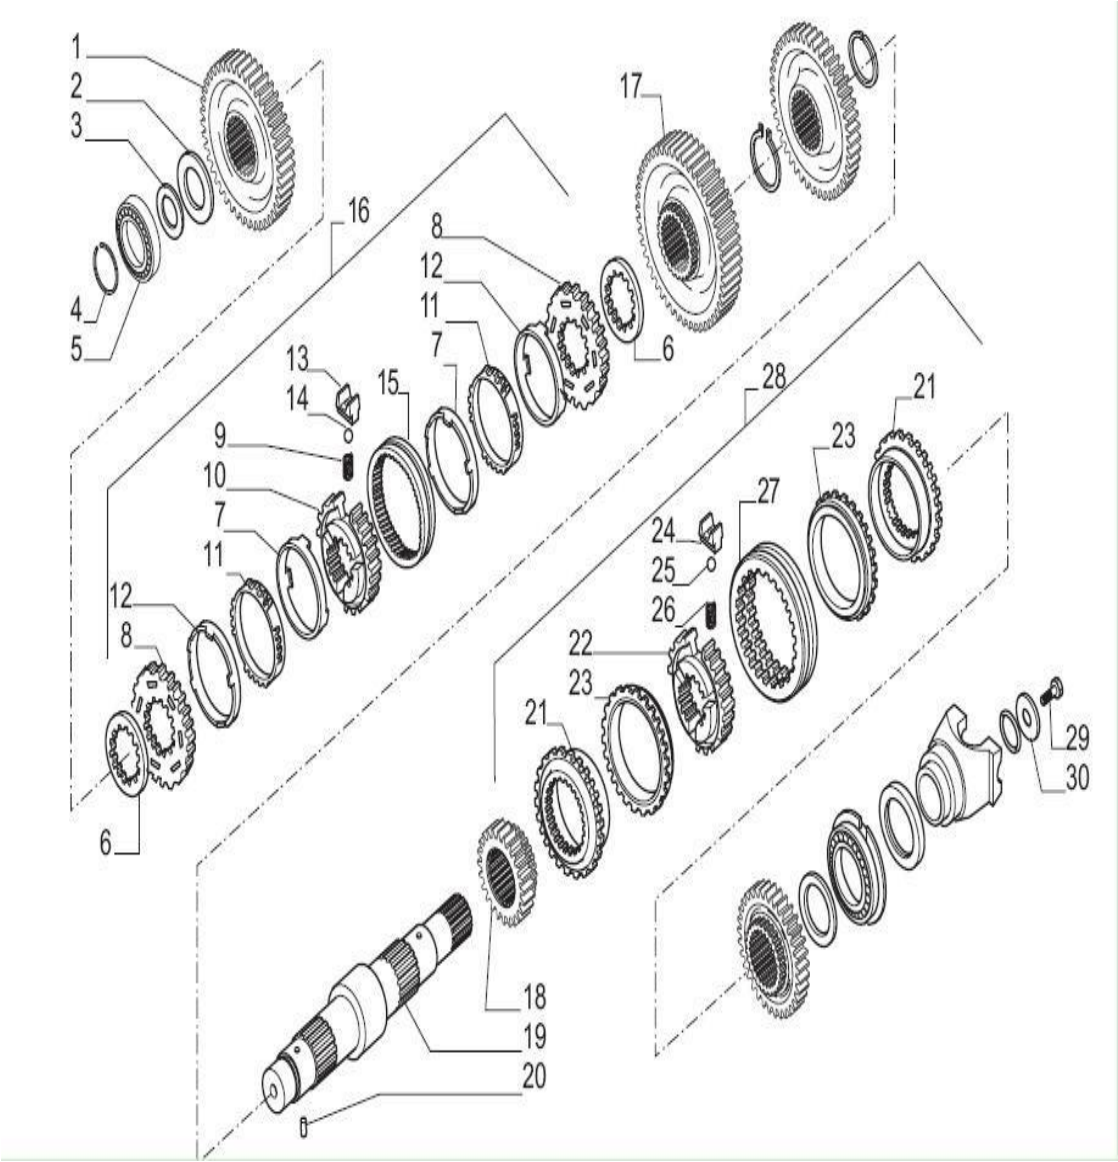

变速箱总成 GEAR BOX ASSEMBLY 06

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W032200074	GEAR Z=44	齿 轮 Z=44	1	
2	W032200075	THRUST WASHER	止推垫圈	1	
3	W032200076	ADJUSTING GASKET	调整垫	99	
4	W032200077	LOCK RING D.40	锁 圈 D.40	1	
5	W032200078	BEARING	轴承	1	
6	W032200079	SPACER	隔环	2	
7	W032200080	ATTRITION DISK	摩擦片	2	
8	W032200081	SYNCHRONIZING KIT	同步环	2	
9	W032200082	SPRING	弹簧	3	
10	W032200083	HUB	毂	1	
11	W032200084	ATTRITION DISK	摩擦片	2	
12	W032200085	STEEL RING	钢垫	2	
13	W032200086	LOCK-SPRING PLATE	锁圈垫块	3	
14	W032200087	BALL	球	3	
15	W032200088	SLEEVE	衬套	1	
16	W032200089	SYNCHRONIZING KIT	同步环	1	
17	W032200090	GEAR Z=50	齿 轮 Z=50	1	
18	W032200091	GEAR Z=23	齿 轮 Z=23	1	
19	W032200092	SECONDARY SHAFT	副轴	1	
20	W032200093	SPLIT PIN D3X8	开口销 D3X8	1	
21	W032200094	CLUTCH RING	离合器环	2	
22	W032200095	HUB	毂	1	
23	W032200096	ATTRITION DISK	摩擦片	2	
24	W032200097	PLATE	板	3	
25	W032200098	BALL	球	3	
26	W032200099	SPRING	弹簧	3	
27	W032200100	SLEEVE	衬套	1	
28	W032200101	SYNCHRONIZING KIT	同步环	1	
29	B042521225	BOLT M12X25	螺 栓 M12X25	1	
30	W032200102	WASHER	垫圈	1	


变速箱总成 GEAR BOX ASSEMBLY 07

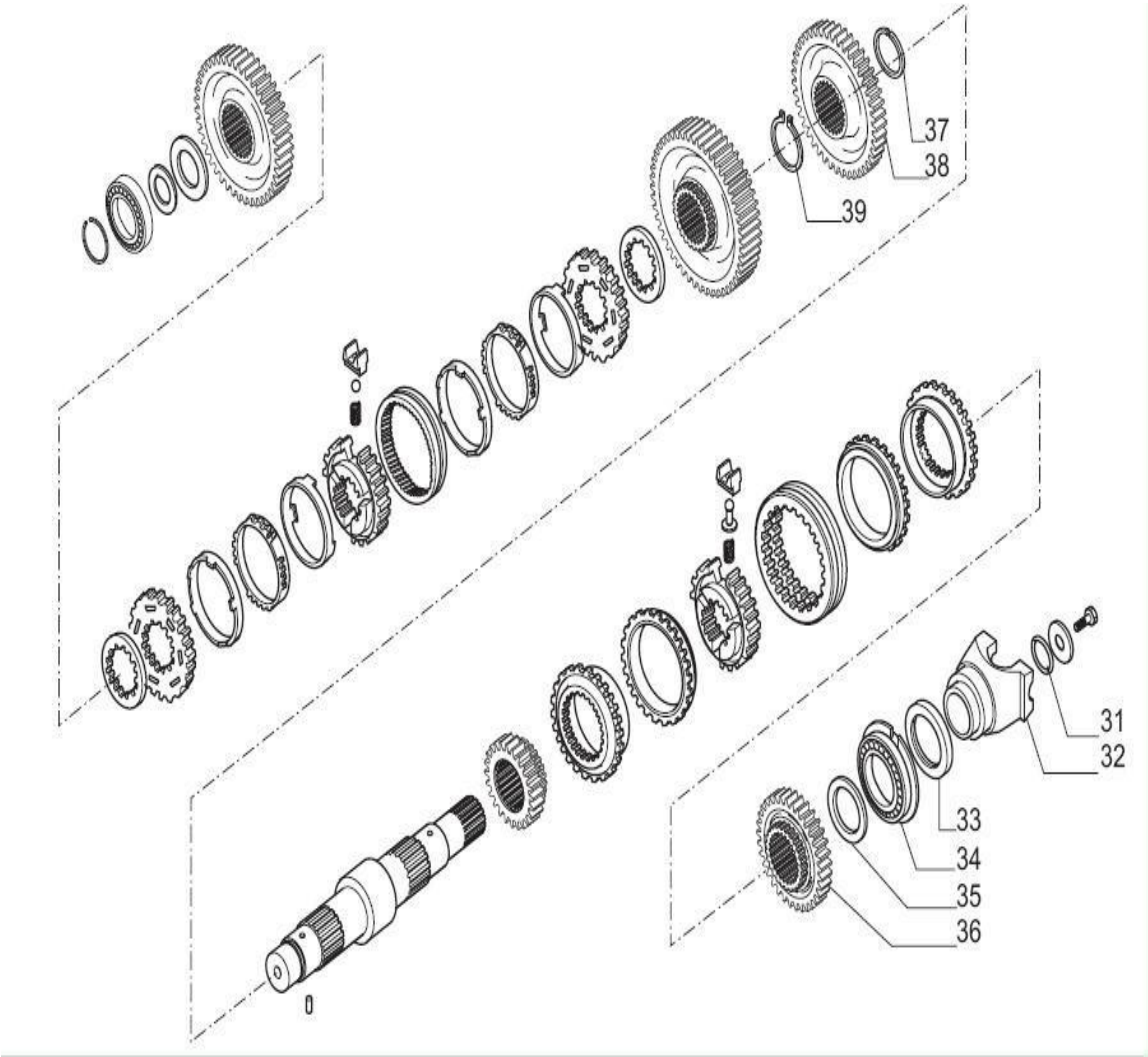

变速箱总成 GEAR BOX ASSEMBLY 07

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
31	W032200194	O-RING	O 型圈	1	
32	W032200103	FLANGE	法兰	1	
33	W032200104	OIL SEAL RING	油封密封圈	1	
34	W032200105	BEARING	轴承	1	
35	W032200106	THRUST SHIM	止推片	1	
36	W032200107	GEAR Z=33	齿 轮 Z=33	1	
37	W032200108	LOCK RING D70	锁紧垫圈 D70	1	
38	W032200109	GEAR Z45	齿 轮 Z45	1	
39	W032200110	LOCK RING D70	锁紧垫圈 D70	1	


变速箱总成 GEAR BOX ASSEMBLY 08

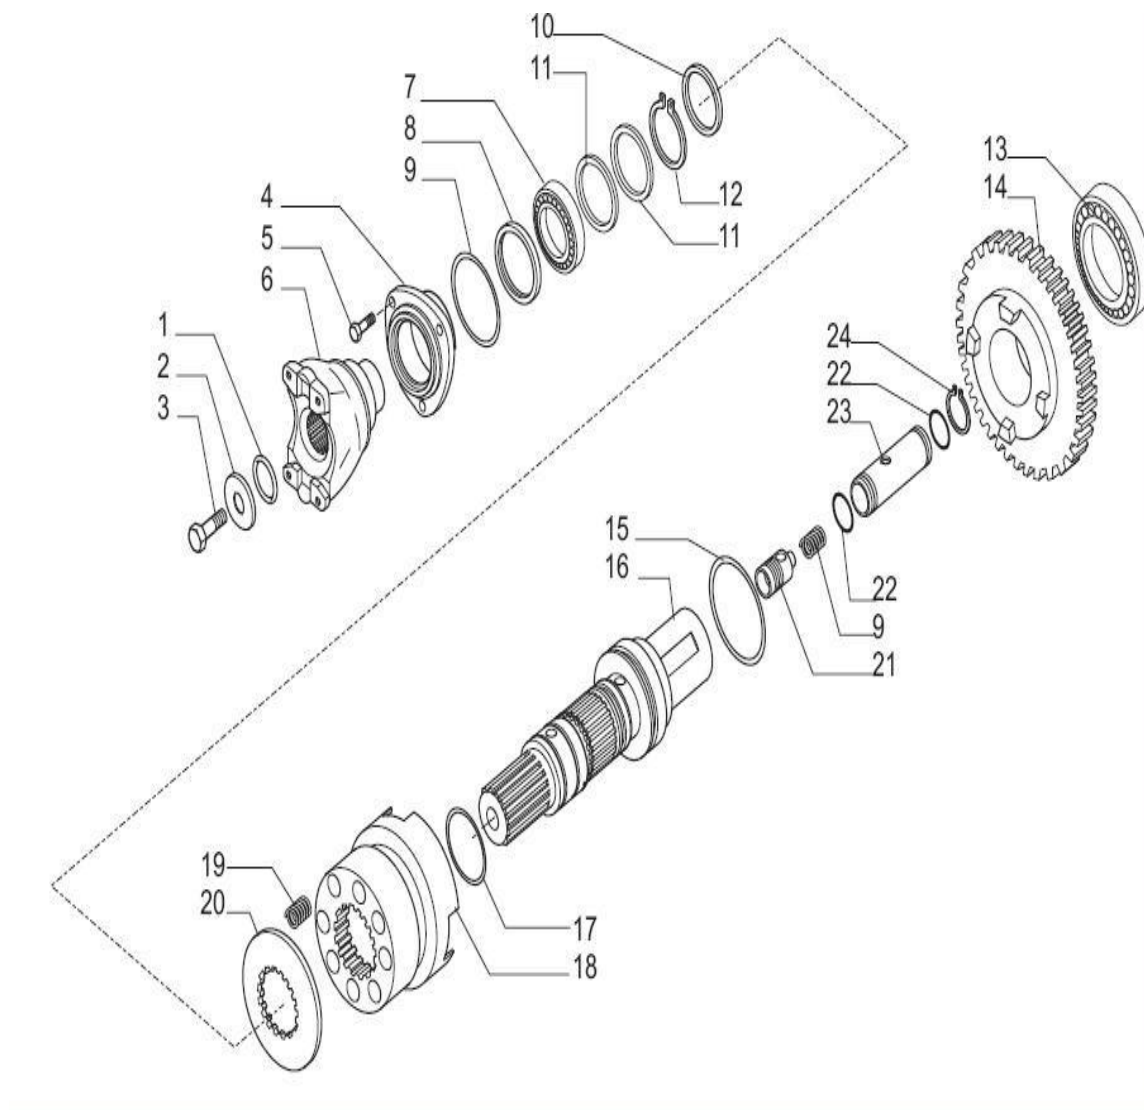

变速箱总成 GEAR BOX ASSEMBLY 08

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W032200195	O RING	O 形圈	1	
2	W032200111	WASHER 44X12.5X5	垫 圈 44X12.5X5	1	
3	B040911225	BOLT M12X25	螺 栓 M12X25	1	
4	W032200112	FRONT COVER	前盖	1	
5	B040910822	BOLT M8X22	螺 栓 M8X22	3	
6	W032200113	FLANGE	法兰	1	
7	W032200114	BEARING	轴承	1	
8	W032200115	SEAL RING 50X65X8	密封垫圈 50X65X8	1	
9	W032200196	O-RING	O 型圈	1	
10	W032200116	WASHER	垫圈	1	
11	W032200117	SNAP RING D45	密封圈 D45	2	
12	W032200118	back-up ring	挡圈	1	
13	W032200119	BEARING	轴承	1	
14	W032200120	SWIVEL HOUSING RH	右侧回转壳	1	
15	W032200196	O-RING	O 型圈	1	
16	W032200121	OUTPUT SHAFT	输出轴	1	
17	W032200197	O-RING	O 型圈	2	
18	W032200122	SLEEVE	衬套	1	
19	W032200123	SPRING	弹簧	8	
20	W032200124	SPACER	隔环	1	
21	W032200125	VALVE	阀	1	
22	W032200198	O-RING	O 型圈	1	
23	W032200126	OIL CYLINDER	油缸	1	
24	W032200127	WASHER	止动垫圈	1	


变速箱总成 GEAR BOX ASSEMBLY 09

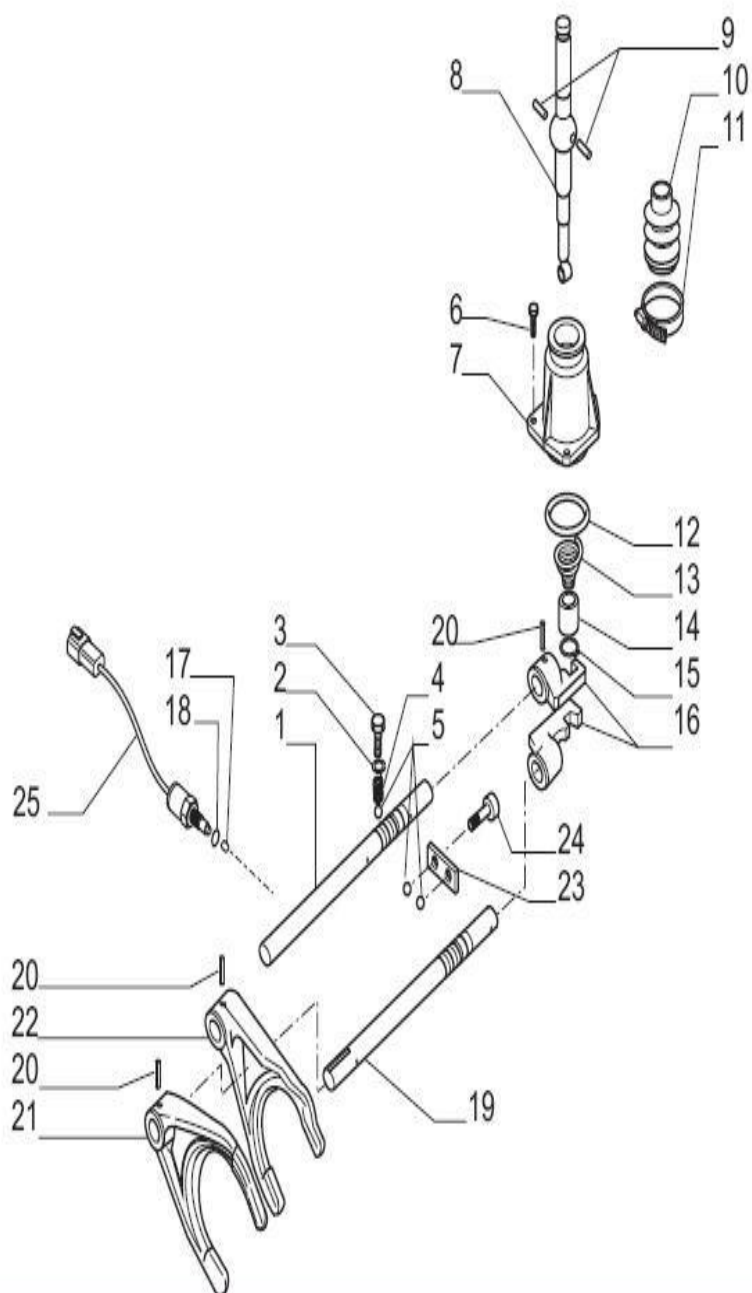

变速箱总成 GEAR BOX ASSEMBLY 09

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W032200128	ROD	杆	1	
2	W032200129	WASHER 12X20X1.5	垫 圈 12X20X1.5	2	
3	138003	BOLT	螺栓	2	
4	W032200130	WASHER	垫圈	2	
5	W032200131	BALL D10	球 D10	4	
6	B042520825	BOLT M8X25	螺 栓 M8X25	3	
7	W032200132	COVER	盖	1	
8	W032200133	CONTROL LEVER	操纵杆	1	
9	W032200199	PIN D6X14	销 D6X14	2	
10	W032200134	BOOT	防护套	1	
11	W032200200	CLAMP HOOP	卡箍	1	
12	W032200201	O-RING	O 型圈	1	
13	W032200135	SPRING	弹簧	1	
14	W032200136	SLEEVE	衬套	1	
15	W032200137	SNAP RING D17	止动垫圈 D17	1	
16	W032200138	SHIFTER	转换机构	2	
17	W032200139	PIN D.6	销 D.6	1	
18	W032200202	O-RING	O 型圈	1	
19	W032200140	ROD	杆	1	
20	W032200141	SPLI PIN 6X30	定位销 6X30	4	
21	W032200142	DRIVE FORK 1/2	主动叉 1/2	1	
22	W032200143	DRIVE FORK 3/4	主动叉 3/4	1	
23	W032200144	PLATE	板	1	
24	B040811020	BOLT M10X20	螺 栓 M10X20	2	
25	W032200145	SWITCH	开关	1	


变速箱总成 GEAR BOX ASSEMBLY 10

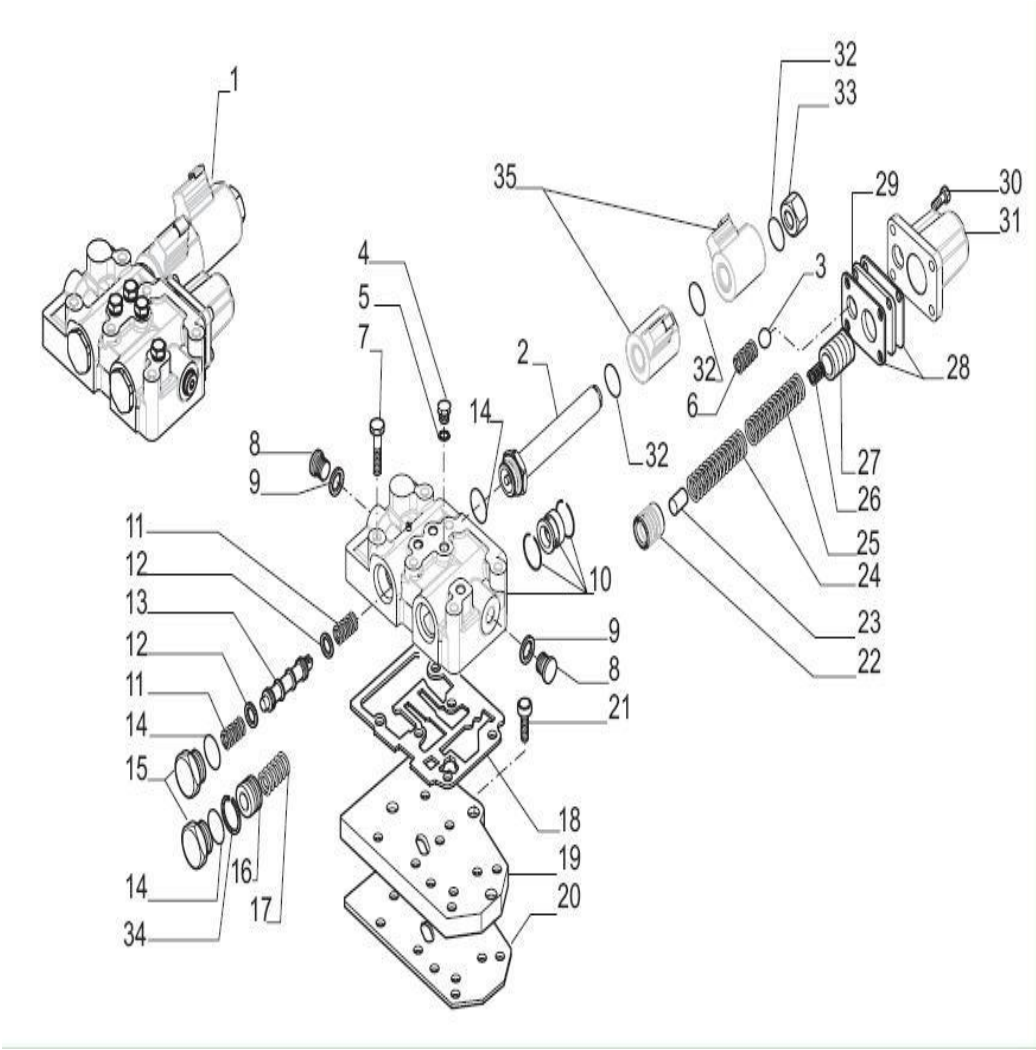

变速箱总成 GEAR BOX ASSEMBLY 10

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W032200146	CONTROL VALVE	控制阀	1	
2	W032200147	SOLENOID PIPE	螺线管	1	
3	W032200148	BALL	球	1	
4	W032200149	PLUG	堵塞	4	
5	W032200150	COPPER WASHER 10X14X1.5	铜垫圈 10X14X1.5	4	
6	W032200151	SPRING	弹簧	1	
7	B040910880	BOLT M8X80	螺栓 M8X80	6	
8	W032200153	PLUG	堵塞	2	
9	W032200154	COPPER WASHER	铜垫圈	2	
10	W032200155	CONEROL VALVE BODY	控制阀体组件	1	
11	W032200156	KIT	弹簧	2	
12	W032200157	SPRING	垫圈	2	
13	W032200158	WASHER	活塞	1	
14	W032200159	PLUNGER	铜垫圈	3	
15	W032200160	COPPER WASHER	堵 塞 M26X1.5	2	
16	W032200161	PLUG M26X1.5	活塞	1	
17	W032200162	PLUNGER	弹簧	1	
18	W032200163	SPRING	垫片	1	
19	W032200164	WASHER	板	1	
20	W032200165	PLATE	垫片	1	
21	B042520820	BOLT M8X20	螺 栓 M8X20	3	
22	W032200166	INWARD PISTON	内活塞	1	
23	W032200203	PIN D8X27	销 D8X27	1	
24	W032200167	SPRING	弹簧	1	
25	W032200168	SPRING	弹簧	1	
26	W032200169	SPRING	弹簧	1	
27	W032200170	OUTWARD PISTON	外活塞	1	
28	W032200171	PLATE GASKET	金属垫片	2	
29	W032200172	PLATE	板	1	


变速箱总成 GEAR BOX ASSEMBLY 10

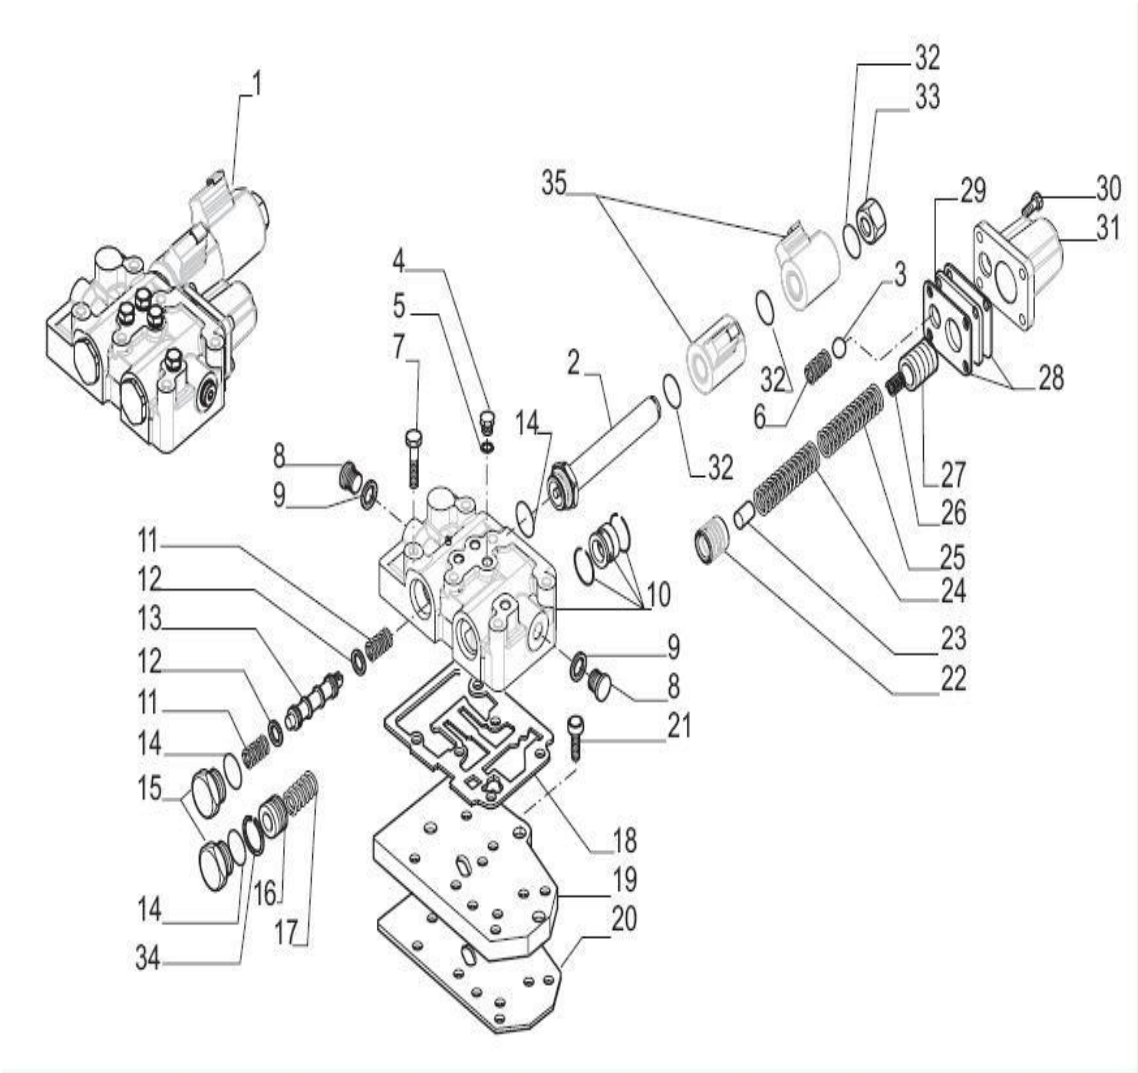

变速箱总成 GEAR BOX ASSEMBLY 10

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
30	B042520620	BOLT M6X20	螺 栓 M6X20	4	
31	W032200173	VALVE COVER	阀盖	1	
32	W032200204	O-RING	O 型圈	4	
33	W032200174	Plug	堵塞	1	
34	W032200175	ELASTIC RING	弹性垫圈	1	
35	W032200176	DISK	盘	2	


变速箱总成 GEAR BOX ASSEMBLY 11

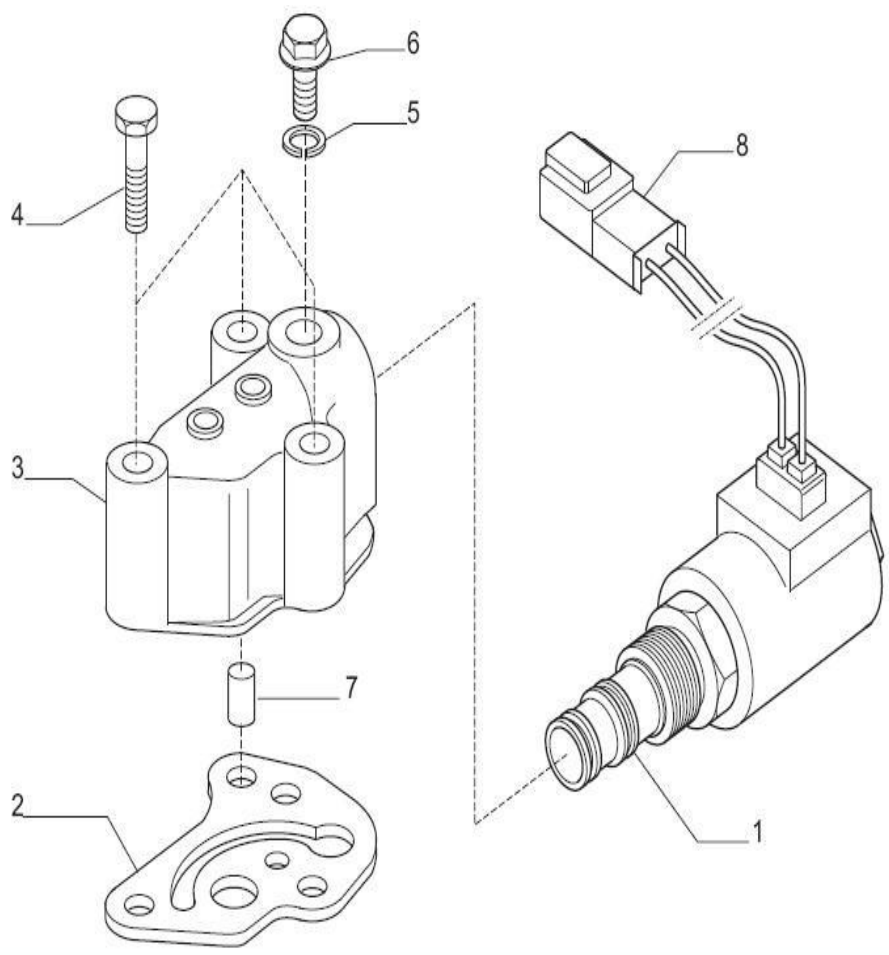

变速箱总成 GEAR BOX ASSEMBLY 1

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W032200177	4WD ELECTRO-VALVE	电控阀	1	
2	W032200178	WASHER	垫片	1	
3	W032200179	HOUSING	壳子	1	
4	B040710806	BOLT M8X6	螺 栓 M8X6	3	
5	W032200180	COPPER WASHER 10X14X1.5	铜垫圈 10X14X1.5	1	
6	W032200181	PULG	堵塞	1	
7	W032200182	VALVOLA	螺旋杆	1	
8	W032200183	PROTECTIVE COVERING	防护盖	1	


变速箱总成 GEAR BOX ASSEMBLY 12

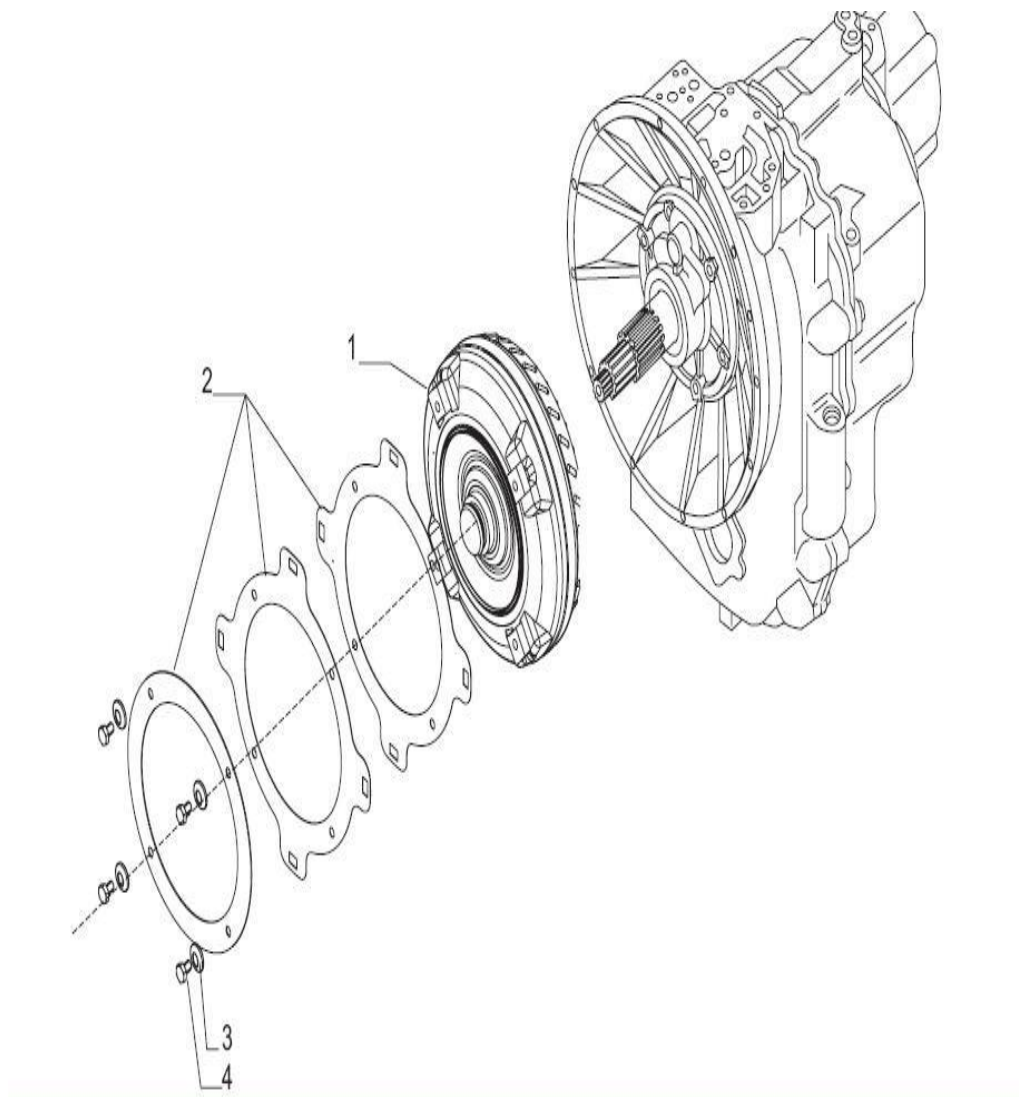

变速箱总成 GEAR BOX ASSEMBLY 12

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W032200184	CONVERTER	变矩器	1	
2	W032200185	FLYWHEEL TOWING PLATE	飞轮摩擦板	1	
3	W032200186	SPRING WASHER	弹簧垫片	4	
4	B040811163	BOLT M10X163	螺 栓 M10X163	4	


前桥安装 FRAME ACCESSORIES

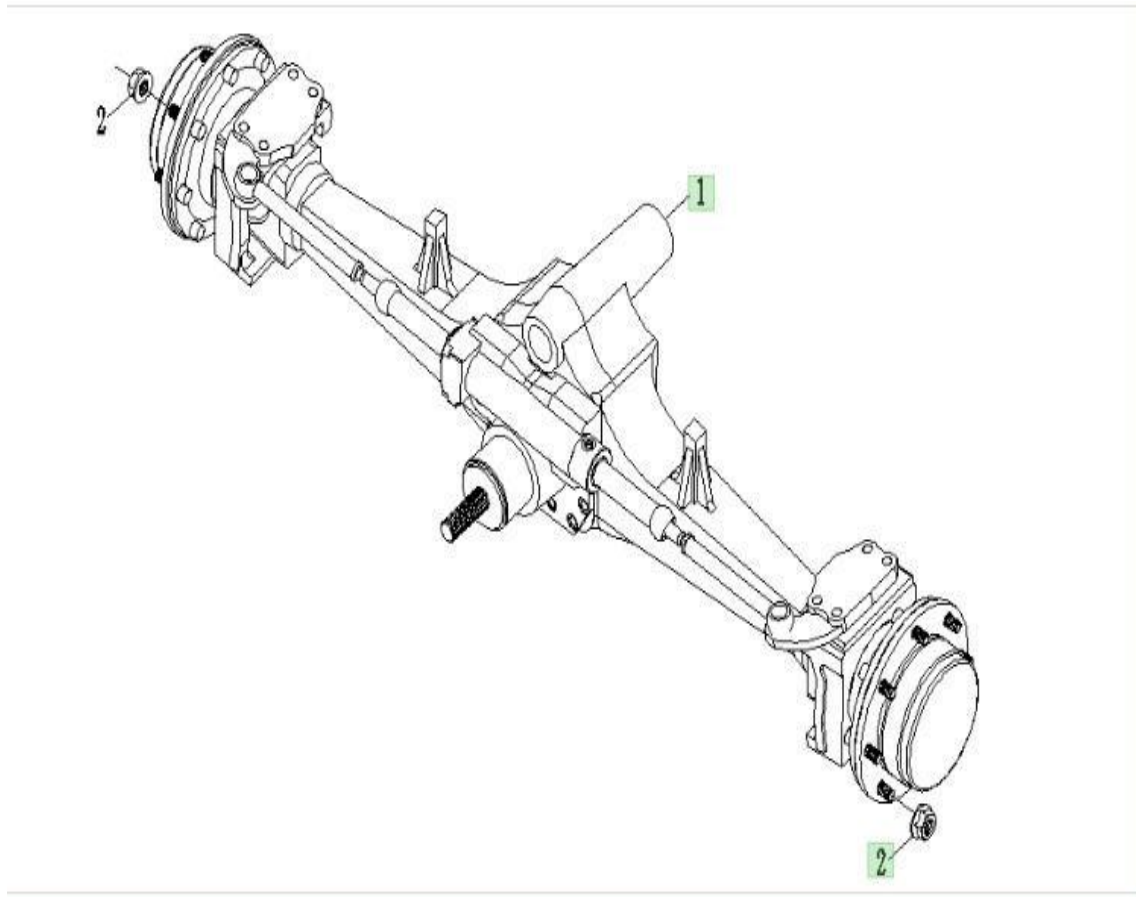

前桥安装 FRAME ACCESSORIES

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W043600000	FRONT STEERING DRIVE	前转向驱动桥总成	1	
2	W110003090	AXLE ASSEMBLY NUT	车轮螺母 M18X1.5-10	16	


前驱动桥总成 FRONT AXLE ASSEMBLY 01

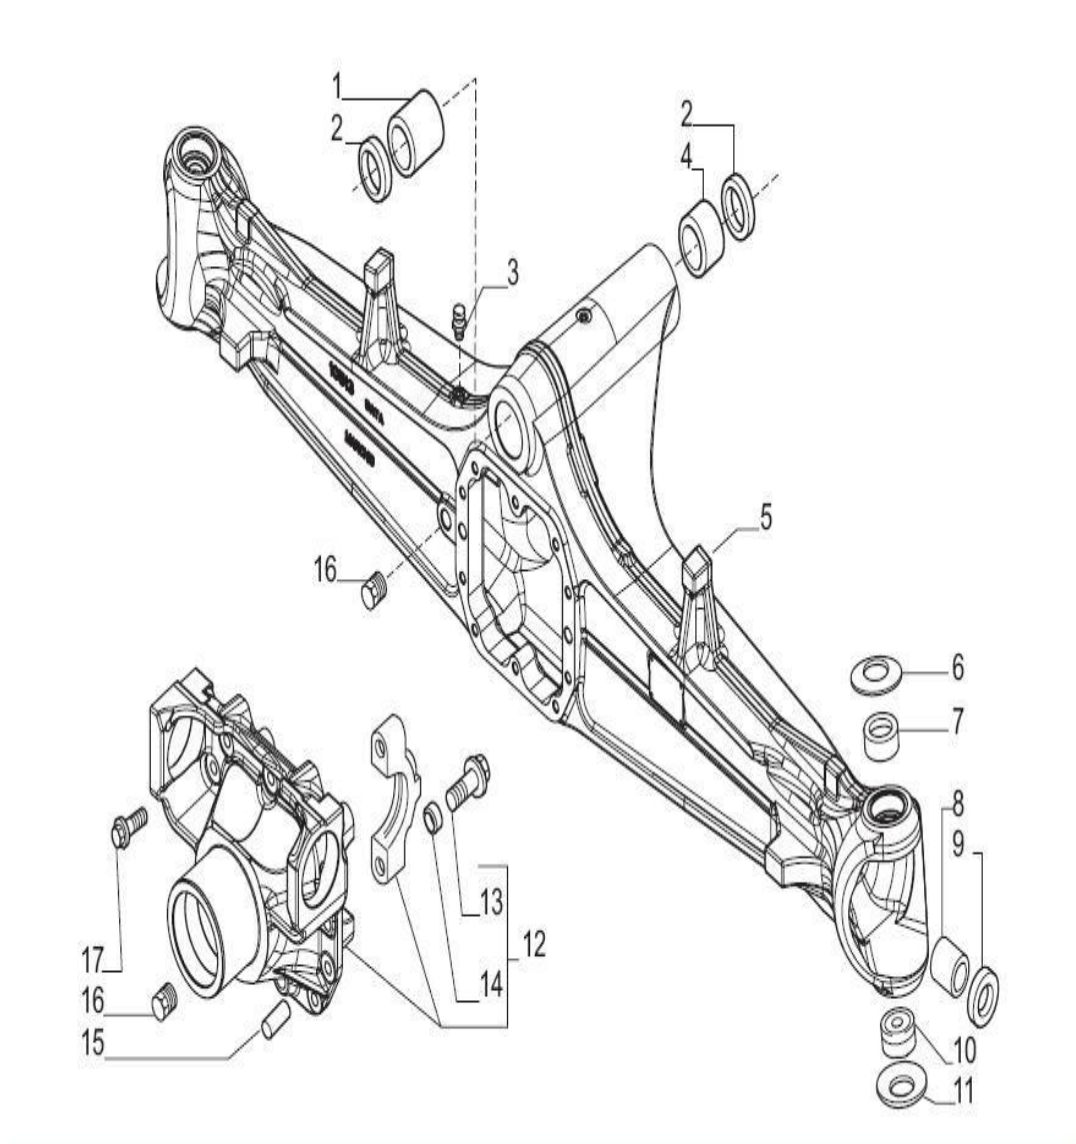

前驱动桥总成 FRONT AXLE ASSEMBLY 01

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043600020	SLEEVE	衬套	1	
2	W043600030	SEAL RING	密封圈	2	
3	W043600040	VENT PLUG	通气塞	1	
4	W043600050	SLEEVE	衬套	1	
5	W043600060	AXLE HOUSING	桥壳	1	
6	W043600070	SPHERICAL WASHER	球面垫片	2	
7	W043600080	SLEEVE	衬套	2	
8	W043600090	SLEEVE	衬套	2	
9	W043600100	OIL SEAL	油封	2	
10	W043600110	SPHERICAL BEARING	球面轴承	2	
11	W043600120	SPHERICAL WASHER	球面垫片	2	
12	W043600130	DIFFERENTIAL SUPPORT	差速器支架	2	
13	W043600710	BOLT	螺栓	1	
14	W043600140	Centering bush	定心衬套	4	
15	W043600720	Pin D15x35	销	4	
16	W043600150	OIL PLUG	油堵	2	
17	W043600730	BOLT	螺栓	10	


前驱动桥总成 FRONT AXLE ASSEMBLY 02

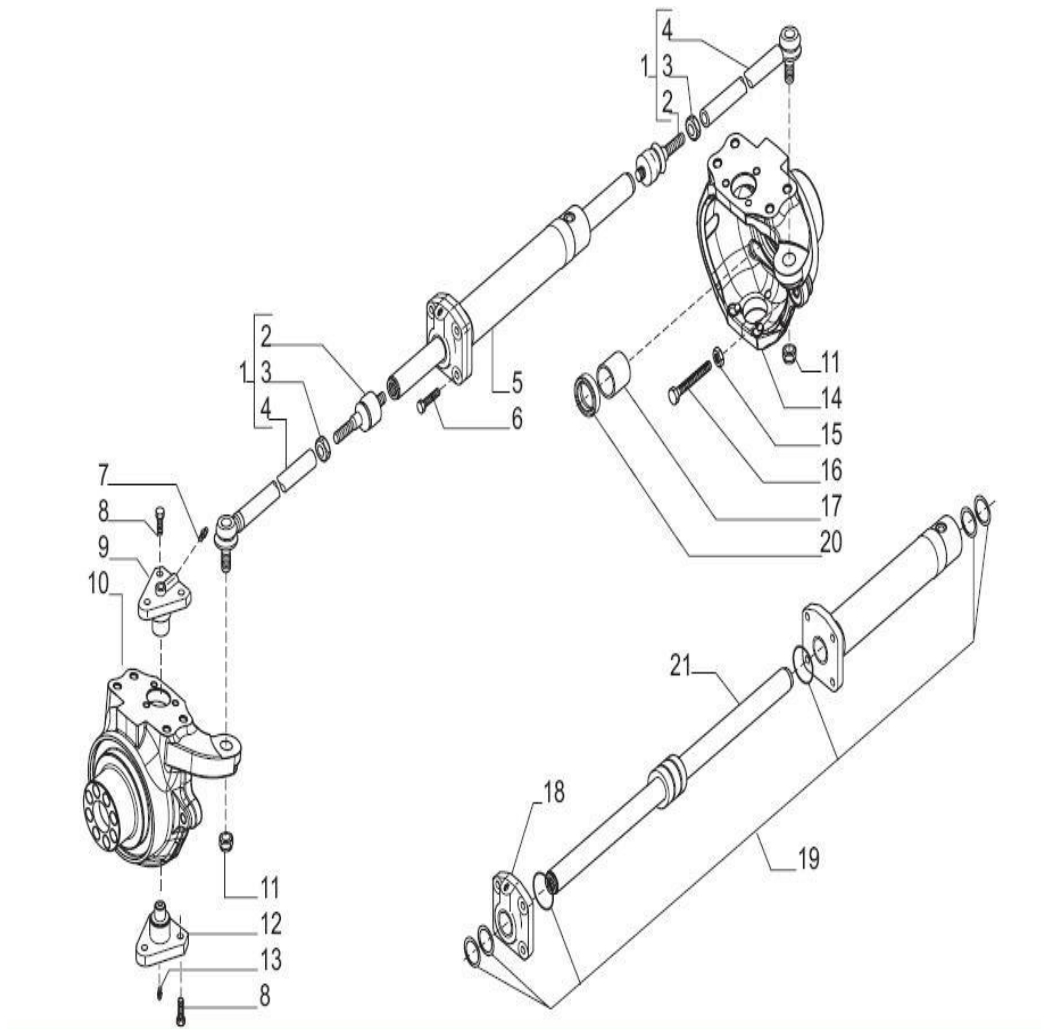

前驱动桥总成 FRONT AXLE ASSEMBLY 02

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043600160	STEERING ARM ASSY	转向臂总成	2	
2	W043600170	CONNECTOR	接头	2	
3	W043600180	Nut M18X1.5	螺母 M18X1.5	2	
4	W043600190	ROD	杆	2	
5	W043600200	STEERING CYLINDER	转向缸	1	
6	W043600210	BOLT	螺钉	4	
7	W043600220	OIL FILLING CAP	注油口	2	
8	W043600230	BOLT	螺钉	12	
9	W043600740	PIN	销	2	
10	W043600240	SWIVIL HOUSING LH	左侧回转壳	1	
11	W043600250	Nut M18x1,5	螺母 M18X1.5	2	
12	W043600750	MAIN PIN	主销	2	
13	W043600260	OIL NOZZLE	注油嘴	2	
14	W043600270	SWIVEL HOUSING RH	右侧回转壳	1	
15	W043600280	Nut M16	螺母 M16	2	
16	W043600760	BOLT	螺栓	2	
17	W043600290	SLEEVE	衬套	2	
18	W043600300	CYLINDER HEAD	缸头	1	
19	W043600310	SEAL PACKAGE	密封包	1	
20	W043600320	OIL SEAL	油封	2	
21	W043600330	ROD	杆	1	


前驱动桥总成 FRONT AXLE ASSEMBLY 03

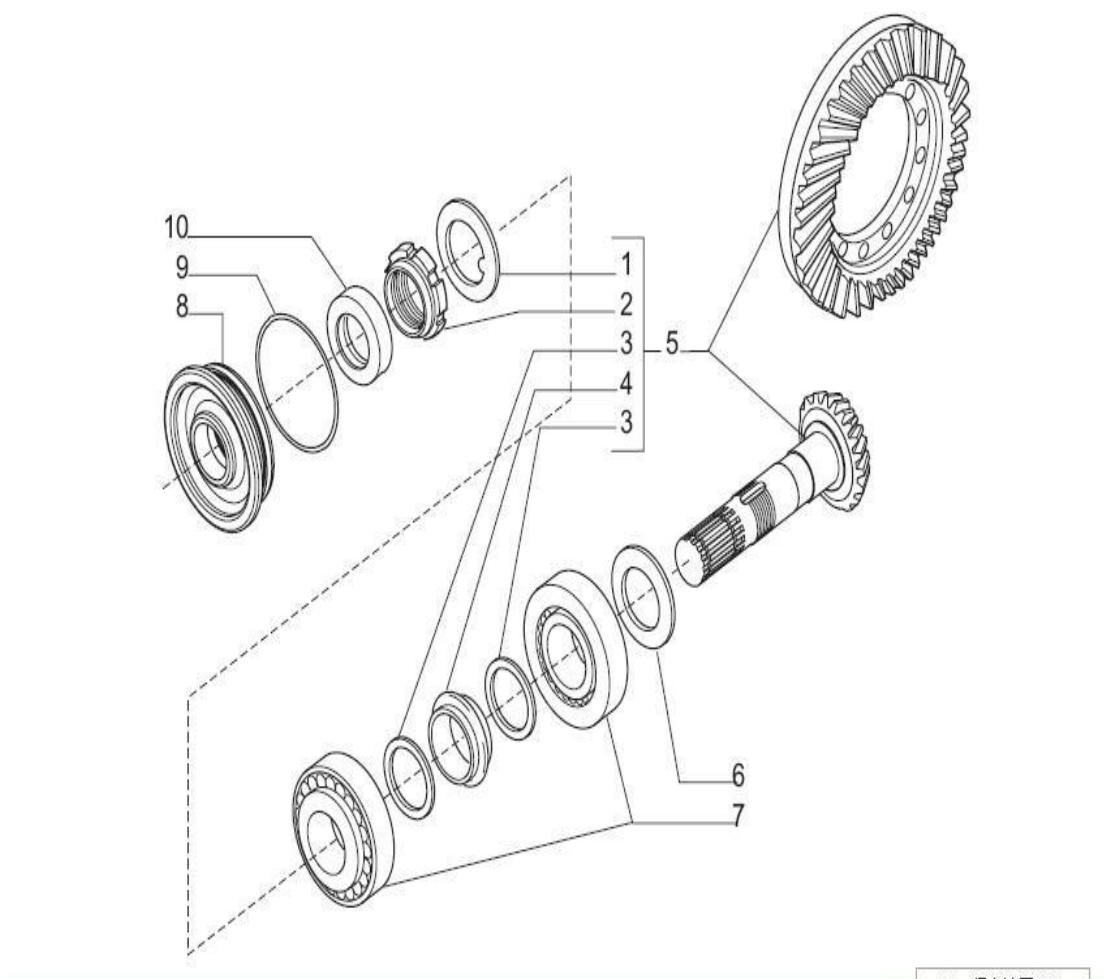

前驱动桥总成 FRONT AXLE ASSEMBLY 03

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043600340	LOCKING WASHER	锁止垫片	1	
2	W043600770	ROUND NUT	圆螺母	1	
3	W043600350	WASHER	垫片	2	
4	W043600360	WASHER	垫片	1	
5	W043600370	BEVEL GEAR/PINION SET	螺旋伞齿轮副	1	
6	W043600380	REGULATING WASHER	调整垫圈	99	
7	W043600390	BEARING	轴承	2	
8	W043600400	COVER	盖	1	
9	W043600780	O-RING	O 型圈	1	
10	W043600410	OIL SEAL RING 35X52X16	油封圈 35X52X16	1	


前驱动桥总成 FRONT AXLE ASSEMBLY 04

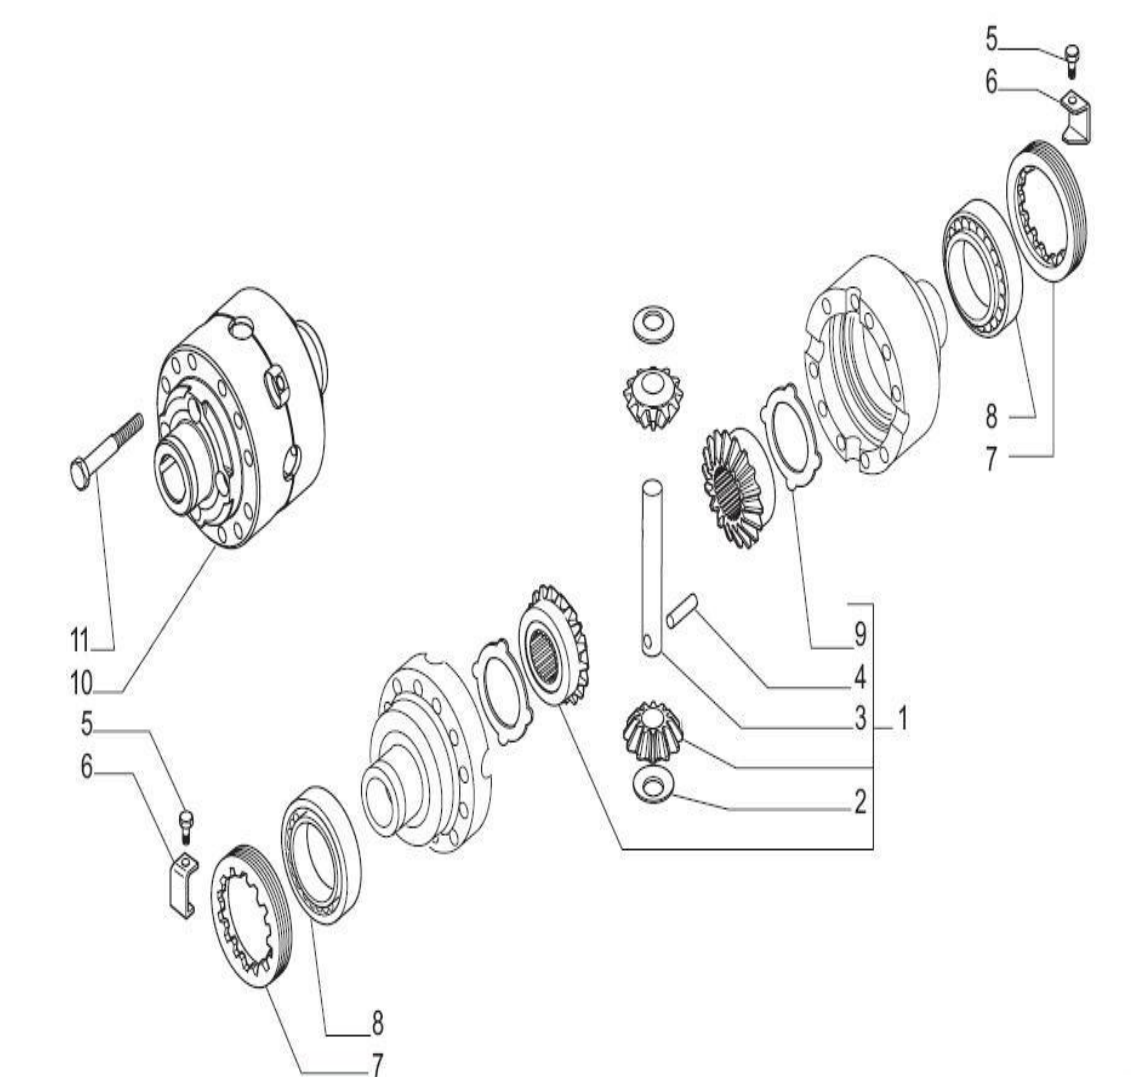

前驱动桥总成 FRONT AXLE ASSEMBLY 04

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043600420	DIFFERENTIAL KIT	差速器组件	1	
2	W043600430	WASHER	垫片	2	
3	W043600440	SHAFT	轴	1	
4	W043600790	PIN	销	1	
5	W043600800	BOLT	螺栓	99	
6	W043600450	LOCKING PLATE	锁圈板	2	
7	W043600810	ROUND NUT	圆螺母	1	
8	W043600460	BEARING	轴承	1	
9	W043600470	DRIVE PLATE	主动盘	1	
10	W043600480	DIFFERENTIAL HOUSING	差速器壳	1	
11	W043600820	Bolt M10x1,5x75	螺栓 M10X1.5X75	1	


前驱动桥总成 FRONT AXLE ASSEMBLY 05

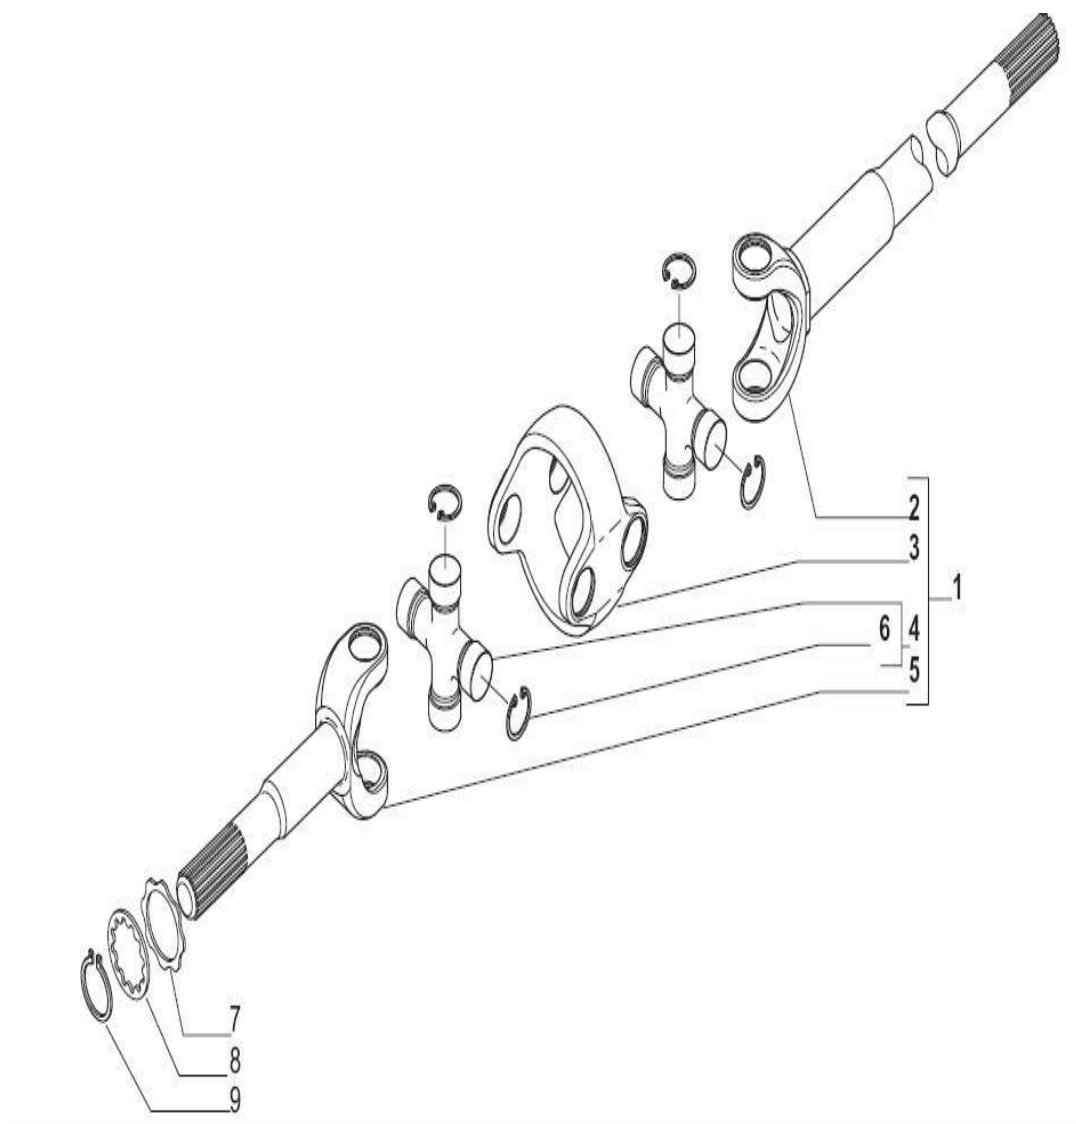

前驱动桥总成 FRONT AXLE ASSEMBLY 05

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043600490	DOUBLE JOINT	双接头	2	
2	W043600500	Fork (diff. Side)	叉（差速器）	2	
4	W043600510	SPIDER	十字轴	4	
5	W043600520	FORK (WHEEL HUB)	轮毂叉	2	
6	W043600530	LOCKRING	锁圈	16	
7	W043600540	WASHER	垫圈	2	
8	W043600550	WASHER	垫圈	2	
9	W043600560	Snap ring	挡圈	2	


前驱动桥总成 FRONT AXLE ASSEMBLY 06

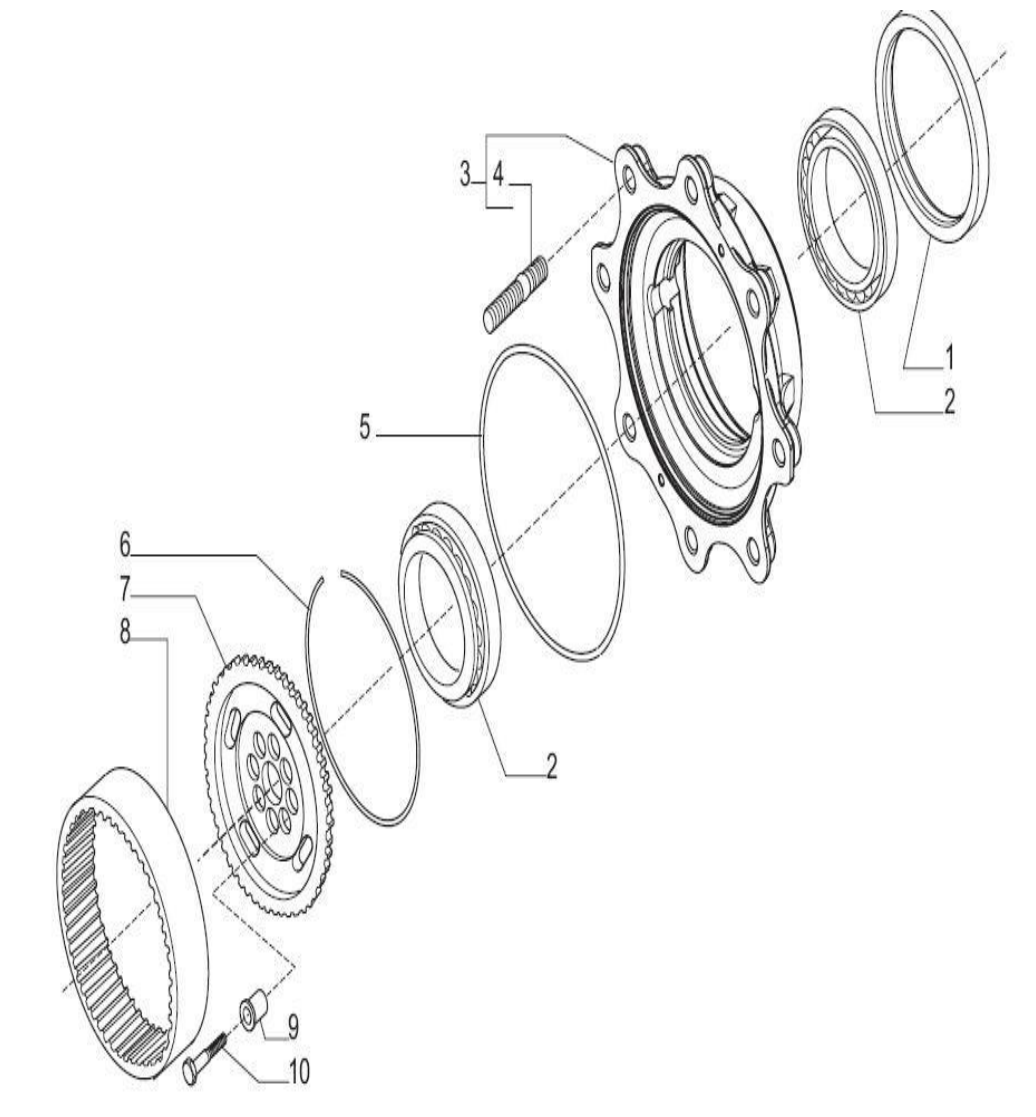

前驱动桥总成 FRONT AXLE ASSEMBLY 06

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043600570	SEAL RING	密封圈	2	
2	W043600580	BEARING	轴承	4	
3	W043600590	WHEEL HUB KIT	轮毂组件	2	
4	W043600600	STUD	螺柱	16	
5	W043600830	O-RING	O 型圈	2	
6	W043600610	LOOP	圈	2	
7	W043600620	WHEEL CARRIER	轮架	2	
8	W043600630	CROWN GEAR Z60	伞齿轮 Z60	2	
9	W043600640	SLEEVE	衬套	16	
10	B010411245	Screw M12x45	螺钉	16	


前驱动桥总成 FRONT AXLE ASSEMBLY 07

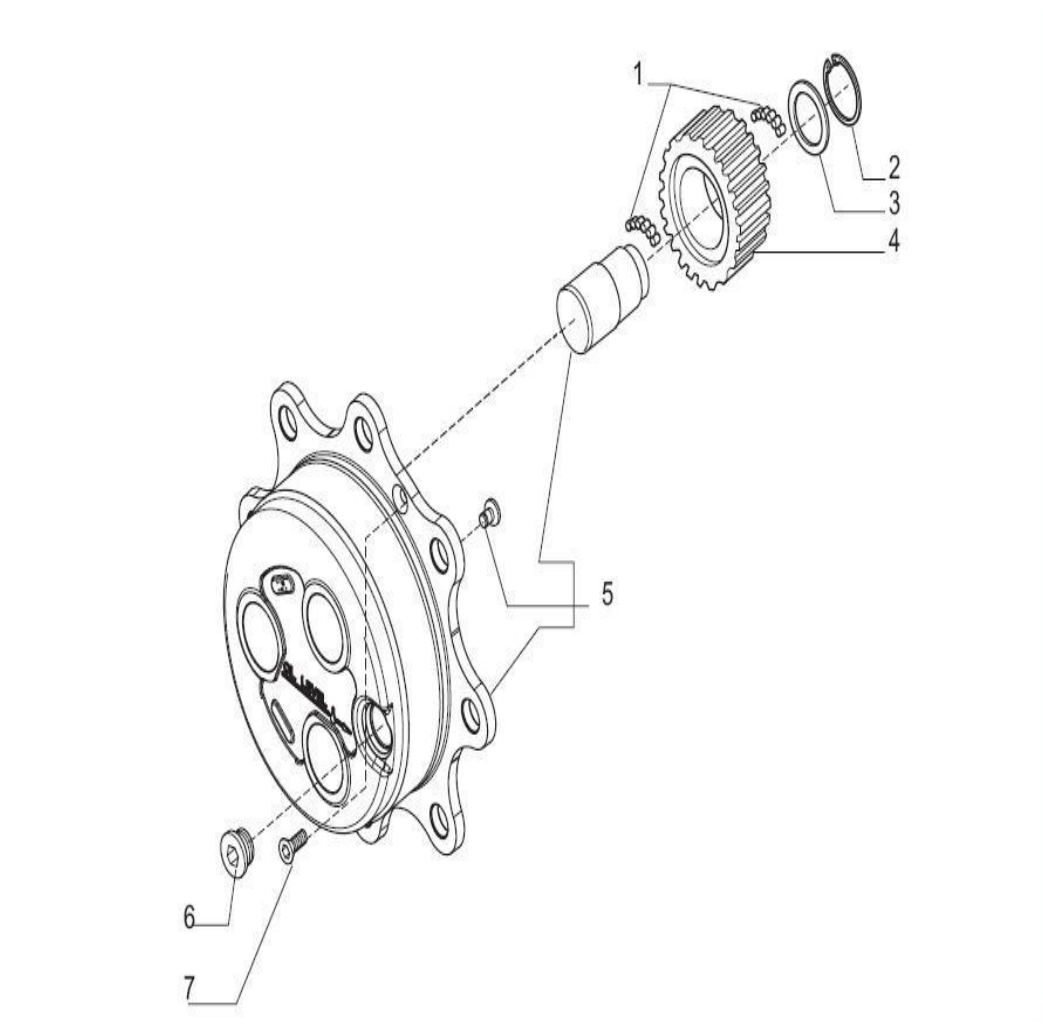

前驱动桥总成 FRONT AXLE ASSEMBLY 07

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043600650	Needle bearings	滚针	336	
2	W043600660	Snap ring D38	挡圈	6	
3	W043600670	WASHER	垫圈	6	
4	W043600680	GEAR	齿轮	6	
5	W043600690	PLANETARY CARRIER KIT	行星架部件	2	
6	W043600700	SCREW PLUG	螺塞	2	
7	B010310820	Screw M8X20	螺钉	2	


车轮总成 RIM ASSEMBLY

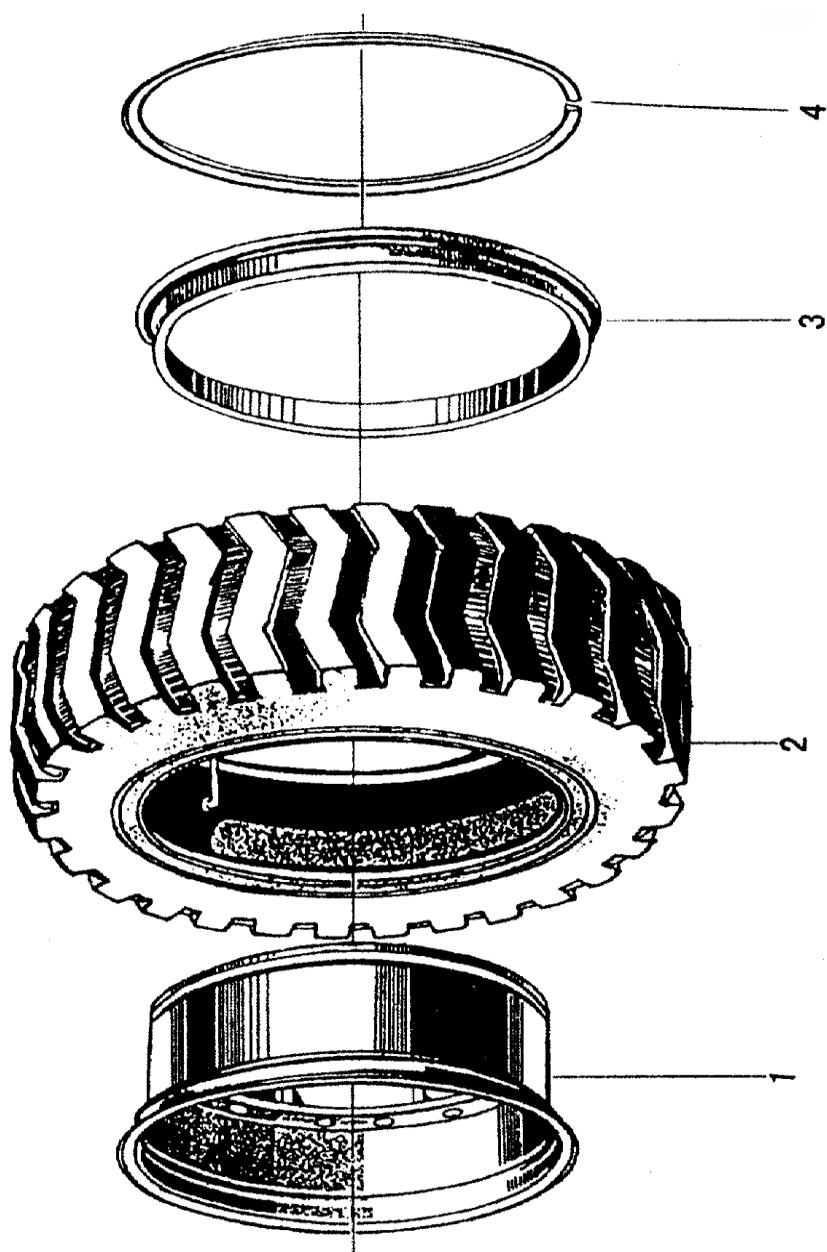

车轮总成 RIM ASSEMBLY

序号 ITEM	零件号 PART NO.	零件名称	Part Name	数量 Q'TY	备注 Remark
1	W110600230	轮辋	RIM	2/2	
2	W110001640	轮胎	TYRE	2/2	
3	W110600230-1	外挡圈	OUTER SNAP	2/2	
4	W110600230-2	锁圈	LOCK RING	2/2	


后驱动桥安装 REAR AXLE INSTALLATION

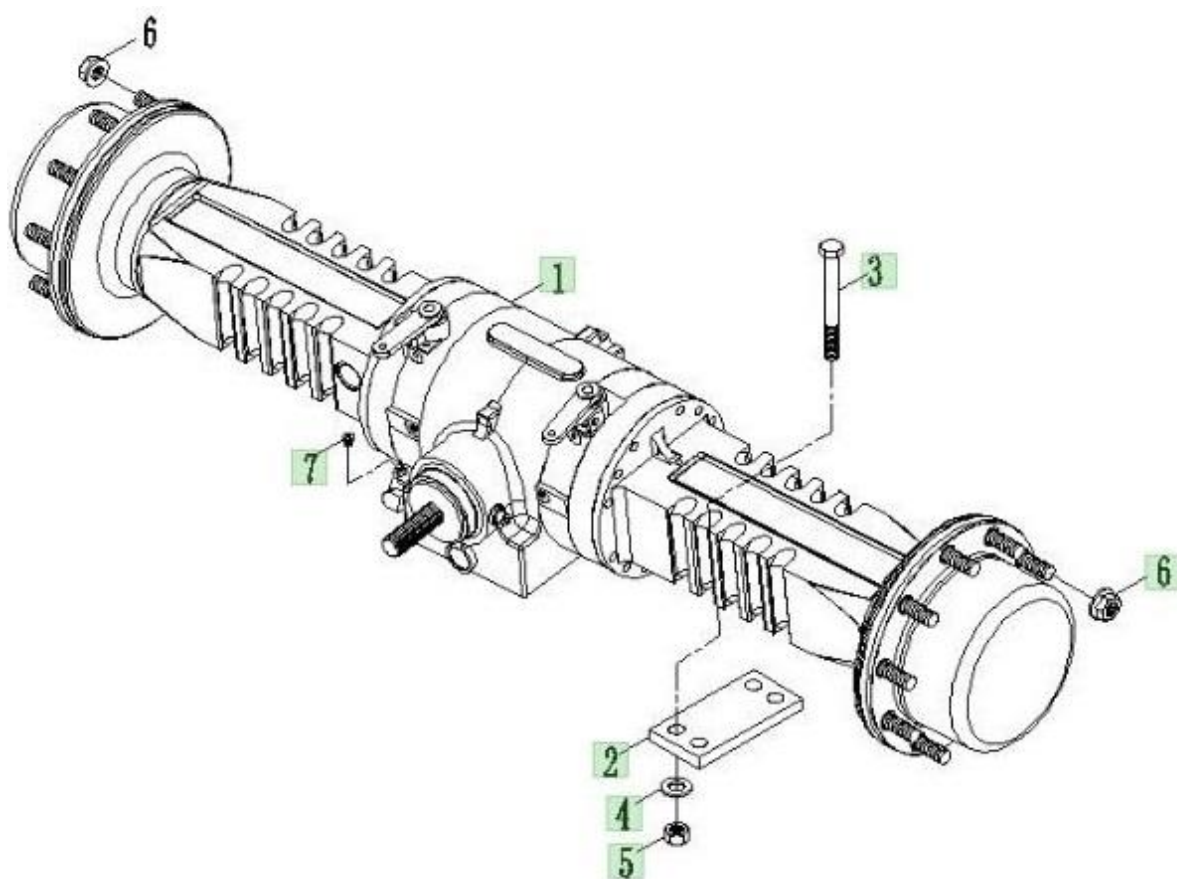

后驱动桥安装 REAR AXLE INSTALLATION

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043700000	REAR AXLE ASSEMBLY	后驱动桥总成	1	
2	B4610-27A000001	PAD BOARD	垫板	2	
3	B040810023	BOLT M24X220	六角头螺栓	8	
4	B061232401	WASHER	垫圈	8	
5	B050212722	HEXAGON NUT	六角凸缘螺母	8	
6	W110003100	NUT M22X1.5-10	车轮螺母	20	
7	QLWZG087-010606	PLUG	堵头	1	


后桥总成 REAR AXLE ASSEMBLY 01

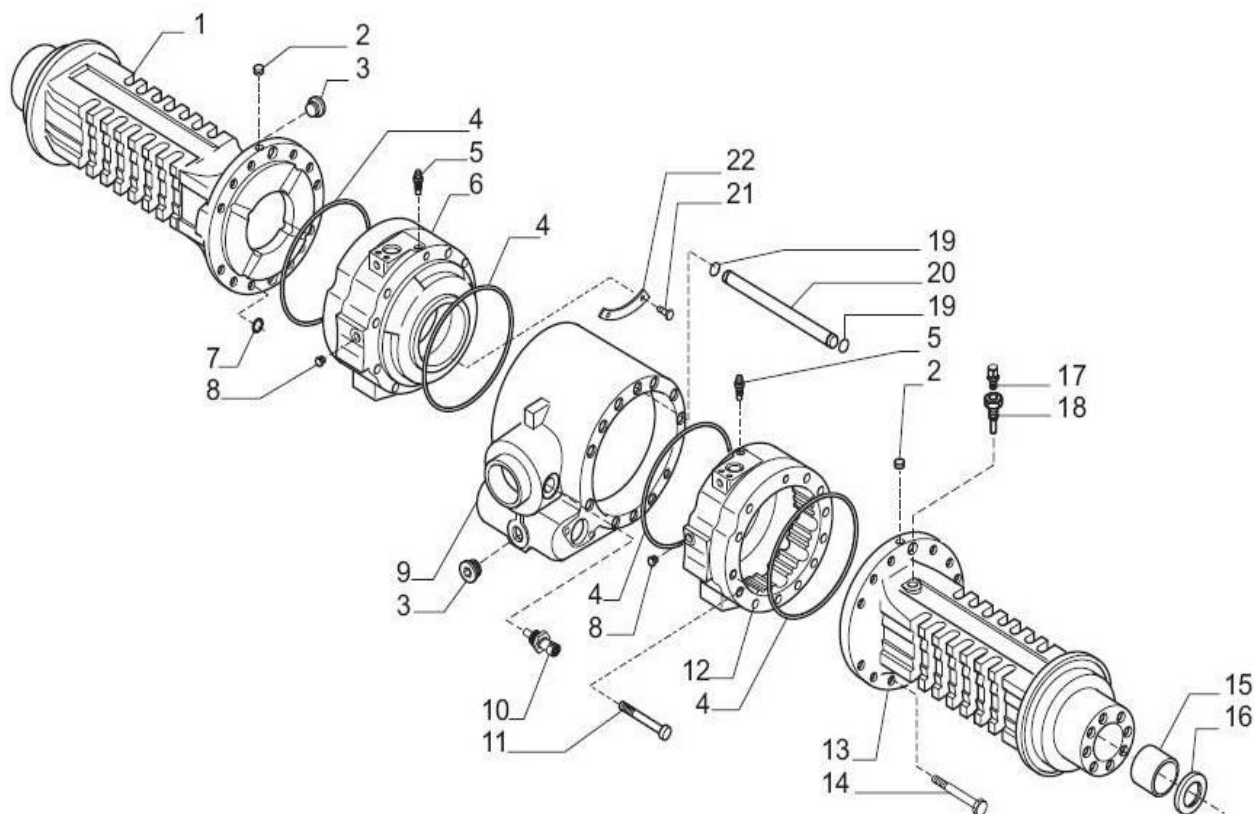

后桥总成 REAR AXLE ASSEMBLY 01

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043700010	BEAM TRUMPET	支撑横梁	1	
2	W043700020	PLUG M10X1	堵 塞 M10X1	2	
3	W043700030	SCREW PLUG	螺塞	2	
4	W043700940	O-RING	O 型圈	4	
5	W043700040	BREATHER M10X1	呼吸器 M10X1	2	
6	W043700050	BRAKE CYLINDER RH	右旋制动油缸	1	
7	W043700950	O-RING	O 型圈	8	
8	W043700060	PLUG 7/16-20	堵 塞 7/16-20	2	
9	W043700070	CENTER BODY	中心体	1	
10	W043700080	OIL TEMPERATURE	油温传感器	1	
11	W043700960	BOLT	螺栓	2	
12	W043700090	BRAKE CYLINDER LH	左旋制动油缸	1	
13	W043700100	BEAM TRUMPET	支撑横梁	1	
14	W043700970	BOLT	螺 栓 M14X140	22	
15	W043700110	SLEEVE	衬套	2	
16	W043700120	SEAL RING	密封圈	2	
17	W043700130	VENT PLUG	通气塞	1	
18	W043700140	BREATHER PIPE	呼吸管	1	
19	W043700980	O-RING	O 型圈	2	
20	W043700150	PIPE	管	1	
21	W043700160	RIVET 4.8X6	铆 钉 4.8X6	4	
22	W043700170	PLATE	板	2	


后桥总成 REAR AXLE ASSEMBLY 02

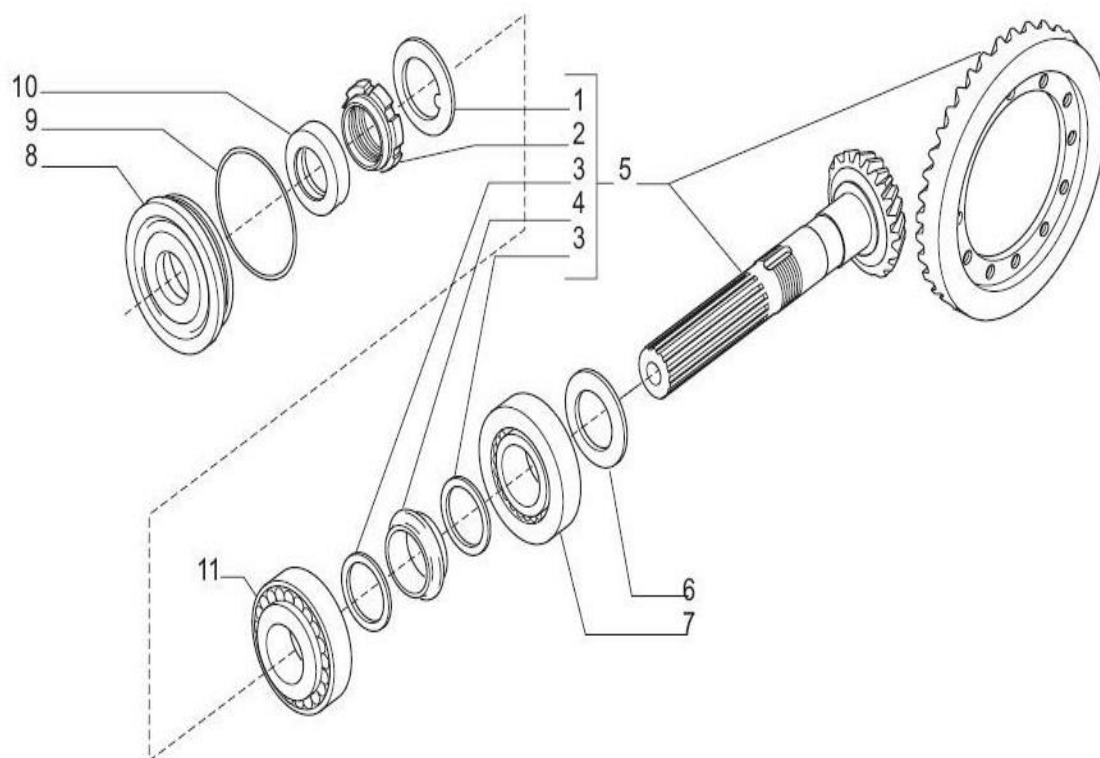

后桥总成 REAR AXLE ASSEMBLY 02

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043700180	LOCKING WASHER	锁止垫片	1	
2	W043600770	ROUND NUT	圆螺母	1	
3	W043700190	WASHER	垫片	2	
4	W043700200	COLLAPSIBLE SPACER	隔环	1	
5	W043700210	BEVEL GEAR	主动锥齿轮	1	
6	W043700220	ADJUSTING GASKET	调整垫片	99	
7	W043700320	BEARING	轴承	1	
8	W043700330	COVER	盖	1	
9	W043700990	O-RING	O 型圈	1	
10	W043700340	OIL SEAL RING 35X52X16	油封圈 35X52X16	1	
11	W043700350	BEARING	轴承	1	


后桥总成 REAR AXLE ASSEMBLY 03

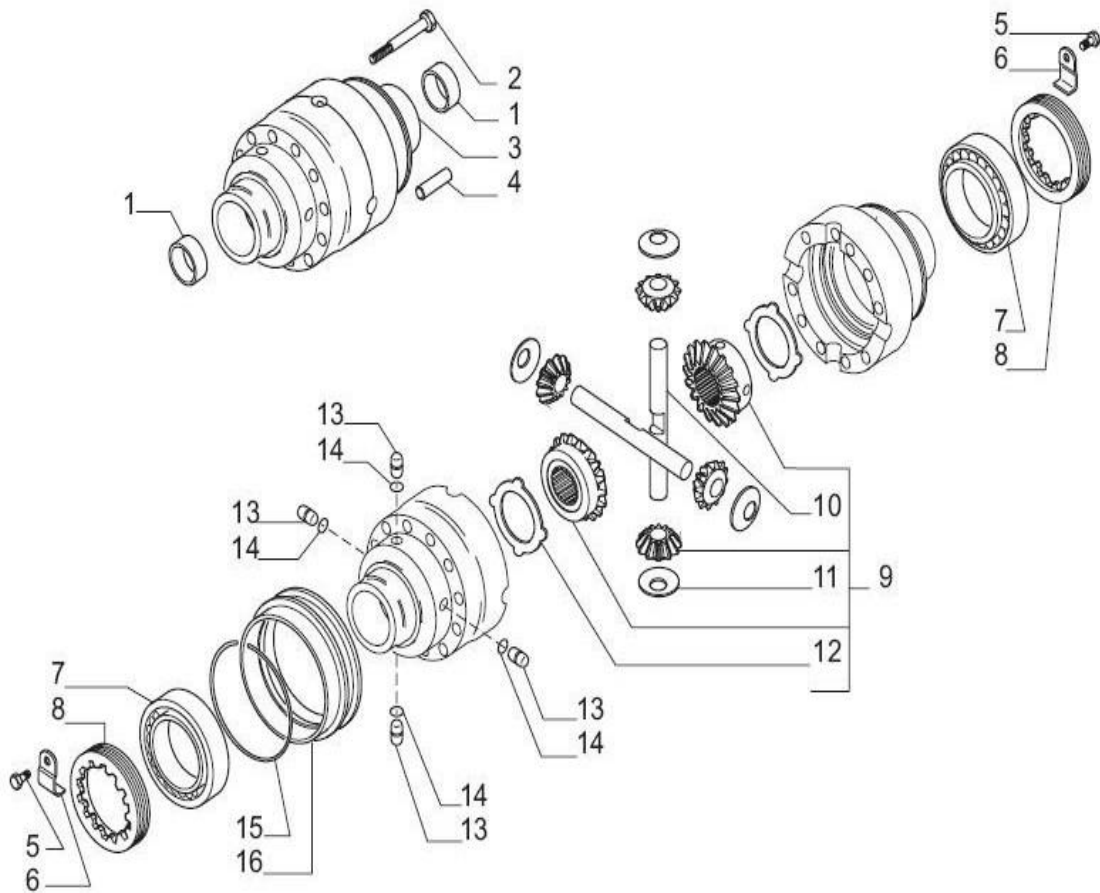

后桥总成 REAR AXLE ASSEMBLY 03

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043700360	SLEEVE	衬套	2	
2	B040811295	BOLT M12X90	螺 栓 M12X90	10	
3	W043700370	DIFFERENTIAL HOUSING	差速器壳	1	
4	W043701000	PIN D12X40	销 D12X40	1	
5	W043600800	BOLT	螺栓	2	
6	W043700380	LOCKING PLATE	锁止片	2	
7	W043700390	BEARING	轴承	2	
8	W043700400	RING NUT M104X2	环形螺母 M104X2	2	
9	W043700410	DIFFERENTIAL KIT	差速器组件	1	
10	W043700420	SHAFT	轴	2	
11	W043700430	THRUST WASHER	止推垫圈	4	
12	W043700440	DIFF.COUNTER-DISC	差速器垫片	2	
13	W043701010	PIN	销	4	
14	W043701020	O-RING	O 型圈	4	
15	W043700450	SEAL RING	密封圈	1	
16	W043700460	COVER	套	1	


后桥总成 REAR AXLE ASSEMBLY 04

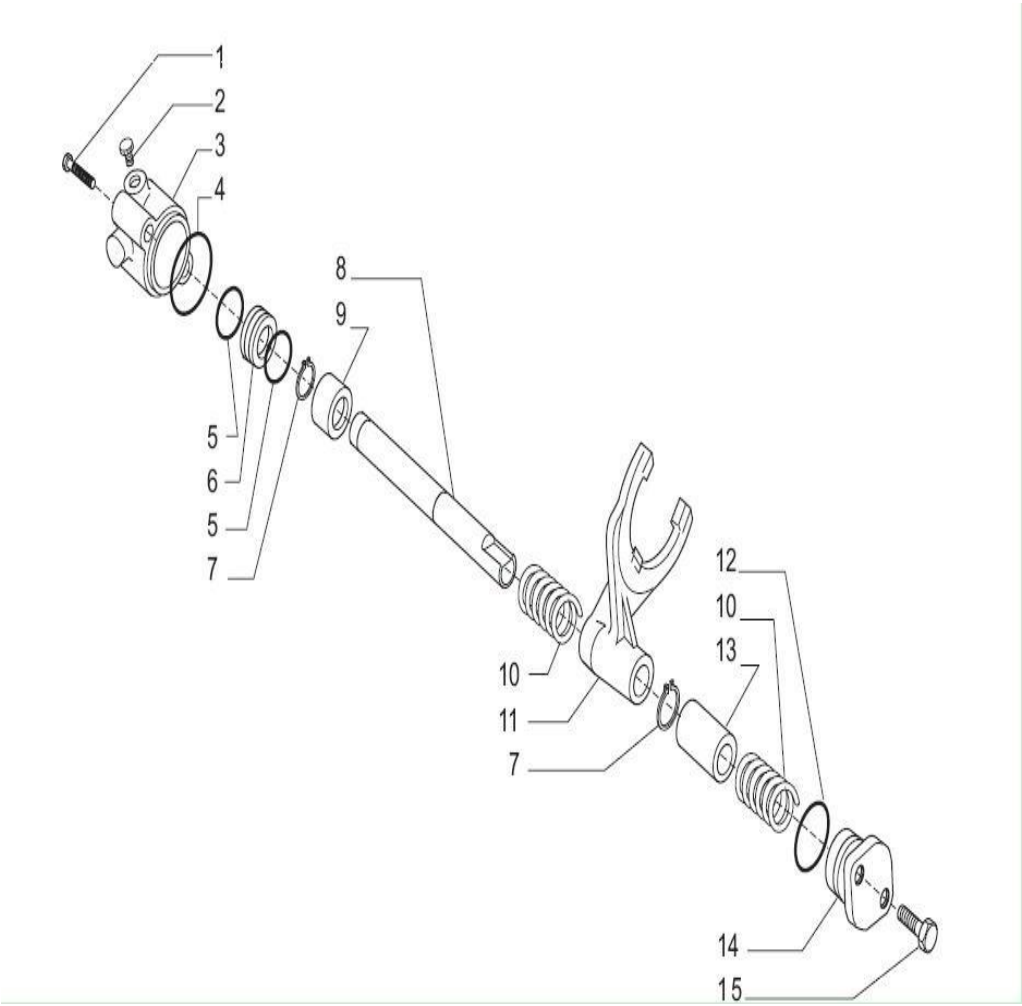

后桥总成 REAR AXLE ASSEMBLY 04

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043701040	BOLT	螺栓	2	
2	W043700470	PLUG	堵塞	1	
3	W043700480	MOUNTINGS	支撑	1	
4	W043701030	O-RING	O 型圈	1	
5	W043701050	O-RING	O 型圈	2	
6	W043700490	PLUNGER	活塞	1	
7	W043700500	SNAP RING	止动密封圈	2	
8	W043700510	SHAFT	轴	1	
9	W043700520	SLEEVE	衬套	1	
10	W043700530	SPRING	弹簧	2	
11	W043700540	FORK	叉	1	
12	W043701060	O-RING	O 型圈	1	
13	W043700550	PACER SLEEVE	隔套	1	
14	W043700560	COVER	盖	1	
15	B040910830	BOLT M8X30	螺 栓 M8X30	2	


后桥总成 REAR AXLE ASSEMBLY 05

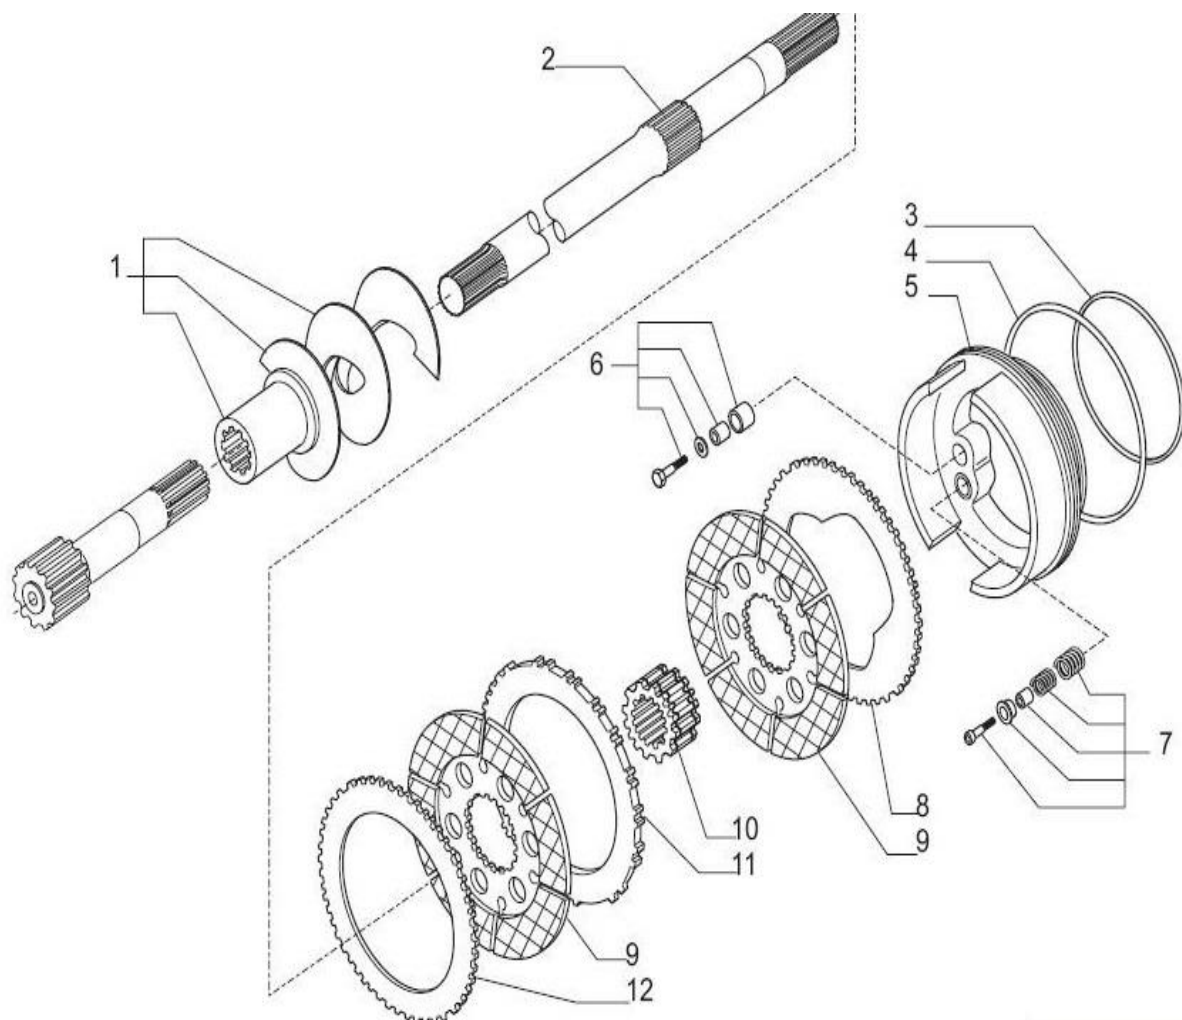

后桥总成 REAR AXLE ASSEMBLY 05

序号 ITEM	零件号 PART NO.	零件名称	Part Name	数量 Q'TY	备注 Remark
1	W043700570	AUGER RH	右旋螺纹钻	1	
1	W043700580	AUGER LH	左旋螺纹钻	1	
2	W043700590	HALF SHAFT	半轴	2	
3	W043701070	O-RING	O 型圈	2	
3	W043701070	O-RING	O 型圈	2	
4	W043701080	O-RING	O 型圈	2	
5	W043700600	POSITIVE BRAKE PISTON	正向制动活塞	2	
6	W043700610	SELF-ADJUST KIT	自动调整组件	2	
7	W043700620	SELF-ADJUST KIT	自动调整组件	2	
8	W043700630	BRAKE COUNTER DISC	制动圆盘	2	
9	W043700640	BRAKE DISC	制动盘	4	
10	W043700650	HUB	毂	2	
11	W043700660	BRAKE COUNTER DISC	制动圆盘	2	
12	W043700670	BRAKE COUNTER DISC	制动圆盘	2	


后桥总成 REAR AXLE ASSEMBLY 06

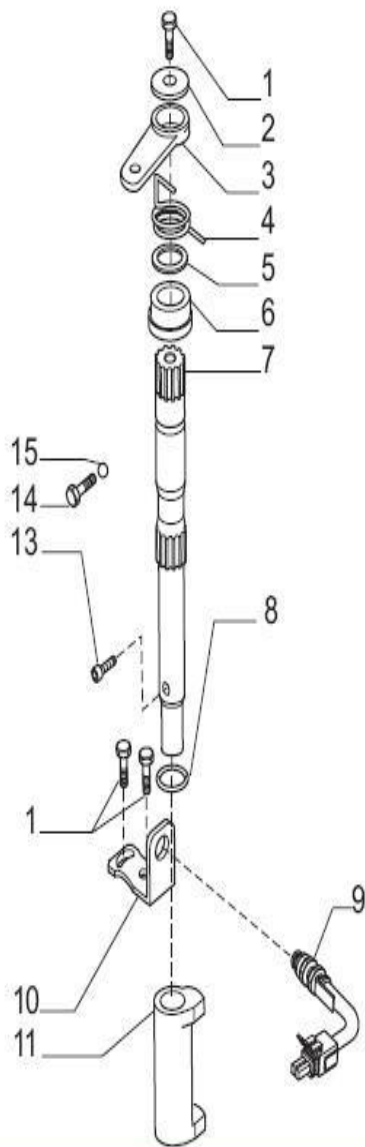

后桥总成 REAR AXLE ASSEMBLY 06

ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B040910820	BOLT M8X20	螺 栓 M8X20	6	
2	W043700680	WASHER	垫圈	2	
3	W043700690	BRAKES CONTROL LEVER	制动控制杆	2	
4	W043700700	SPRING RH	右旋弹簧	1	
4	W043700710	SPRING	弹簧	1	
5	W043700720	SLEEVE	衬套	2	
6	W043700730	PACER SLEEVE	隔套	2	
7	W043700740	BRAKES CONTROL SHAFT	制动控制轴	2	
8	W043701090	O-RING	O 型圈	2	
9	W043700750	SENSOR KIT	传感器组件	2	
10	W073700760	LOCK-LEVER BRACKET	锁杆支架	2	
11	W043700770	CAM	凸轮	2	
13	B040710616	BOLT M6X16	螺 栓 M6X16	2	
14	B040910823	BOLT M8X23.5	螺 栓 M8X23.5	2	
15	W043700780	BALL D6.5	球 D6.5	2	


后桥总成 REAR AXLE ASSEMBLY 07

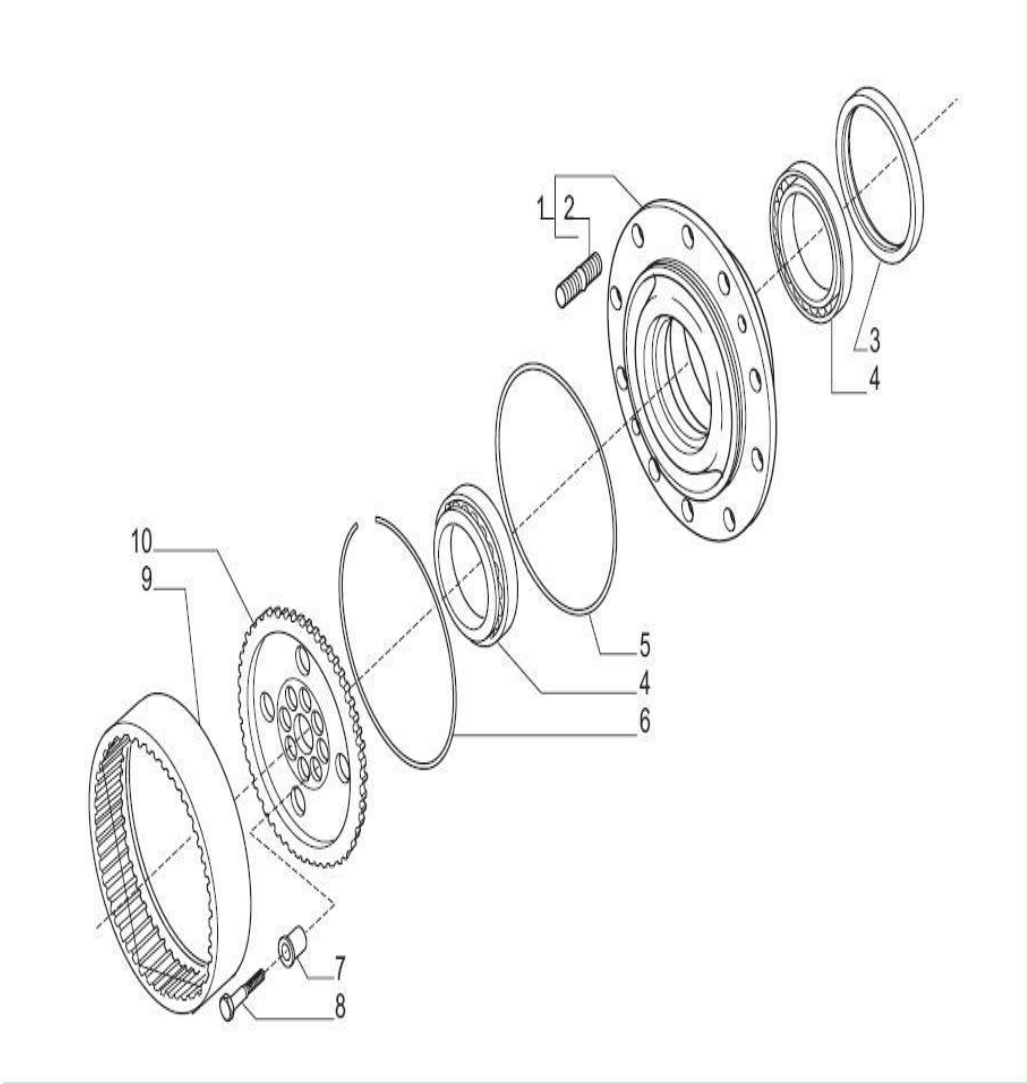

后桥总成 REAR AXLE ASSEMBLY 07

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043700790	WHEEL HUB ASSY	轮毂总成	1	
2	W043701100	STUD	柱头螺栓	20	
3	W043700800	SEAL RING	密封圈	2	
4	W043700810	BEARING	轴承	4	
5	W043701110	O-RING	O 型圈	2	
6	W043700820	WAHSER	挡圈	2	
7	W043700830	LOCATING BUSH	定位衬套	16	
8	W043701120	BOLT	螺栓	16	
10	W043700840	SUPPORTING DISK OF INNER GEAR RING	内齿圈支撑盘	2	


后桥总成 REAR AXLE ASSEMBLY 08

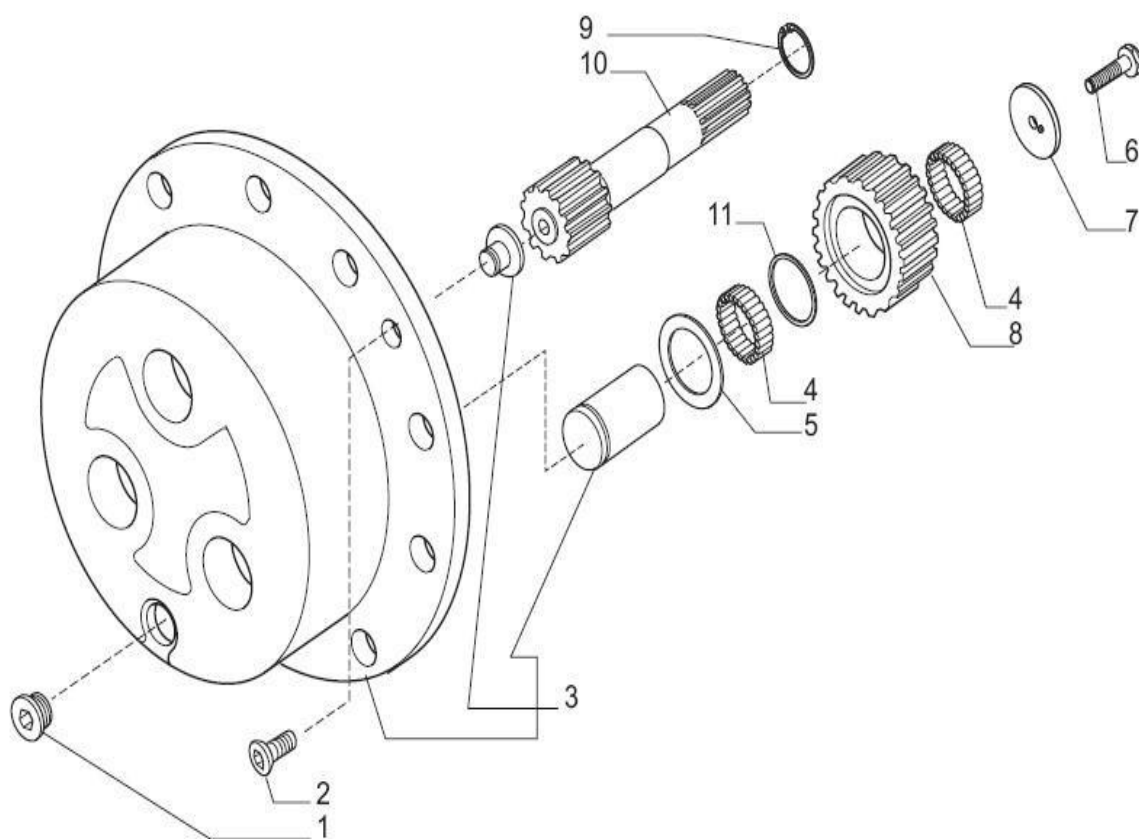

SHANMON388T 挖掘装载机零部件图册
SHANMON388 TBackhoe loader parts catalog

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W043700850	SCREW PLUG	螺塞	2	
2	B040910820	BOLT M8X20	螺 栓 M8X20	4	
3	W043700860	PLANET CARRIER	行星轮架	2	
4	W043700870	NEEDLE BEARINGS	滚针轴承	37	
5	W043700880	THRUST WASHER	止推垫圈	6	
6	W043701130	Bolt	螺栓	6	
7	W043700890	WASHER	垫圈	6	
8	W043700900	GEAR Z31	齿 轮 Z31	6	
9	W043700910	WASHER	止动垫圈	2	
10	W043700920	HALF-SHAFT WITH GEAR Z=13	带齿轮半轴 Z=13	2	
11	W043700930	THRUST WASHER	止推垫圈	6	


后轮轮辋 REAR RIM

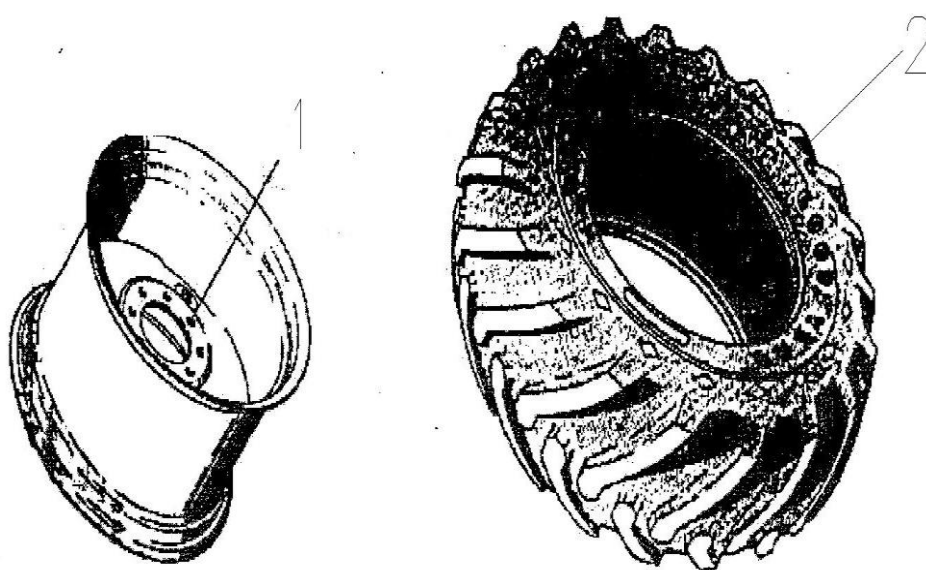

后轮轮辋 REAR RIM

序号 ITEM	零件号 PART NO.	Part Name	名称	数量 Q'TY	备注 Remark
1	W110600260	Rear axle rim	后桥轮辋	2	
2	W110001660	Rear axle tire	后桥轮胎	2	


变速箱变矩器管路 OIL PIPELINE OF CONVERTER GEARBOX

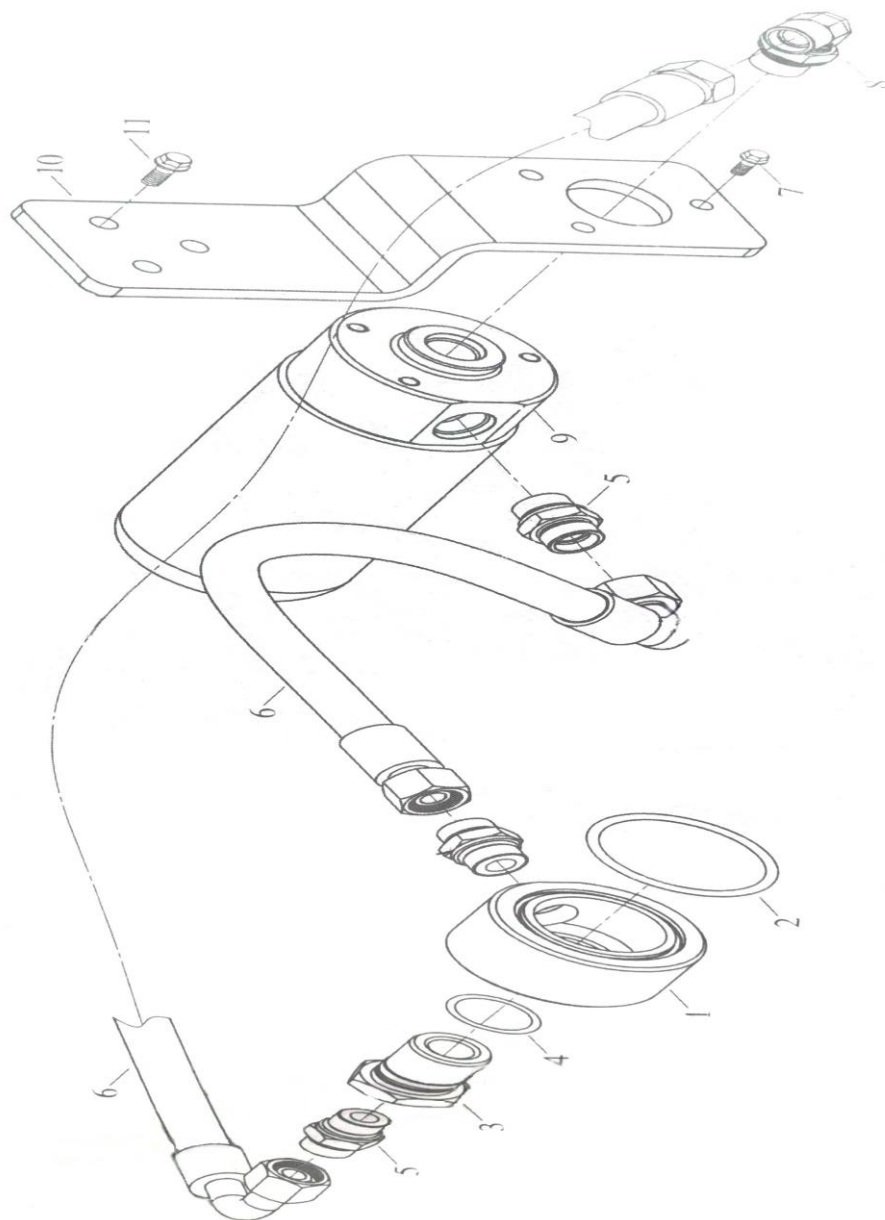

变速箱变矩器管路 OIL PIPELINE OF CONVERTER GEARBOX

序号 ITEM	零件号 PART NO.	Part Name	名称	数量 Q'TY	备注 Remark
1	B4616-31A000002	Gearbox oil separating block	变速箱分油块	1	
2	B160130630	O-ring	O 型圈	1	
3	B4616-31A000003	Oil filter joint	滤油器接头	1	
4	B160110315-	O-rig	O 型圈	2	
5	QLWZG074-102210	Straight joint	直通接头	2	
6	Z062120010	24° tapered hose assembly	软管总成	2	
7	B042520820	Hex flange bolt	六角法兰面螺栓	2	
8	QLWZG077-102210	Right angle adjustable joint	直角可调接头	1	
9	B4616-31A000004	Oil filter separating block	滤油器分油块	1	
10	Z062120260	Support plate	支撑板	1	
11	B042521025	Hex flange bolt	六角法兰面螺栓	1	


传动油散连接油路 TRANSMISSION OIL COOLING OIL-WAY

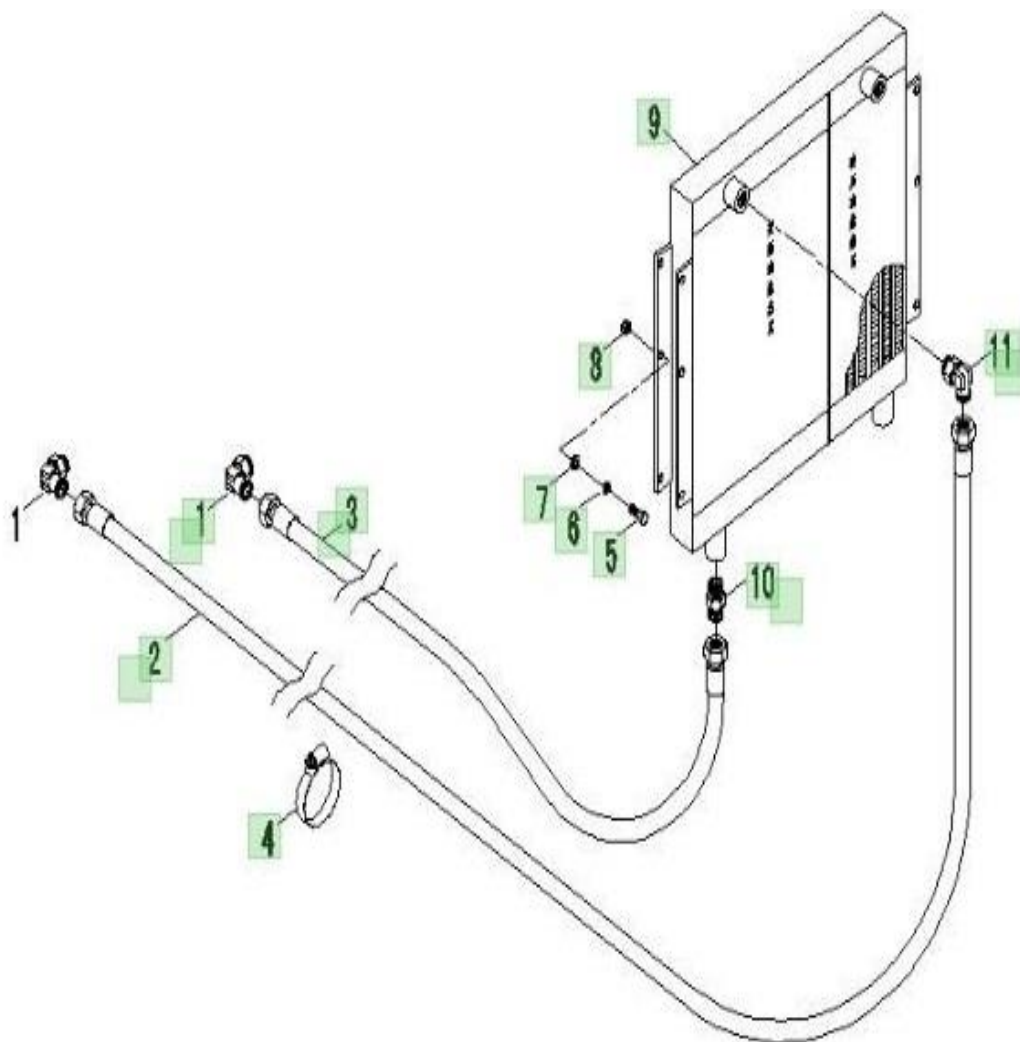

传动油散连接油路 TRANSMISSION OIL COOLING OIL-WAY

序号 ITEM	零件号 PART NO.	Part Name	名称	数量 Q'TY	备注 Remark
1	QLWZG077-102610	RIGHT-ANGLE ADJUSTABLECONNECTOR	直角可调节头	2	
2	Z062120030	TAPER HOSASSEMBLY	24° 锥软管总成	1	
3	Z062120050	TAPERHOSEASSEMBLY	24° 锥软管总成	1	
4	Z593340140	Pipe Card	管卡	1	
5	B042521025	BOLT	六角头螺栓	6	
6	B060111003	WASHER	标准型弹簧垫圈	6	
7	B060411002	WASHER	平垫圈	6	
8	B052421010	NUT	1 型六角螺母	6	
10	QLWZG074-002622	STRAIGHT JOINT	直通接头	2	
11	QLWZG078-002626	Right angle combination joint	直角组合接头	1	
9	B4610-32A010000A0	Oil Radiator Assembly	油散热器总成	1	


优先阀总成 PRIORITY VALVE ASSEMBLY

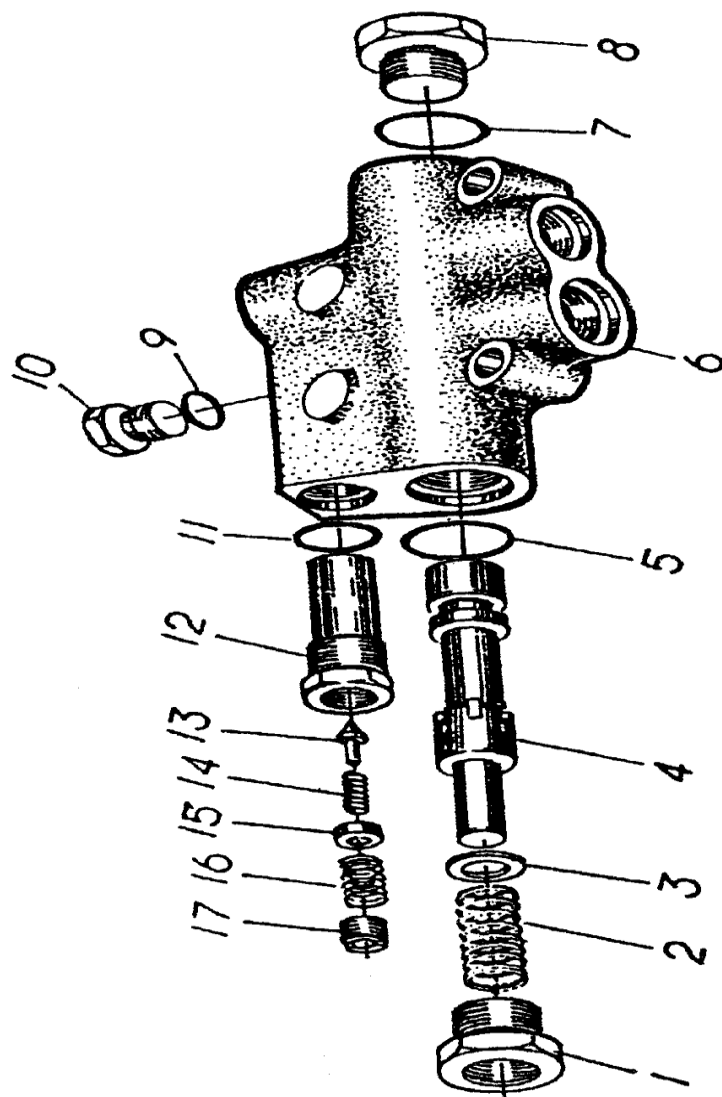

优先阀总成 PRIORITY VALVE ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1		Joint	接头	1	
2		Spring	弹簧	1	
3		Block Circle	挡圈	1	
4		Stem	阀杆	1	
5		O-ring	O 型圈	1	
6		Body	阀体	1	
7		O-ring	O 型圈	1	
8		Bolt	螺钉	1	
9		O-ring	O 型圈	1	
10		Bolt	放气螺栓	1	
11		O-ring	O 型圈	1	
12		Pressure sleeve	压套	1	
13		Pilot Valve	导阀	1	
14		Guide valve spring	导阀弹簧	1	
15		Retaining ring	挡环	1	
16		Spring	弹簧	1	
17		Bolt	螺栓	1	

齿轮泵总成 GEAR PUMP ASSEMBLY

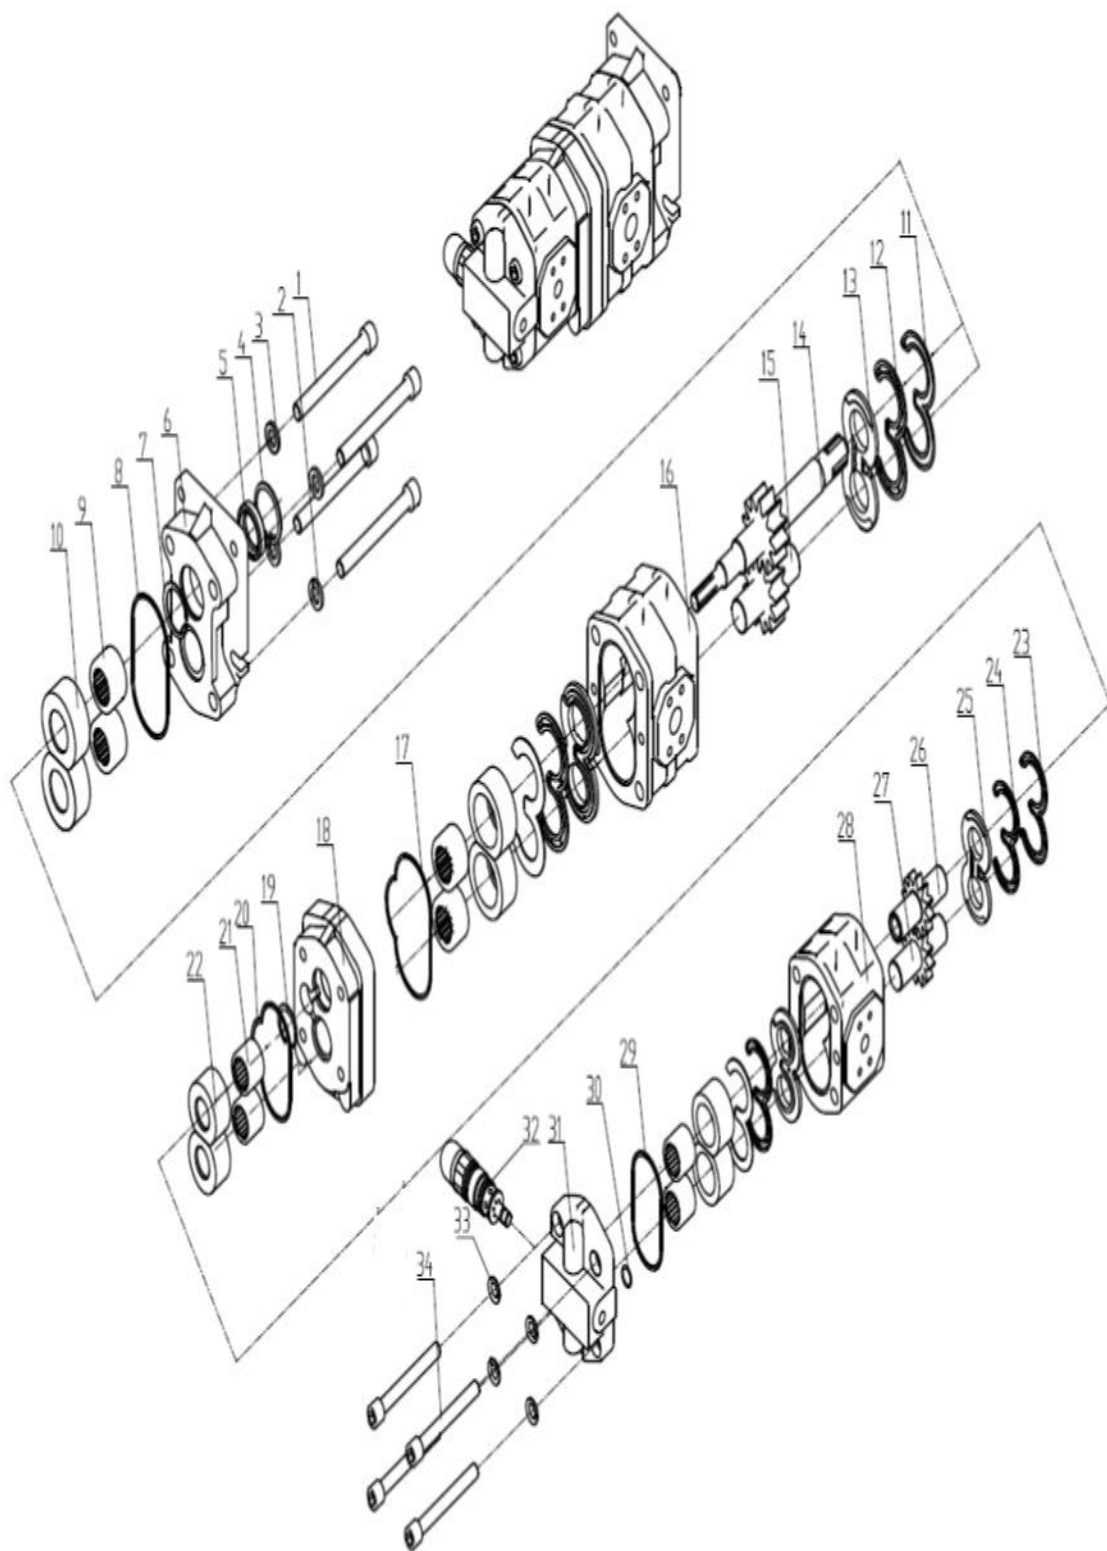


齿轮泵总成 GEAR PUMP ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B010211616	Screws M16x160	螺钉 M16x160	4	
2	B060411603	Washers	垫圈 16	2	
3	CBZ2-2	Washers	垫圈	2	
4	B070155602	Block Circle 56	挡圈 56	1	
5	B35x56x12 D (定制)	Rotary shaft lip seal ring	旋转轴唇形密封圈	2	
6	W060900001-2	Front cover	前盖	1	
7	B070155202	Block Circle 52	挡圈 52	1	
8	W060900001-3	Rectangular sealing ring	矩形密封圈	1	
9	W060900001-4	Bearing	轴承	4	
10	W060900001-5	Sleeve	轴套	4	
11	W060900001-6	Ear-shaped baffle	耳形挡片	2	
12	W060900001-7	Ear Seal	耳形密封	2	
13	W060900001-8	Side panels	侧板	2	
14	W060900001-9	Driving Gear Shaft I	主动齿轮轴 I	1	
15	W060900001-10	Driven gear shaft	从动齿轮轴	1	
16	W060900001-11	Pump Body I	泵体 I	1	
17	W060900001-12	Rectangular sealing ring	矩形密封圈	1	
18	W060900001-13	Intermediate	中间体(左旋)	1	
19	B070154002	Block Circle 40	挡圈 40	1	
20	W060900001-14	Rectangular sealing ring	矩形密封圈	1	
21	W060900001-15	Bearing	轴承	1	
22	W060900001-16	Sleeve	轴套	4	
23	W060900001-17	Ear-shaped baffle	耳形挡片	2	
24	W060900001-18	Ear Seal	耳形密封	2	
25	W060900001-19	Side panels	侧板	2	
26	W060900001-20	Drive Gear Shaft II	主动齿轮轴 II	1	
27	W060900001-21	Driven gear shaft	从动齿轮轴	1	
28	W060900001-22	Pump Body II	泵体 II	1	
29	W060900001-23	Rectangular sealing ring	矩形密封圈	1	
30	B160121292	O-ring 15X2.65	O型圈 15X2.65	1	
31	W060900001-24	Back cover	后盖	1	
32	W060900001-1	type direct acting relief valve	DBD 型直动式溢流阀	1	
33	B060131403	Washers 14	垫圈 14	4	
34	W060900001-25	Bolt M14X123	螺栓 M14x123	4	

前、后传动轴

FRONT\REAR DRIVING SHAFT

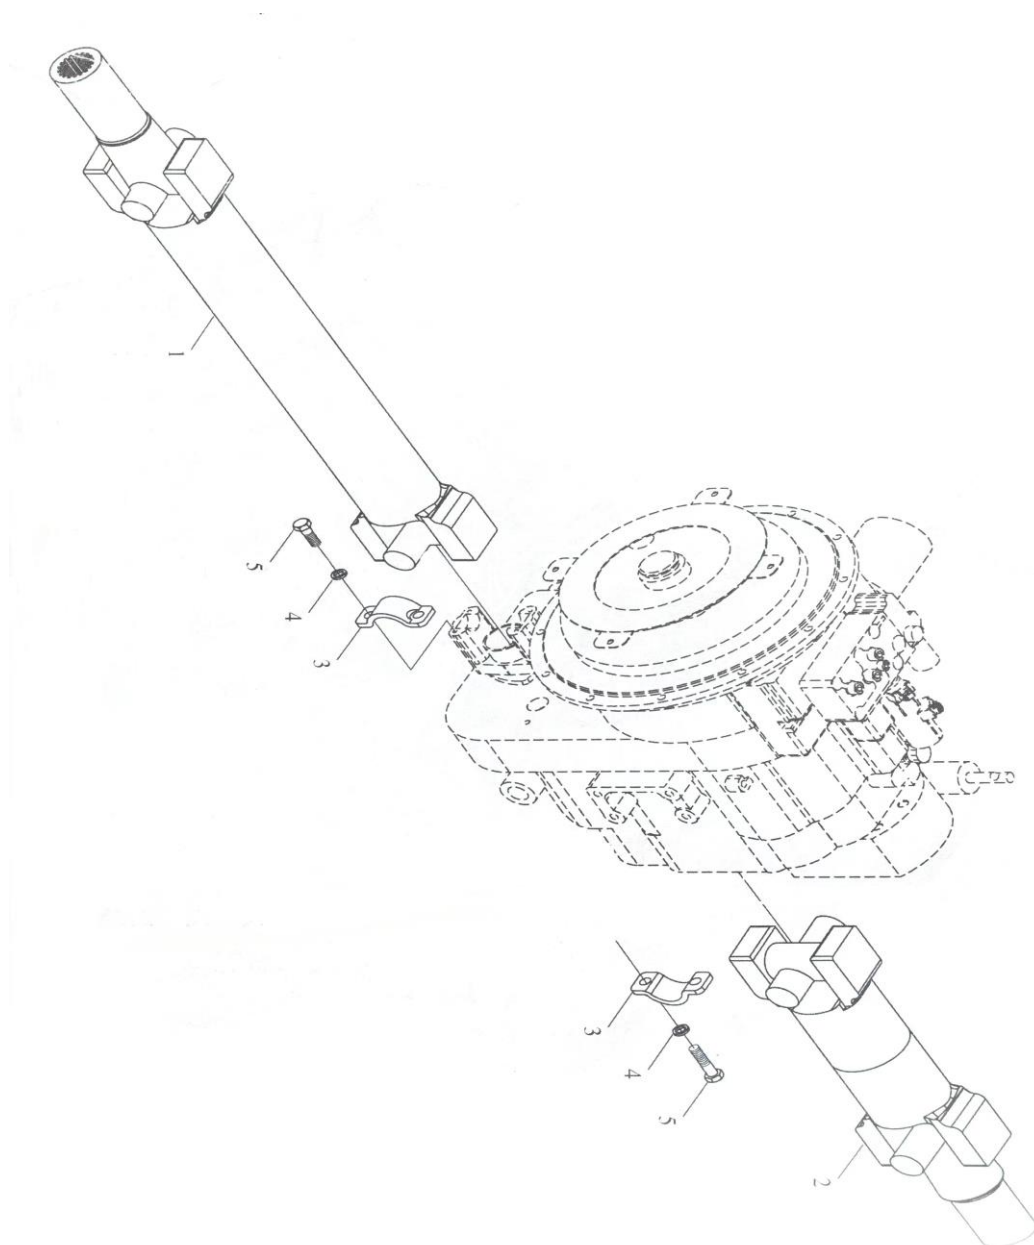


前、后传动轴

FRONGT REAR DRIVING SHAFT

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z060150160	Front dring shaft	前传动轴	1	
2	Z060150170	Rear dring shaft	后传动轴	1	
3	Z050150060	Connection block	连接块	2	
4	B041010008	Bolt	螺栓	4	
5	B060110802	Washer	垫圈 8	4	


加油机构 ACCELERATION CONTROL MEDCHANISM

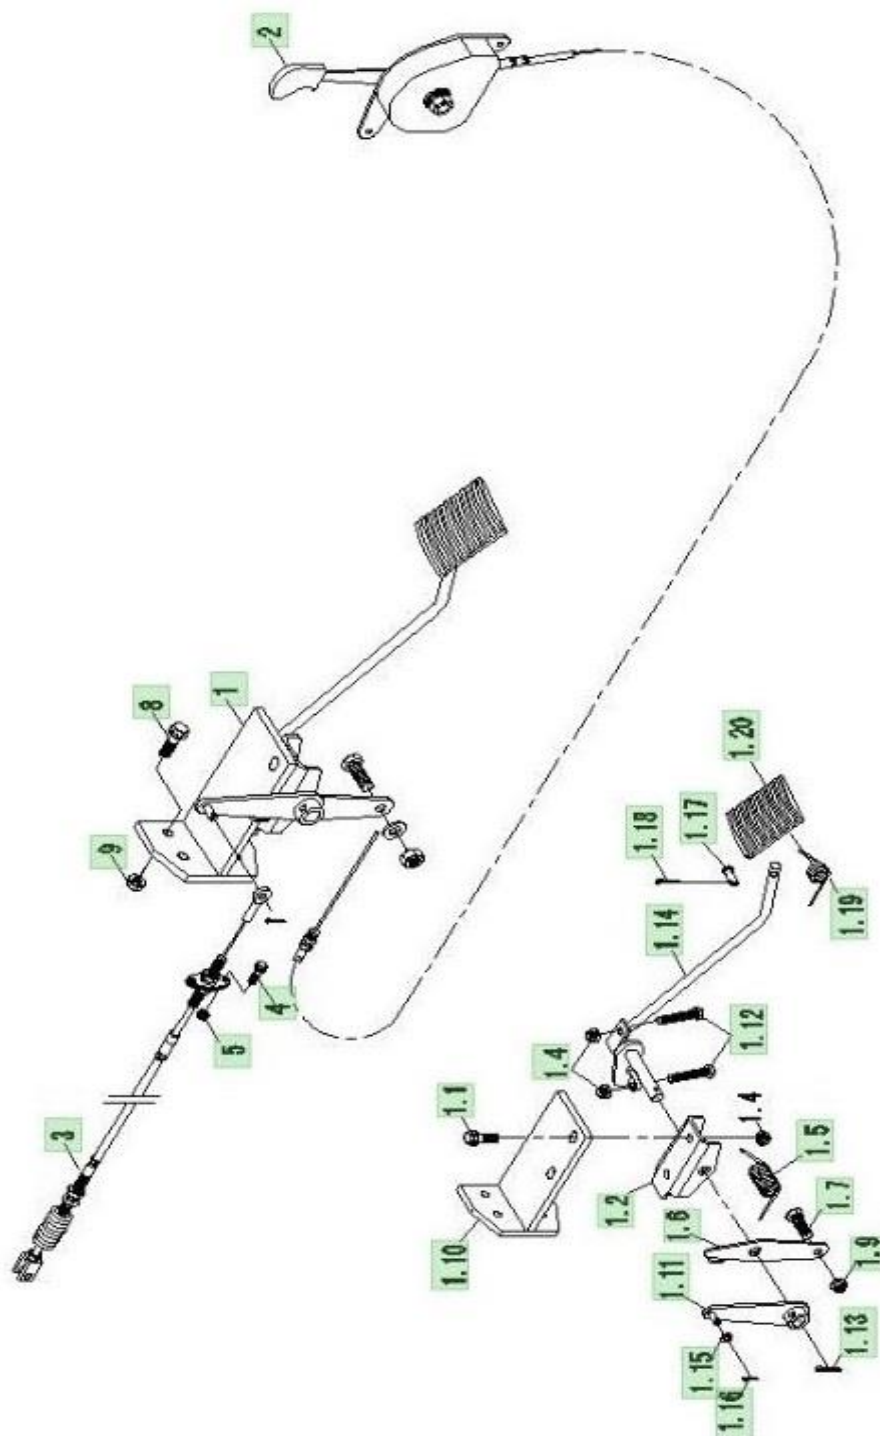

加油机构 ACCELERATION CONTROL MEDCHANISM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	B4616-05A010000	Gas pedal assembly	油门踏板总成	2	
1.1	B040710825	Bolt M8X25	螺栓 M8X25	2	
1.10	B4610-05A010300	Throttle bracket	油门支架	1	
1.11	B4610-05A010100	Foot throttle rocker arm welded	脚油门摇臂焊合	1	
1.12	B040710845	Bolt M8X45-	螺栓 M8X45-	2	
1.13	GBT879.1-5X20	Elastic cylinder pin	弹性圆柱销	1	
1.14	B4610-05A010200	Pedal rocker arm welded together	脚踏板摇臂焊合	1	
1.15	B060411603	Washer 16	垫圈 16	2	
1.16	B080210006	Pin 2X12	开口销 2X12	1	
1.17	B080330430	Pin 4X30	销轴 4X30	1	
1.18	B080210009	Pin 1.6X10	开口销 1.6X10	1	
1.19	B4610-05A010005	Double Spring	双联弹簧	1	
1.2	B4610-05A010001	Spring clamp plate	弹簧卡板	1	
1.20	B4610-05A010400	Soldering of pedals	脚踏板焊合	1	
1.4	B050330807	Nut M8	六角薄螺母 M8	4	
1.5	B4610-05A010002	Spring	弹簧	1	
1.6	B4610-05A010003	Hand throttle swing arm	手油门摇臂	1	
1.7	B4610-05A010004	Bolt	紧固螺栓	1	
1.9	B050330807	Nut M8	螺母 M8	1	
2	B4619-05A020000	Hand throttle assembly	手油门总成	1	
3	B4610-05A020000	Throttle cable assembly	油门拉线总成	1	
4	B040910520	Bolt M5X20	螺栓 M5X20	2	
5	B050330505	Nut M5	螺母 M5	2	
8	B040710816	Bolt M8X16	螺栓 M8X16	4	


驾驶室 Cab assembly

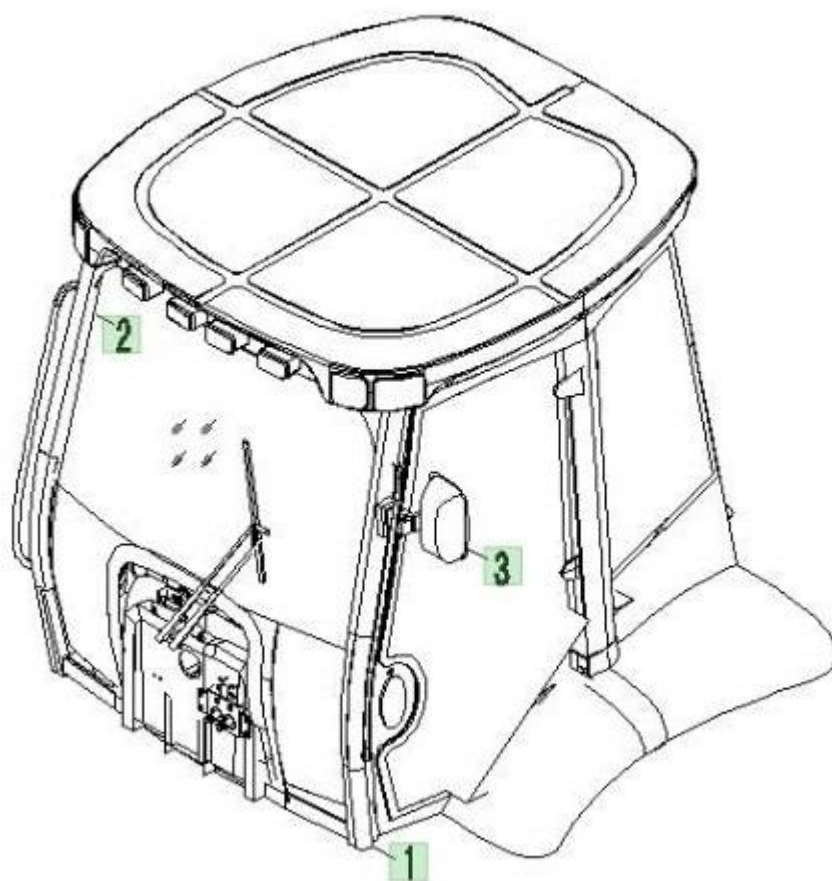

驾驶室 Cab assembly

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B4610-45A010000	Cab skeleton assembly	驾驶室骨架总成	1	
2	B4610-45A020000	Cab interior assembly	驾驶室内饰总成	1	
3	B4611-45A030000	Cab exterior assembly	驾驶室外装总成	1	

驾驶室外装总成 CAB OUTER INSTALL ASSEMBLY

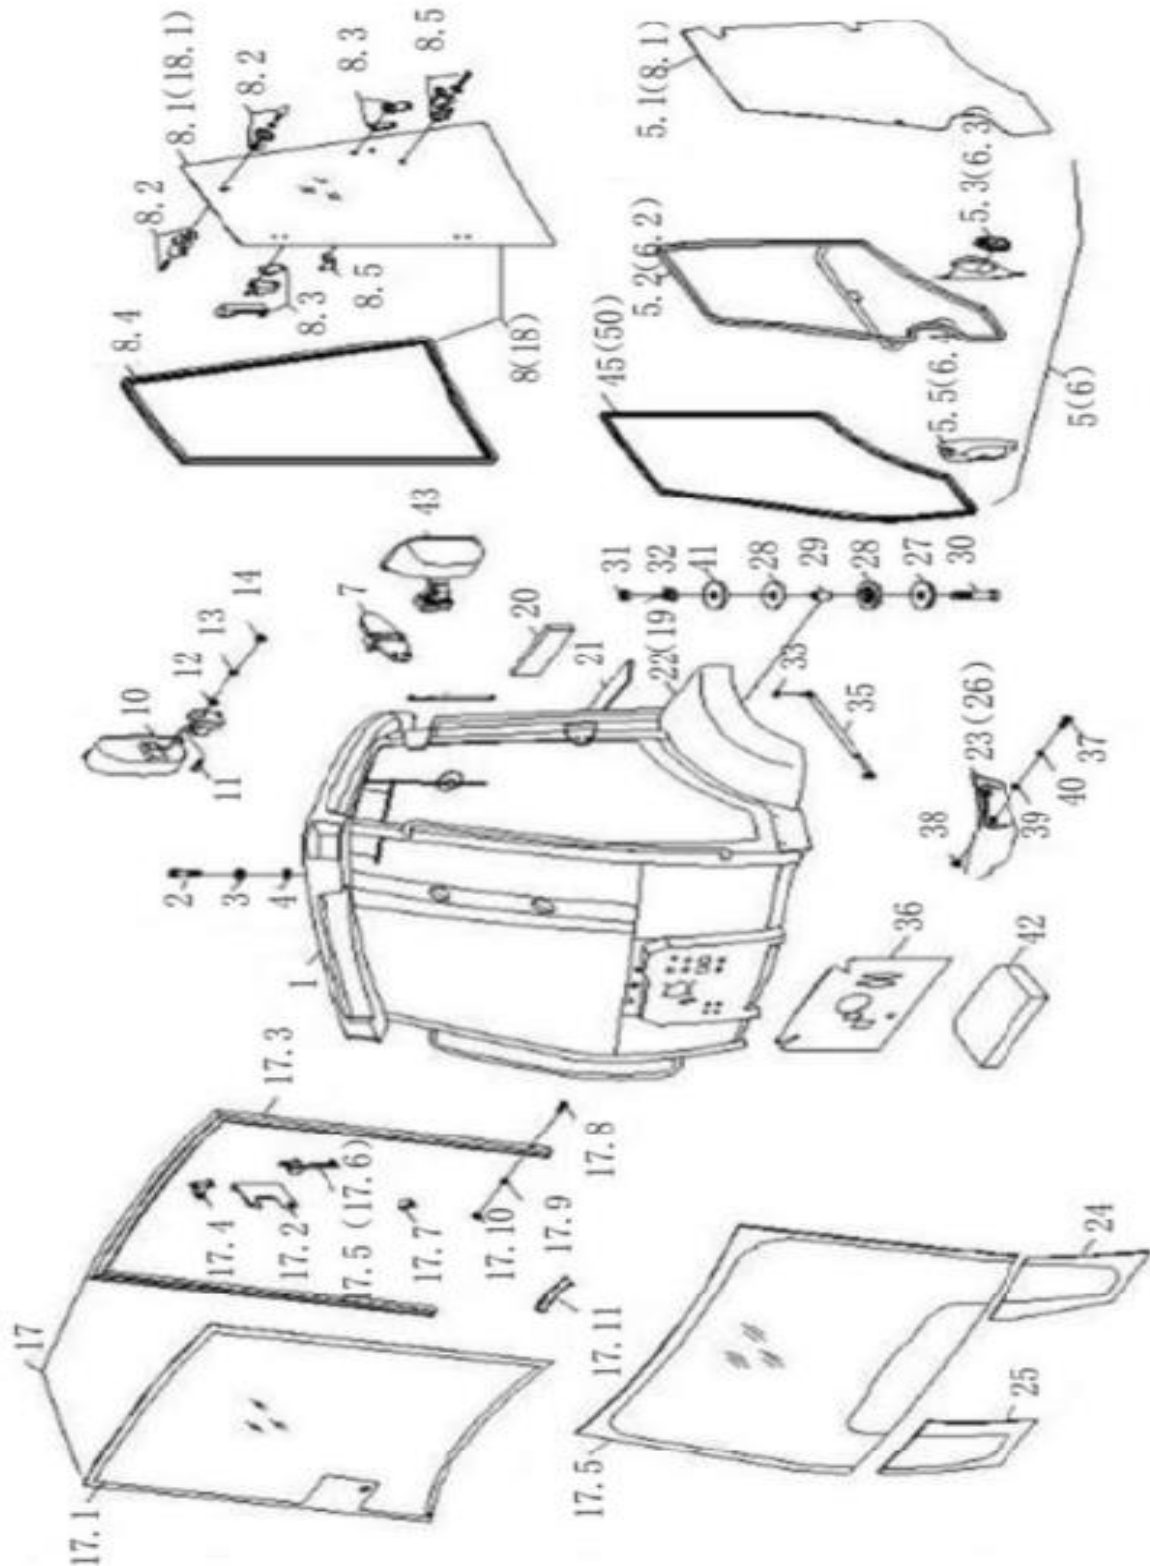


驾驶室外装总成 CAB OUTER INSTALL ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	Z062200011-12	Top cover	顶盖	1	
2	B040811650	Bolt M16X50	螺栓 M16X50	8	
3	B060411603	Washer 16	垫圈 16	8	
4	Z062200011-57	Washer	防水垫圈	8	
5	Z062200017-41	Left door assembly	左车门总成	1	
5.1	Z062200017-47	Left door glass	左门玻璃	1	
5.2	Z062200017-44	Left door frame welded	左车门骨架焊合	1	
5.3	Z062200017-42	Lock Assembly	门锁总成	1	
5.5	Z062200011-59	Left door lock trim panel	左门锁装饰板	1	
6	Z062200011-60	Right door assembly	右车门总成	1	
6.1	Z062200017-53	Right door glass	右门玻璃	1	
6.2	Z062200011-58	Right door frame welded	右车门骨架焊合	1	
6.3	B4610-45A031600	Right Door Lock Assembly	右门锁总成	1	
6.4	Z062200011-61	Right door lock trim panel	右门锁装饰板	1	
7	Z062200011-62	Hinge assembly	铰链总成	4	
8	Z062200017-48	Left window assembly	左侧窗总成	1	
8.1	B4610-45A030401	Left Window glass	左侧窗玻璃	1	
8.2	Z062200011-63	Side window locking mechanism	侧窗上锁止机构	2	
8.3	Z062200011-64	Locking mechanism in side window	侧窗中锁止机构	2	
8.5	Z062200011-65	Bump Lock component	碰锁组件	2	
9	Z062200011-66	Rear Window Air Spring	后视窗气弹簧	2	
10	Z062200010-3	Right rearview mirrorassembly	右后视镜总成	1	
11	B040810670	Bolt M6X70	螺栓 M6X70	4	
12	B060410602	Washer 6	平垫圈 6	4	
13	B060110602	Washer 6	弹性垫圈 6	4	
14	B050360605	Nut M6	螺母 M6	4	
15	B4610-45A030001	Front windshield	前挡风玻璃	1	
16	Z062200011-15	Left Rearview Mirror Assembly	左后视镜总成	1	
17	B4610-45A030800	Rear Window Assembly	后视窗总成	1	
17.1	Z062200010-1	Rear window glass	后视窗玻璃	1	
17.10	B050330506	Nut M4	螺母 M4	2	
17.11	Z062200011-67	Rear window sealant strip	后视窗密封胶条	1	
17.2	Z062200011-68	Windshield wiper mounting plate	雨刮器固定板	1	
17.3	Z062200011-69	Rear window skeleton welded	后视窗骨架焊合	1	

SHANMON388T 挖掘装载机零部件图册
SHANMON388 TBackhoe loader parts catalog

17.4	Z062200011-70	Connecting rod lower support	连杆下支座	2
17.5	Z062200011-71	Left lock of rear window	后视窗左边锁	1
17.6	Z062200011-72	Rear window right lock	后视窗右边锁	1
17.7	Z062200011-73	Roller bearings	滚轮支座	2
17.8	B010210420	Countersunk head screws	沉头螺钉 M4X20	2
17.9	B060410401	Washer 4	垫圈 4	2
18	Z062200017-55	Right side window assembly	右侧窗总成	1
18.1	B4610-45A030501	Right window glass	右侧窗玻璃	1
19	Z062200011-14	Right Mudguard tile	右挡泥瓦	1
20	Z062200011-74	Air-conditioning air change panel	空调换风板	1
21	Z062200011-75	Rear decorative baffle	后装饰挡板	1
22	Z062200011-13	Left mudguard tile	左挡泥瓦	1
23	Z062200011-76	Front lower left decorative corner panel	前左下装饰角板	1
24	Z062200010-2	Front left lower windshield	前左下挡风玻璃	1
25	Z062200011-77	Front lower right windshield	前右下挡风玻璃	1
26	Z062200011-78	Front lower right trim corner panel	前右下装饰角板	1
27	Z062200011-80	Washer	大垫圈	4
28	Z062200011-81	Shock absorbers	减震器	8
29	Z062200011-82	Seat guide sleeve	座圈导套	4
30	B040820160	Bolt M20x160	螺栓 M20X160	4
31	B0502120179	Lock nut M20	锁紧螺母 M20	4
32	F850-46A000005	Washer	垫圈	4
33	B050360807	Nut M8	螺母 M8	2
35	B4610-45A031000	Door Air Spring	车门气弹簧	2
36	Z062200011-79	Cabin Insulation Cotton	驾驶室隔热棉	1
37	Z062200011-86	PAN head screw	盘头螺钉	4
38	B050330505	Nut M5	螺母 M5	4
39	B060410501	Washer 5	垫圈 5	4
40	B060110501	Washer 5	弹簧垫圈 5	4
41	Z062200011-83	Washer	大垫圈	4
42	Z062200011-84	Rubber pads	胶垫	6
43	Z062200011-15	Left rearview mirror	左侧后视镜	1
45	Z062200017-49	Door seal	车门密封条	2
50	Z062200017-49	Door seal	车门密封条	2


顶盖线路(12V)TOP COVER WIRING(12V)

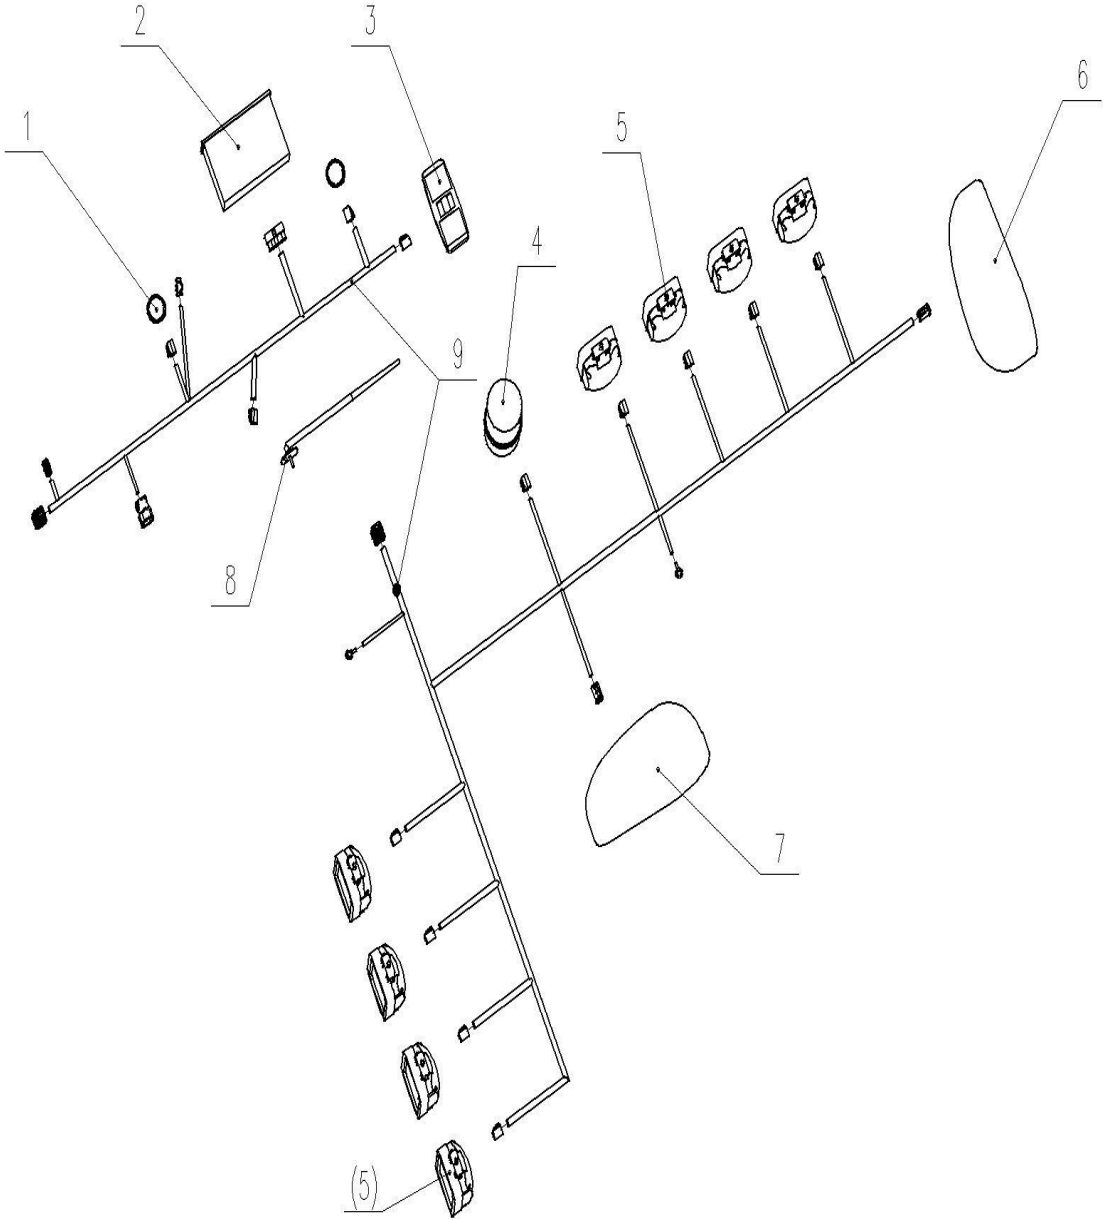

顶盖线路(12V)TOP COVER WIRING(12V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z062200011-38	Radio player horn	收放机喇叭	2	
2	B4610-66A030000	Radio player	收放机	1	
3	B4610-62A080000	dome light	顶灯	1	
4	W013500330	Warning lights	警示灯	1	
5	B4616-62A040000	Work lights	工作灯	8	
6	B4616-62A020000	Left front combination lamp	左前组合灯	1	
7	B4616-62A050000	Right front combination lamp	右前组合灯	1	
8	Z062200011-41	Radio player antenna	收放机天线	1	
9	WM16E	Top cover harness	顶盖线束	1	


底盘线路 CHASSIS WIRING (12V)

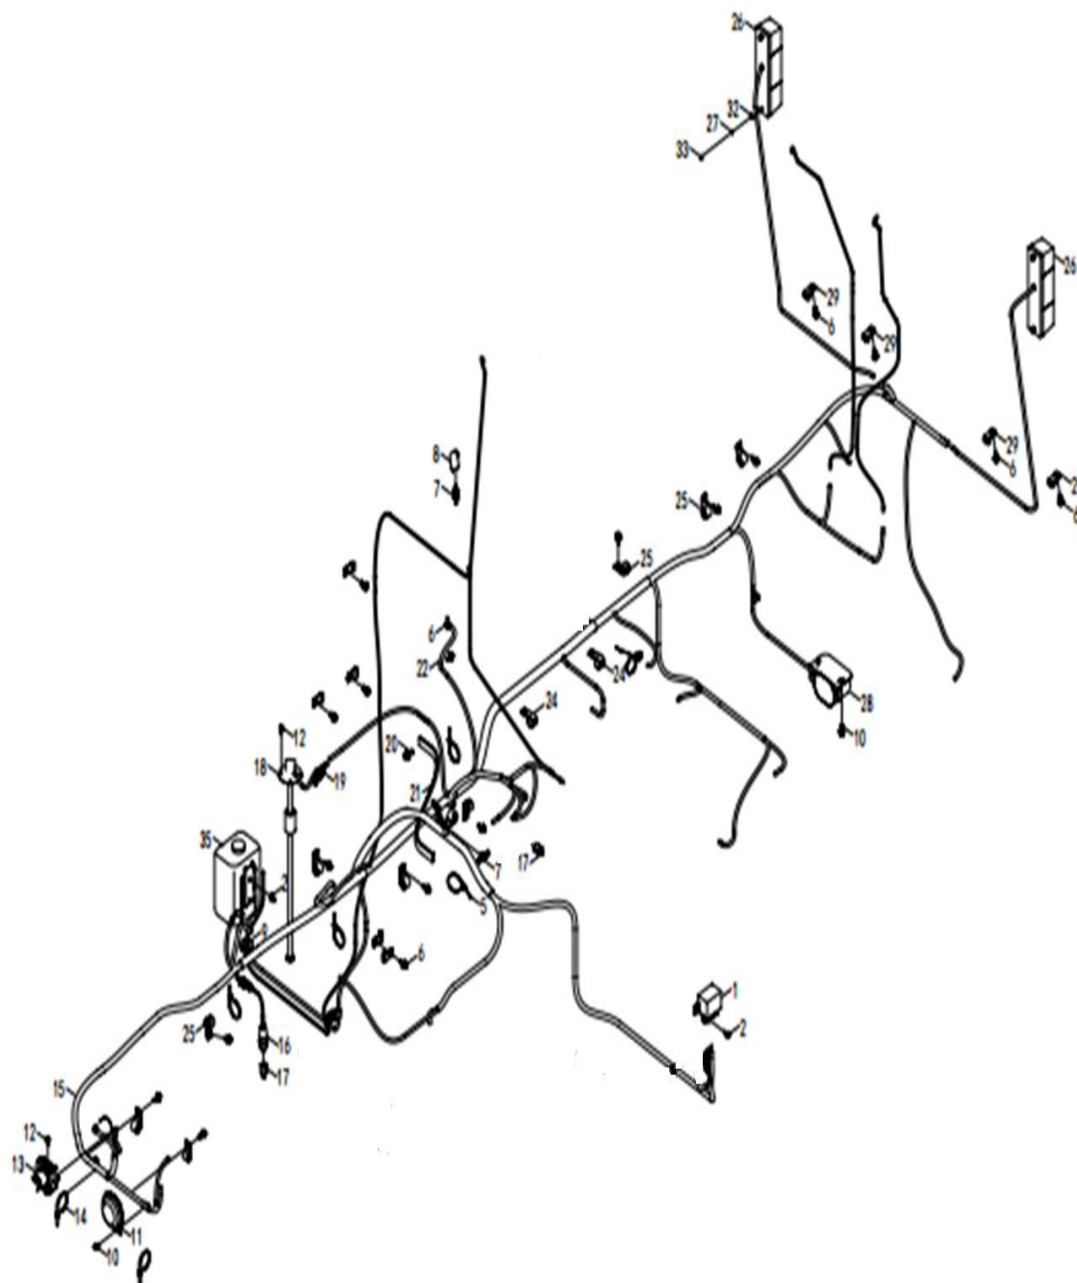

底盘线路 CHASSIS WIRING(12V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q' TY	备注 Rem ark
1	B4618-64A140000	150A Relay	150A 继电器	1	
2	GBT16674.1-M6X12-88-D0	Hexagon flange face bolt	六角法兰面螺栓	4	
5	QLWZG126-025120	Adjustable self-tightening plastic strap	可调节自紧式塑料扎带	7	
6	GBT16674.1-M8X16-8.8-D0	Hexagon flange face bolt	六角法兰面螺栓	22	
7	W013500970-7	Torque Converter Oil Temperature Sensor	变矩器油温传感器	2	
8	9F850-64A000002	Sheath	护套	2	
9	B4616-66A000005	Protective coil	护线圈	1	
10	GBT166741-M6X16-8.8-DC	Hexagon flange face bolt	六角法兰面螺栓	3	
11	B4616-64A110000	Electric homn	电喇叭	1	
12	GBT16674.1-M5X12-8.8-DC	Hexagon flange face bolt	六角法兰面螺栓	6	
13	B4610-64A100000	Power supply relay	电源继电器	1	
14	9F850-62A000001	Adjustable self-tightening plastic strap	可调节自紧式塑料扎带	8	
15	Z062210111	Chassis wiring harness	底盘线束	1	
16	W013500970-4	Oil pressure switch	机油压力开关	1	
17	W013900680	Transition joint	过渡接头	2	
18	W013500970-3	Liquid level sensor	液位传感器	1	
19	QLWZG102-00008	Pipe Clip	管夹	1	
20	GBT16674.1-M10X20-8.8-D	Small series of hexagon flange face bolts	六角法兰面螺栓 小系列	1	
21	Z593210340	Engine ground wire	发动机搭铁线	1	
22	9D652-64400000240	Cab ground wire	驾驶室搭铁线	1	
24	QLWZG102-00219	Pipe clamp	管夹	4	
25	QLWZG102-00116	Pipe clamp	管夹	6	
26	B4616-64A060000	Rear lamp	后尾灯	2	
27	GBT93-5-DC	Standard type spring washer	标准型弹簧垫圈	4	
28	9F565-64A120000	Reversing alarm	倒车报警器	1	
29	QLWZG102-00012	Pipe clamp	管夹	6	
32	GBT97.1-5-DC	Flat washer	平垫	4	
33	GBT6170-M5-8-DC	Type I hexagon nut	1 型六角螺母	4	
35	B4616-64A020000	Windscreen washer	风窗洗涤器	1	


仪表安装(12V) INSTRUMENT INSTALLATION(12V)

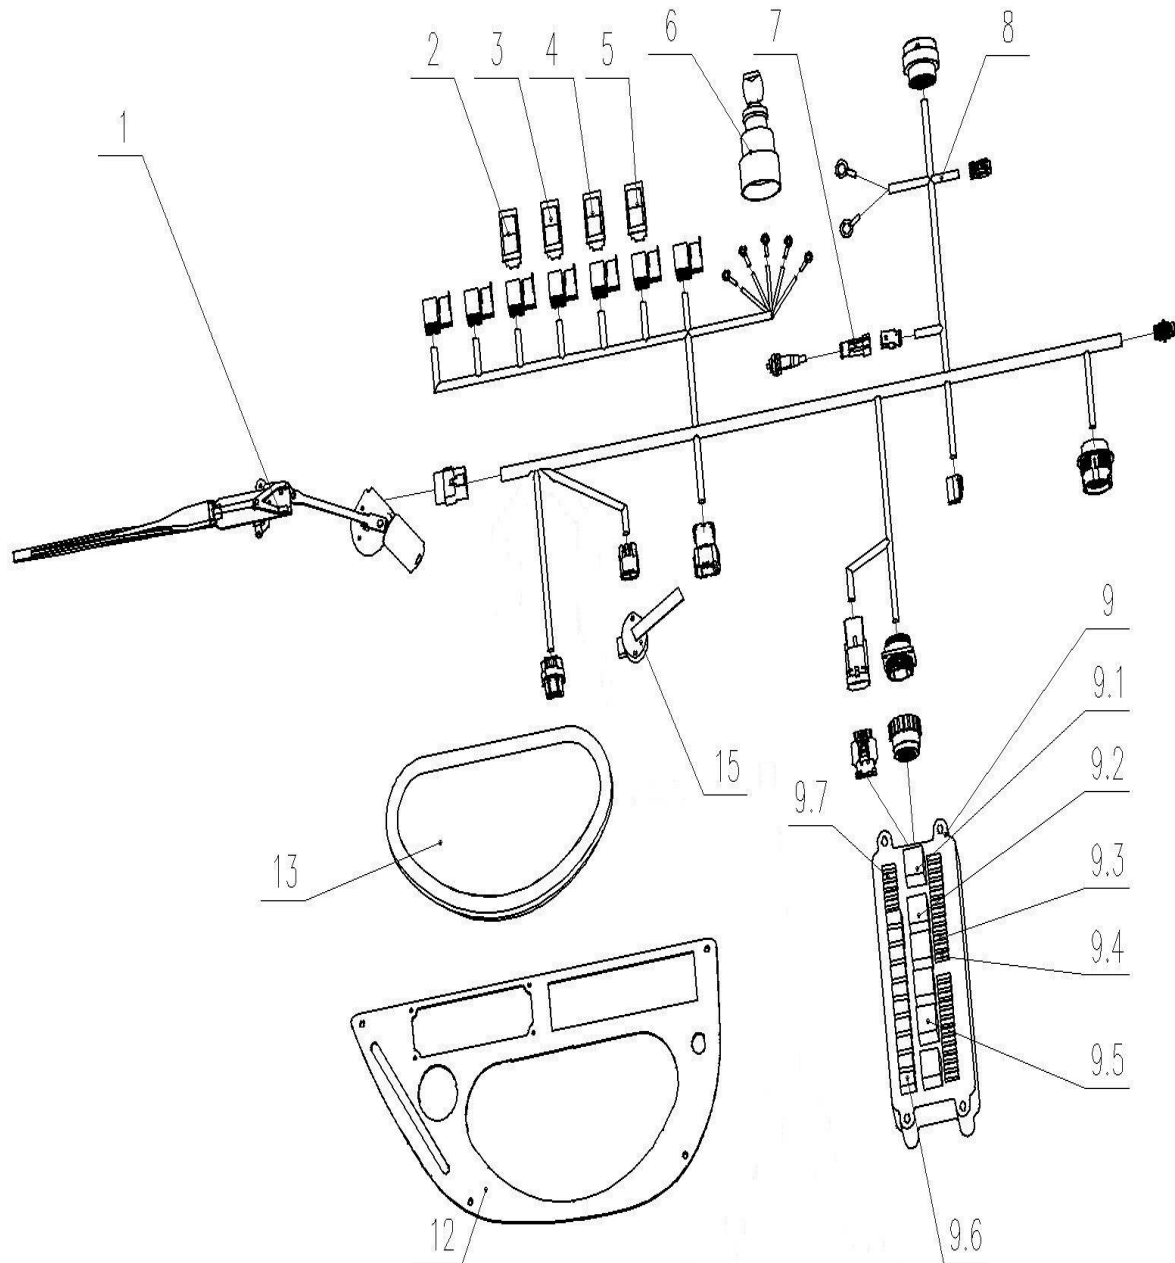

仪表安装(12V) INSTRUMENT INSTALLATION(12V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 QTY	备注 Remark
1	B4610-66A050000	REAR WIPER	后雨刮器	1	
2	9F853-69A050200	Warning light switch	警示灯开关	1	
3	9F853-69A090200	Rear wiper switch	后雨刮开关	1	
4	9F653-66G120000	Rear work light switch	后工作灯开关	1	
5	B4616-66A100000	Side shift switch	侧移开关	1	
6	9F850-66A050000	key switch	钥匙开关	1	
7	W013500762-2	Hand brake switch	手刹开关	1	
8	Z062210101	Instrument harness	仪表线束	1	
9	B4616-66A060000	Central control box	中央控制盒	1	
9.1	B4616-66A060001	Wiper intermittent relay	雨刮间歇继电器	1	
9.2	B4616-66A060002	Composite alarm flasher	复合报警闪光器	1	
9.3	W013500670-5	10Afuse	10A 保险片	11	
9.4	W013500670-6	20Afuse	20A 保险片	15	
9.5	B4616-	Relay	继电器	3	
9.6	66A060003B4616-	Relay	继电器	9	
9.7	66A060004	30Afuse	30A 保险片	3	
12	W013500670-7	Instrument mounting plate	仪表台面板	1	
13	Z063210117	Instrument panel assembly	仪表台总成	1	
15	W013500971	Hand throttle assembly	手油门总成	1	
	B4619-05A020000				


控制台线路(12V)CONSOLE LINE (12V)

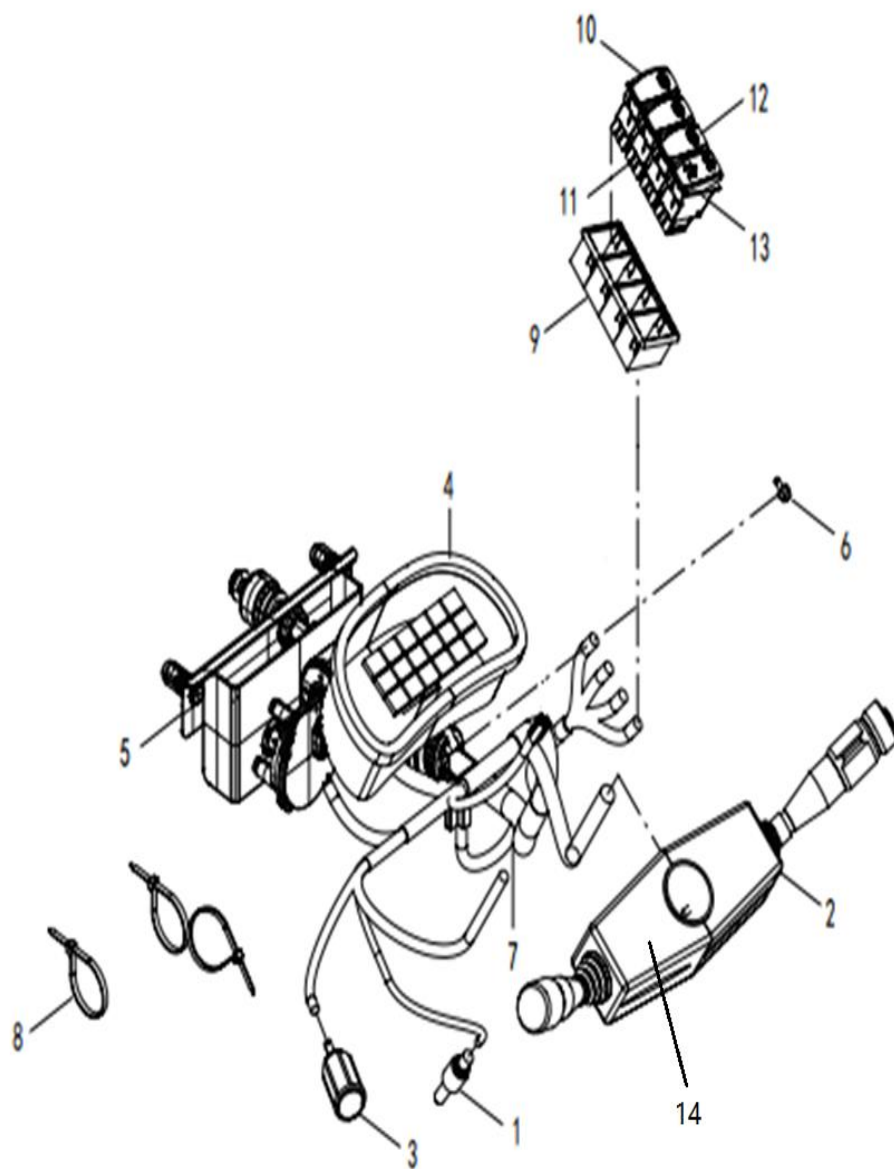

控制台线路(12V)CONSOLE LINE (12V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B4610-63A040000	Brake light travel switch	制动灯行程开关	1	
2	W013500410	Right switch	右侧开关	1	
3	B4610-66A040000	Power supply socket	电源插座	1	
4	B4616-63A050000	Front display panel	前显示面板	1	
5	B4616-63A030000	Front wiper assembly	前雨刮器总成	1	
6	B042520816	Hexagon flange face bolt	六角法兰面螺栓	1	
	Z062210091	Console wiring harness	控制台线束		
7	QLWZG126-025120	Adjustable self-tightening	可调节自紧式塑料扎	1	
8		plastic strap	带	3	
	9F850-66A000002	Quad rocker switch frame	四联翘板开关边框		
9	B4616-63A090000	Hazard Alarm Switch	危险报警开关	1	
10	B4616-63A080000	Light switch (transverse	灯光开关(横向)	1	
11	B4616-63A070000	Front working light switch	前工作灯开关(横向)	1	
12	B4616-63A100000	Fourdrive switch	四驱开关	1	
13	N300140190	Gear switch	档位开关	1	
14				1	


电瓶组系统 BATTERY CASSES SYSTEM

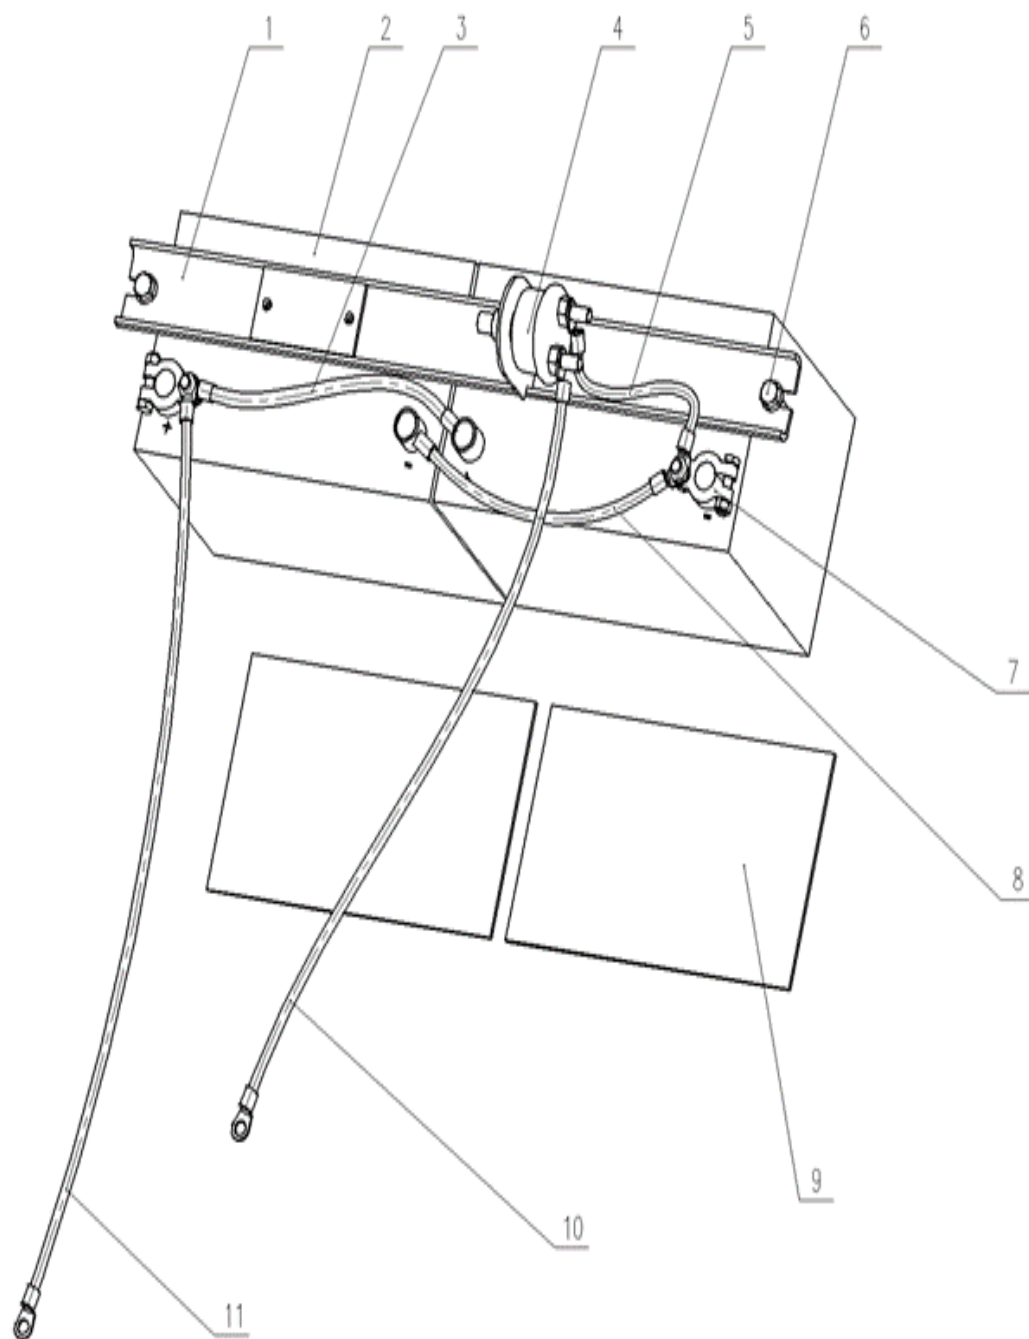

电瓶组系统 BATTERY CASSES SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z063210060	Battery Platen	电瓶压板	1	
2	W110001431	Batteries	蓄电池	2	
3	Z062210170	Battery wire	电瓶线	1	
4	W110000147	Main power switch	电源总开关	1	
5	Z050210060	Battery wire	电瓶线	1	
6	Z593210071	Double headed screw	双头螺柱	2	
7	W110001770	Battery holder	电瓶夹子	2	
8	Z062210180	Battery wire	电瓶线	1	
9	Z050210170	Shim Plate	垫板	2	
10	Z110180080	Battery wire	电瓶线	1	
11	Z593210360	Battery wire	电瓶线	1	

底盘液压系统(一) CHASSIS HYDRAULIC SYSTEM (ONE)

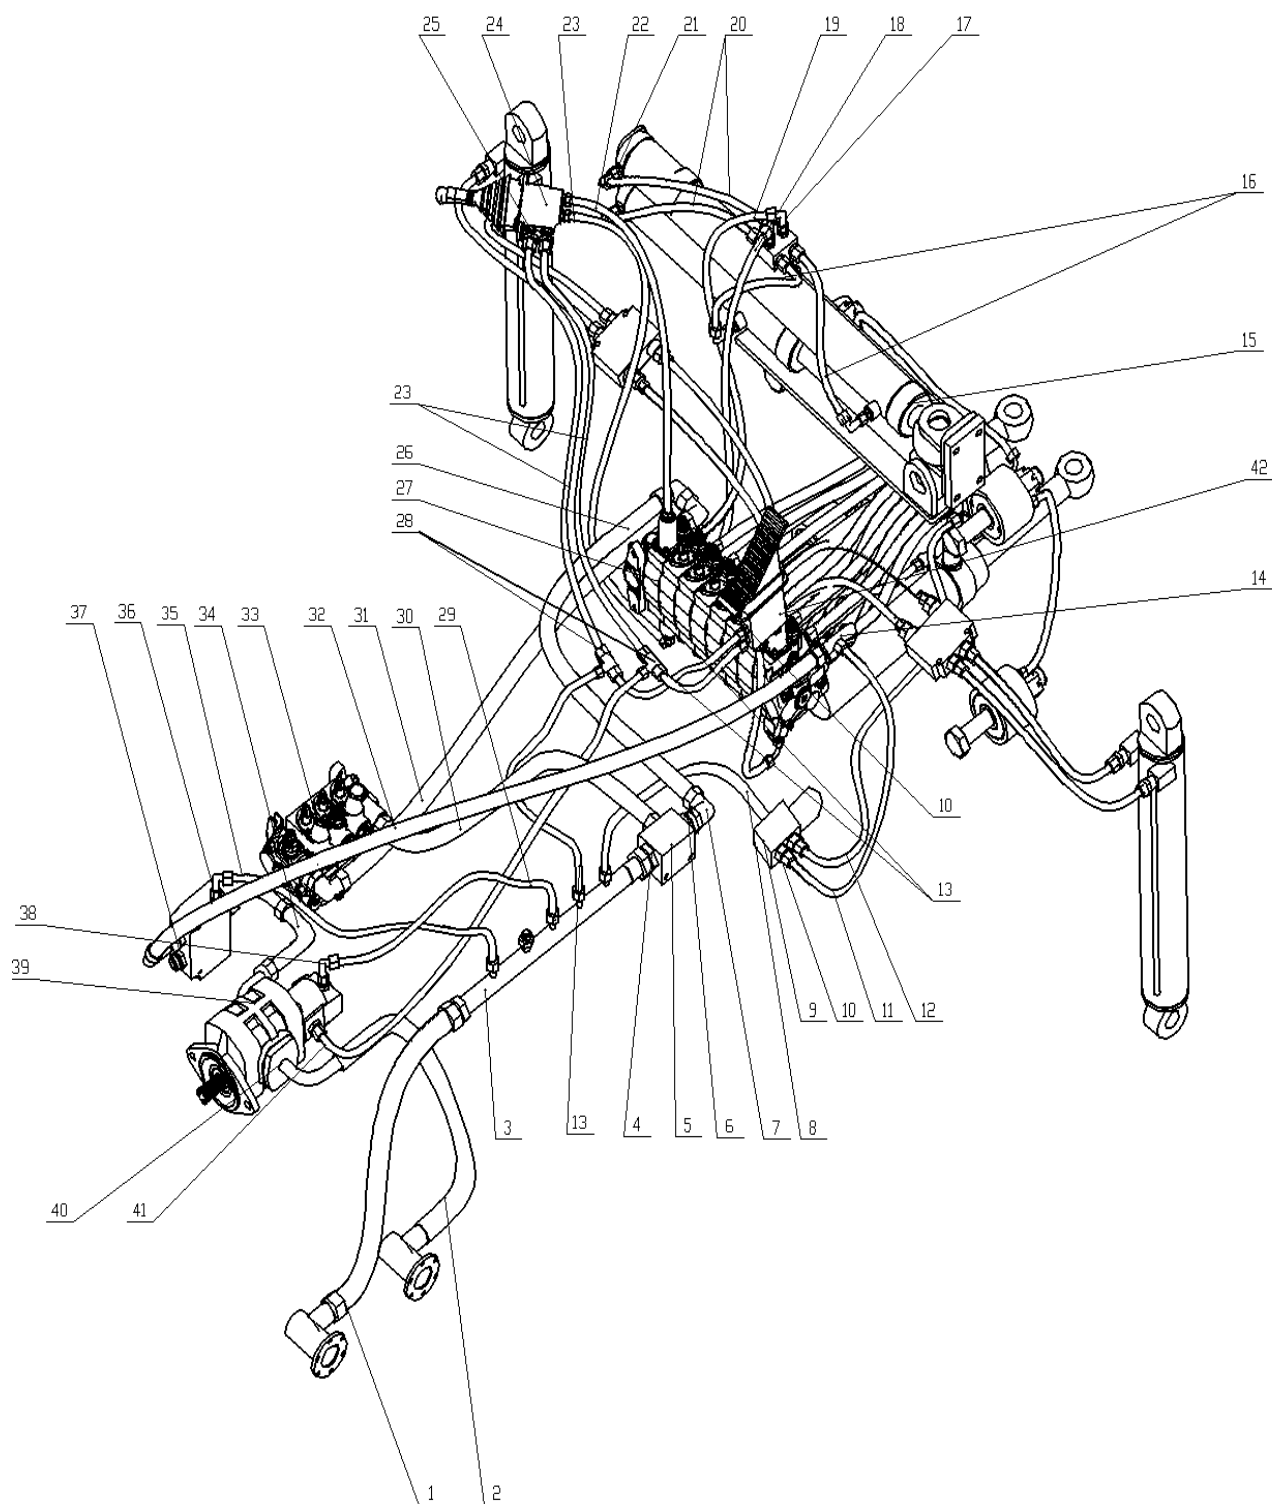


底盘液压系统(一) CHASSIS HYDRAULIC SYSTEM (ONE)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z064240225	Fuel tank return pipe	油箱回油管	1	
2	Z065060160	Pump suction pipe	泵吸油管	1	
3	Z064240362	Back to the tubing	回油管	1	
4	QLWZG074-004542	Direct connection	直通接头	1	
5	B4616-59A050001	Back to the oil block	后回油块	1	
6	QLWZG074-003642	Direct connection	直通接头	2	
7	QLWZG078-003636	Right Angle combination joint	直角组合接头	2	
8	Z064240280	Clamping valve return pipe	夹紧阀回油管	1	
9	W074200040	Clamp solenoid valve	夹紧电磁阀	1	
10	Z050251090	Joint	接头	7	
11	Z060250261	Pilot valve tubing	先导阀油管	1	
12	Z064240300	Pilot valve tubing	先导阀进油管	1	
13	Z064130300	Pilot valve tubing	先导阀进回油管	3	
14	Z064240160	Tap valve into oil nozzle	挖掘阀进油管	1	
15	W053025750	Sliding frame push-pull cylinder	滑架推拉缸	1	
16	Z064240600	Slip cylinder tubing 2	滑移缸油管 2	2	
17	QLWZG078-001616	Right Angle combination joint	直角组合接头	1	
18	Z0613820010	Slip cylinder inlet pipe 1	滑移缸进油管 1	1	
19	Z064300110	Slip cylinder inlet pipe 2	滑移缸进油管 2	1	
20	Z064300030	Pipe	液压锁油管	2	
21	W110003210	joint	接头	10	
22	Z050610110	Pilot valve tubing	先导阀进油管	1	
23	Z064300090	Pilot valve tubing	先导阀进油管	3	
24	W071900007	Monolithic pilot valve	单片先导阀	1	
25	Z050251090	Joint	过渡接头	4	
26	Z064240200	Excavate valve return pipe	挖掘阀回油管	1	
27	W076400005	Excavate the valve	挖掘阀	1	
28	Z050251320	Three-way connecto	三通接头	2	
29	Z050251470	tubing	先导阀进油管	1	
30	Z062240212	Working valve return pipe	工作阀回油管	1	
31	Z064240240	Work valve into the oil pipe	工作阀进油管	1	
32	Z065240100	Excavate valve into oil pipe	挖掘阀进油管	1	
33	W070300400	Load valve	装载阀	1	
34	Z062060170	Priority valve into the fuel line	优先阀进油管	1	
35	Z060250261	Pilot valve tubing	油管 II	1	
36	W110250960	Joint	过渡接头	1	
37	QLWZG074-003027	Joint	过渡接头	2	

SHANMON388T 挖掘装载机零部件图册
SHANMON388 TBackhoe loader parts catalog

38	QLWZG077-001614	Right angle adjustable joint	直角可调接头	1	
39	W060900001	Gear oil pump (double)	齿轮油泵(双联)	1	
40	Z065060130	Steering pump suction port	转向泵吸油口	1	
41	Z050610110	Pilot valve into the fuel line	先导阀进油管	1	
42	W071900006	Single-foot pilot valve	单脚踏式先导阀	1	


底盘液压系统(二) CHASSIS HYDRAULIC SYSTEM (TWO)

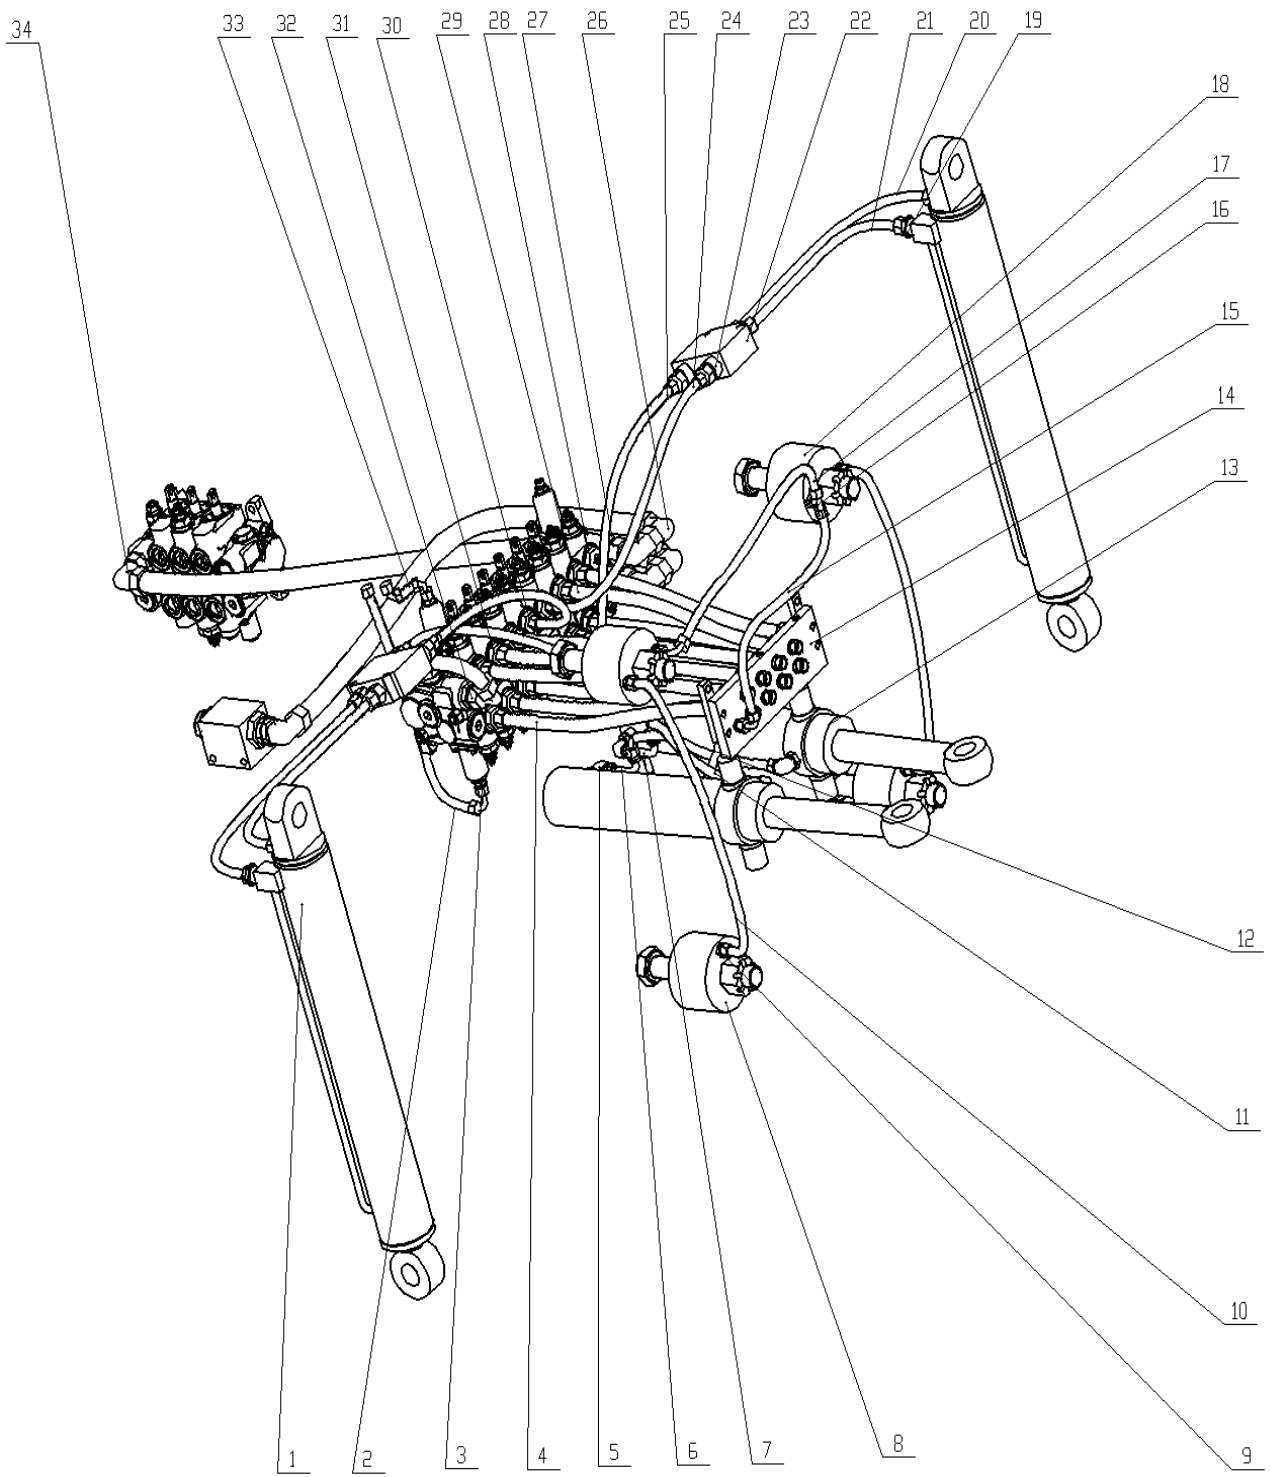

底盘液压系统(二) CHASSIS HYDRAULIC SYSTEM (TWO)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W053025040	Outtrigger jars	支腿缸	2	
2	Z050610070	Posterior lumen tubing	后腔油管	1	
3	QLWZG074-001614	Direct connection	直通接头	2	
4	Z062240700	Tubing	油管	8	
5	Z190180370	Direct connection	直通接头	4	
6	Z062241405	Left turn cylinder large cavity connector	左回转缸大腔接头	1	
7	Z062241455	Right rotary cylinder large cavity connector	右回转缸大腔接头	1	
8	W053025010	Clamping cylinder II	夹紧缸 II	2	
9	Z590190940	Transition joint	过渡接头	6	
10	Z050251051	Clamp tubing	夹紧油管	2	
11	Z062241483	Rotary cylinder tubing	回转缸油管	2	
12	Z062240693	Tubing 2	回转联出油管 2	2	
13	W053025175	Rotary cylinder	回转缸	2	
14	Z050420011	Oil Road block	油路块	1	
15	Z050250922	Clamp tubing	夹紧油管	1	
16	Z050251720	Three-way combined connector	三通组合接头	1	
17	Z050251012	Clamp cylinder tubing	夹紧缸油管	1	
18	W053025010	Clamping cylinder I	夹紧缸 I	2	
19	Z050251730	Transition joint	过渡接头	4	
20	Z064240600	Hydraulic lock tubing	液压锁油管	2	
21	Z064240620	Hydraulic lock tubing	液压锁油管	2	
22	W073025010	Two-way hydraulic lock	双向液压锁	2	
23	W110251890	Transition joint	接头	8	
24	Z062240721	Tubing	支腿联上出油管	2	
25	Z062240741	Direct connection	直通接头	2	
26	QLWZG078-003636	Tubin Right Angle	直角组合接头	2	
27	QLWZG074-003633	Direct connection	直通接头	2	
28	QLWZG074-001830	Direct connection	直通接头	2	
29	Z062240693	tubing	回转联出油管	2	
30	QLWZG074-001630	Direct connection	直通接头	4	
31	Z020100200	Direct connection	直通接头	8	
32	QLWZG074-003030	Direct connection	直通接头	3	
33	Z050610030	Tubing	油管	1	
34	QLWZG078-003030	Tubin Right Angle	直角组合接头	3	


挖掘液压系统(一) EXCAVATE THE HYDRAULIC SYSTEM (ONE)

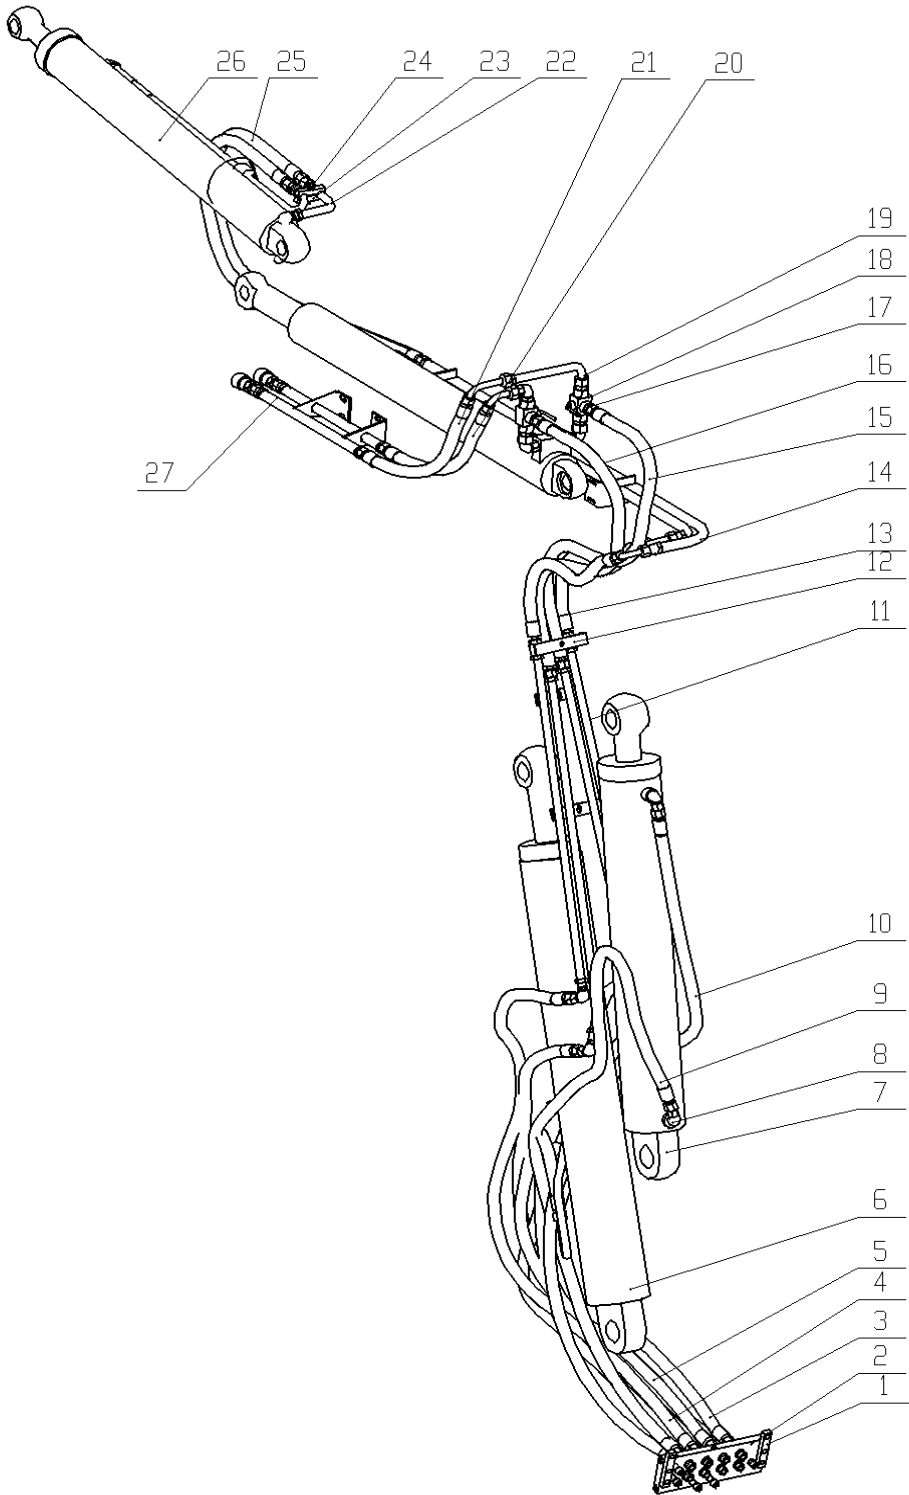

挖掘液压系统(一) EXCAVATE THE HYDRAULIC SYSTEM (ONE)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	Z050251045	Fixing plate	固定板	2	
2	Z050420011	Oil Road block	油路块	1	
3	Z062580115	Hard tubing tubing 1	硬管油管 1	3	
4	Z062580215	Hard tubing tubing3	硬管油管 3	1	
5	Z062580015	Boom cylinder large cavity tubing	大臂缸大腔油管	2	
6	W053025800	Big Arm cylinder	大臂缸	1	
7	W053025850	Bucket rod cylinder	斗杆缸	1	
8	Z060100580	Right angle adjustable joint	直角可调接头	4	
9	Z062580075	Large cavity into the tubing	大腔进油管	1	
10	Z062580095	Small cavity into the tubing	小腔进油管	1	
11	Z062580135	Middle hard tube	中间硬管	1	
12	Z062580510	Pipe clamp plate	管卡板	1	
13	Z062580275	Tubing	进油管	2	
14	Z062580290	Excavate hard oil pipe into cylinder	挖掘缸进油硬管	1	
15	Z062580535	Tubing	油管	2	
16	Z062580255	Tubing	进油管	1	
17	Z350170030	Joint	接头	4	
18	W079600055	Three-way ball valve	三通球阀	2	
19	Z062880035	Flex and break hard pipe	伸缩破碎硬管	1	
20	Z062880010	Tubing	油管	1	
21	Z062880050	Tubing	油管	1	
22	Z061250925	Excavate cylinder large cavity hard tube	挖掘缸大腔硬管	1	
23	Z061250955	Pipe Card	管卡	1	
24	B042520835	Transition joint	螺栓 M8×35	2	
25	Z062250050	Excavate the cylinder	挖掘缸进油管	2	
26	W053025055	Direct connection	挖掘缸	1	
27	Z050380402	Additional device hard tube	附加装置硬管	1	


挖掘液压系统（二） EXCAVATE THE HYDRAULIC SYSTEM（TWO）

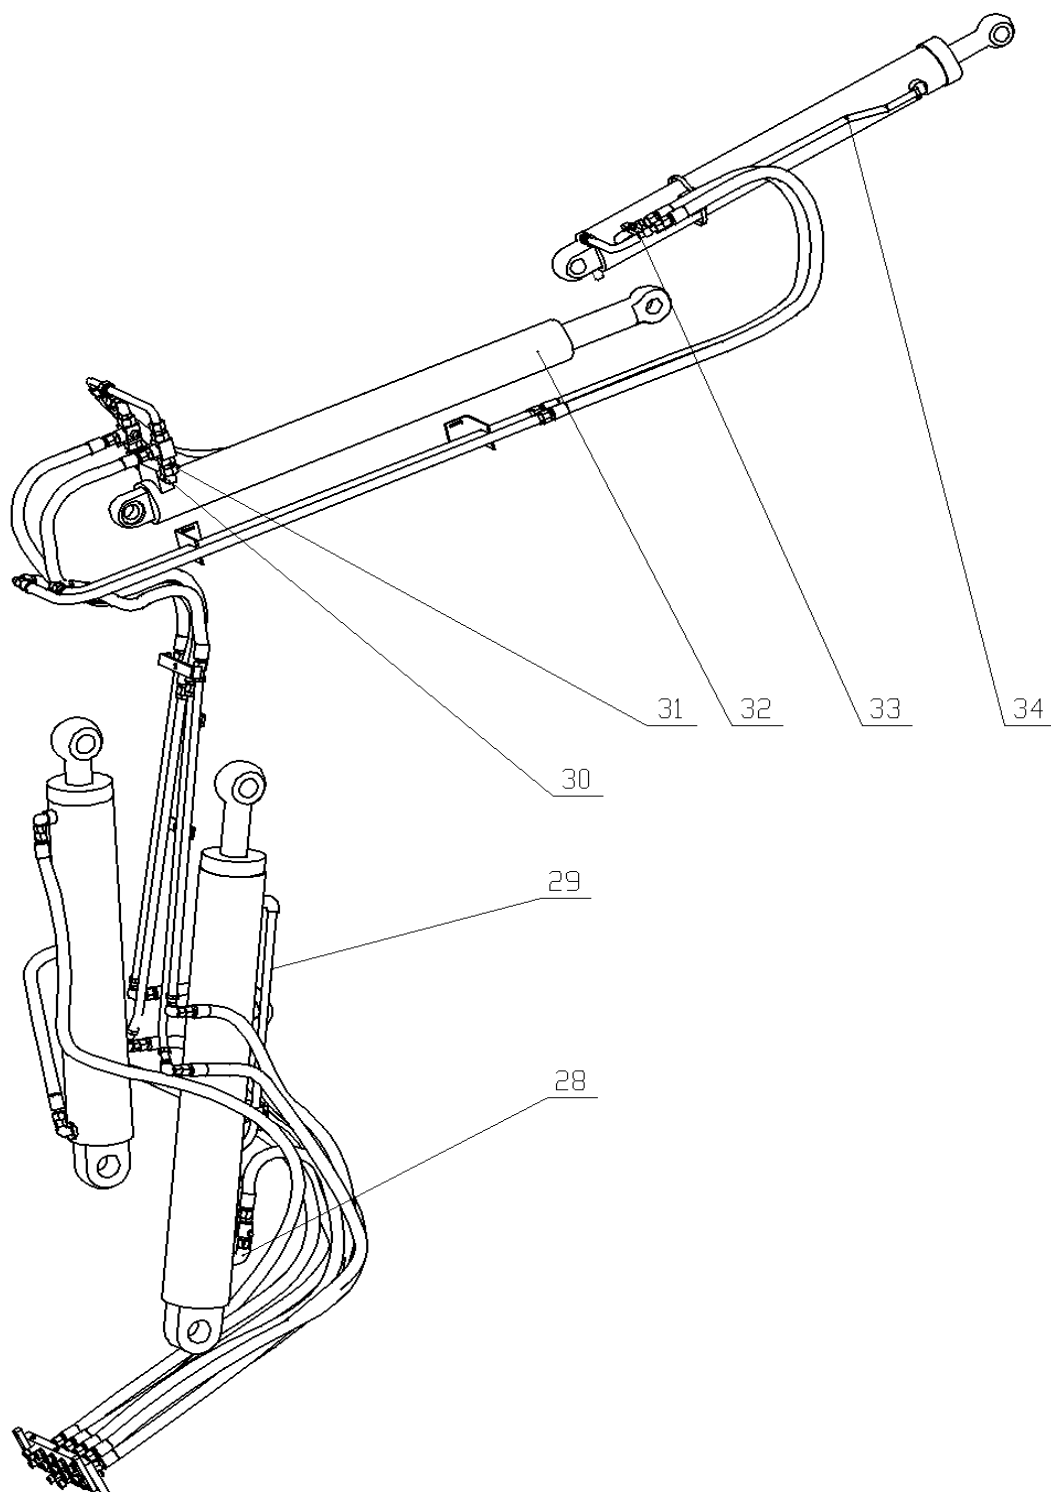

挖掘液压系统（二） EXCAVATE THE HYDRAULIC SYSTEM（TWO）

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
28	Z062580035	Arm cylinder large cavity hard tube	大臂缸大腔硬管	1	
29	Z062580055	Big arm cylinder small lumen hard tube	大臂缸小腔硬管	1	
30	Z060100580	Right angle adjustable joint	直角可调接头	1	
31	Z061250850	Transition joint	过渡接头	1	
32	W053025151	Retractable cylinder	伸缩油缸	1	
33	Z061250945	Pressure Plate	压板	1	
34	Z061250526	Small lumen hard tube	挖掘缸小腔硬管	1	


挖掘阀支架 BACKHOE VALVE FRAME

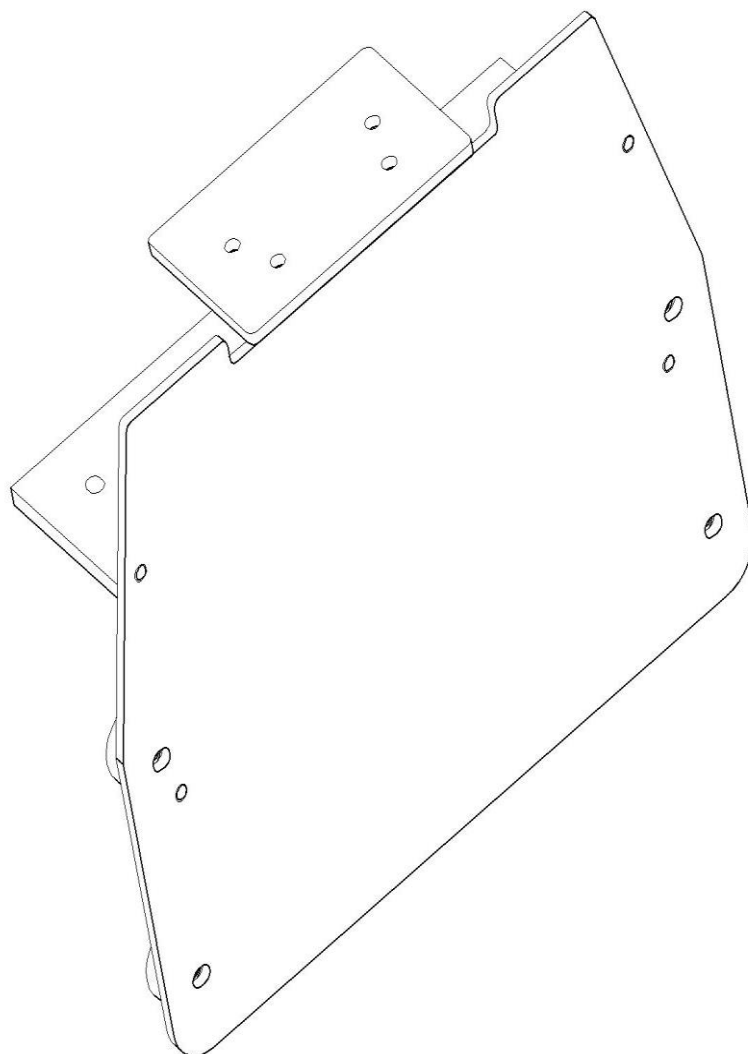

挖掘阀支架 BACKHOE VALVE FRAME

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z065240010	Excavate the control valve bracket	挖掘控制阀支架	1	


油缸及阀 CYLINDER AND VALVE

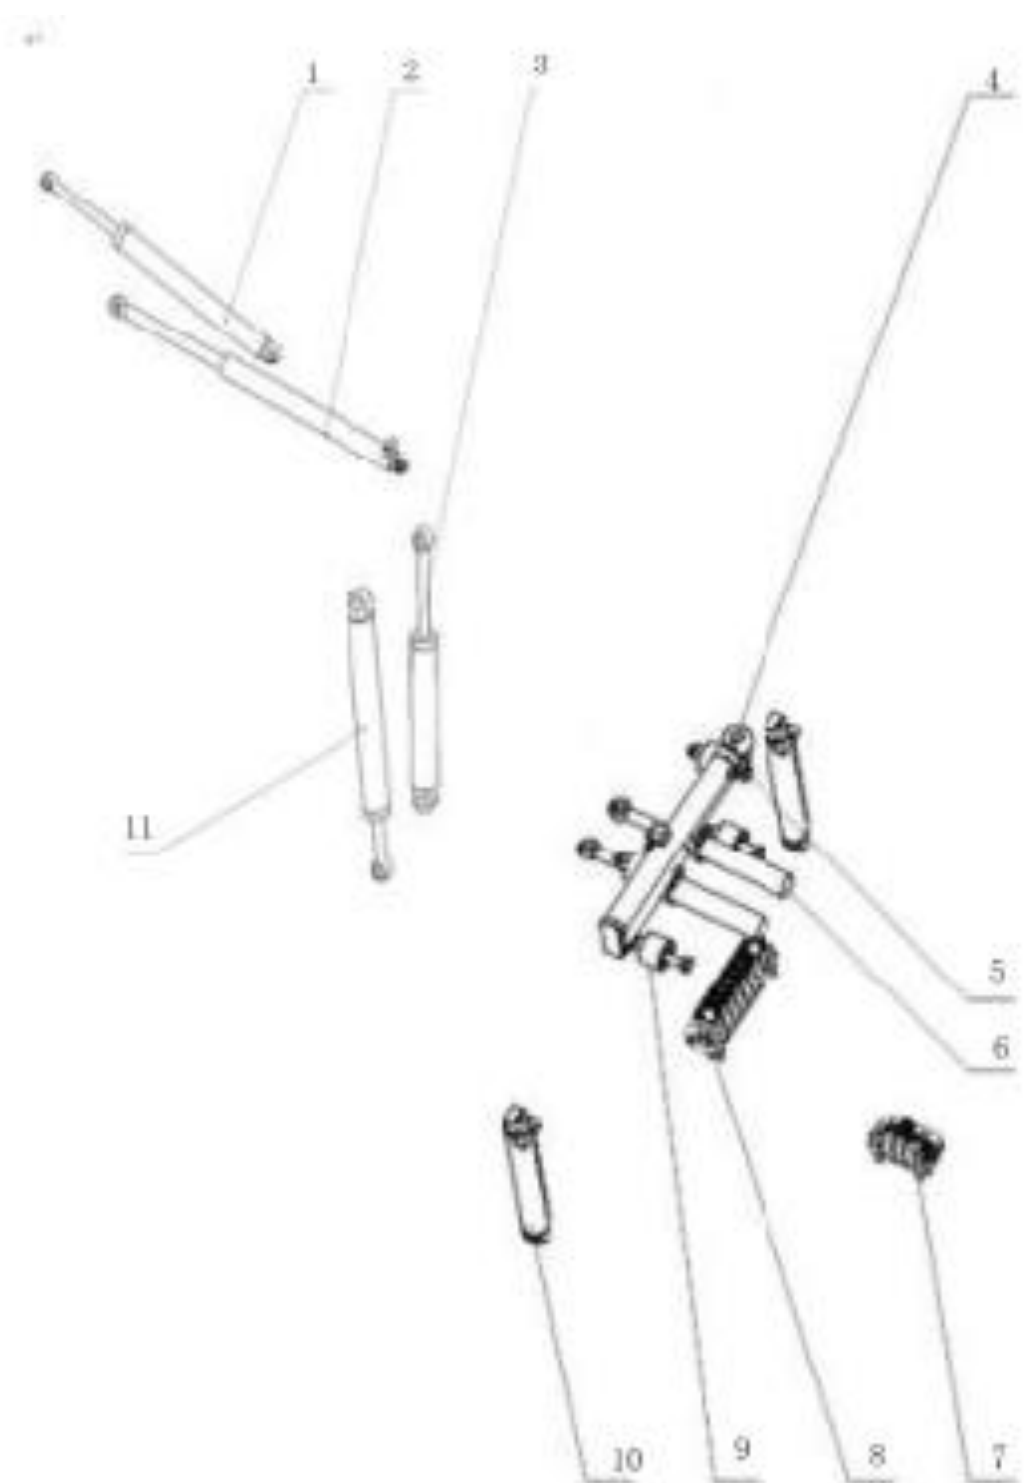

油缸及阀 CYLINDER AND VALVE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W053025055	Excavate the cylinder	挖掘缸	1	
2	W053025151	Retractable cylinder	伸缩油缸	1	
3	W053025850	Excavate the cylinder	斗杆缸	1	
4	W053025750	Sliding frame push-pull cylinder	滑架推拉缸	1	
5	W053025010	Clamping cylinder I	夹紧缸I	2	
6	W053025175	Rotary cylinder	回转缸	2	
7	W070300400	Triple loading valve	三联装载阀	1	
8	W076400005	Excavate the valve	挖掘阀	1	
9	W053025100	Clamping cylinderII	夹紧缸II	2	
10	W053025040	Outtrigger jars	支腿缸	2	
11	W053025800	Big Arm cylinder	大臂缸	1	

挖掘阀总成 BACKHOE VALVE ASSEMBLY

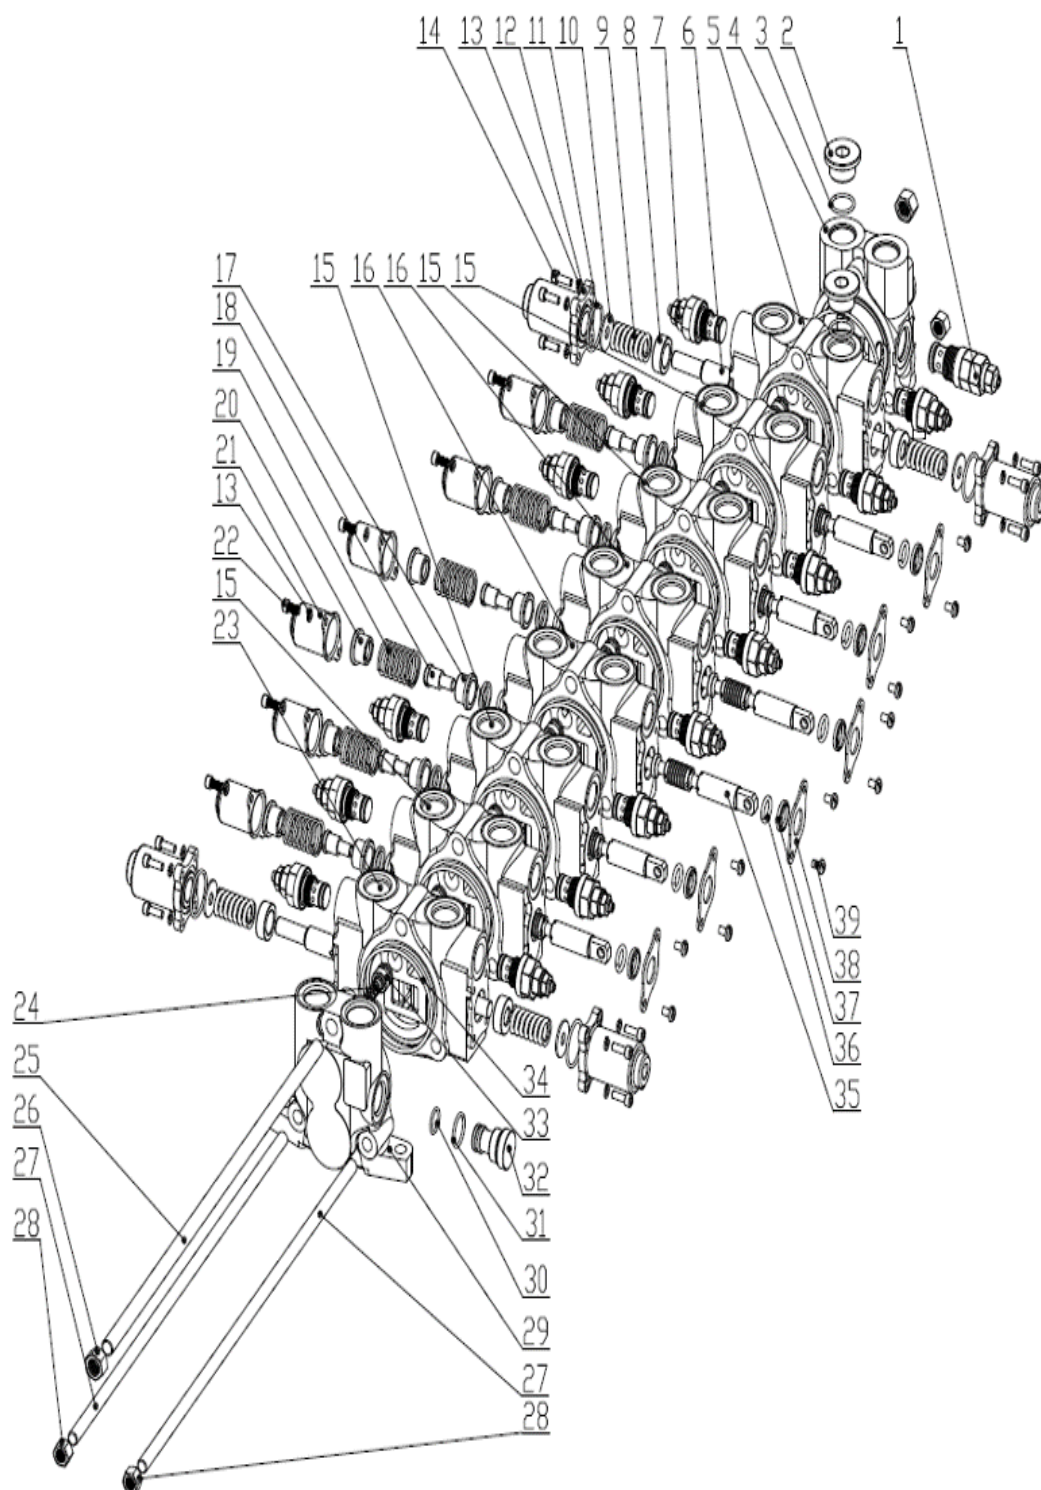


挖掘阀总成 BACKHOE VALVE ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W070400009-17	Main Relief Valve	主溢流阀	1	
2	W070400009-1	Screw plug	螺塞	3	
3	B160121290	O-ring 26.6X2.9	O 型圈/26.6x2.9	3	
4	W070400009-2	Inlet valve body	进油阀体	1	
5	W076400020-1	Valve Body	阀体	1	
6	W076400020-2	O-stem	O 型阀杆	2	
7	W070400009-14	Secondary Relief Valve	二次溢流阀	14	
8	W076400020-3	Spring seat	弹簧座	4	
9	W076400020-4	Spring	弹簧	4	
10	W076400020-5	Limit Gasket	限位垫片	4	
11	B160110345	O-ring 34.5X2.65	O 型圈/34.5x2.65	4	
12	W074200020-6	End Cap II	端盖II	4	
13	B060110602	PAD/6	弹垫/6	28	
14	B010410618	Hexagon socket screw/M6X18	内六角螺 M6x18	16	
15	W070400009-4	Valve Body	阀体	4	
16	W076400020-7	Valve Body	阀体	2	
17	W070400009-5CDB	Spring seat	弹簧座	6	
18	W070400009-18	Setting screw	定位螺钉	6	
19	W070400009-22	Spring	弹簧	6	
20	W070400009-7	Spring seat	弹簧座	6	
21	W070400009-8	Positioning end cap	定位端盖	6	
22	B010410614	Hexagon socket screw/M6X14	内六角螺钉	12	
23	W076400020-8	Valve Body	阀体	1	
24	W070400009-12	Spring	弹簧	8	
25	W076400020-12B05	Stud Bolt/M14X1.5X525	双头螺栓	1	
26	B050411412	Nut M14X1.5	螺母/M14x1.5	2	
27	W076400020-13	Stud Bolt/M12X1.25X525	双头螺栓/M12x1	2	
28	B050410001	Nut M12X1.25	螺母/M12x1.25	4	
29	W076400020-9	Return valve body	回油阀体	1	
30	B160131222	O-ring 22X2.4	O 型圈/22x2.4	1	
31	B160120236	O-ring 23.6X2.65	O 型圈/23.6x2.65	1	
32	W076400020-10	Screw plug	螺塞	1	
33	W070400009-13	Check Valve	单向阀	8	
34	B160110875	O-ring 87.5X3.55	O 型圈/87.5x3.55	9	
35	W076400020-11	O-stem	O 型阀杆	6	
36	B160121185	O-ring 18.64X3.53	O 型圈	12	
37	W070400009-21	Nylon retainer/25x3.2	尼龙挡圈/25x3.2	12	
38	W070400009-15GB	Backing Plate	垫板	12	

SHANMON388T 挖掘装载机零部件图册
SHANMON388 TBackhoe loader parts catalog

39	B010510610	Half Dome Head Screw/M6X10	半圆头螺钉 /M6x10	12	
----	------------	-------------------------------	-----------------	----	--


回转油缸 SWING CYLINDER

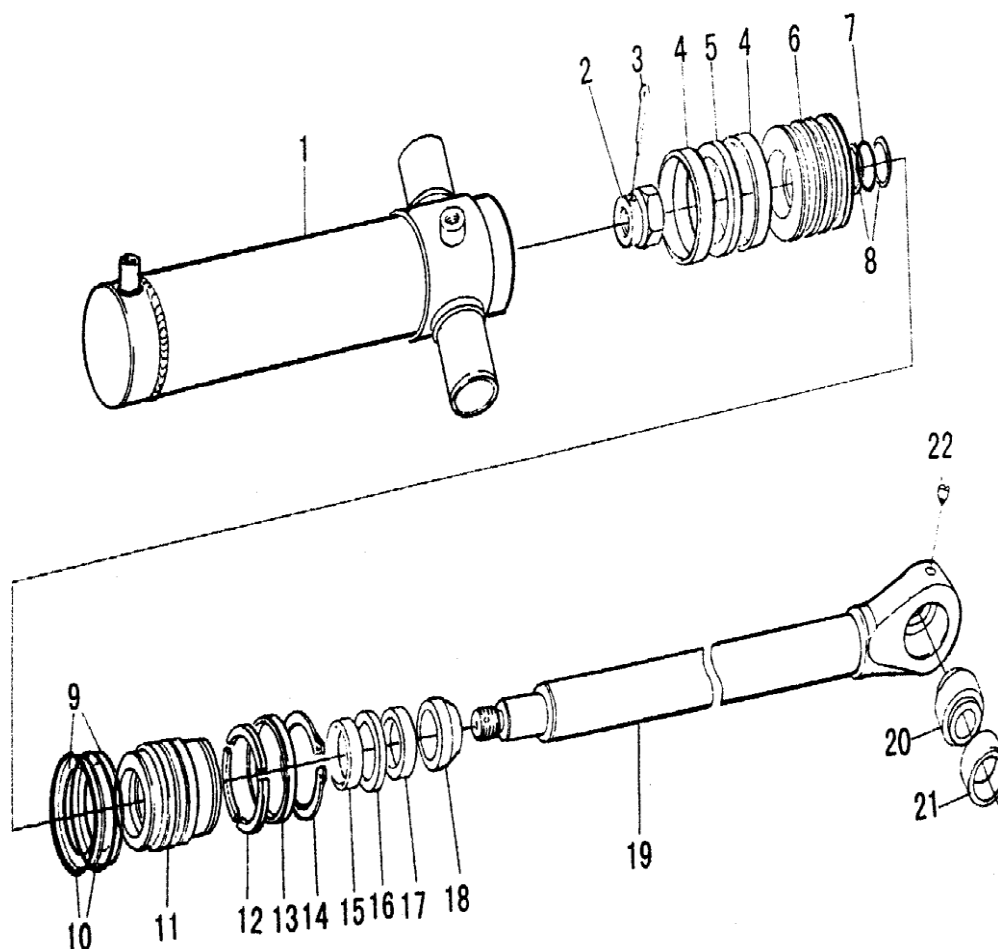

回转油缸 SWING CYLINDER

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W053025175-1	Cylinder block assembly	缸体组件	1	
2	W053025175-2	Lock nut	锁紧螺母	1	
3	W053025175-3	Pin	开口销	1	
4	W053025175-4	Guide ring	导向环	2	
5	W053025176-1.1	Circle of Grays	格莱圈	1	
6	W053025175-6	Piston	活塞	1	
7	B160130316	O-ring 32.5X2.65	O 型圈 32.5X2.65	1	
8	W053025175-8	Block Circle D32X27X1.5	挡圈 D32X27X1.5	1	
9	W053025175-9	Block Circle D80X75X1.5	挡圈 D80X75X1.5	2	
10	B160131020	O-ring 100X2.65	O 型圈 100X2.65	2	
11	W053025175-11	Guide sleeve	导向套	1	
12	W053025175-12	Snap key	卡键	3	
13	W053025175-13	Block sleeve	挡套	1	
14	W053025175-14	Axle collar	轴用挡圈	1	
15	W053025175-15	Axle collar	导向环	1	
165	W053025176-1.2	Steé Feng	斯特封	1	
17	W053025176-1.3	U-RING	U 型密封圈	1	
18	W053025176-1.4	Dust Ring	防尘圈	1	
19	W053025175-19	Piston rod	活塞杆	1	
20	B120524028	Joint Bearing 40	关节轴承 40	1	
21	B070156202	Block sleeve 62	挡圈 62	1	
22		Oil Cup	油杯	1	
	W053025176	Sealed package	密封包	1	


挖掘缸 BACKHOE CYLINDER

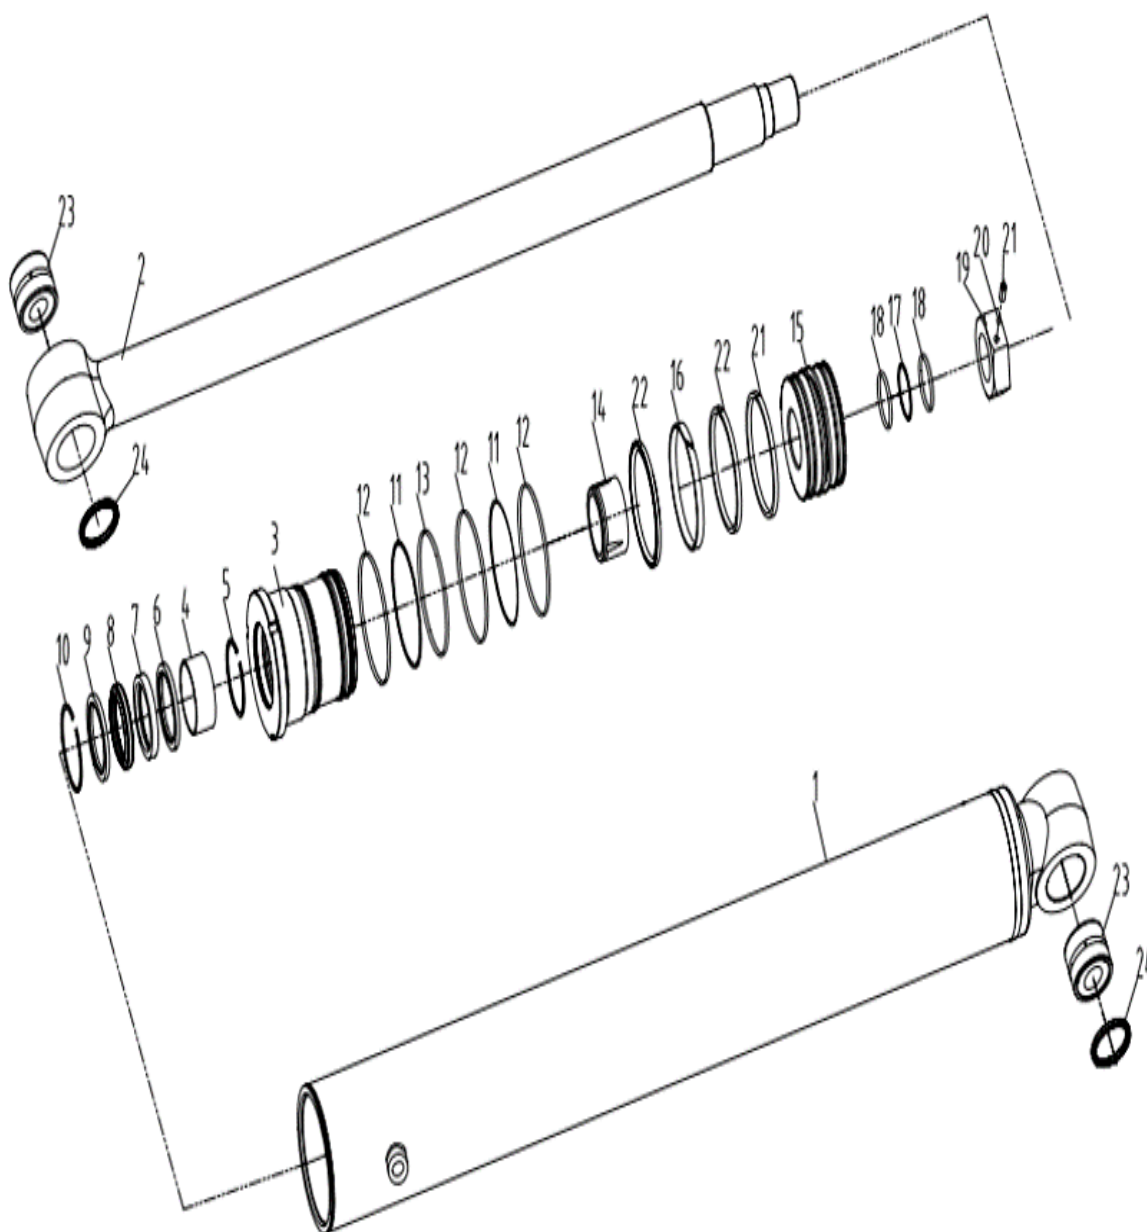

挖掘缸 BACKHOE CYLINDER

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W053025055-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025055-3	Piston rod assembly	活塞杆总成	1	
3	W053025055-4	Cylinder head	缸盖	1	
4	W053025055-5	Bushings	衬套	1	
5	W053025055-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025051-1.1	Seals-buffers	密封件-缓冲	1	
7	W053025051-1.2	Seals-piston rod	密封件-活塞杆	1	
8	W053025051-1.3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025051-1.4	Seals-dust proof	密封件-防尘	1	
10	W053025055-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160110840	O-rings	O 形圈 84.4X3.1	2	
12	W053025055-8	Stop ring-o-ring	挡圈-O 形圈	3	
13	B160120900	O- Ring	O 形圈 90X2.65	1	
14	W053025055-9	Buffer sleeve	缓冲套	1	
15	W053025055-10	Piston	活塞	1	
16	W053025051-1.5	Seals-piston rod	密封件-活塞	1	
17	B160110346	O- Ring	O 形圈 34.4X3.1	1	
18	W053025055-11	Stop ring-o-ring	挡圈-O 形圈	2	
19	W053025055-12	Piston back mother	活塞背母	1	
20	W053025055-16	Steel Ball	钢球	1	
21		Screw	螺钉	2	
22	W053025055-18	Support Ring	支承环	1	
23	B120524028	Joint Bearing	关节轴承 40	2	
24	B070156202	Elastic retaining ring	弹性挡圈 62	2	
25	W053025051	Seal repair kit	密封件维修包	1	


斗杆油缸 CROWD CYLINDER

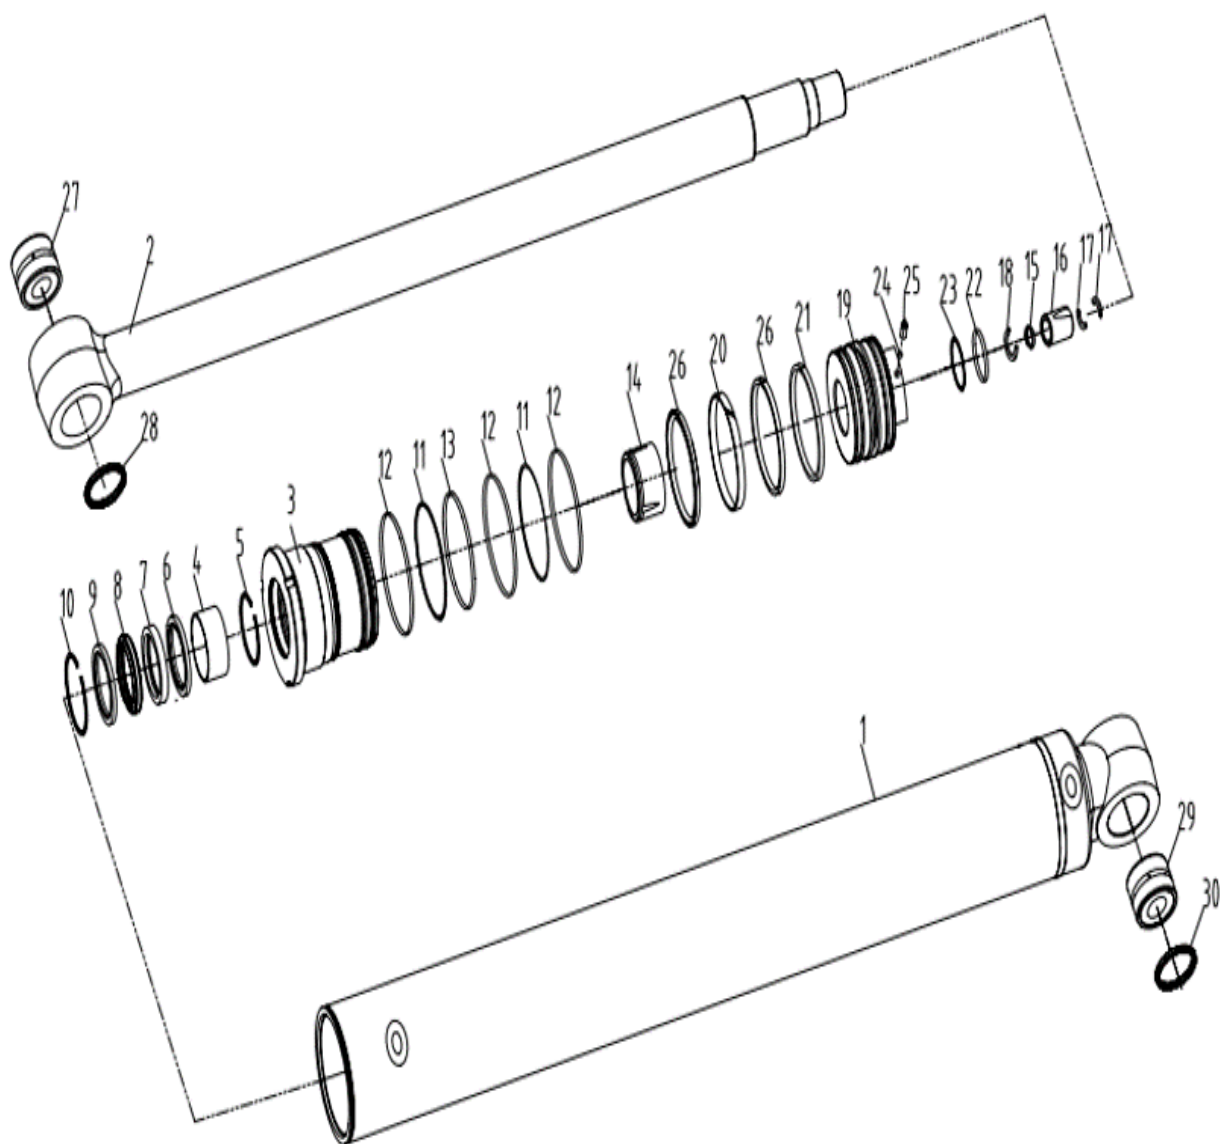

斗杆油缸 CROWD CYLINDER

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W053025850-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025850-3	Piston rod assembly	活塞杆总成	1	
3	W053025850-4	Cylinder head	缸盖	1	
4	W053025850-5	Bushings	衬套	1	
5	W053025850-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025850-1.1	Seals-buffers	密封件-缓冲	1	
7	W053025850-1.2	Seals-piston rod	密封件-活塞杆	1	
8	W053025850-1.3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025850-1.4	Seals-dust proof	密封件-防尘	1	
10	W053025850-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160131190	O-rings	O 形圈 19.4X3.1	2	
12	W053025850-8	Stop ring-o-ring	挡圈-O 形圈	3	
13	B160131252	O- Ring	O 形圈 125X2.65	1	
14	W053025850-9	Buffer sleeve	缓冲套	1	
15	W053025850-1.5	Air Cushion Seal	气垫密封	1	
16	W053025850-10	Buffer sleeve	缓冲套	1	
17	W053025850-11	Stop rings	止动环	2	
18	W053025850-12	Stop rings	止动环	1	
19	W053025850-13	Piston	活塞	1	
20	W053025850-1.6	Seals-piston rod	密封件-活塞	1	
21	W053025850-14	Environmental pollution	纳污环	1	
22	B160110346	O- Ring	O 形圈 34.4X3.1	1	
23	W053025850-15	Stop ring-o-ring	挡圈-O 形圈	1	
24	W053025850-16	Steel Ball	钢球	1	
25		Screw	螺钉	1	
26	W053025850-18	Support Ring	支承环	2	
27	B120525035	Joint Bearing	关节轴承 50	1	
28	B070157503	Elastic retaining ring	弹性挡圈 75	1	
29	B120526044	Joint Bearing	关节轴承 60	1	
30	B070159003	Elastic retaining ring	弹性挡圈 90	1	
31	W053025850-1	Seal repair kit	密封件维修包	1	


大臂油缸 BOOM CYLINDER

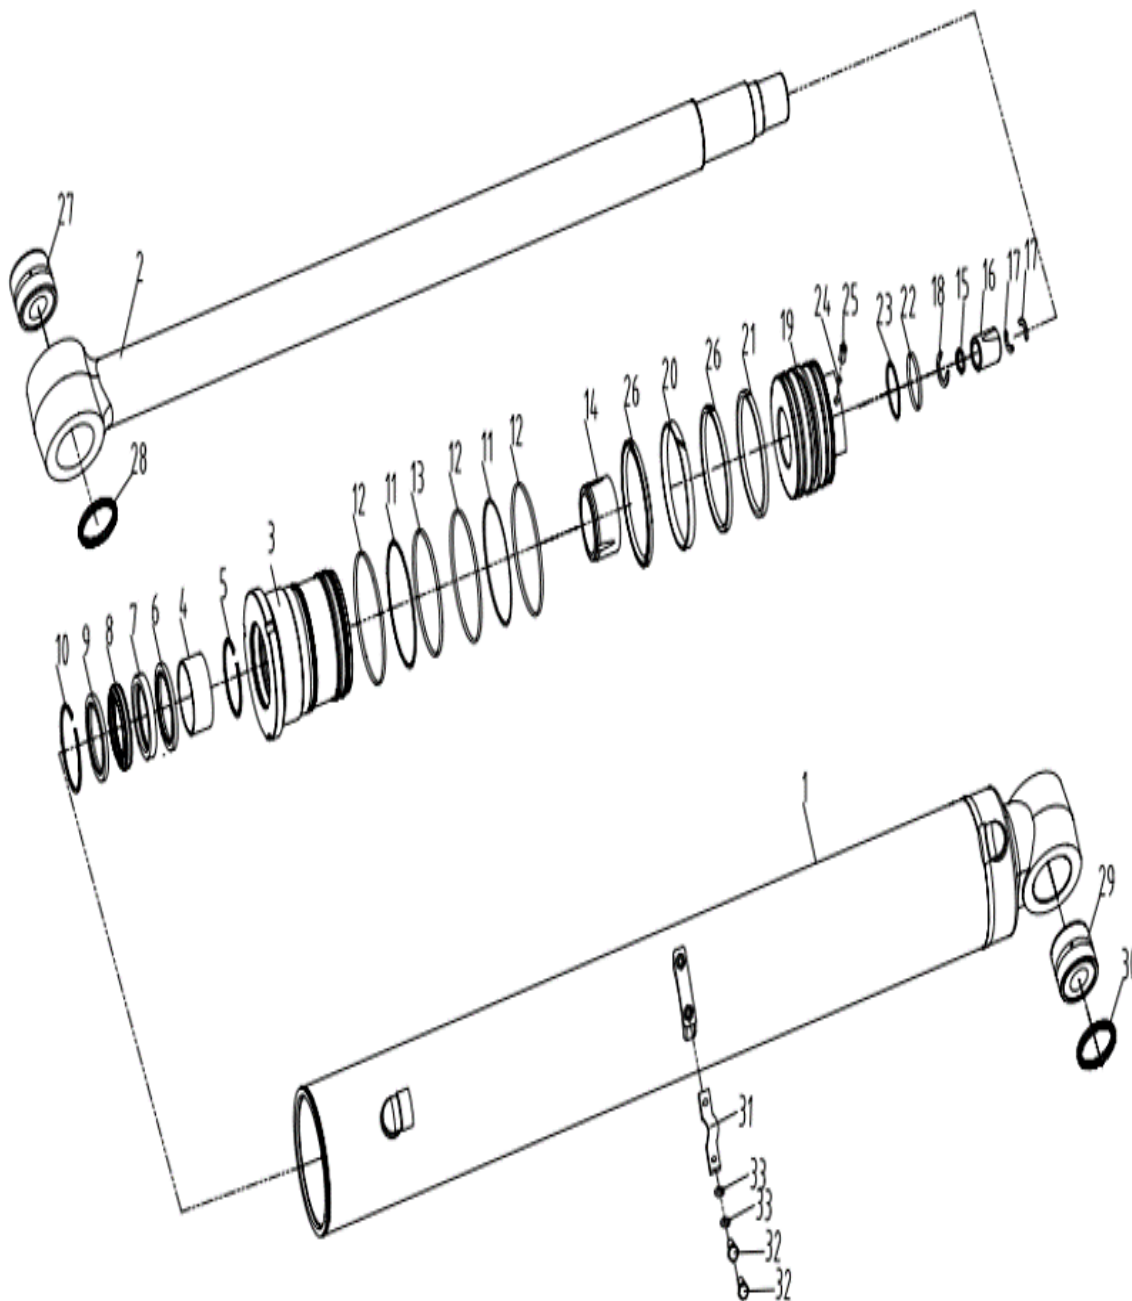

大臂油缸 BOOM CYLINDER

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W053025800-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025800-3	Piston rod assembly	活塞杆总成	1	
3	W053025800-4	Cylinder head	缸盖	1	
4	W053025800-5	Bushings	衬套	1	
5	W053025800-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025800-1.1	Seals-buffers	密封件-缓冲	1	
7	W053025800-1.2	Seals-piston rod	密封件-活塞杆	1	
8	W053025800-1.3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025800-1.4	Seals-dust proof	密封件-防尘	1	
10	W053025800-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160131190	O-rings	O 形圈 119.4X3.1	2	
12	W053025800-8	Stop ring-o-ring	挡圈-O 形圈	3	
13	B160131252	O- Ring	O 形圈 125X2.65	1	
14	W053025800-9	Buffer sleeve	缓冲套	1	
15	W053025800-1.5	Air Cushion Seal	气垫密封	3	
16	W053025800-10	Buffer sleeve	缓冲套	1	
17	W053025800-11	Stop rings	止动环	2	
18	W053025800-12	Stop rings	止动环	1	
19	W053025800-13	Piston	活塞	1	
20	W053025800-1.6	Seals-piston rod	密封件-活塞	1	
21	W053025800-14	Environmental pollution	纳污环	1	
22	B160110346	O- Ring	O 形圈 34.4X3.1	1	
23	W053025800-15	Stop ring-o-ring	挡圈-O 形圈	1	
24	W053025800-16	Steel Ball	钢球	1	
25		Screw	螺钉	1	
26	W053025800-18	Support Ring	支承环	2	
27	B120525035	Joint Bearing	关节轴承 50	1	
28	B070157503	Elastic retaining ring	弹性挡圈 75	1	
29	B120526044	Joint Bearing	关节轴承 60	1	
30	B070159003	Elastic retaining ring	弹性挡圈 90	1	
31	W053025800-19	Pipe Clip	管夹	1	
32	B040710816	Bolts	螺栓 M8×16	2	
33	B061620816	Gasket	垫片	2	
34	W053025800-1	Seal repair kit	密封件维修包	1	


支腿油缸 STABILIZER CYLINDER

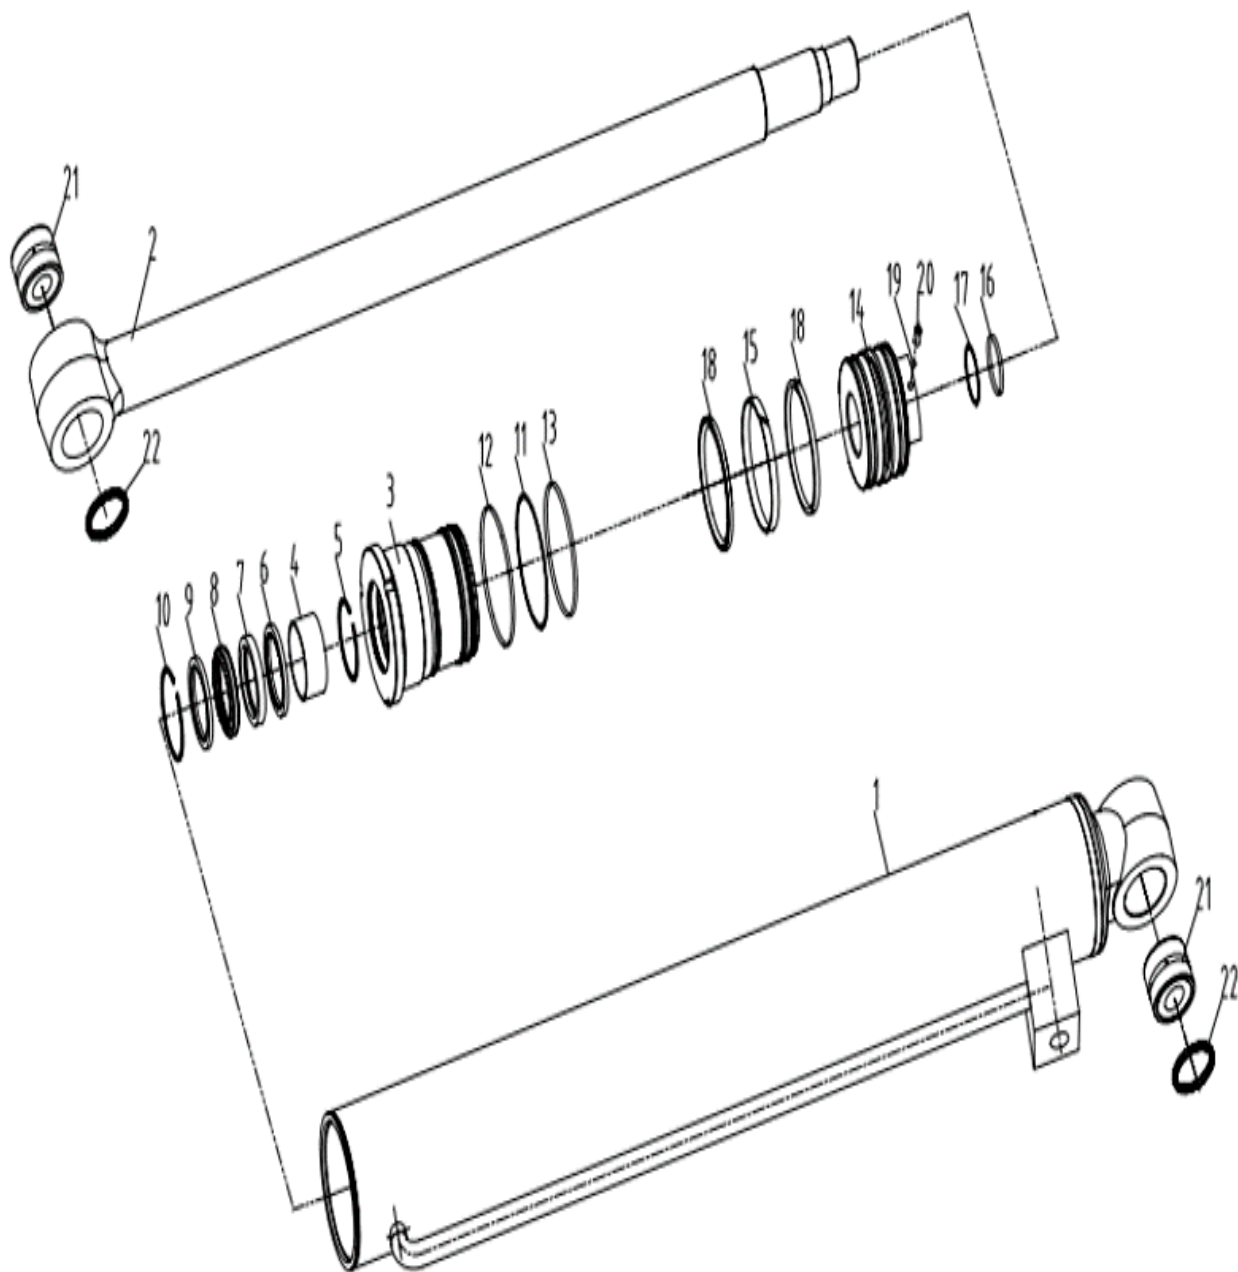

支腿油缸 STABILIZER CYLINDER

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W053025040-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025040-3	Piston rod assembly	活塞杆总成	1	
3	W053025040-4	Cylinder head	缸盖	1	
4	W053025040-5	Bushings	衬套	1	
5	W053025040-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025041-1.1	Seals-buffers	密封件-缓冲	1	
7	W053025041-1.2	Seals-piston rod	密封件-活塞杆	1	
8	W053025041-1.3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025041-1.4	Seals-dust proof	密封件-防尘	1	
10	W053025040-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160130740	O-rings	O 形圈 74.4X3.1	2	
12	W053025040-8	Stop ring-o-ring	挡圈-O 形圈	3	
13	B160130840	O- Ring	O 形圈 80X2.65	1	
14	W053025040-9	Buffer sleeve	缓冲套	1	
15	W053025040-10	Piston	活塞	1	
16	W053025040-1.5	Seals-piston rod	密封件-活塞	1	
17	B160140540	O- Ring	O 形圈 54.4X3.1	1	
18	W053025040-11	Stop ring-o-ring	挡圈-O 形圈	2	
19	W053025040-12	Support Ring	支承环	2	
20	W053025040-16	Steel Ball	钢球	1	
21		Screw	螺钉	1	
22	W053025040-18	Support Ring	支承环	1	
23	B120524028	Joint Bearing	关节轴承 40	2	
24	B070156202	Elastic retaining ring	弹性挡圈 62	2	
25	W053025041	Seal repair kit	密封件维修包	1	


夹紧油缸 GRPING CYINDER

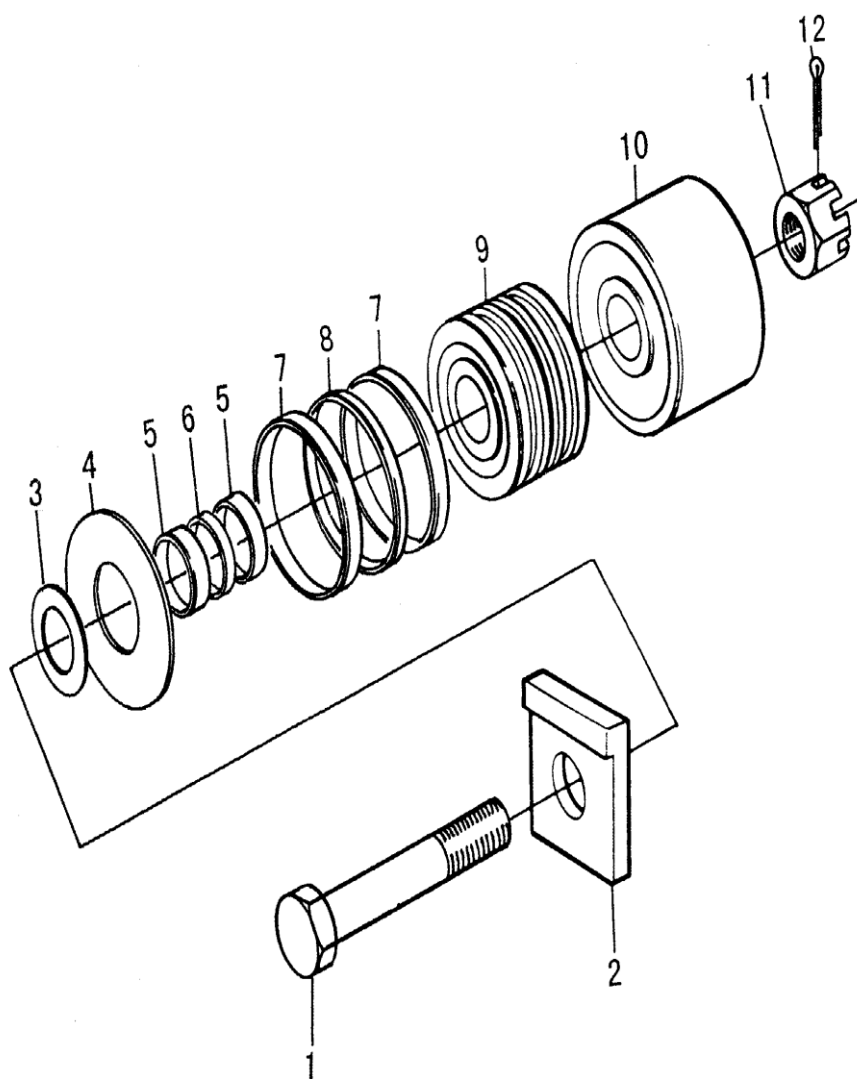

夹紧油缸 GRPING CYINDER

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025012	Bolt M36X2	螺栓	1	
2	Z050030830	Skateboards	滑板	1	
3	W053025010-2	PAD 1	垫 1	1	
4	W053025010-3	PAD 2	垫 2	2	
5		Retaining ring	挡圈	1	
6	W053025011	Seals	密封件	2	
7	W053025010-6	Support Ring	支撑环	1	
8	W053025011	Seals	密封件	1	
9	W053025010-8	Piston	活塞	1	
10	W053025010-9	Cylinder barrel	缸筒	1	
11	W053025010-10	Slotted nut	开槽螺母	1	
12	B080330550	Sell 5X50	销 5X50		

伸缩油缸 RETRACTABLE CYLINDER

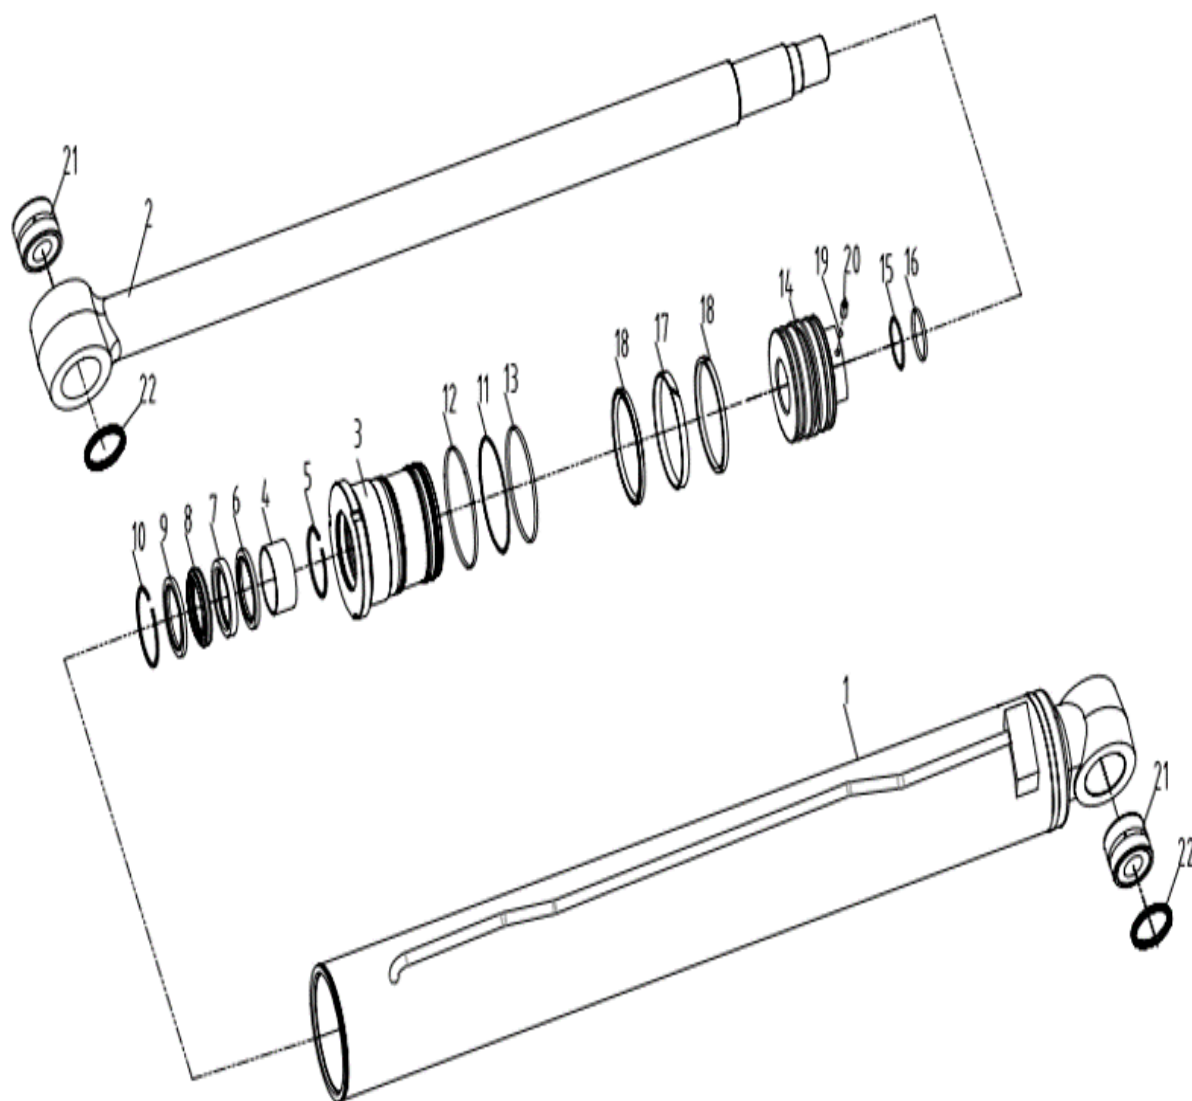


伸缩油缸 RETRACTABLE CYLINDER

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W053025151-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025151-3	Piston rod assembly	活塞杆总成	1	
3	W053025151-4	Cylinder head	缸盖	1	
4	W053025151-5	Bushings	衬套	1	
5	W053025151-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025152-1	Seals-buffers	密封件-缓冲	1	
7	W053025152-2	Seals-piston rod	密封件-活塞杆	1	
8	W053025152-3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025152-4	Seals-dust proof	密封件-防尘	1	
10	W053025151-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160110840	O-rings	O 形圈 84X3.1	1	
12	W053025151-8	Stop ring-o-ring	挡圈-O 形圈	1	
13	B160120900	O- Ring	O 形圈 90X2.65	1	
14	W053025151-9	Piston	活塞	1	
15	B160130590	O- Ring	O 形圈 59.4X3.1	1	
16	W053025151-10	Stop ring-o-ring	挡圈-O 形圈	1	
17	W053025151-11	Seals-pistons	密封件-活塞	1	
18	W053025151-12	Support Ring	支承环	2	
19	W053025151-13	Steel Ball	钢球	1	
20		Screw	螺钉	1	
21	B120524028	Joint Bearing	关节轴承 40	2	
22	B070156202	Elastic retaining ring	弹性挡圈 62	2	
23	W053025152	Seal repair kit	密封件维修包	1	

装载装置操纵机构

OPERATING MECHANISM OF WORKING DECICE

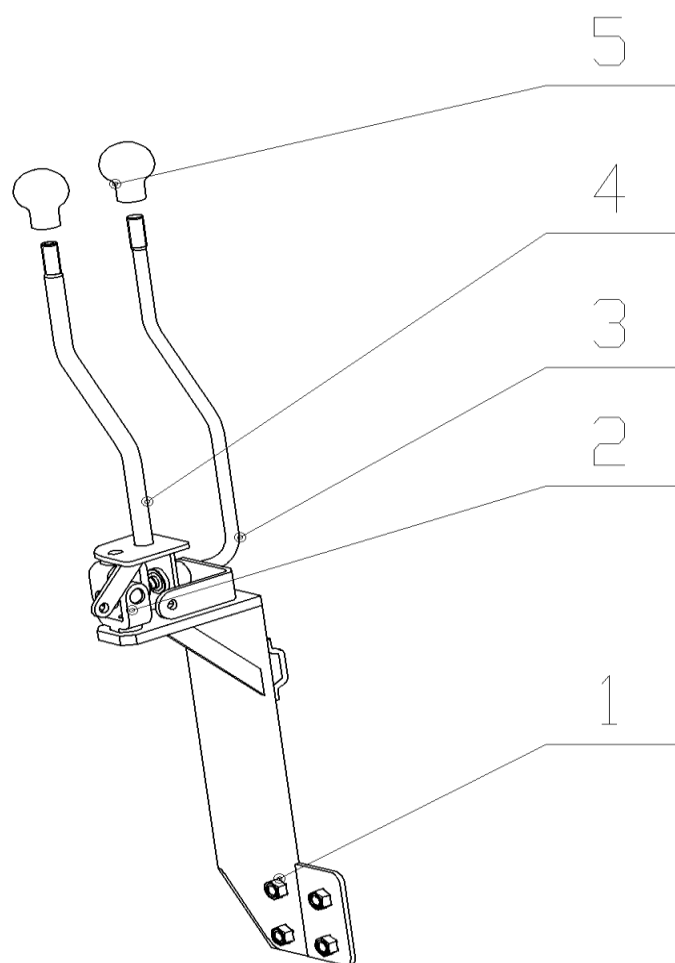


装载装置操纵机构

OPERATING MECHANISM OF WORKING DECICE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Rema rk
1	B4616-85A0100-1	Loading control bracket	装载操纵支架	1	
2	B4616-85A0100-4	Universal joint	万向节	1	
3	B4616-85A0100-2	Triple joystick	三联操纵杆	1	
4	B4616-85A0100-3	Load the joystick	装载操纵杆	1	
5	W013900460	Handle Ball	手柄球	2	


挖掘装置操纵机构 BOOM LOCK MECHANISM

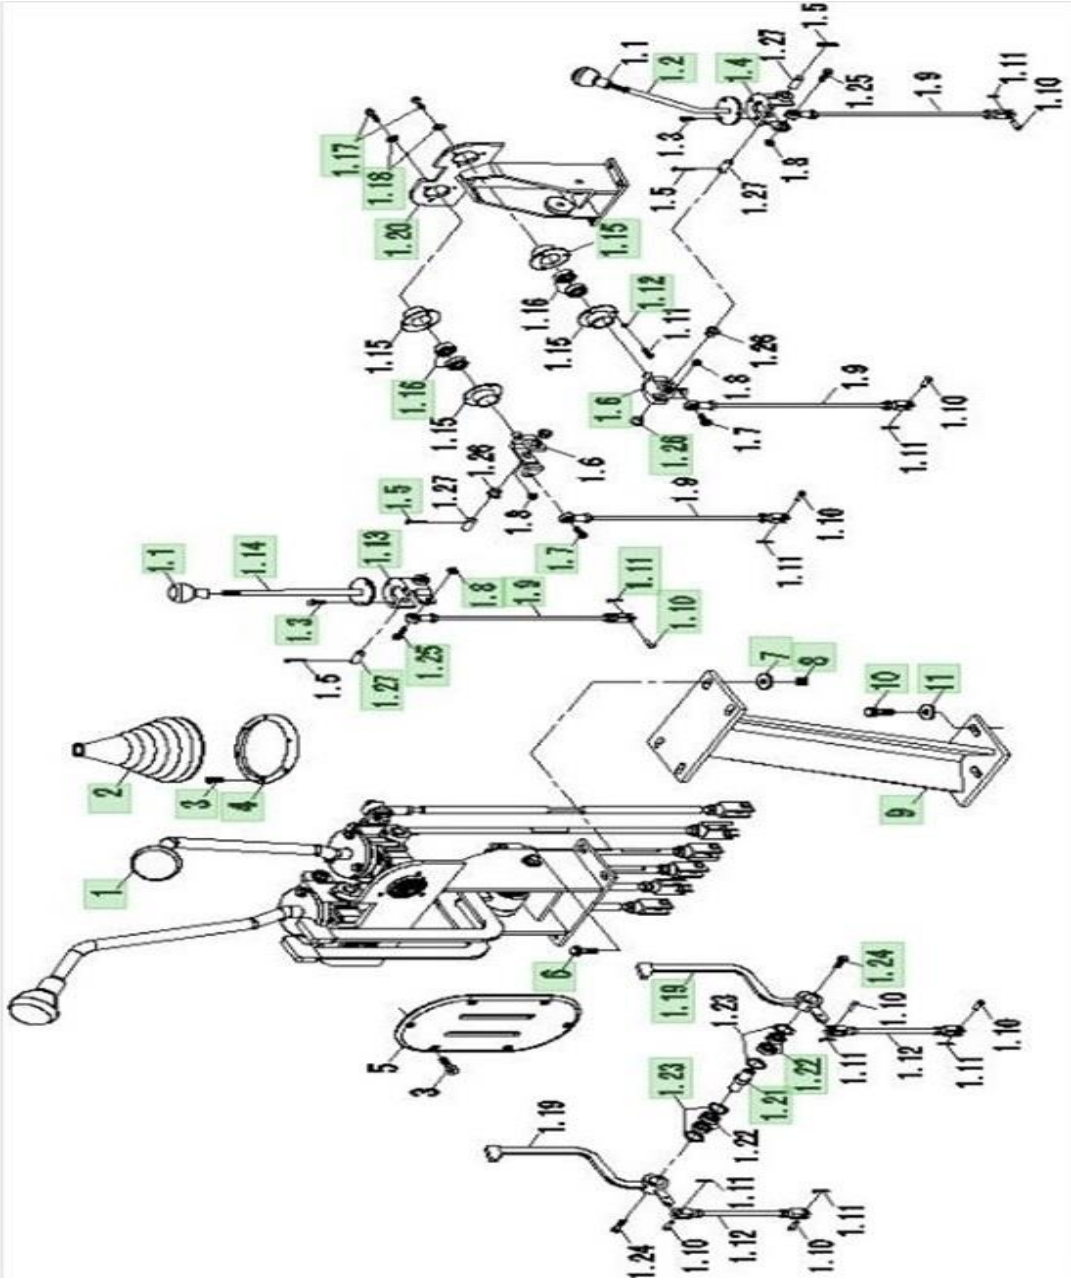

挖掘装置操纵机构 BOOM LOCK MECHANISM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B4611-87A010000	Excavation control mechanism	挖掘操纵机构	1	
1.1	GBT882	Pin	销轴	8	
1.2	B4610-87A010100	Left stick	左操纵杆	1	
1.3	B040710616	Bolt M6X16	螺栓	12	
1.4	B4610-85A010001	Left swing rack	左摆动架	1	
1.5	GBT91	Pin	开口销	4	
1.6	B4610-85A010006	Swinging body	摆动体	2	
1.7	B040710835	Bolt M8X35	螺栓 M8X35	2	
1.8	B050340807	Nut M8	螺母 M8	4	
1.9	B4610-87A010800	Bucket rod pulling wire assembly	斗杆拉线总成	4	
1.10	B4610-87A010900	Handle	手柄	2	
1.11	GBT91	Pin	开口销	8	
1.12	B4610-87A010700	Outrigger Pull Line Assembly	支腿拉线总成	2	
1.13	B4610-87A010010	Right swing rack	右摆动架	1	
1.14	B4610-87A010400	Right Stick	右操纵杆	1	
1.15	B4610-85A010005	Housing	轴承座	4	
1.16	B120121712	Bearing 6203	轴承 6203	4	
1.17	B040710816	Bolt M8X16	螺栓 M8X16	2	
1.18	B4610-85A010004	Washer	垫圈	2	
1.19	B4610-87A010300	Left leg operated weld	左支腿操纵焊合	2	
1.20	B4611-87A010100	The bracket is welded	支架焊合	1	
121	B4610-87A010006	Step shaft	阶梯轴	1	
1.22	B120121710	Deep groove ball bearing 6003	深沟球轴承 6003	4	
1.23	GBT893.1	Block Circle	挡圈	4	
1.24	B040711030	Bolt M10X30	螺栓 M10X30	2	
1.25	B040910840	Bolt M8X40	螺栓 M8X40	2	
1.26	B4610-85A010002	Sleeve	轴套	4	
1.27	B4610-85A010003	Axis	轴	4	
2	B4610-85A000001	Dust jacket	防尘套	2	
3	GBT65	Slotted cylindrical head screws	开槽圆柱头螺钉	14	
4	B4610-85A000002	Pressure Plate	压板	4	
5	B4610-87A000003	Rubber sheets	橡胶板	1	
6	B040710825	Bolt M8X25	螺栓 M8X25	4	
7	B060410802	Washer 8	垫圈 8	8	
9	B4611-87A020000	Fixed Plate welded	固定板焊合	1	
10	B040911025	Bolt M10X25	螺栓 M10X25	3	
11	GBT96.1	Washer	大垫圈	3	


摆臂组合 BACKHOE SWING ARM MODULE

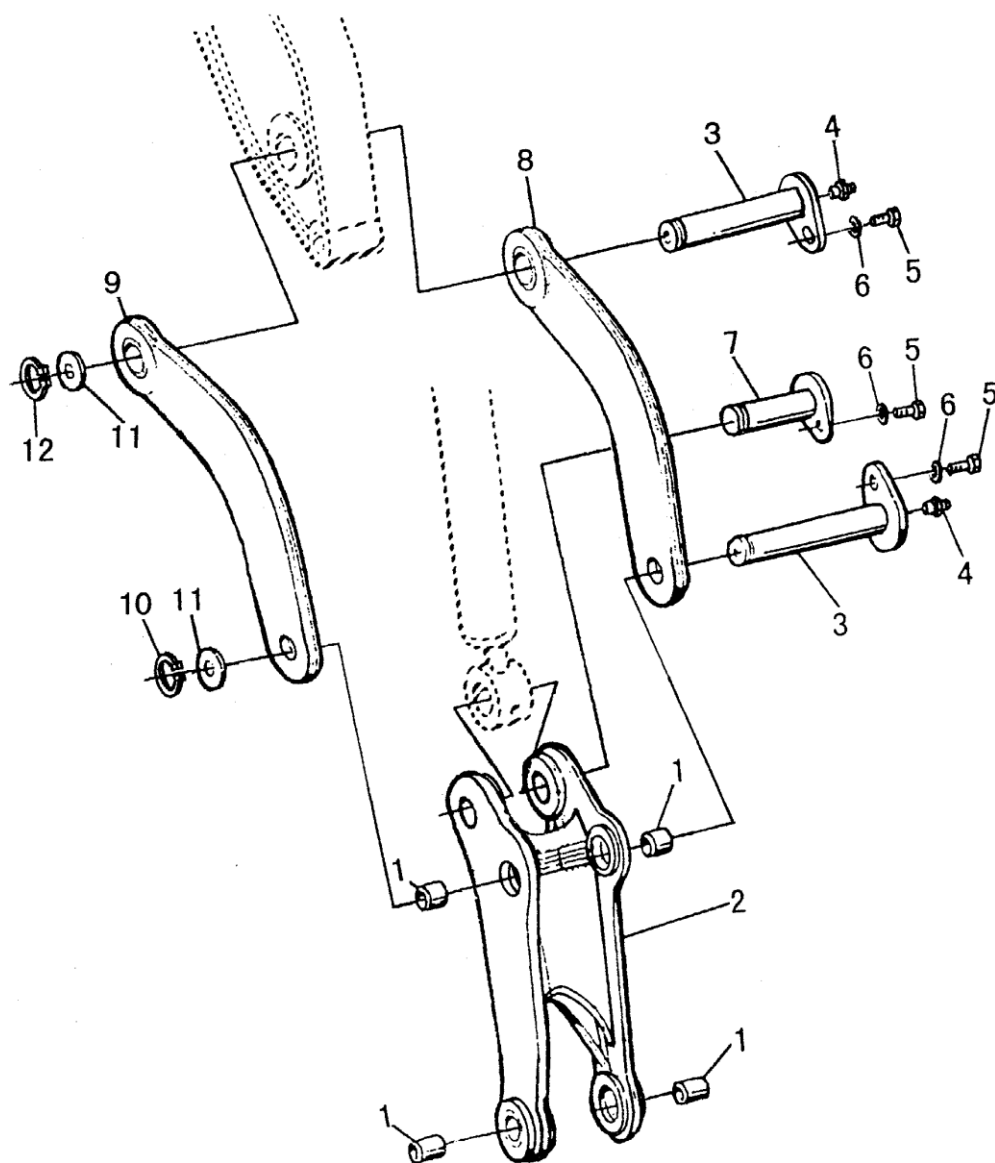

摆臂组合 BACKHOE SWING ARM MODULE

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	Z050260750	Swing arm bush	摆臂套	4	
2	Z050260605	Swing arm	摆臂	1	
3	Z050260790	Pin for swing garm	摆臂销轴总成	2	
4	B150101000	Oil cup M10X1	油杯 M10X1	10	
5	B040911235	Bolt M12X35	螺栓 M12X35	6	
6	B060211203	Washer 12	垫圈 12	6	
7	Z050260700	Pin for swing garm	摆臂销轴总成	1	
8	Z050260730	Ear-plate	耳板	1	
9	Z050260740	Ear-plate	耳板	1	
10	B070255002	Stop Ring, 50	挡圈 50	2	
11	Z050260820	Adjustment Pads	调整垫	2	

挖斗组合 BACKHOE BUCKET MODULE

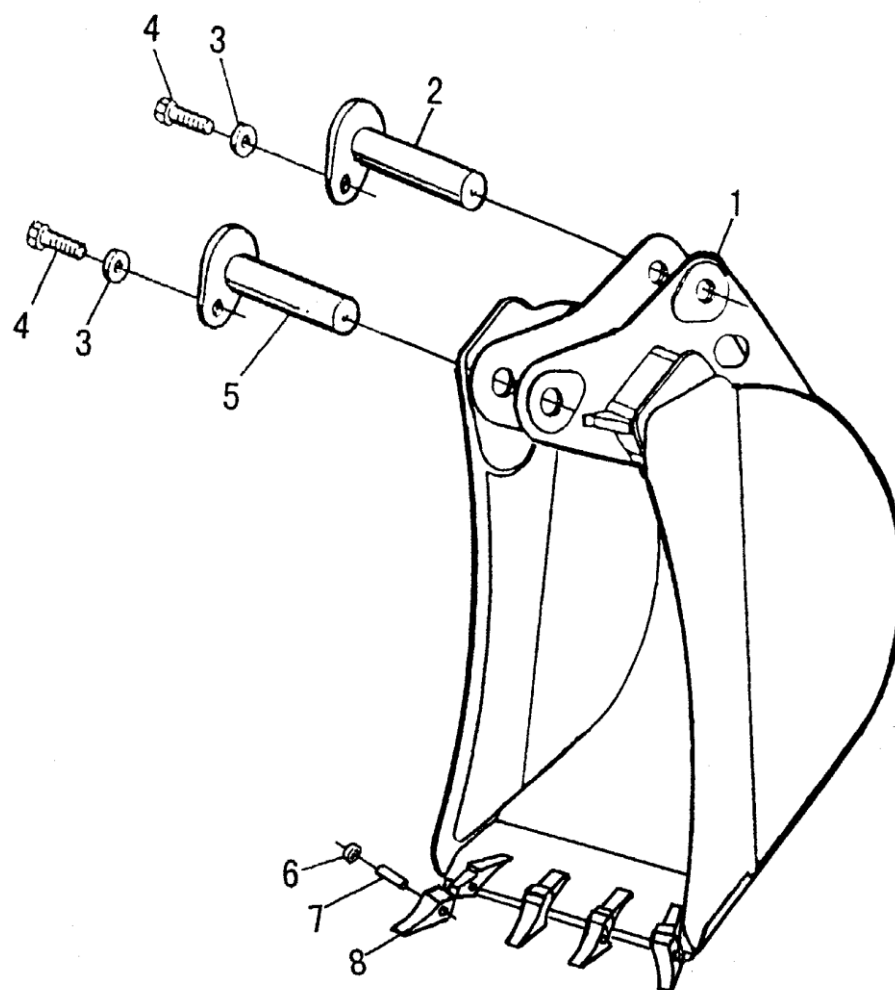


挖斗组合 BACKHOE BUCKET MODULE

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Remark
1	Z061260001	Bucket	挖斗（标准）	1	
2	Z050260760	Lower pin shaft	挖斗下销轴总成	1	
3	B042521235	Bolt M12X35	六角法兰面螺栓	2	
4	B060111203	Washers	垫圈	2	
5	Z050260850	Upper pin shaft	挖斗上销轴总成	1	
6	Z050260520	Clip	挡圈(轴用)	4	
7	Z050260510	Pin	销	4	
8	Z050260500	Bucket teeth	齿尖	4	

挖掘大臂组合


BACKHOE BOOM MODULE

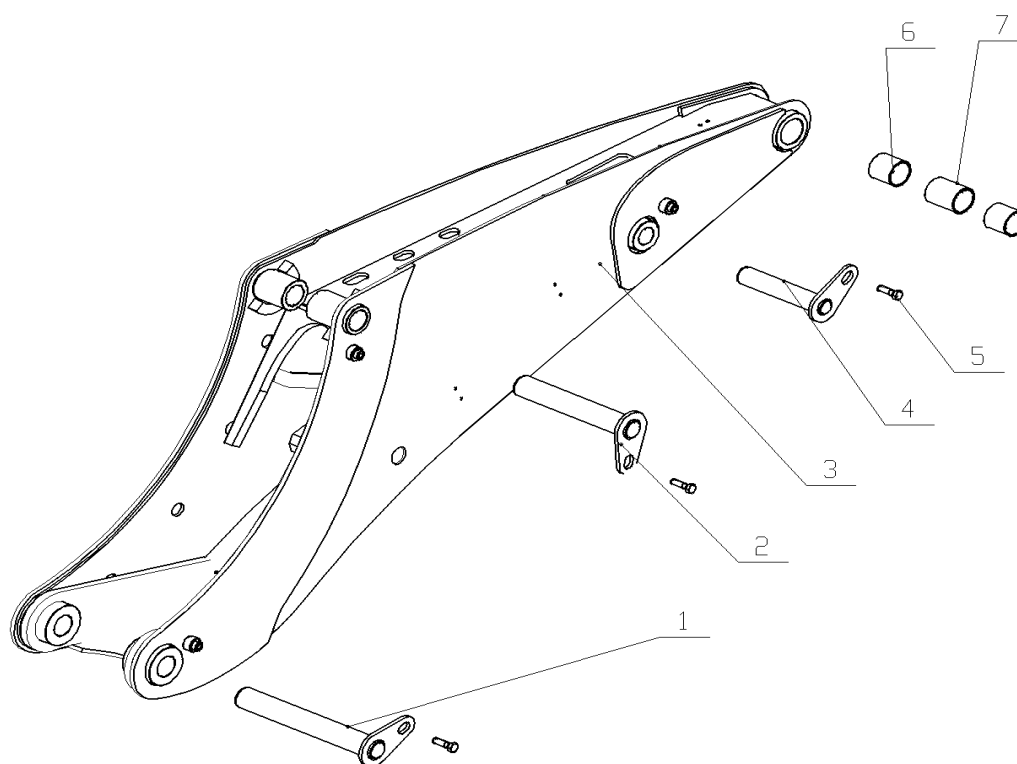

挖掘大臂组合 BACKHOE BOOM MODULE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z062260390A	Lower Arm pin shaft assembly	大臂下销轴组件	1	
2	Z062260400A	Lower pin shaft of bucket rod cylinder	斗杆缸下销轴	1	
3	Z062260012	Big Arms	大臂	1	
4	Z062260411A	ARM cylinder upper pin assembly	大臂缸上销轴组件	1	
5	B042521625	Bolt M16X25	螺栓 M16X25	3	
6	Z050260940	Bushing II	斗杆轴套 II	2	
7	Z050260930	Bucket Rod Spacer III	斗杆隔套 III	1	


伸缩斗杆组合 TELESCOPIC ROD

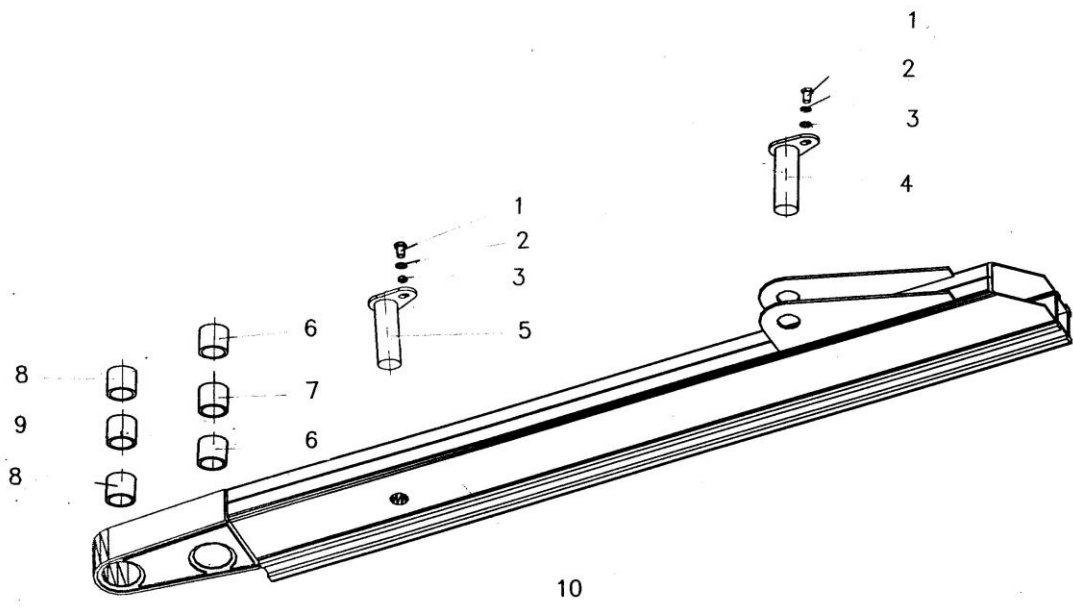

伸缩斗杆组合 TELESCOPIC ROD

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	B040911235	Bolt M12*35	螺栓 M12X35	2	
2	B060211203	Washer 12	垫圈 12	2	
3	B060111203	Spring washerR 12	弹簧垫圈 12	2	
4	Z050260925	Excavating cylinder on pin shaft	挖掘缸上销轴	1	
5	Z050260505	Telescopic cylinder lower pin shaft	伸缩缸下销轴	1	
6	Z050260750	ARM swing	摆臂套	2	
7	Z050260840	Bucket rod spacer	斗杆隔套	1	
8	Z050260880	Bushing of bucket rod	斗杆轴套	2	
9	Z050260890	Bucket rod spacer	斗杆隔套	1	
10	Z050260346	Telescopic arm bucket rod	伸缩臂斗杆	1	


伸缩臂座体组合 TELESCOPIC BOOM

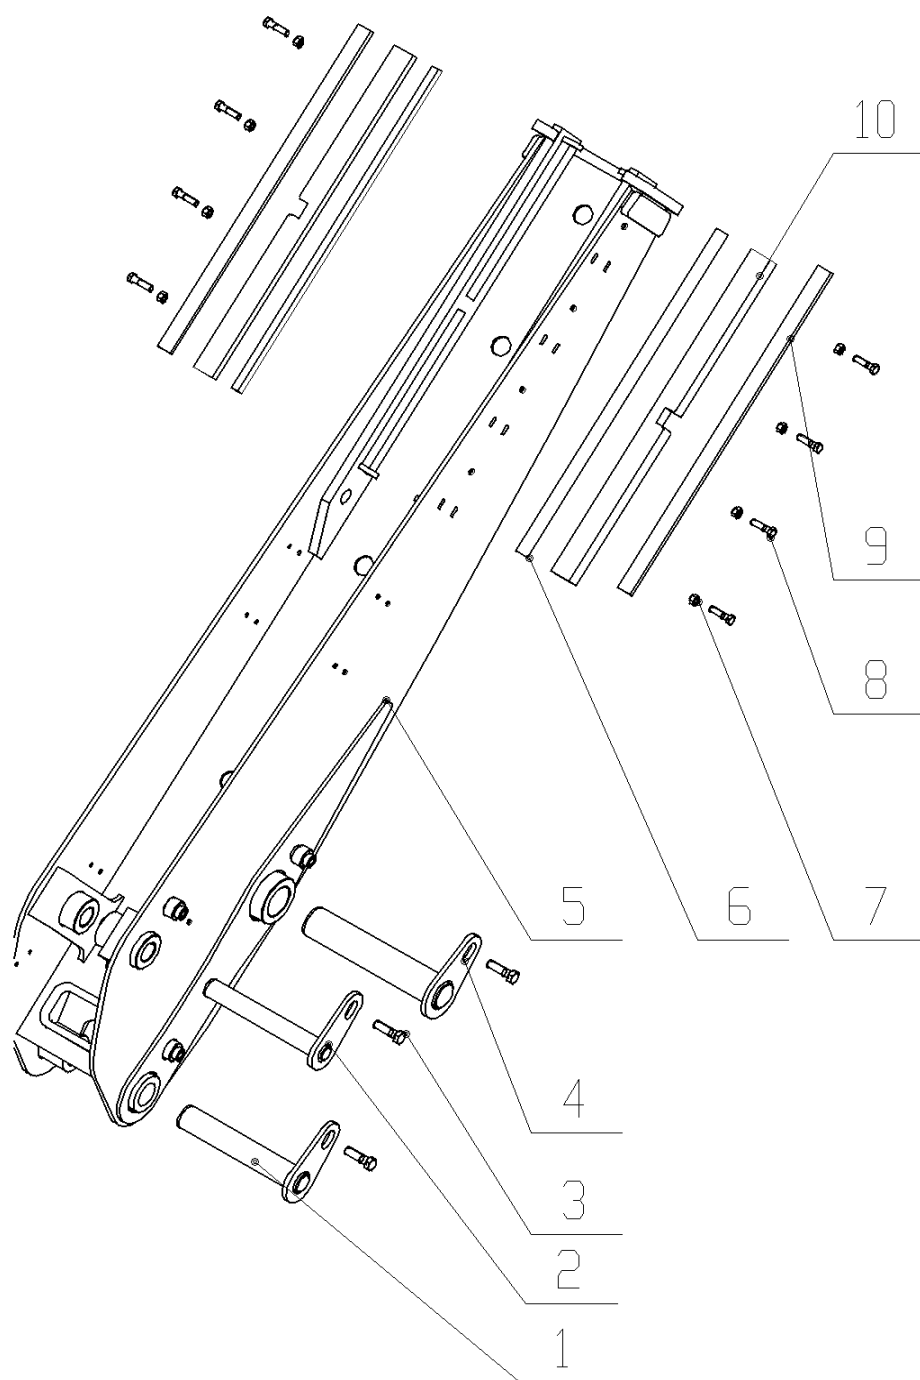

伸缩臂座体组合 TELESCOPIC BOOM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	Z062260420A	Pin Assembly on bucket rod cylinder	斗杆缸上销轴组件	1	
2	Z062260440A	Telescopic cylinder rear pin assembly	伸缩缸后销轴组件	1	
3	B042521625	Bolt M16X25	螺栓 M16X25	3	
4	Z062260430A	Upper arm pin shaft assembly	大臂上销轴组件	1	
5	Z062260210A	Bucket rod slide frame	斗杆滑架	1	
6	Z050261684	Nylon slider	尼龙滑块	2	
7	B050111212	Nuts M12	螺母 M12	8	
8	B042521235	Bolt M12×35	螺栓 M12×35	8	
9	Z050261683	Nylon slider	尼龙滑块	2	
10	Z050260499	Slider	滑块	2	


摆动架总成 OSCILLATION FRAME ASSEMBLY

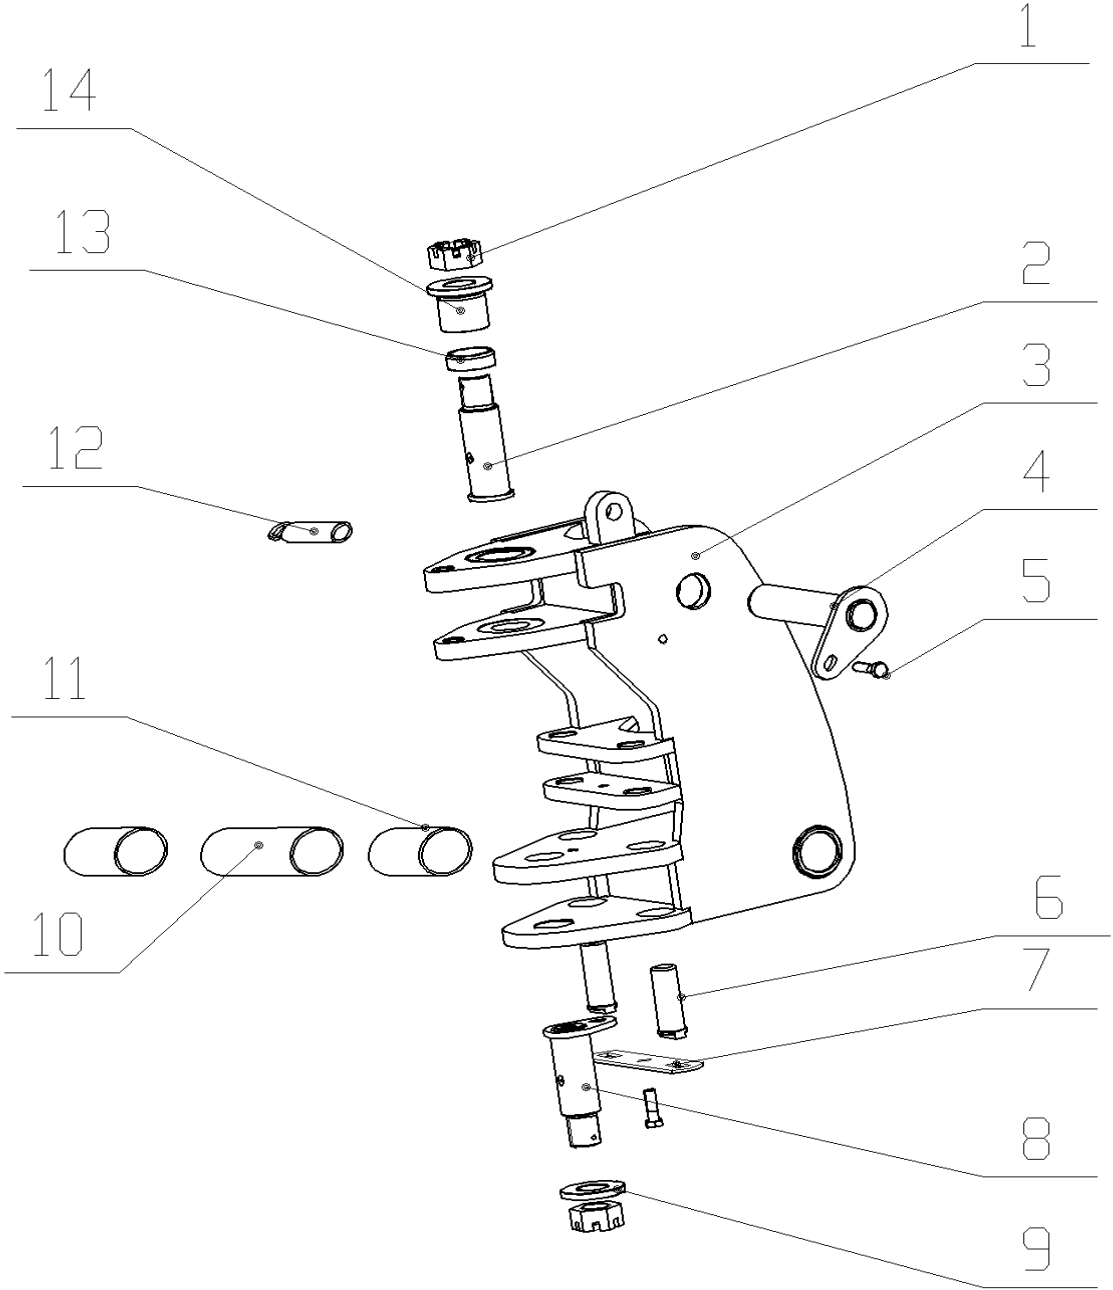

摆动架总成 OSCILLATION FRAME ASSEMBLY

序号 ITEM	零件号 PART NO.	零件名称	Part Name	数量 Q'TY	备注 Remark
1	Z310390070	Nuts M48 × 2	螺母 M48×2	2	
2	Z061240170	Pin shaft with upper hinge	上铰接销轴	1	
3	Z061240012	Slewing frame	回转架	1	
4	Z061240101A	Upper arm cylinder lower pin assembly	大臂缸下销轴组件	1	
5	B042521635	Bolt M16×35	螺栓 M16×35	2	
6	Z050240181	Rotary cylinder front pin shaft	回转缸前销轴	2	
7	B042521235	Fixed shaft plate	定轴板	1	
8	Z050240250	Pin shaft with lower hinge	下铰接销轴	1	
9	Z061240191	On the mat	上垫	2	
10	Z061240220	A condom	隔套	1	
11	Z050240261	Slewing frame bushing	回转架衬套	2	
12	Z061240121	Lock pin shaft	锁止销轴	1	
13	Z061240210	Lower support sleeve	下支撑套	1	
14	Z3B00303200	Upper support sleeve	上支撑套	1	


滑动架 SLIDING FRAME

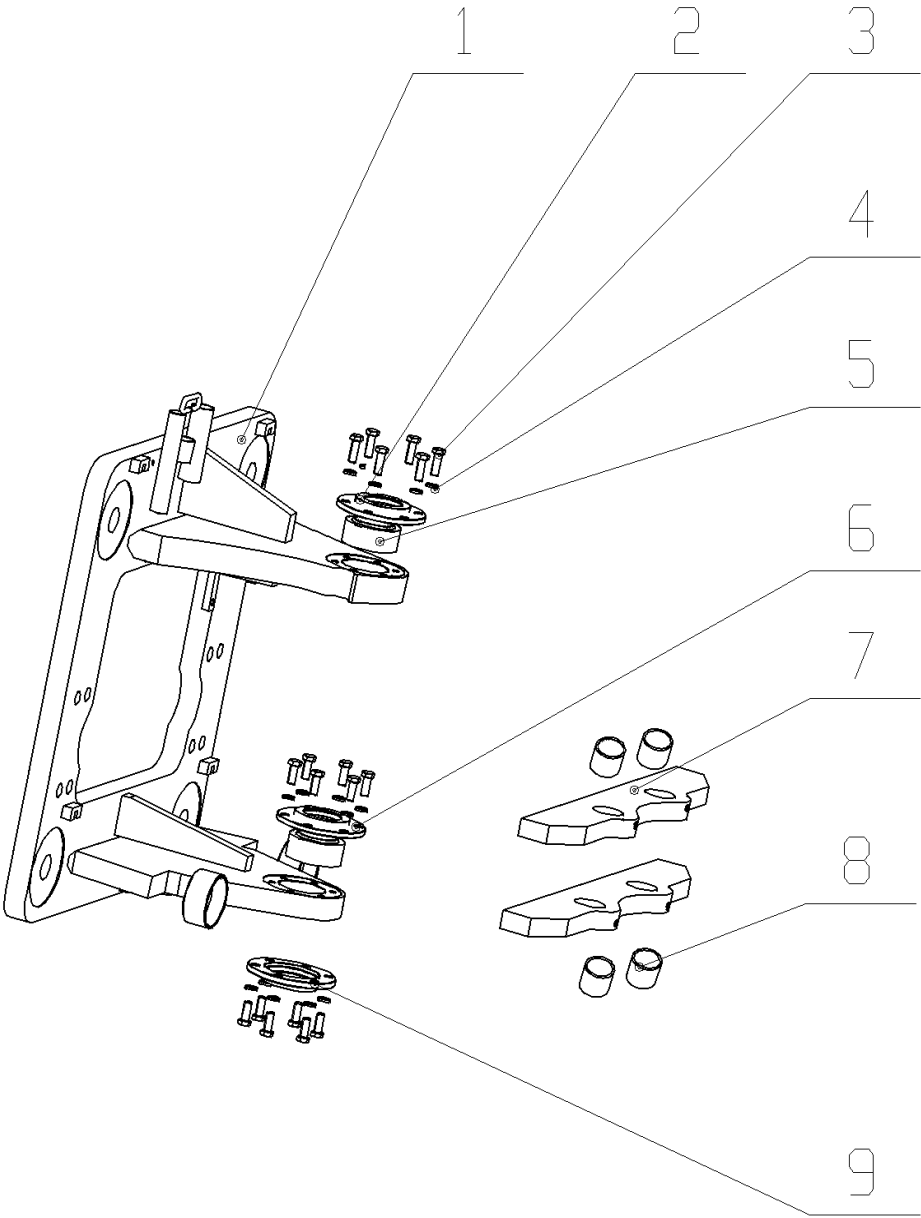

滑动架 SLIDING FRAME

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z062340012	Sliding frame	滑动架	1	
2	Z062340160	Upper bearing capSpring	上轴承盖	1	
3	B042521230	Bolt M12×30	螺栓 M12×30	18	
4	B061431201	Washers	垫圈	18	
5	B120526044	Joint Bearing	关节轴承	2	
6	Z3D405005	Lower upper bearing cap	下上轴承盖	1	
7	Z062340120	Cylinder support	油缸支座	2	
8	Z062340170	Rotary cylinder liner	回转缸套	4	
9	Z3D405004	Lower lower bearing cap	下下轴承盖	1	

滑架推拉座 SLIDING FRAME PUSH-PULL SEAT

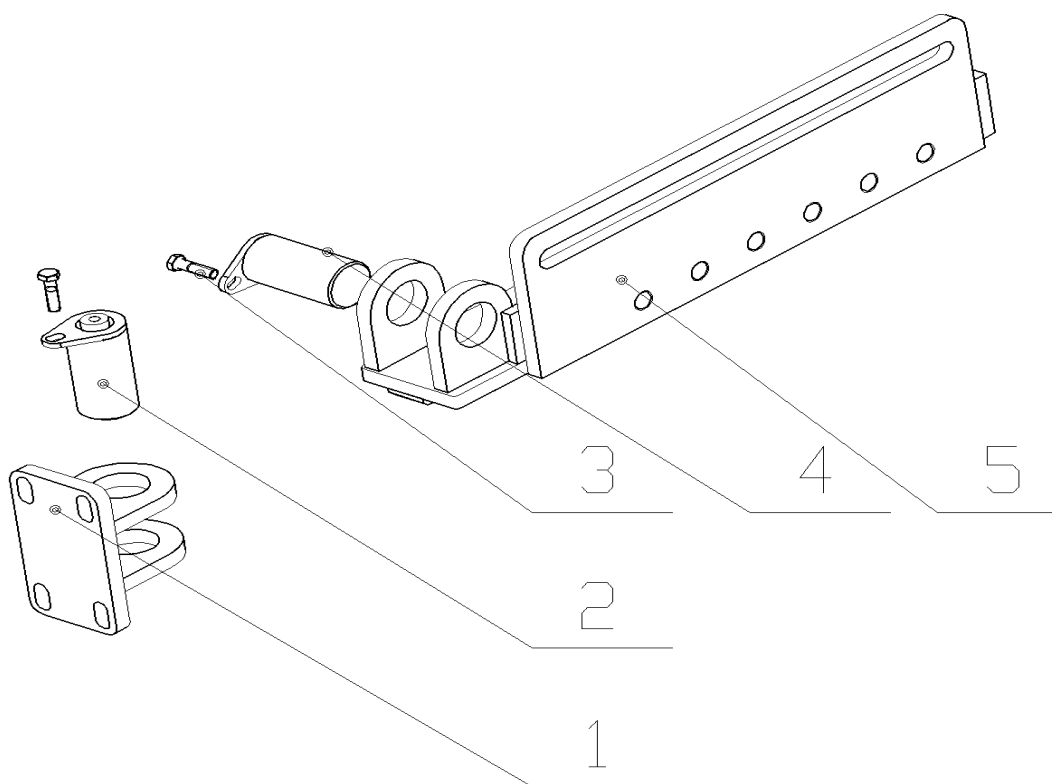


滑架推拉座 SLIDING FRAME PUSH-PULL SEAT

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z050340500	Cylinder block 1	油缸座 1	1	
2	Z050340750	Pin	销轴	1	
3	B040711025	Bolt M10×25	螺栓 M10×25	2	
4	Z050340780	Pin	销轴	1	
5	Z050340550	Cylinder block 2	油缸座 2	1	

柴油机装置

DIESL ENGING MOUNT

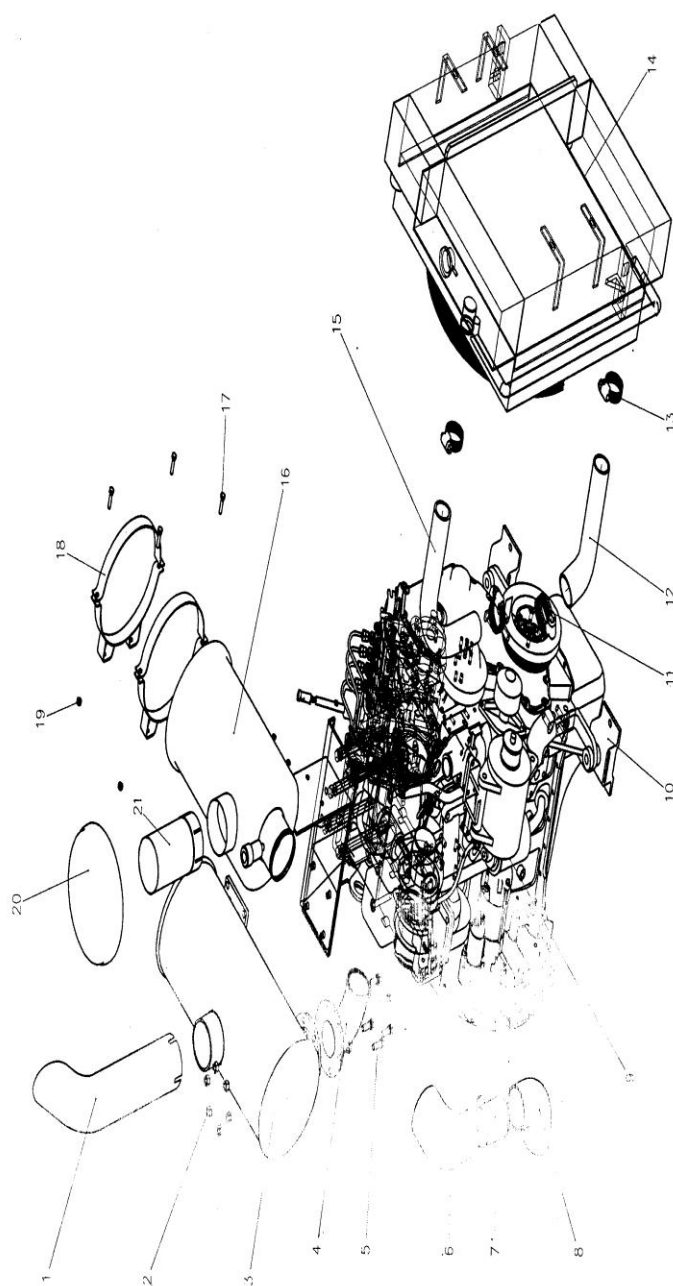


柴油机装置 DIESL ENGING MOUNT

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z061350360	Pipe of muffler	消音器尾管	1	
2	HEX NUT M12	Hex nut M12	六角锁紧螺母	6	
3	W017100150	Muffler	消音器	1	
4	W017102680	Inlet pipe of muffler	消音器进气管	1	
5	B040911235	Bolt M12×35	螺栓 M12×35	6	
6	W017102690	Outlet pipe for air filter	空滤器出气管 I	1	
7	Z061350061	Middle pipe	中间接管	1	
8	Z061350050	Outlet pipe for air filter	空滤器接管	1	
9	W017100000	Engine	柴油机	1	
10	Z350140010	Anti-vibration block for engine	柴油机减震垫	2	
11	B190110800	Clamp 70	喉箍 70×89	2	
12	Z065350020	Intake pipe	进水管	1	
13	W017102700	Clamp	喉箍	2	
14	W013900060	Water tanks	水箱	1	
15	Z065350010	Out take pipe	回水管	1	
16	W017100230	Air filter	空滤器	4	
17	W017102710	Bolt	螺栓	1	
18	W017102720	Air filter clamp	空滤器卡箍	2	
19	W017102730	Note	螺母	4	
20	W017100240	Air filter cap	空滤器帽	1	
21	W017102740	Air filter nozzle	空滤器接管	1	

柴油箱

FUEL TANK

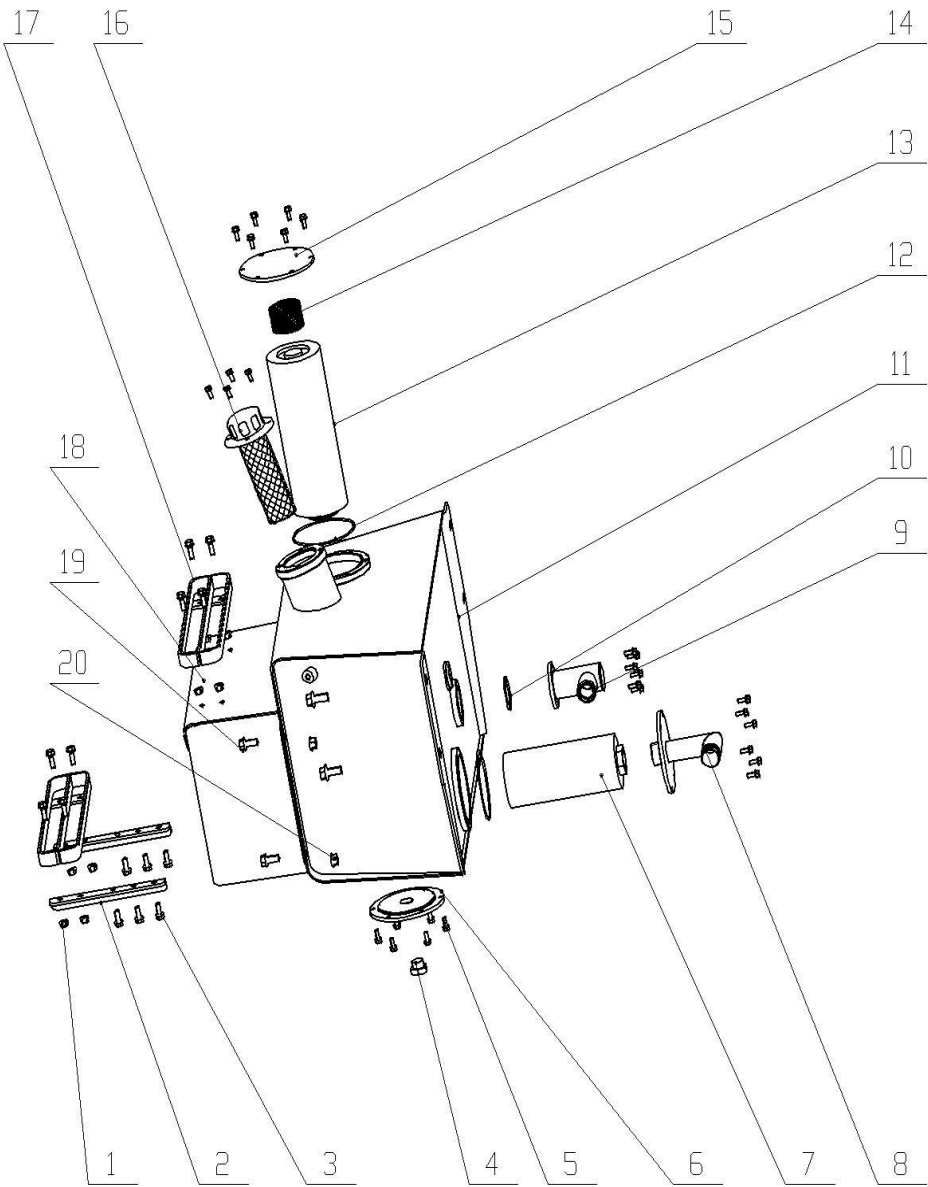


柴油箱

FUEL TANK

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z590130190	Oil filter screen	吸油滤网	1	
2	Z063080012	Diesel tank	柴油箱	1	
3	B040710516	Bolt M5X16	螺栓 M5X16	4	
4	W110001460	Fuel filter	加油滤清器	1	
5	B040910820	Bolt M8X20	螺栓 M8X20	10	
6	B040911035	Bolt M10X35	螺栓 M10X35	12	
7	Z063070231	Pedal Assembly	踏板组件	2	
8	Z063080150	Battery box	电瓶箱	1	
9	Z063070380	Angle iron	角铁	2	
10	B040911635	Bolt M16X35	螺栓 M16X35	4	
11	B052421414	Nut M16	六角螺母 M14	4	
12	B160141451	O- ring 145X2.65	O 型圈 145X2.65	1	
13	Z063070410	Flange plate	法兰盘	1	
14		Drain Plug	放油螺塞	1	

机油箱

ENGINE OIL RESEERVOIR

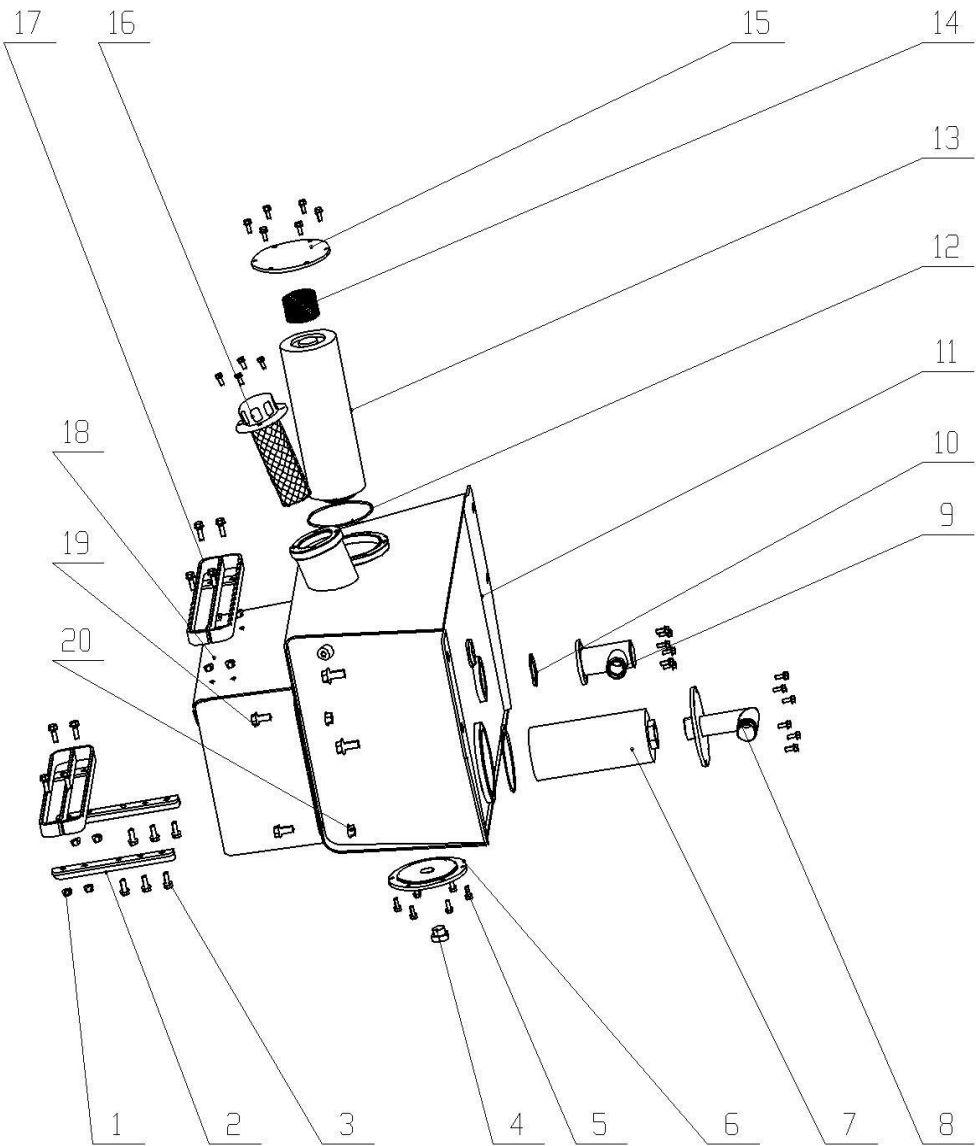


机油箱

ENGINE OIL RESEERVOIR

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B050211008	Nut M10	螺母 M10	14	
2	Z065080050	Angle iron	角铁	2	
3	B042521035	Bolt M10X35	螺栓 M10X35	14	
4		Screw Block	螺堵	1	
5	B010310820	Bolt M8X20	螺栓 M8X20	28	
6	Z063070410	Clean the flange	清洗法兰	1	
7	Z065120200-1	Oil filter screen	吸油滤网	1	
8	Z063070430	Oil Suction Pipe	吸油管	1	
9	Z061070201	Oil Return Port	回油口	1	
10		O-ring	O 型圈	1	
11	Z063070011	Oil Tank	机油箱体	1	
12		O-ring	O 型圈	2	
13	W013500320	Hydraulic oil filter element	液压油滤芯	1	
14	Z590200130	Spring	弹簧	1	
15	Z590200140	Screen top cover	滤网顶盖	1	
16	W110001460	Fuel filter	加油滤清器	1	
17	Z063070231	Pedal Assembly	踏板组件	2	
18	Z063070270	Battery box	电瓶箱	1	
19	B040911635	Bolt M16X35	螺栓 M16X35	4	
20	B050211614	Nut M10	螺母 M16	4	

发动机罩总成

ENGINE HOOD ASSEMBLY

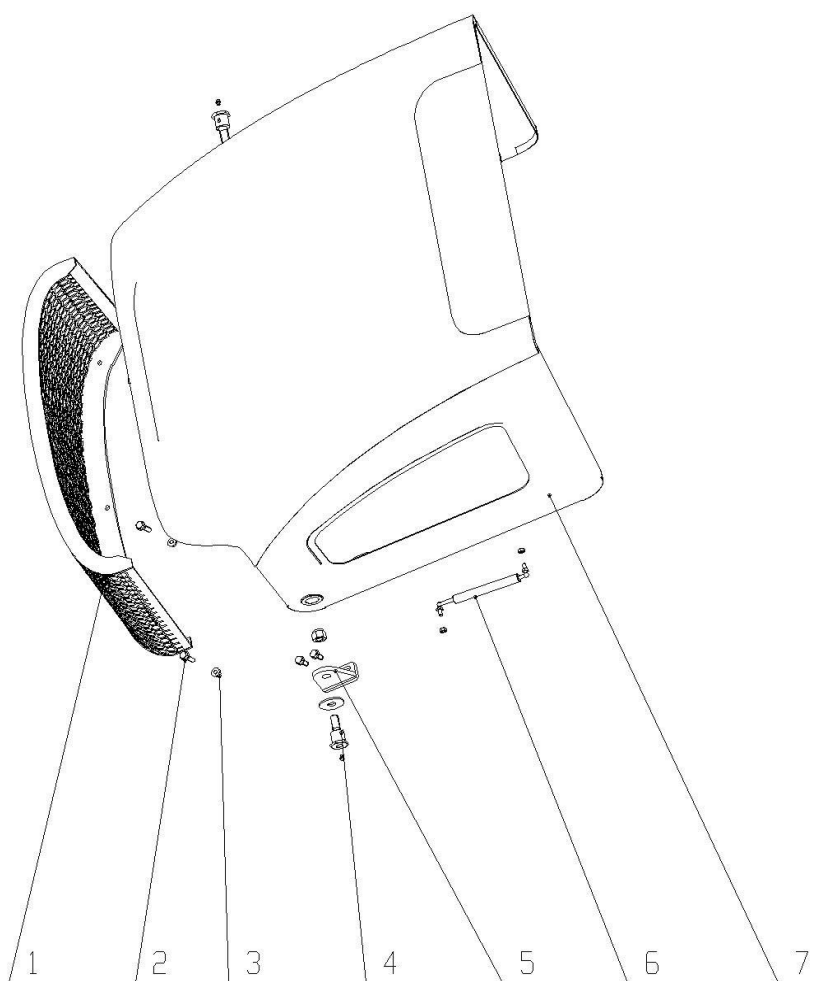


发动机罩总成

ENGINE HOOD ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z061053010	Fixed cover	固定罩	1	
2	B042521035	Bolt M10X35	六角螺栓 M10X35	7	
3	B050211008	Nut M10	尼龙六角锁紧螺母	7	
4	Z061052261	Axis of rotation	旋转轴	2	
5	Z061050800	Hood swivel seat	机罩旋转座	2	
6	W110060290	Air Spring	气弹簧	2	
7	Z061053103	Rotating hood	旋转罩	1	


变速操纵杆 CONTROL SYSTEM

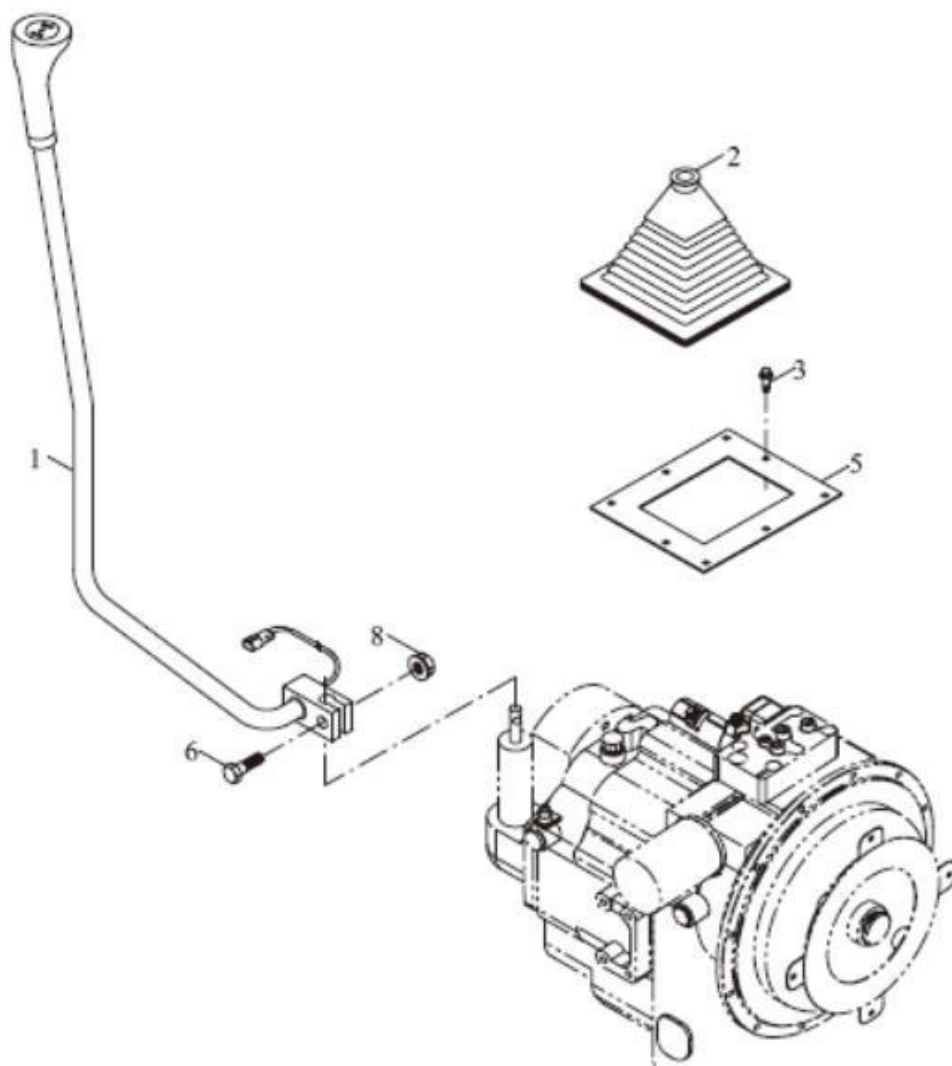

变速操纵杆 CONTROL SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q' TY	备注 Remark
1	B4610-83A010000	GEAR SHIFT CONTROL	变速操纵总成	1	
2	B4610-83A00000	DUSTPROOF SLEEVE	防尘套	1	
3	GBT16674.1-M6X12	BOLT	六角法兰面螺栓	8	
5	B4610-83A000001	PRESSURE PLATE	压板	1	
6	GBT27-M12X50-8.8	BOLT	六角头绞制孔螺栓	1	
8	GBT6177.1-M12-8-	NUT	六角法兰面螺母	1	


空调系统 AIR CONDITION SYSTEM

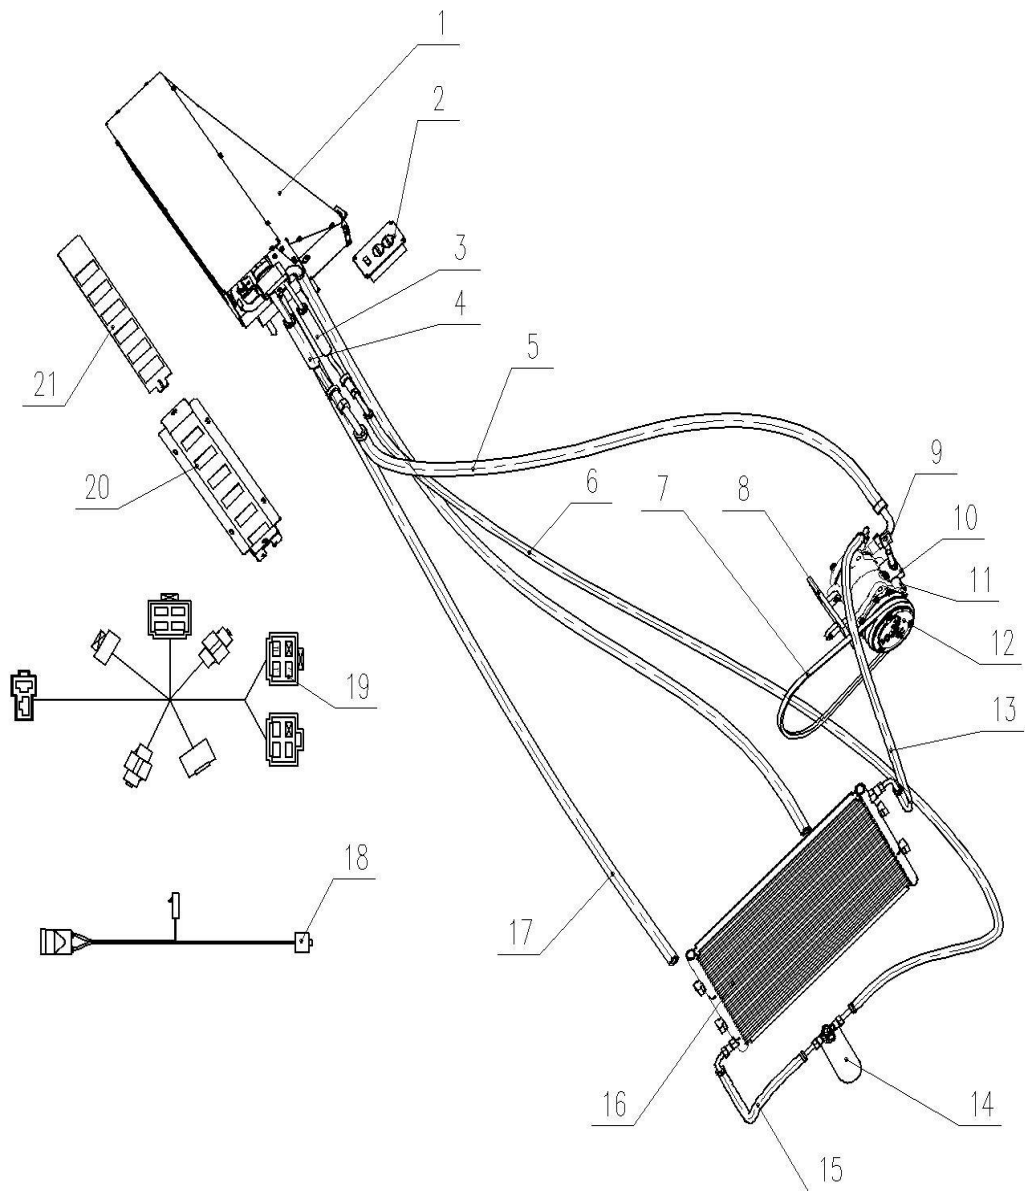

空调系统 AIR CONDITION SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W013500290-5	Evaporator assembly	蒸发器总成	1	
2	W013500290-2	control panel	控制面板	1	
3	W013500700-6	Evaporator inlet pipe1	蒸发器进液管 1	1	
4	W013500700-7	Evaporator outlet pipe	蒸发器出气管	1	
5	W013500700-8	Compressor return pipe	压缩机回气管	1	
6	W013500700-9	Evaporator inlet pipe2	蒸发器进液管 2	1	
7	W013800890	V-belt	三角带	1	
8	Z062590130	Compressor bracket	压缩机支架	1	
9	Z062590040	Compressor strut	压缩机撑杆	1	
10	Z062590110	Adjust Block	调节块	1	
11	Z062590090	Heel	垫块	1	
12	W013500290-4	Compressor	压缩机	1	
13	W013500290-10	Compressor exhaust pipe	压缩机排气管	1	
14	W013500290-11	Drying bottle assembly	干燥瓶组件	1	
15	K05KB64	Cold storage pipe	冷储管	1	
16	W01350029-6	Condenser	冷凝器	1	
17		Heating hose	暖风胶管	2	
18	W013500700-13	Pressure switch harness	压力开关线束	1	
19	W013500290-9	Evaporator wiring harness	蒸发器线束	1	
20	Z062200050	Internal and external circulation air vents	内外循环风口	1	
21	Z062200090	Recirculation damper assembly	循环风门组件	1	
22	K07WM03-08	Water pipe transition pipe	水管过渡管	2	


先导液压系统 01 PILOT HYDRAULIC SYSTEM 01

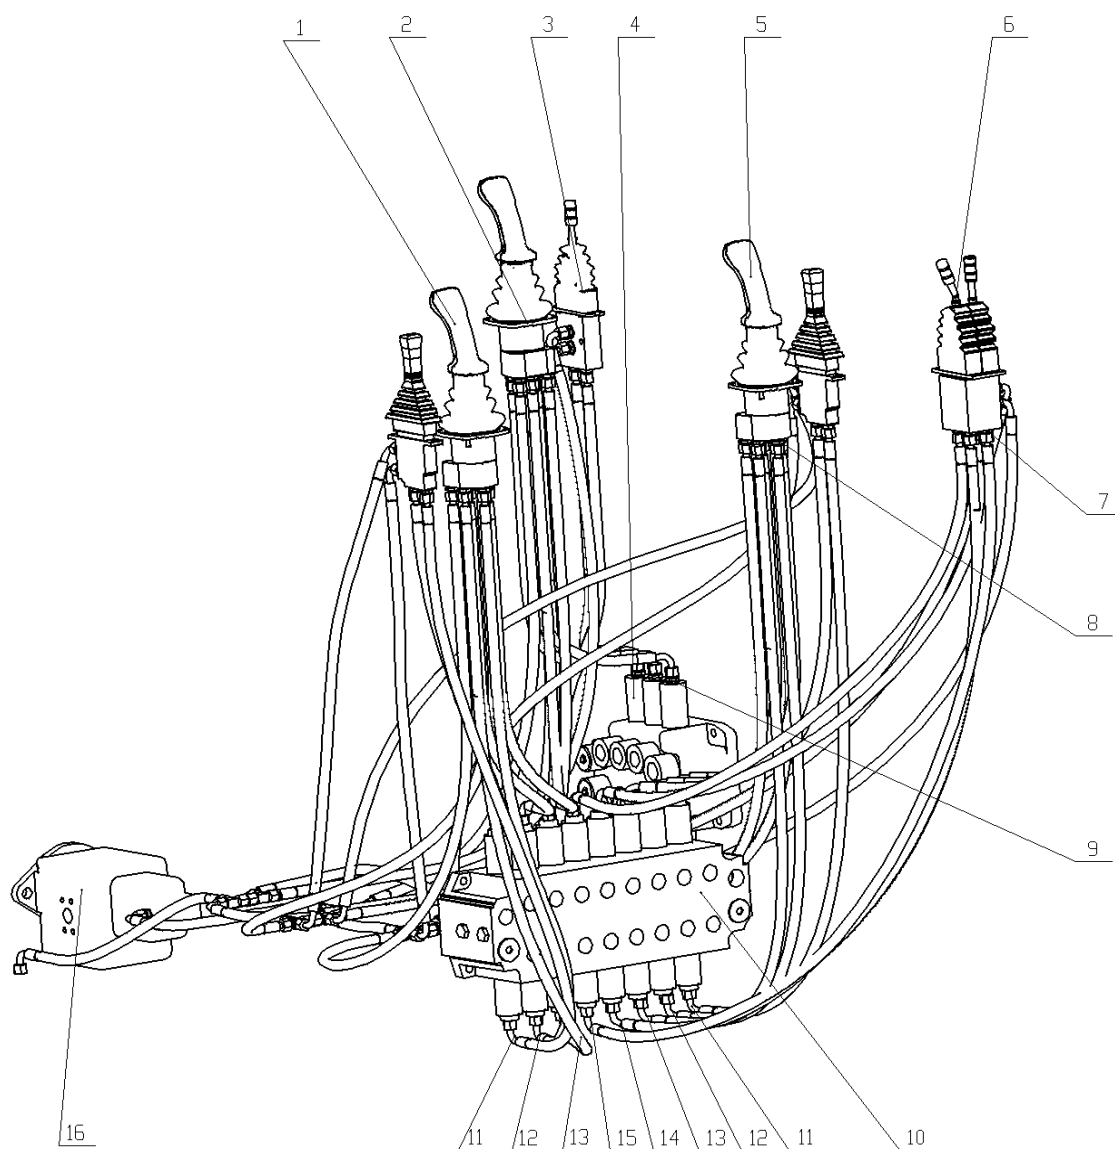

先导液压系统 01 PILOT HYDRAULIC SYSTEM 01

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W073025220	Right-hand pilot valve	右手先导阀	1	
2	W073025226	Load pilot valve	装载先导阀	1	
3	W071900008	Monolithic pilot valve	单片先导阀	3	
4	W070400009	Triple valve	三联工作阀	1	
5	W073025200	Left-handed pilot valve	左手先导阀	1	
6	W071900009	Chip type pilot combination valve	片式先导组合阀	1	
7	Z590190940	Transition joint	过渡接头	10	
8	Z062251550	Transition joint	过渡接头	18	
9	QLWZG074-001614	Transition joint	过渡接头	22	
10	W076400020	Excavating valve	挖掘阀	1	
11	Z062251880	Pilot tubing	先导油管	2	
12	Z062251840	Pilot tubing	先导油管	2	
13	Z062251920	Pilot tubing	先导油管	2	
14	Z062251640	Pilot tubing	先导油管	1	
15	Z062251680	Pilot tubing	先导油管	1	
16	W060900001	Gear oil pump (double)	齿轮油泵(双联)	1	

先导液压系统 02 PILOT HYDRAULIC SYSTEM 02

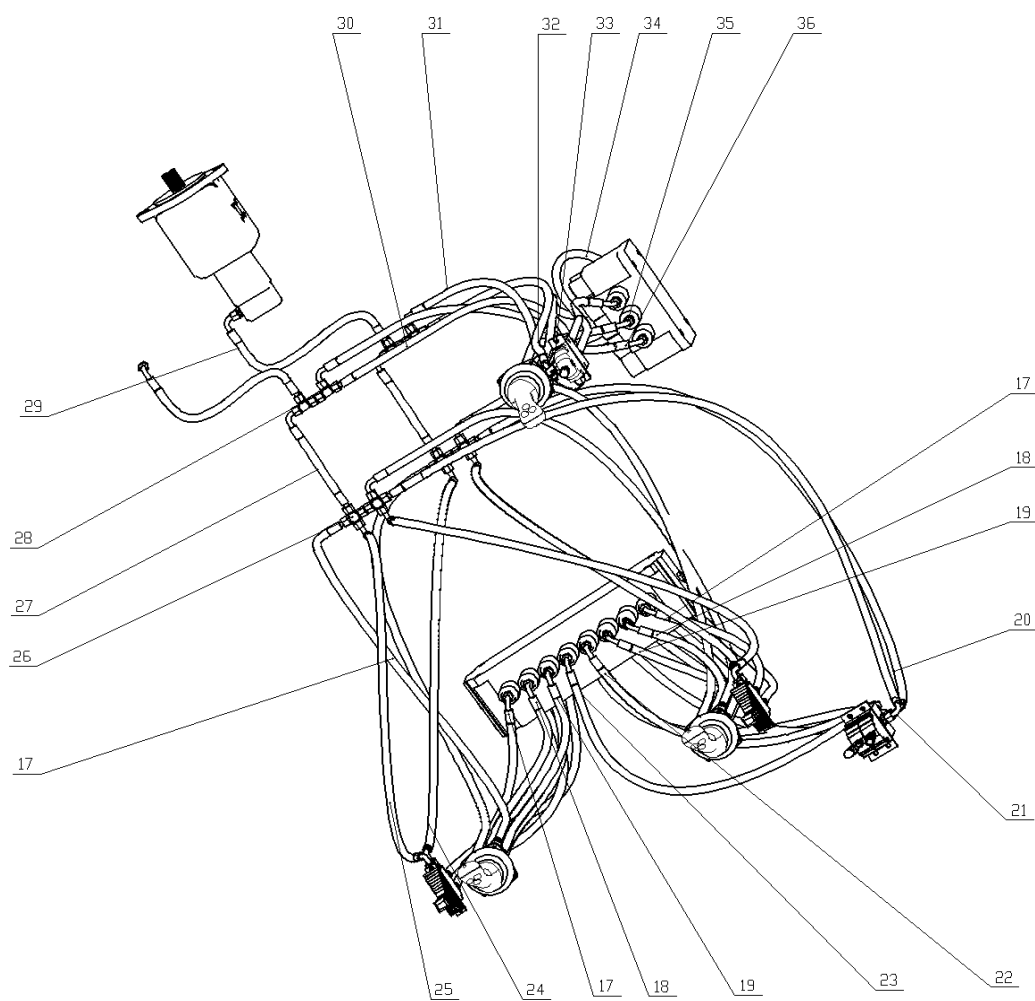

先导液压系统 02 PILOT HYDRAULIC SYSTEM 02

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
17	Z062251205	Pilot tubing	先导油管	5	
18	Z062251860	Pilot tubing	先导油管	2	
19	Z062251820	Pilot tubing	先导油管	2	
20	Z062251600	Pilot tubing	先导油管	1	
21	Z062251620	Pilot tubing	先导油管	1	
22	Z062251660	Pilot tubing	先导油管	1	
23	Z062251700	Pilot tubing	先导油管	1	
24	Z062251940	Pilot tubing	先导油管	2	
25	Z062251960	Pilot tubing	先导油管	2	
26	Z062251300	Four-way connector	四通接头	4	
27	Z062251165	Pilot tubing	先导油管	4	
28	Z050251320	Three-way connector	三通接头	2	
29	Z062251360	Pilot tubing	先导油管	1	
30	Z062251760	Pilot tubing	先导油管	1	
31	Z062251780	Pilot tubing	先导油管	1	
32	Z062251720	Pilot tubing	先导油管	1	
33	Z062251740	Pilot tubing	先导油管	1	
34	Z062251340	Pilot tubing	先导油管	3	
35	Z062251800	Pilot tubing	先导油管	1	
36	Z062251180	Pilot tubing	先导油管	2	

