

388H BACKHOE LOADER

EXPLODED DRAWING

前 言

388H 轮式挖掘装载机零部件图册，是为了便于用户在使用、维修和保养等工作中的方便而编绘的，以供在使用过程中查阅及参考，也可帮助用户了解本机的结构和装配关系。发动机随机已有零部件图册，本书故未编出。

图册按各总成及结构布局绘制出了各零部件的图形及相互关系。凡不可拆卸的部件，一般只标出部件代号，不另列其组成零件。明细表采用中英文对照编译了名称、代号及数量。

随着技术更新和生产的不断发展，产品将不断改进，故本图册的内容会有部分不相一致，因此用户在订购零部件时，请指明车出厂日期和编号。

FOREWORD

This part list of Model 388H backhoe loader is intent as a consultation reference for the customer to use the machine, and to help them repair and maintain the loaders. It can also help the users to be familiar with the construction and assembly relation of the machine. The engine has its own part list with it,so this book does not contain the engine part list.

The part list contains the part-drawings of deferent assem-blies,showing the shape of the parts as well as the assembling relation,The components which can not be taken apart(as the weldment or riveted assemblies) are Indicated only by their component numbers without the consisting part numbers.

目录 CONTENTS

图一	整 机	(1)
FIG1	THE WHOLE MACHINE	(1)
图二	动臂组合	(3)
FIG2	LOADER BOOM MODULE	(3)
图三	快换六合一	(5)
FIG3	QUICK CHANGE SIX IN ONE	(5)
图四	快换装置	(7)
FIG4	CHANGE THE GEAR	(7)
图五	联板组合	(9)
FIG5	LINKAGE MODULE	(9)
图六	车架总成	(11)
FIG6	FRAME ASSEMBLY	(11)
图七	转向液压系统	(13)
FIG7	STEERING HYDRAULIC SYSTEM	(13)
图八	工作液压系统	(15)
FIG8	WORKING DEVICE HYDRAULIC SYSTEM	(15)
图九	四合一斗液压系统	(17)
FIG9	FOUR-IN-ONE BUCKET HYDRAULIC SYSTEM	(17)
图十	快换液压系统	(19)
FIG10	CHANGE THE HYDRAULIC SYSTEM QUICKLY	(19)
图十一	装载阀总成	(21)
FIG11	LOADER VALVE ASSEMBLY	(21)
图十二	转斗油缸	(23)
FIG12	TILTING CYLINDER ASSEMBLY	(23)
图十三	举升油缸	(25)
FIG13	LIFTING CYLINDER ASSEMBLY	(25)
图十四	手制动系统	(27)
FIG14	MANUEL BRAKE SYSTEM	(27)
图十五	行车制动系统	(29)
FIG15	DRIVING BRAKE SYSTEM	(29)
图十六	方向机组合	(33)
FIG16	STEERING WHEEL MODULE	(33)
图十七	传动系统	(35)
FIG17	TRANSMISSION SYSTEM	(35)
图十八	变速箱总成	(37)
FIG18	GEARBOX ASSEMBLY	(37)
图十九	前进低档离合器	(41)
FIG19	FORWARD LOW GEAR CLUTCH	(41)
图二十	倒退离合器总成	(43)
FIG20	REVERSE CLUTCH ASSEMBLY	(43)


图二十一 双变中间轴.....	(45)
FIG21 DOUBLE VARIABLE INTERMEDIATE AXIS.....	(45)
图二十二 双变输出轴.....	(47)
FIG22 DUAL VARIABLE OUTPUT SHAFT.....	(47)
图二十三 双变变矩器.....	(49)
FIG23 DOUBLE TORQUE CONVERTER.....	(49)
图二十四 大泵口油泵轴组件.....	(52)
FIG24 LARGE PUMP SHAFT ASSEMBLY.....	(52)
图二十五 油泵轴组件.....	(54)
FIG25 OIL PUMP SHAFT ASSEMBLY.....	(54)
图二十六 驱动桥总成.....	(56)
FIG26 AXLE ASSEMBLY.....	(56)
图二十七 驱动桥总成.....	(58)
FIG27 AXLE ASSEMBLY.....	(58)
图二十八 主减总成.....	(62)
FIG28 MASTER SUBCTION ASSEMBLY.....	(62)
图二十九 轮胎轮辋总成.....	(64)
FIG29 RIM AND TYRE ASSEMBLY.....	(64)
图三十 传动液压系统.....	(66)
FIG30 TRANSMISSION HYDRAULIC SYSTEM.....	(66)
图三十一 转向器.....	(68)
FIG31 ORBIT-ROLL VALV.....	(68)
图三十二 优先阀.....	(70)
FIG32 PRIORITY VALVE.....	(70)
图三十三 齿轮泵总成.....	(72)
FIG33 GEAR PUMP ASSEMBIY.....	(72)
图三十四 油门操纵系统.....	(74)
FIG34 THROTTLE CONTROL SYSTEM.....	(74)
图三十五 熄火机构.....	(76)
FIG35 FLAMEOUT MECHANISM.....	(76)
图三十六 座椅安装总成.....	(78)
FIG36 SEAT INSTALLATION ASSEMBLY.....	(78)
图三十七 驾驶室.....	(80)
FIG37 CAB CEILING.....	(80)
图三十八 驾驶室外装总成.....	(82)
FIG38 CAB OUTER INSTALL ASSEMBLY.....	(82)
图三十九 顶盖线路.....	(85)
FIG39 FRAME ACCESSORIES.....	(85)

图四十 底盘线路·····	(89)
FIG40 CHASSIS WIRING·····	(89)
图四十一 仪表安装·····	(91)
FIG41 INSTRUMENT INSTALLATION·····	(91)
图四十二 控制台线路·····	(95)
FIG42 CONSOLE LINE·····	(95)
图四十三 电瓶组系统·····	(99)
FIG43 BATTERY CASES SYSTEM·····	(99)
图四十四 底盘液压系统(一)·····	(103)
FIG44 CHASSIS HYDRAULIC SYSTEM (ONE)·····	(103)
图四十五 底盘液压系统(二)·····	(106)
FIG45 CHASSIS HYDRAULIC SYSTEM (TWO)·····	(106)
图四十六 挖掘液压系统(一)·····	(108)
FIG46 BZCKHOE HYDRAULIC SYSTEM (ONE)·····	(108)
图四十七 挖掘液压系统(二)·····	(110)
FIG47 BZCKHOE HYDRAULIC SYSTEM (TWO)·····	(110)
图四十八 挖掘阀支架·····	(112)
FIG48 BACKHOE VALVE FRAME·····	(112)
图四十九 油缸及阀·····	(114)
FIG49 CYLINDER AND VALVE·····	(114)
图五十 挖掘阀总成·····	(116)
FIG50 BACKHOE VALVE FRAME·····	(116)
图五十一 回转油缸·····	(119)
FIG51 SWING BYLINDER·····	(119)
图五十二 挖掘油缸·····	(121)
FIG52 BACKHOE CYLINDER·····	(121)
图五十三 斗杆油缸·····	(123)
FIG53 CROWD CYLINDER·····	(123)
图五十四大臂油缸·····	(125)
FIG54 BOOM CYLINDER·····	(125)
图五十五 支腿油缸·····	(127)
FIG55 SABILIZER CYLINDER·····	(127)
图五十六 夹紧油缸·····	(129)
FIG56 GRIPING CYLINDER·····	(129)
图五十七 伸缩油缸·····	(131)

FIG57 RETRACTABLE CYLINDER.....	(131)
图五十八 装载装置操纵机构.....	(133)
FIG58 OPERATING MECHANISM OF WORKING DECICE.....	(133)
图五十九 挖掘操纵机构.....	(135)
FIG59 EXCAVATION CONTROL MECHANISM.....	(135)
图六十 挖掘摆臂组合.....	(137)
FIG60 BACKHOE SWING ARM MODULE.....	(137)
图六十一 挖斗组合.....	(139)
FIG61 BACKHOE BUCKET MODULE.....	(139)
图六十二 挖掘大臂组合.....	(141)
FIG62 BACKHOE BOOM MODULE.....	(141)
图六十三 伸缩斗杆组合.....	(143)
FIG63 TELESCOPIC ROD.....	(143)
图六十四 伸缩臂座体组合.....	(145)
FIG64 TELESCOPIC BOOM.....	(145)
图六十五 摆架总成.....	(147)
FIG65 AUXILIARY FRAME ASSEMBLY.....	(147)
图六十六 滑动架总成.....	(149)
FIG66 SLIDE FRAME ASSEMBLY.....	(149)
图六十七 滑架推拉座.....	(151)
FIG67 SLIDING FRAME PUSH-PULL SEAT.....	(151)
图六十八 柴油机装置.....	(153)
FIG68 DIESEL ENGINE MOUNT.....	(153)
图六十九 柴油箱总成.....	(155)
FIG69 FUEL TANK ASSEMBLY.....	(155)
图七十 机油箱总成.....	(157)
FIG70 ENGINE OIL TANK ASSEMBLY.....	(157)
图七十一 发动机罩总成.....	(159)
FIG71 ENGINE HOOD ASSEMBLY.....	(159)
图七十二 变速操纵干部.....	(161)
FIG72 CONTROL SYSTEM.....	(161)
图七十三 空调系统.....	(163)
FIG73 AIR CONDITION SYSTEM.....	(163)

整机


MACHINE BODY

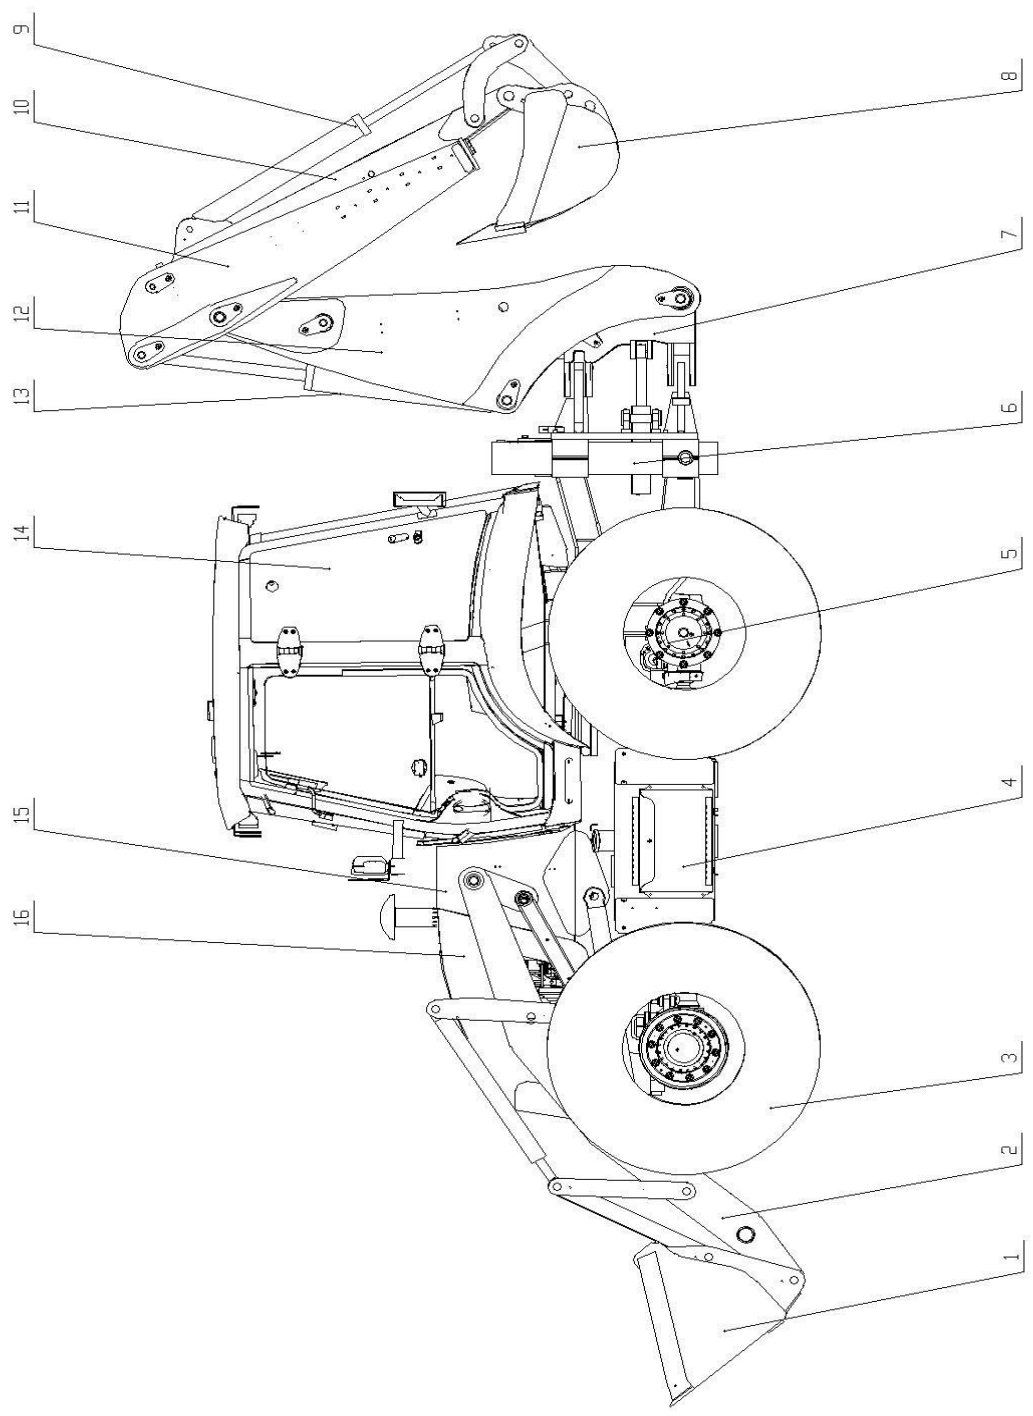

整机 MACHINE BODY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z065011021	Scoop bucket	铲斗	1	
2	Z065010150	Boom	动臂	1	
3	W110010620	Tires	轮胎	4	
4	Z065070110	Battery box	电瓶箱	1	
5	W064600000	Back loading part Axle	后桥	1	
	W064500000	Front loading part Axle	前桥	1	
6	Z065020011	Car Frame	车架	1	
7	Z061240012	Slewing frame	回转架	1	
8	Z061260001	Digging bucket	挖斗	1	
9	W053025055	Excavate the cylinder	挖掘缸	1	
10	Z050260346	Telescopic arm bucket rod	伸缩臂斗杆	1	
11	Z062260210A	Bucket rod slide frame	斗杆滑架	1	
12	Z062260012	Big Arms	大臂	1	
13	W053025800	Big Arm cylinder	大臂缸	1	
14	Z062200011	Cabin Ass'y	驾驶室部分	1	
15	W017100000	Engine	发动机	1	
16	Z061053103	Rotating hood	旋转罩	1	


动臂组合 LODER BOOM MOODULE

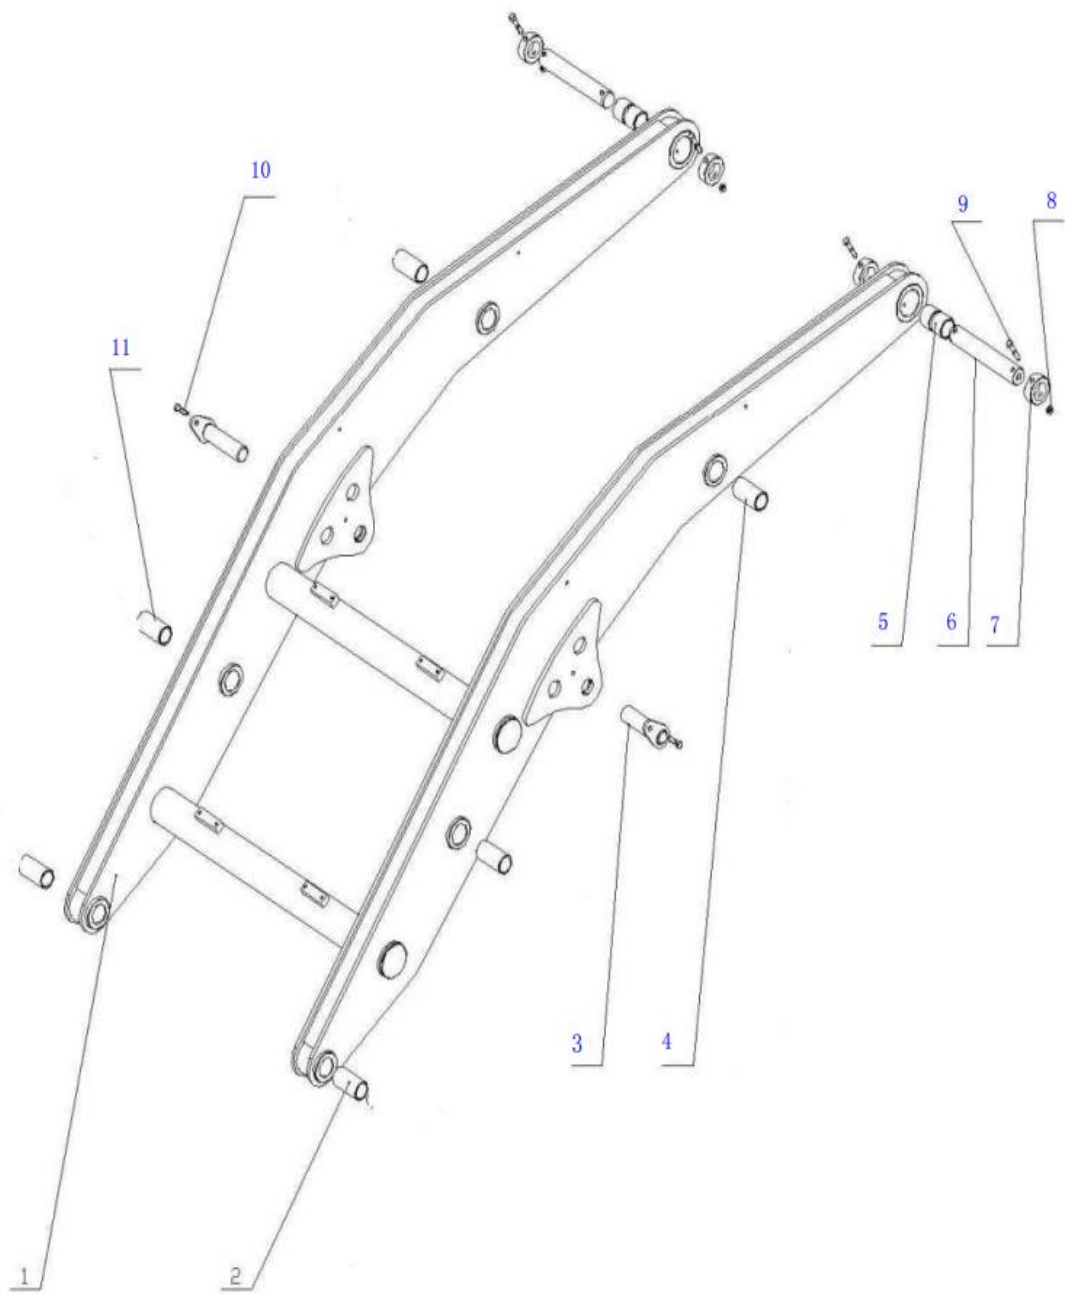

动臂组合 LODER BOOM MOODULE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z065010150	Boom	动臂	1	
2	Z062010900	Bushing	衬套	2	
3	Z062010910	Lifting cylinder front pin	举升缸前销轴	2	
4	Z062011060	Battery box	摇臂衬套	2	
5	Z062010880	Rear bushing of frame tie rod	车架拉杆后衬套	2	
6	Z061012150	Rear pin shaft of boom	动臂后销轴	2	
7	Z062010171	Block Circle	挡圈	2	
8	B190120303	Nylon lock nut	尼龙锁紧螺母	2	
9	B040611265	Bolt M12X65	螺 栓 M12X65	2	
10	B042521225	Bolt M12X25	螺 栓 M12X25	2	
11	Z062010900	Bushing	衬套	4	


快换六合一 QUICK CHANGE SIX IN ONE

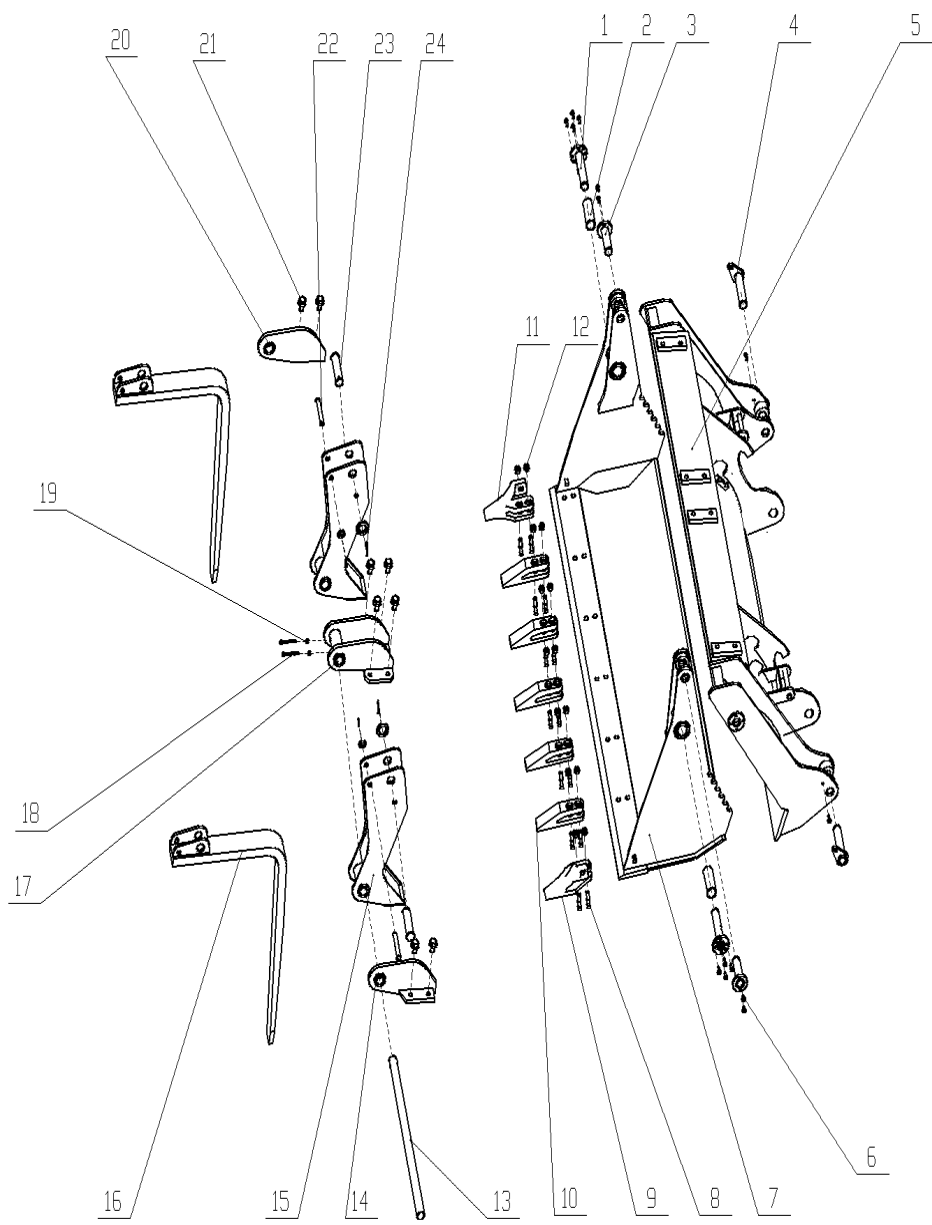

快换六合一 QUICK CHANGE SIX IN ONE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z061011590	Spindle Assembly	转轴总成	2	
2	Z061011620	Sleeve	轴套	2	
3	Z061011630	Pin shaft on cylinder	油缸上销轴	2	
4	Z061011560	Lower pin shaft of oil cylinder	油缸下销轴	2	
5	Z065011126	After four-in-one	四合一斗后	1	
6	B040910825	Bolt M8X25	螺栓 M8X25	14	
7	Z065011021	Four-in-one before	四合一斗前	1	
8	Z110010010	Bucket Tooth Bolt	斗齿螺栓	16	
9	Z110010800	Left Tooth	左边齿	1	
10	Z110010020	Bucket Teeth	斗齿	5	
11	Z110010800	Right Tooth	右边齿	1	
12	B050331614	Nut	螺母	16	
13	Z061011370	Pin	支架销轴	2	
14	Z061011330	Left support	左支座	1	
15	Z061011490	Fork stand	货叉支架	2	
16	Z061011440	Forks	货叉	2	
17	Z061011380	Shaft support	转轴支座	1	
18	B042520880	Bolt	六角法兰面螺栓	2	
19	B050210806	Nylon hexagon lock nut	锁紧螺母	2	
20	Z061011430	Right support	右支座	1	
21	B042521635	Bolt	六角法兰面螺栓	8	
22	Z061011480	Pin	定位销	2	
23	Z061011470	Pin	转销	2	
24	B080211063	Pin	开口销 6X60	2	


快换装置 **CHANGE THE GEAR**

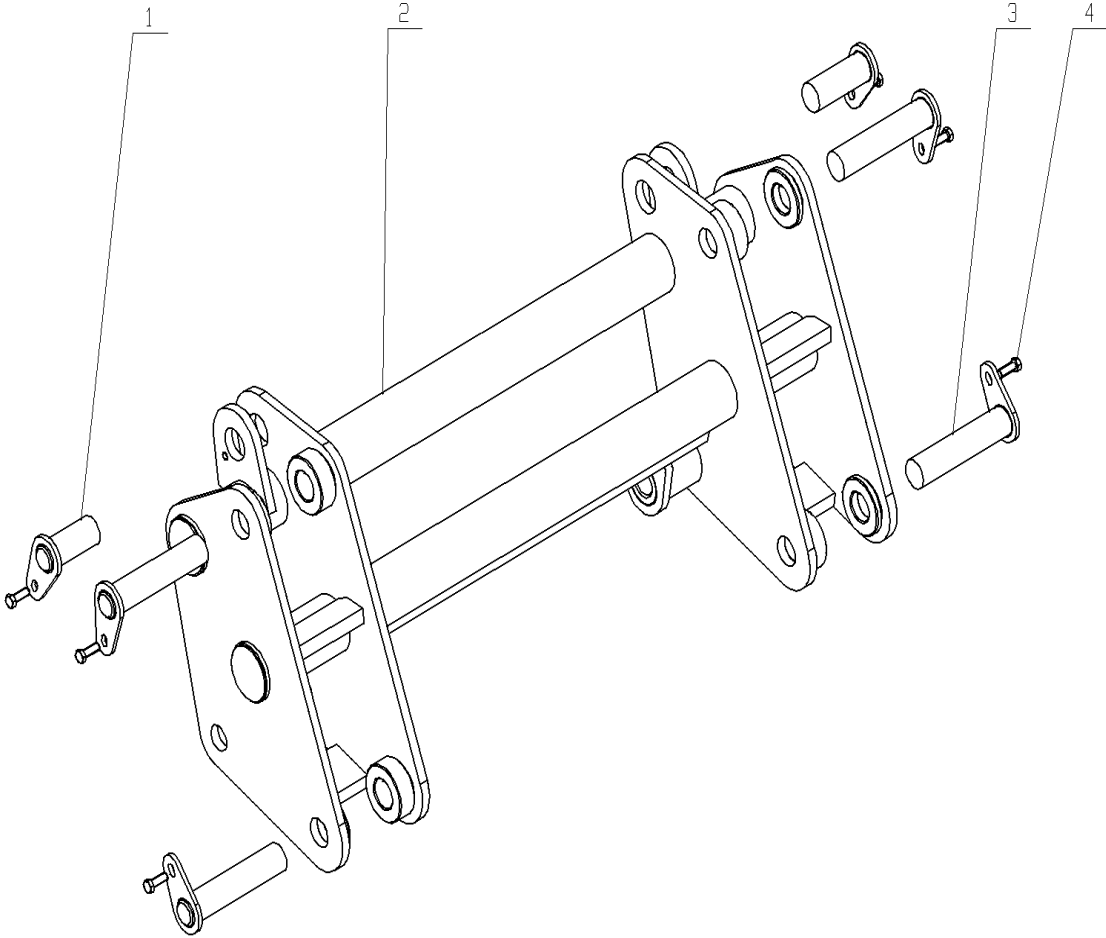

快换装置 **CHANGE THE GEAR**

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z220510251	Pin Assembly	销轴总成	2	
2	Z050700015	Change the gear	快换装置	1	
3	Z062011012	Bucket arm pin shaft	铲斗动臂销轴	4	
4	B042521225	Bolt M12X25	螺栓 M12×25	4	


联板组合 LINKAGE MODULE

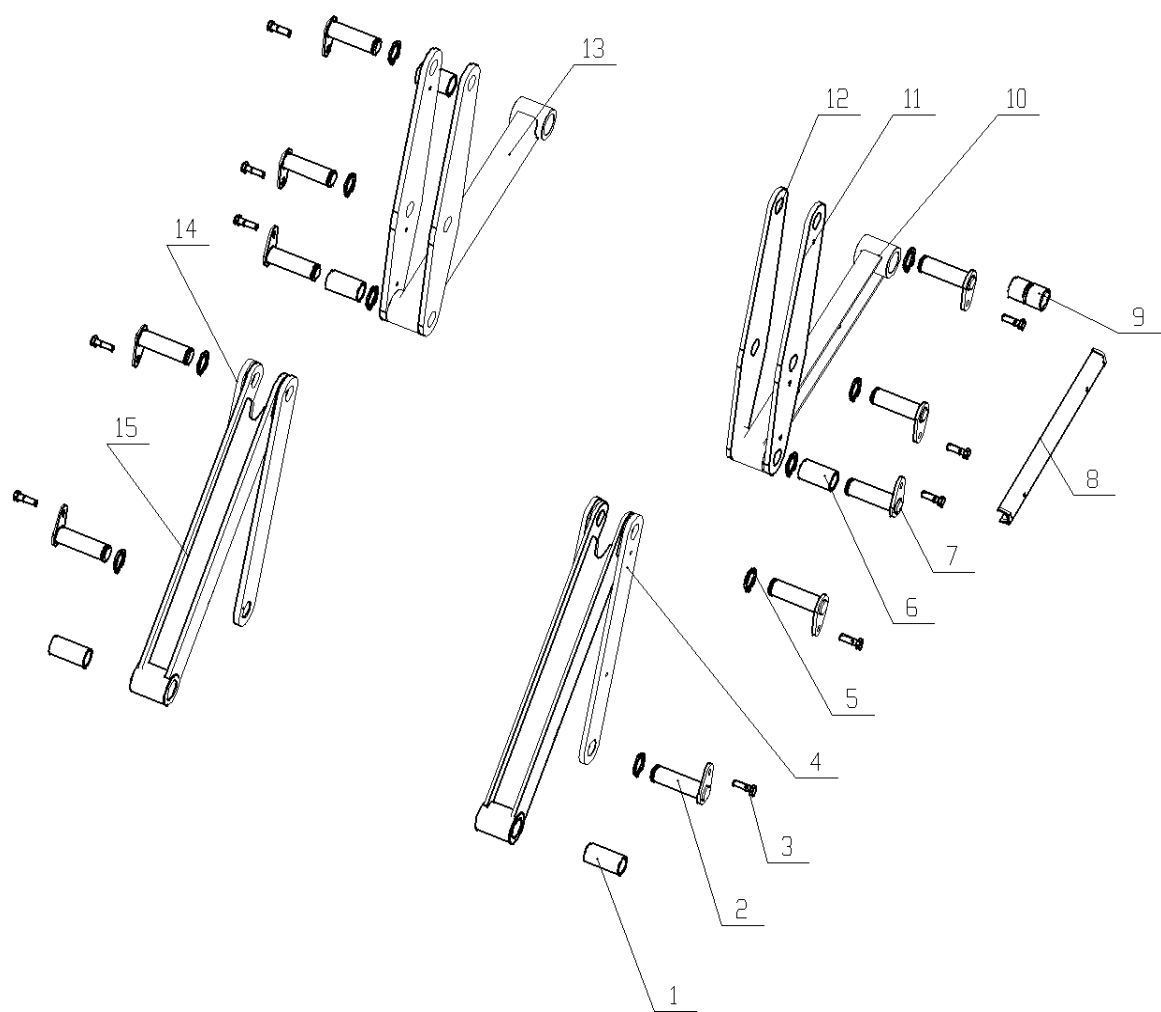

联板组合 LINKAGE MODULE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z062010900	ARM front bushing	动臂前衬套	2	
2	Z062010970	Pole pin assembly	撑杆销轴总成	2	
3	B042521225	Bolt M12×25	螺栓 M12×25	10	
4	Z065010040	External Strut	外撑杆板	2	
5	B070114502	Block Circle	挡圈	10	
6	Z062010870	Frame tie rod front bushing	车架拉杆前衬套	2	
7	Z062010940	Rocker arm pin shaft	摇臂销轴	6	
8	Z062020900	Lock Lever	锁止杆	1	
9	Z062010880	Rear bushing of frame tie rod	车架拉杆后衬套	2	
10	Z065010100	Left rear lever	左后拉杆	1	
11	Z065010060	External rocker arm	外摇臂	2	
12	Z065010080	Inner rocker arm	内摇臂	2	
13	Z065010120	Right back lever	右后拉杆	1	
14	Z065010040	External strut plate	外撑杆板	2	
15	Z065010010	Front lever	前拉杆	2	

车架体 CHASSIS


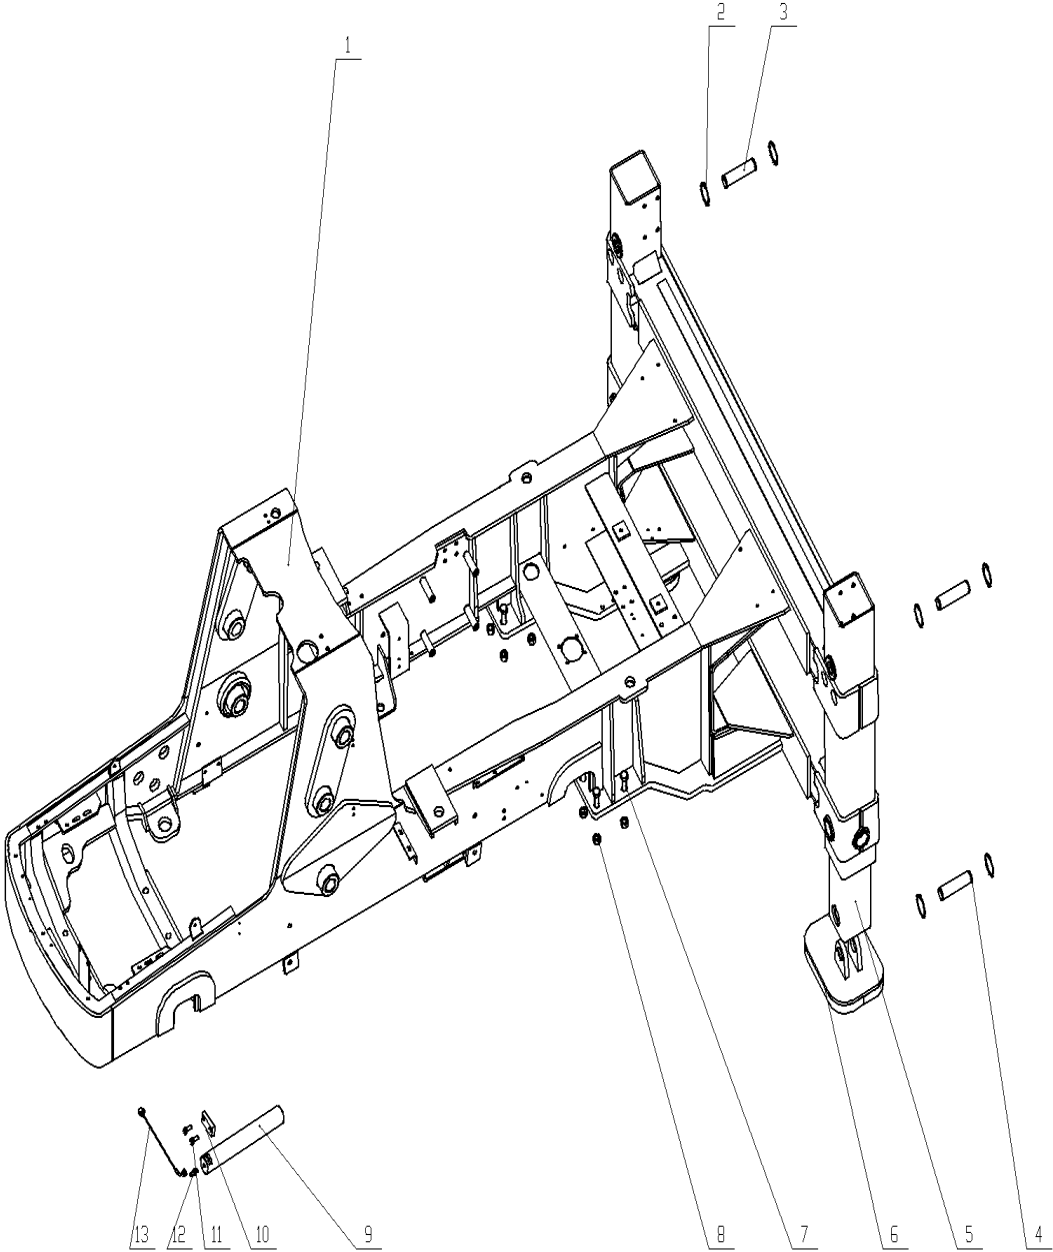


车架体 CHASSIS

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z065020011	Chassis	车架体	1	
2	B070114002	Retaining ring	挡圈(轴用)	8	
3	Z050030810	Pin shaft on outrigger cylinder	支腿缸上销轴	2	
4	Z050030671	Lower pin shaft of outrigger cylinder	支腿缸下销轴	2	
5	Z050030681	Move your legs	活动支腿	2	
6	Z050030610	Foot support	支脚	2	
7	B040820027	Bolt M24×240	螺栓 M24×240	8	
8	B050212722	Lock nut M24	锁紧螺母 M24	8	
9	Z065020050	Pin	销轴	1	
10	Z065020060	Fixed shaft plate	定轴板	1	
11	B040911035	Bolt M10×35	螺栓 M10×35	2	
12	Z350021112	Transition joint	过渡接头	2	
13	Z060020952	Lubricating oil pipe i	润滑油管 I	1	

转向液压系统

STEERING HYDRAULIC SYSTEM

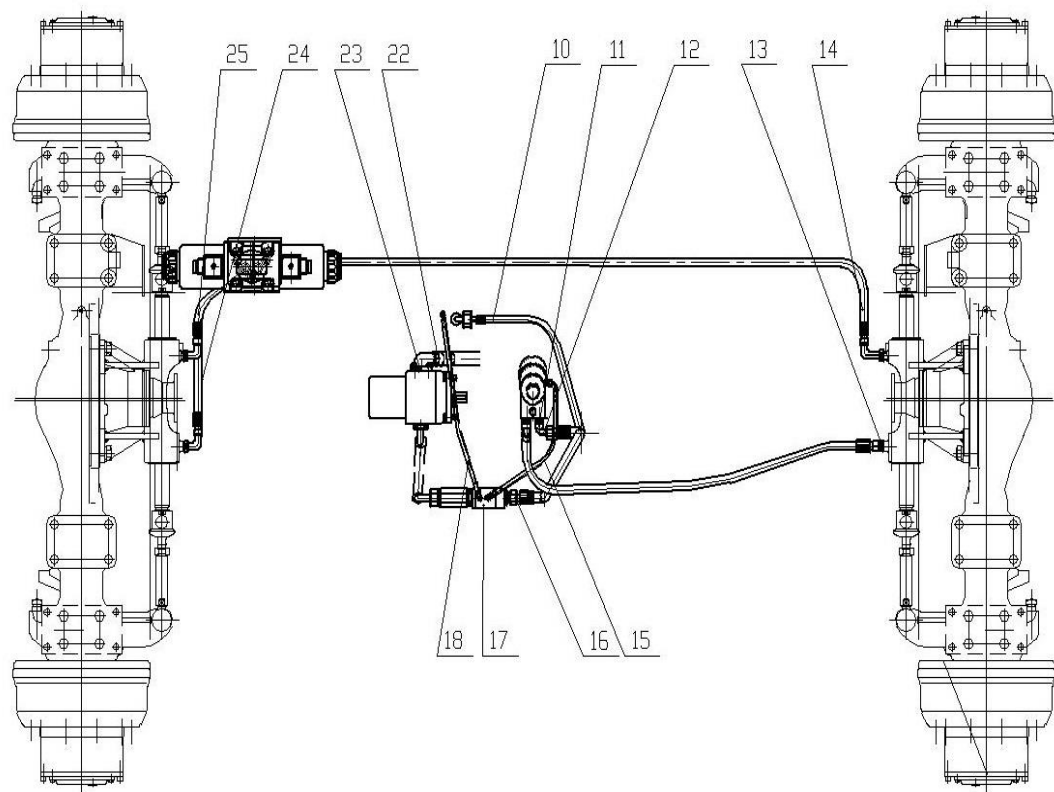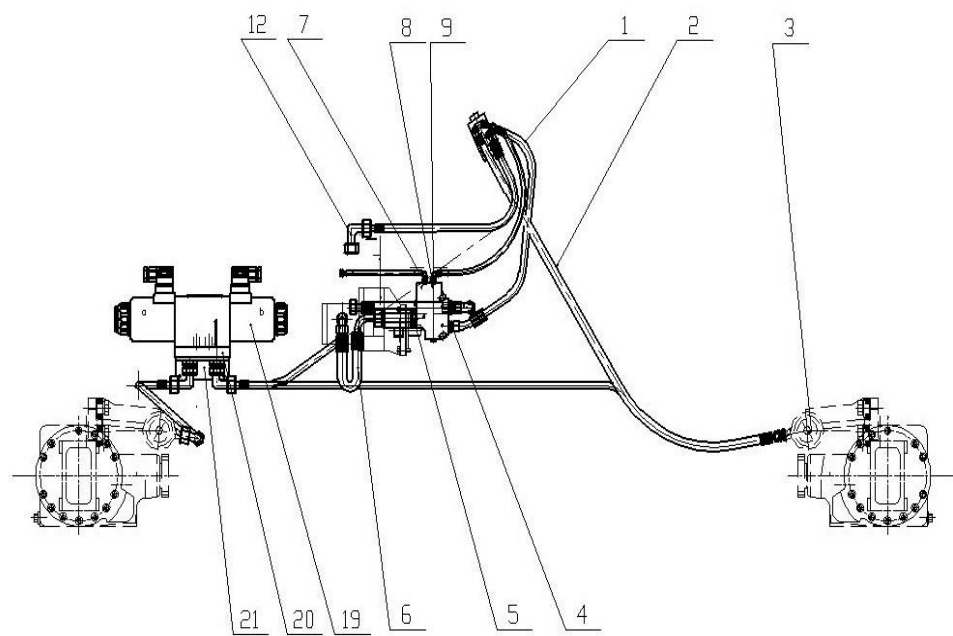


转向液压系统 STEERING HYDREULIC SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z062060030	Steering gear feed line	转向器进油管	1	
2	Z065060010	Diverter port a tubing	转向器 A 口油管	1	
3	WZL100W.01	Steering cylinder	转向缸	2	
4	Z350170030	Joint	接头	1	
5	QLWZG074-003027	Joint	直通接头	1	
6	Z062060170	Priority valve tubing	优先阀进油管	1	
7	W110250960	Joint	过渡接头	1	
8	QLWZG074-001412	Joint	直通接头	2	
9	QLWZG078-001414	Right Angle combination joint	直角组合接头	1	
10	Z062060210	Steering return tubing	转向器回油管	1	
11	Z180200230	Joint	接头	4	
12	QLWZG078-002222	Right Angle combination joint	直角组合接头	7	
13	QLWZG077-002218	Right angle adjustable joint t	直角可调接头	3	
14	Z065060230	T to the Maebashi Pipeline	T 口到前桥油管	1	
15	Z062060150	LS tubing	LS 油管	1	
16	QLWZG078-003030	Right Angle combination joint	直角组合接头	1	
17	W110000300	Priority Valve	优先阀	1	
18	Z060250261	Priority valve return line	优先阀回油管	1	
19	W070100700	Solenoid valve	电磁阀	1	
20	W070100710	Valve Plate	阀板	1	
21	Z065060301	Valve Plate	控制电磁阀阀板	1	
22	Z590190020	Low pressure oil resistant hose	低压耐油胶管	1	
23	Z590190590	Patch flange	拼合法兰	1	
24	Z065060250	valve a outlet pipe	电磁阀 A 口油管	1	
25	Z065060270	valve b outlet pipe	电磁阀 B 口油管	1	

工作液压系统

WORKING DEVICE HYDRAUIC SYSTEM

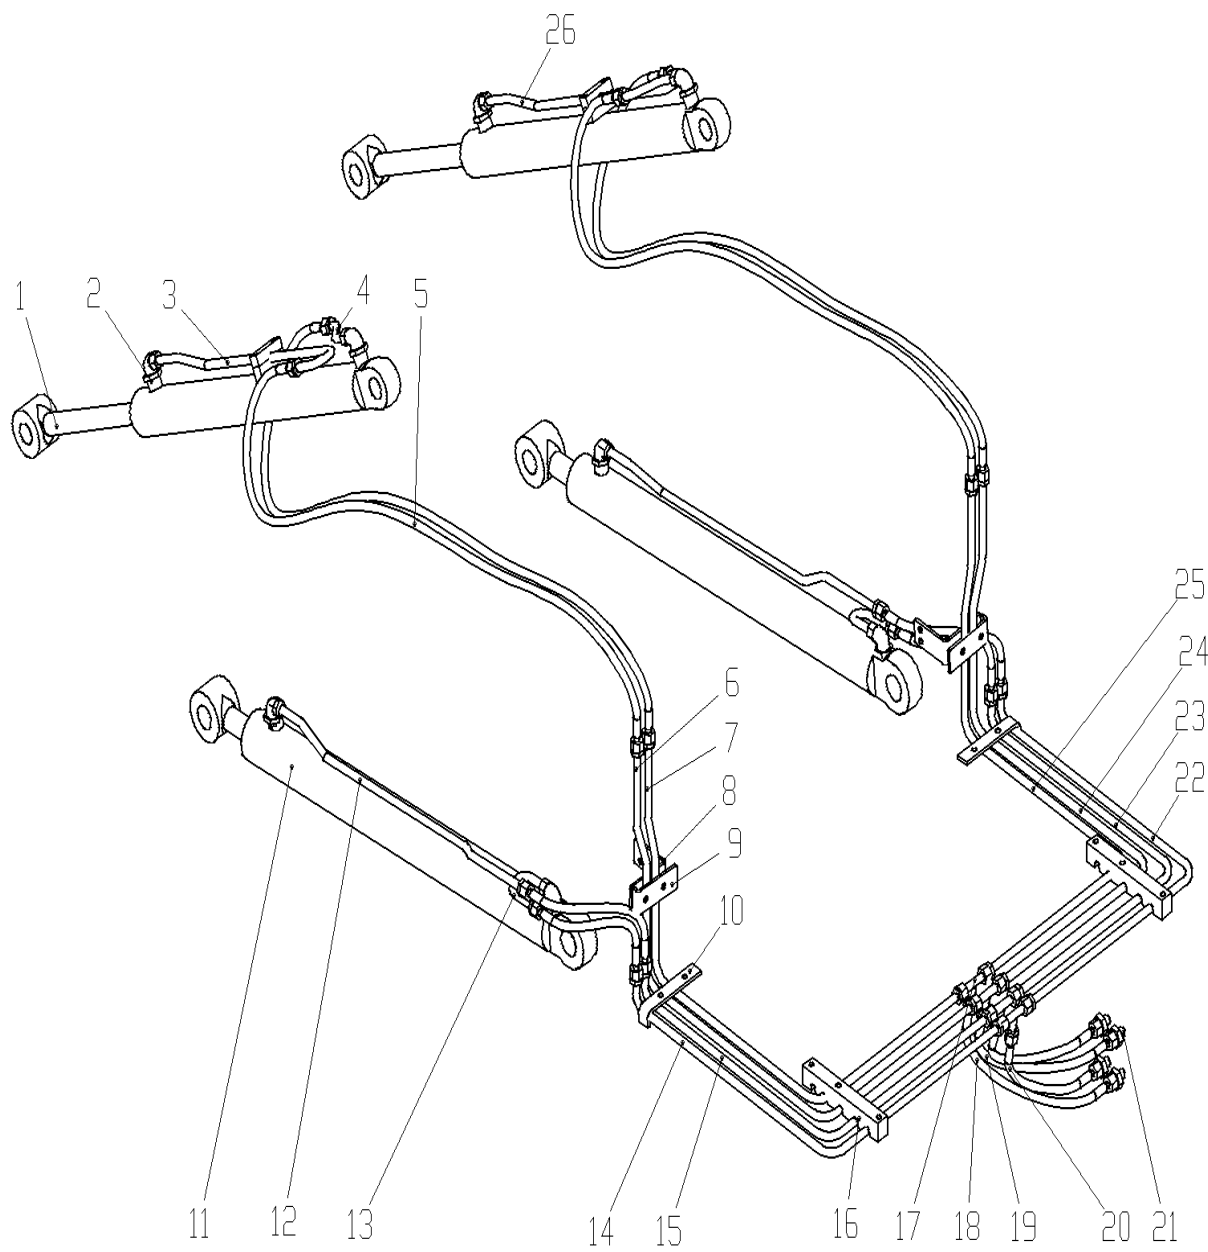


工作液压系统 WORKING DEVICE HYDRAULIC SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	
1	W053025650	Flip Bucket	装载转斗缸	2	
2	QLWZG077-002218	Right angle adjustable joint	直角可调接头	8	
3	Z062100600	Oil feed pipe	左翻斗缸小腔硬管	1	
4	Z062100550	Oil feed pipe	翻斗缸大腔硬管	2	
5	Z065100120	Tubing	转斗缸软管	4	
6	Z065100031	Oil feed pipe	左翻斗缸小腔硬管	1	
7	Z065100050	Oil feed pipe	左翻斗缸大腔硬管	1	
8	Z061100323	Stent	支架	2	
9	Z061100350	Pipe Card	管卡	2	
10	Z064100162	Pressure Plate	压板	2	
11	W053025600	Lifting cylinder	举升缸	2	
12	Z062100346	Oil feed pipe	举升缸小腔硬管	2	
13	Z062100305	Oil feed pipe	举升缸大腔硬管	2	
14	Z062100164	Oil feed pipe	左举升缸大腔硬管	1	
15	Z062100144	Oil feed pipe	左举升缸小腔硬管	1	
16	Z062100091	Pressure Plate	压板	2	
17	QLWZG079-202222	Three-way connector	三通接头	4	
18	Z062240010	Tubing	工作阀出油管 1	1	
19	Z062240050	Tubing	工作阀出油管 3	2	
20	Z064100180	Tubing	工作阀出油管 2	1	
21	Z020100200	Joint	接头	6	
22	Z064100144	Oil feed pipe	右举升缸大腔硬管	1	
23	Z064100124	Oil feed pipe	右举升缸小腔硬管	1	
24	Z065100070	Oil feed pipe	右翻斗缸小腔硬管	1	
25	Z065100090	Oil feed pipe	右翻斗缸大腔硬管	1	
26	Z062100570	Oil feed pipe	右翻斗缸小腔硬管	1	

四合一斗液压系统

FOUR-IN-ONE BUCKET HYDRAULIC SYSTEM

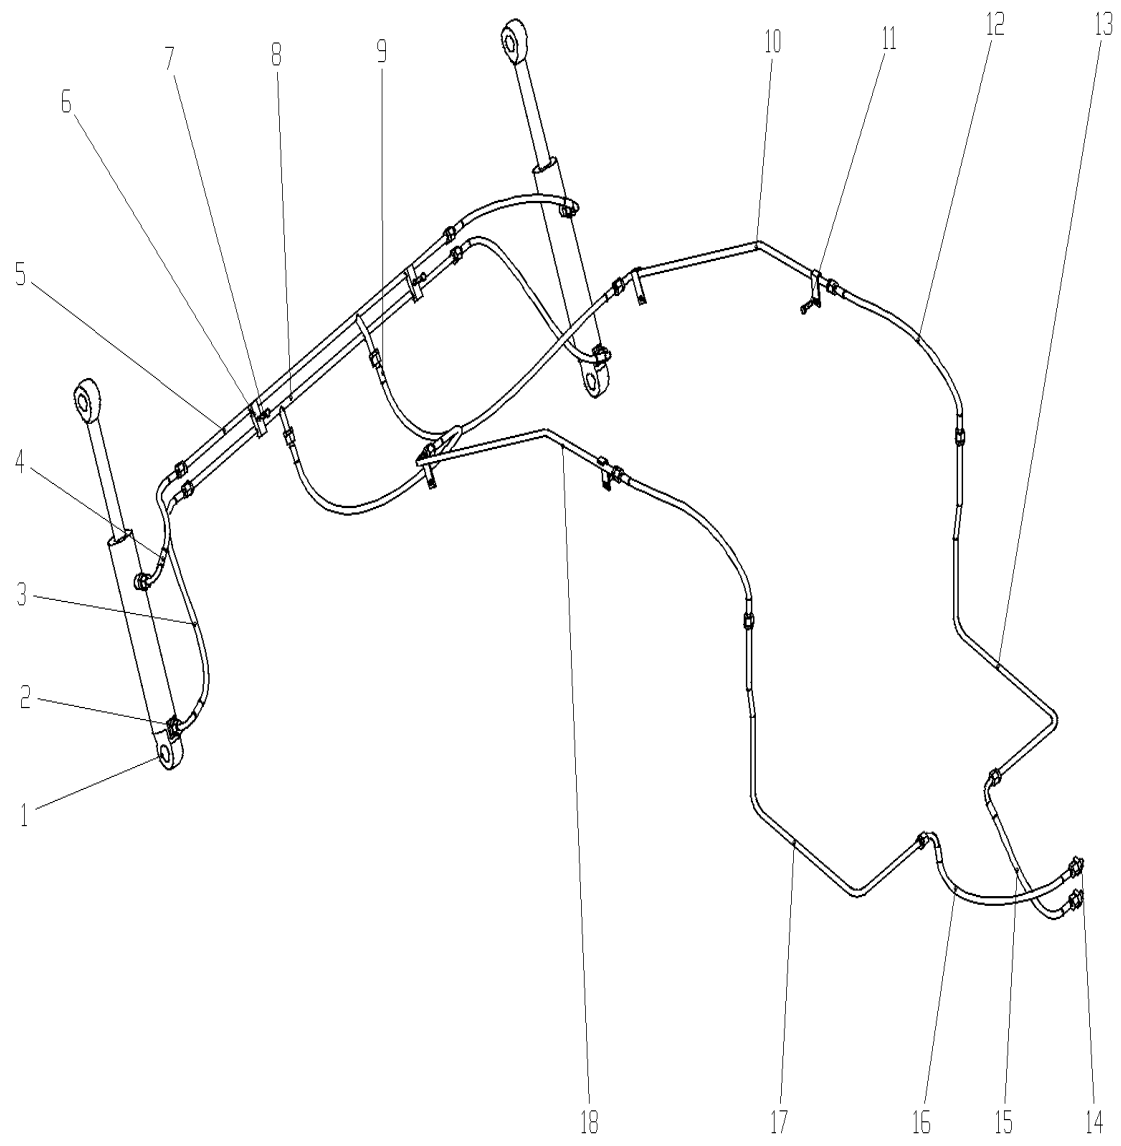


四合一斗液压系统

FOUR-IN-ONE BUCKET HYDRAULIC SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY
1	W053025350	FOUR-IN -ONE CYLINDER	四合一斗油缸	2
2	W110251910	JOINT	接头	4
3	Z065100341	CYLINDER HOSE I	油缸软管 I	2
4	Z065100361	CYLINDER HOSE2	油缸软管 2	2
5	Z050560131	Hard Tube I	硬管 I	1
6	Z050560150	PIPE CARD	管卡	2
7	B042521225	BOLT	螺栓	2
8	Z050560101	Hard Tube2	硬管 2	1
9	Z065100280	RIGHT ARM HARD TUBE	右动臂硬管	1
10	Z065100300	TUBE	三通进油管	2
11	B042521020	BOLT	螺栓	4
12	Z065100240	TUBE	动臂硬管进油管	2
13	Z065100200	THIED RIGHT HARD TUBE	第三联右侧硬管	1
14	Z020100200	JOINT	接头	2
15	Z062380010	TUBE	第三联 A 口出油管	1
16	Z062380030	TUBE	第三联 B 口出油管	1
17	Z065100220	THIED LEFT HARD TUBE	第三联左侧硬管	1
18	Z065100260	Left arm hard tube	左动臂硬管	1

快换液压系统

CHANGE THE HYDRAULIC SYSTEM QUICKLY

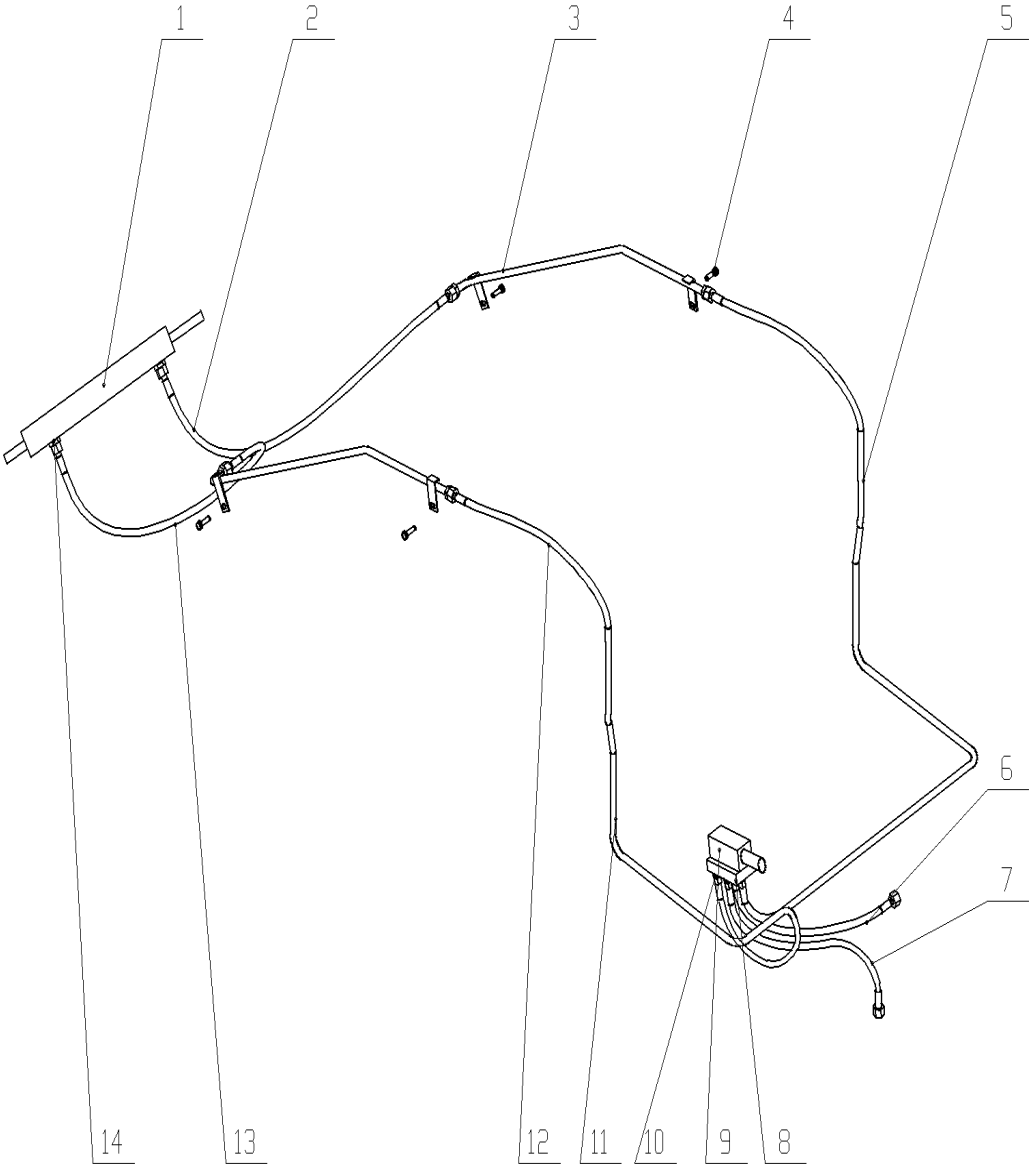


快换液压系统

CHANGE THE HYDRAULIC SYSTEM QUICKLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY
1	W055200000	Change the oil cylinder quickly	快换油缸（两头忙）	1
2	Z065100600	Change the right front tubing	快换右前油管	1
3	Z065100580	Quick change right arm hard tube	快换右动臂硬管	1
4	B040711020	Bolt M10×20	螺栓 M10×20	4
5	Z065100540	Solenoid valve B outlet pipe	电磁阀 B 口出油管	1
6	Z061100280	Tube	油管	1
7	Z065100500	Tube	油管	1
8	W070100250	Valve Plate	阀板	1
9	W072000000	Wet solenoid directional valve	湿式电磁换向阀	1
10	Z590190940	Joint	过渡接头	4
11	Z065100520	Solenoid valve a outlet pipe	电磁阀 A 口出油管	1
12	Z065100560	Quick change left arm hard tube	快换左动臂硬管	1
13	Z065100620	Change the left front tubing	快换左前油管	1
14	Z350730590	Jont	接头	2


装载阀 LOAD VALVE

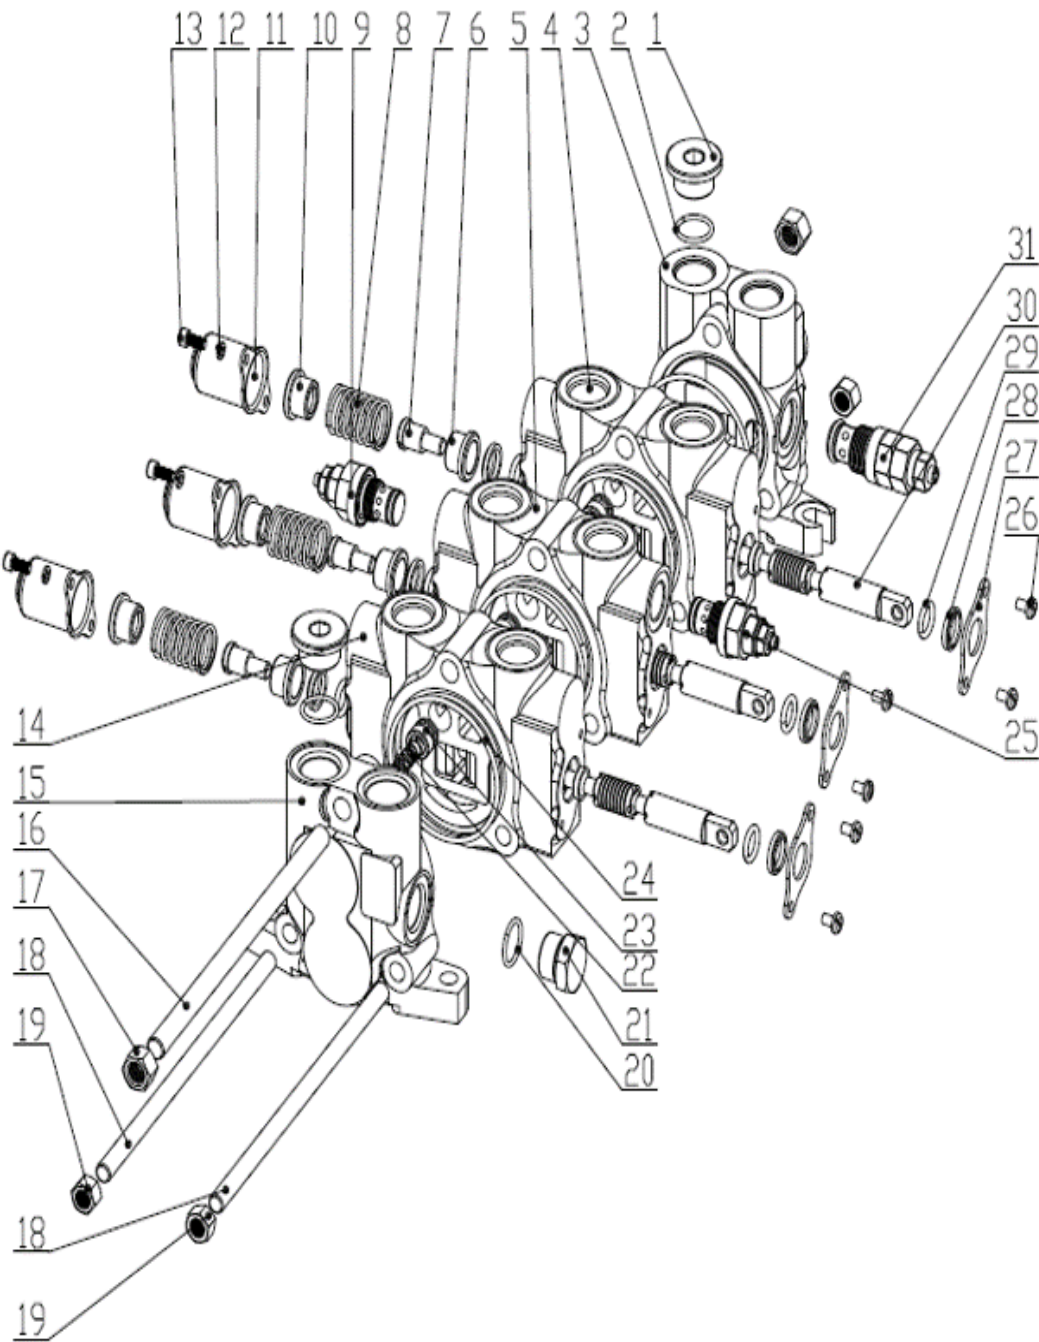

装载阀 LOAD VALVE

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
1	ACV-L25F-21	Screw plug	螺塞	3	
2	ISO6149/26.6x2.9	C-ring 26.6X2.9	O 型圈/26.6x2.9	3	
3	CDB-F20D-1.01d1	Inlet valve body	进油阀体	1	
4	CDB-F20-2.07	Valve Body	阀体	1	
5	CDB-F20-3.04c	Valve Body	阀体	1	
6	CDB20-2.03	Spring seat	弹簧座	3	
7	CDB20-2.05	Setting screw	定位螺钉	3	
8	CDB-F20-2.04a	Spring	弹簧	3	
9	XDYF20-02-00	Secondary Relief Valve	二次溢流阀	1	
10	CDB20-2.20	Spring seat	弹簧座	3	
11	CDB-F20-2.06	Positioning end cap	定位端盖	3	
12	GB93/6	PAD/6	弹垫/6	6	
13	GB70/M6x14	Hexagon Screw/M6X14	内六角螺钉/M6x14	6	
14	CDB-F20-3.04	Valve Body	阀体	1	
15	CDB-F20-5.00	Return valve body	回油阀体	1	
16	CDB-F20-7.00.3	Double headed bolt	双头螺栓 /M14x1.5x269	1	
17	GB6171/M14x1.5	Nut M14X1.5	螺母/M14x1.5	2	
18	CDB-F20-6.00.3	Stud Bolt /M12X1.25X269	双头螺栓 /M12x1.25x269	2	
19	GB6176/M12x1.25	Nut M12X1.25	螺母/M12x1.25	4	
20	B160120236	O-ring 23.6X2.65	O 型圈/23.6x2.65	1	
21	CDB-F20-1.09	Screw plug	螺塞	1	
22	CDB-F20-2.01	Spring	弹簧	3	
23	CDB-F20-2.02	Check Valve	单向阀	3	
24	GB3452.1/87.5x3.55	O-ring 87.5X3.55	O 型圈/87.5x3.55	4	
25	XDYF20-02/03.20	Secondary Relief Valve	二次溢流阀	1	
26	GB67/M6x10	Half Round head screw	半圆头螺钉/M6x10	6	
27	CDB-F20-2.11	Backing Plate	垫板	6	
28	CDB-F20-2.10	Nylon retaining ring	尼龙挡圈/25x3.2	6	
29	2-210	O-ring	O 型圈 18.64x3.53	6	
30	CDB20-4.01-02	Type 0 stem	O 型阀杆	3	
31	XDYF25-01b-00	Main Relief Valve	主溢流阀	1	


转斗油缸 TILT CYLINDER

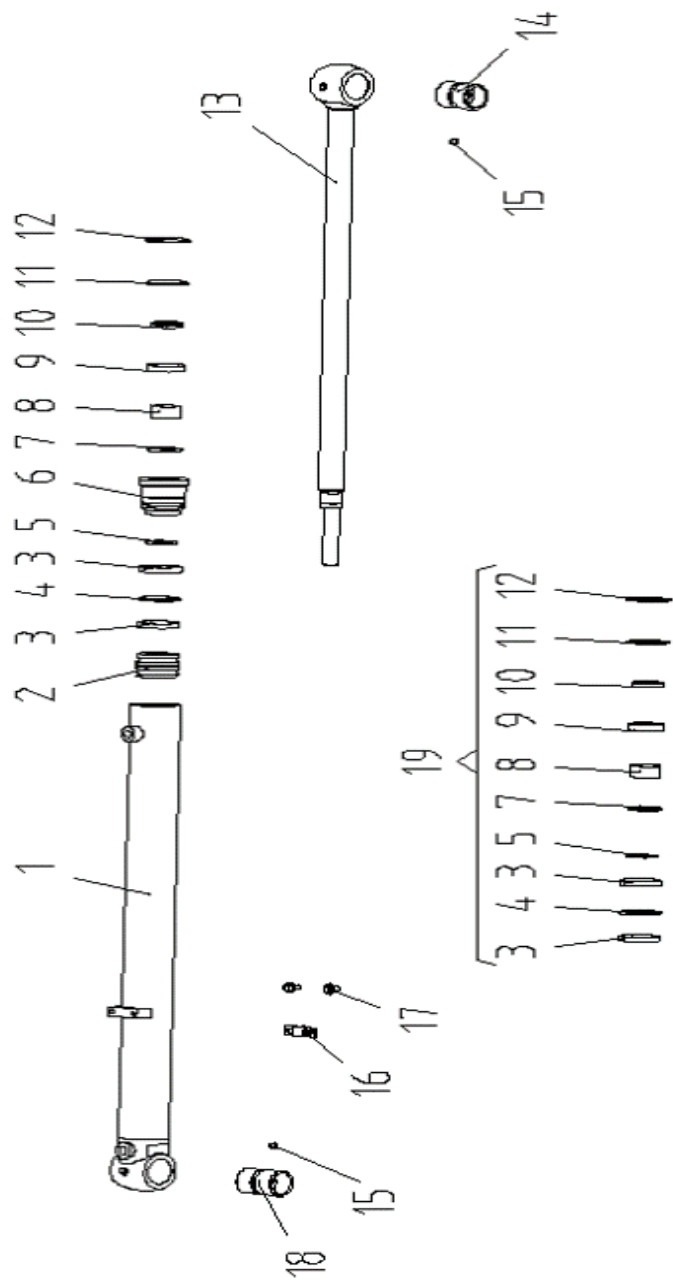

转斗油缸 TILT CYLINDER

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	ZD100	Cylinder block	缸体	1	
2	ZL30QG.30A-1	Piston	活塞	1	
6	ZD002	Guide sleeve	导向套	1	
13	ZD200	Piston rod	活塞杆	1	
14	ZD012	Rod bushing	杆衬套	1	
15	GB1152	Oil Cup M10 * 1	油杯 M10*1	2	
16	ZD117	Pipe Clip	管夹	1	
17	GBT16674.1	Hexagon flange bolts M10 * 15	六角法兰面螺栓 M10*15	2	
18	ZD011	Cylinder head bushing	缸头衬套	1	
19	W053025650-1	Sealed package	密封包	1	

举升油缸
 LIFTING CYLINDER

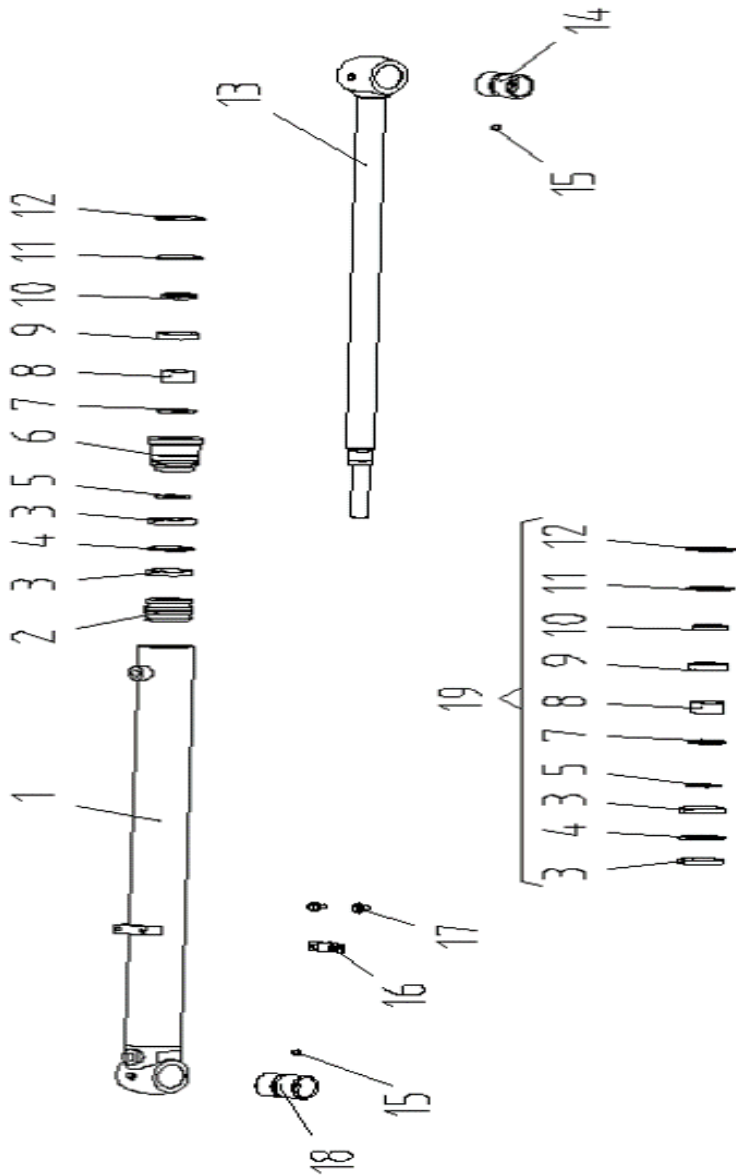


举升油缸 LIFTING CYLINDER

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	ZD100	Cylinder block	缸体	1	
2		Piston	活塞	1	
6	ZD002	Guide sleeve	导向套	1	
13	WZD200	Piston rod	活塞杆	1	
14	ZD012	Rod bushing	杆衬套	1	
15	GB1152	Oil Cup M10 * 1	油杯 M10*1	2	
16	ZD117	Pipe Clip	管夹	1	
17	GBT16674.1	Hexagon flange bolts	法兰面螺栓 M10*15	2	
18	B120525035	Joint Bearing 50	关节轴承 50	1	
19	W053025600-1	Sealed package	密封包	1	

手制动系统

MANNEL BRAKE SYSTEM

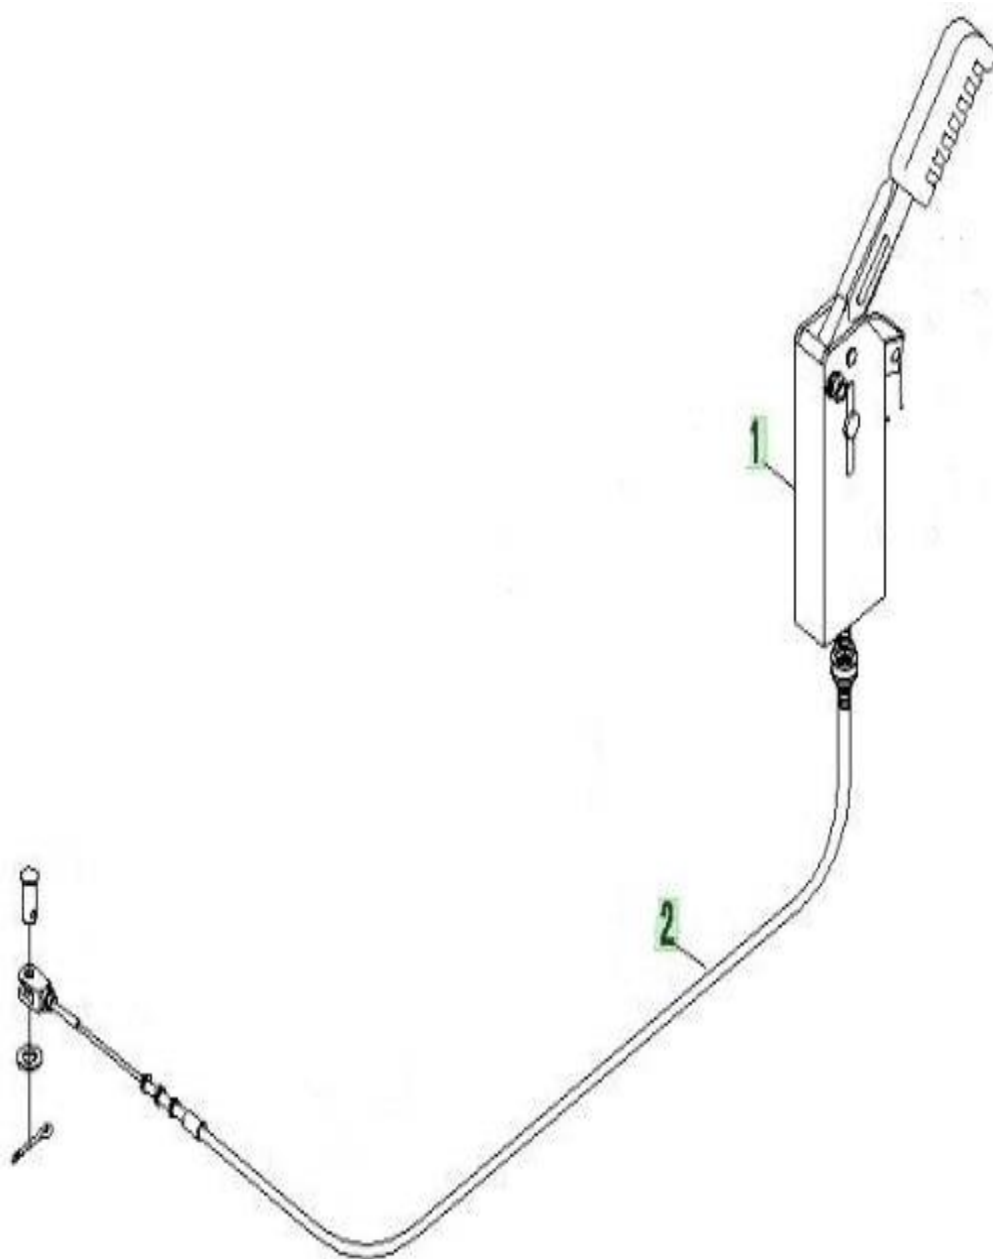


手制动系统

MANNEL BRAKE SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W013500762	Handbrake assembly	手刹总成	1	
2	W013500762-1	Flexible shaft	软轴	1	

行车制动系统

DRIVING BRAKE SYSTEM

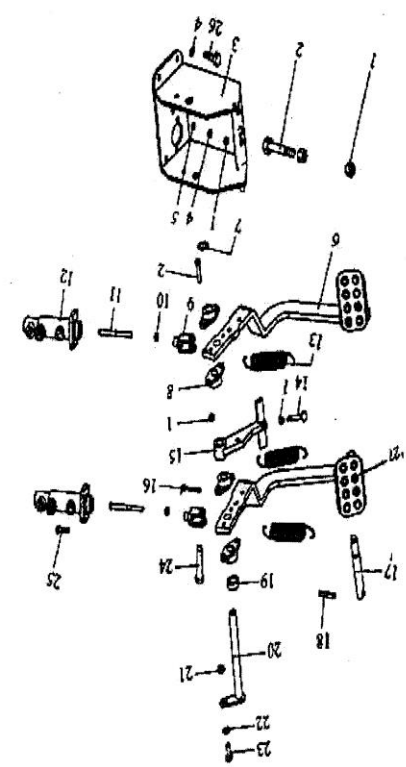


行车制动系统

DRIVING BRAKE SYSTEM

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
1	B050360807	Nuts M8	螺母	9	
2	B040810840	Bolt M8X40	螺栓 M8X40	5	
3	Z060110870	Support	支架	1	
4	B060310802	Washer 8	垫圈 8	4	
5	B060311003	Washer 10	垫圈 10	2	
6	Z060110810	Pedals	踏板	1	
7	B060212003	Washer	垫	1	
8	Z060110860	Joint cover	连接套	4	
9		Clevis	横夹	2	
10	B050360807	Nuts	螺母 M8	2	
11	Z060110930	Rod	顶杆	2	
12	W070800020	Brake pump	刹车泵	2	
13	Z060110920	Spring	弹簧	3	
14	B040710816	Bolt	螺栓	1	
15		Joint	连接板	1	
16	B080210002	Pin	销	2	
17	Z060110780	Pin shaft	销轴	1	
18		Pin	销	1	
19	Z050140130	Bushing	轴套	2	
20	B080330835	Pin shaft	销轴	1	
21	B050311008	Nuts	螺母 M10	1	
22	B060311003	Washer	垫圈 10	1	
23	B040711025	Bolt	螺栓 M10X25	1	
24	B080311032	Pin	销轴 10X32	2	
25	B040710830	Bilt	螺栓 M8X30	4	
26	B042520820	Bolt	螺栓 M8X20	4	
27	Z060110810	Pedal	踏板	1	


行车制动系统(二) DRIVING BRAKE SYSTEM(TWO)

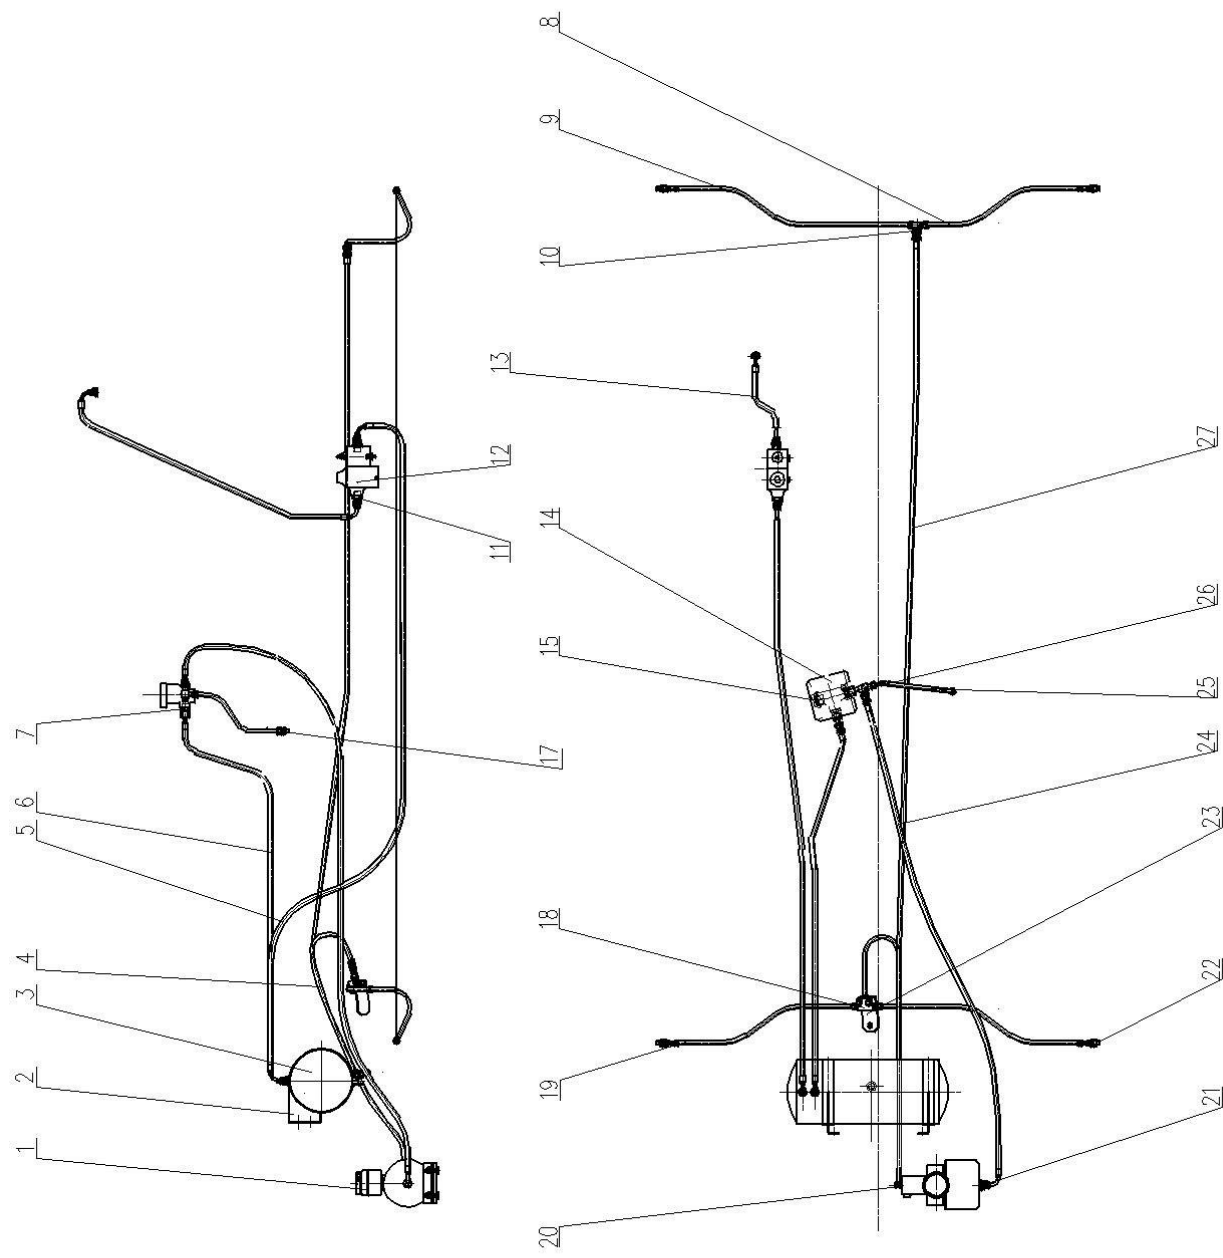

行车制动系统(二) DRIVING BRAKE SYSTEM(TWO)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W062100001	Air Booster pump	空气加力泵	1	
2	Z064220100	Right bracket	右支架	1	
3	Z110070355	Gas storage tank	贮气筒 (L=380)	1	
4	Z065220030	Booster pump out of the tubing	加力泵出油管	1	
5	Z065220160	Air Bag intake pipe	气包进气管	1	
6	Z064220030	Air Bag outlet tube	气包出气管	1	
7	Z150110150	Air compressor outlet connector	空压机出气口接头	2	
8	Z065220140	Front axle right brake inlet pipe	前桥右制动进油管	1	
9	Z065220120	Front axle left brake inlet tubing	前桥左制动进油管	1	
10	Z065220350	Front axle brake tee joint	前桥刹车三通接头	1	
11	Z590220070	Oil-water separator inlet and outlet joint	油水分离器进出接头	2	
12	W110002580	Multifunctional unloading valve	多功能卸荷阀	1	
13	Z050110030	Air compressor outlet pipe	空压机出气管	1	
14	W910000100	Air Brake Valve	气制动阀	1	
15	Z064220160	Screw Block	螺堵	1	
17	Z590220230	Tubing fittings	油管接头	1	
18	Z590220190	Three-way board	三通板	1	
19	Z065220050	Rear axle brake inlet pipe	后桥制动进油管	2	
20	W110250962	Transition Joint	过渡接头	4	
21	W44000055	Right angle transition joint	直角过渡接头	1	
22	W110250961	Transition Joint	过渡接头	4	
23	Z065220110	Rear axle three-way oil board frame	后桥三通油路板架	1	
24	Z065220010	Foot brake air outlet	脚刹出气管	2	
25	Z060110140	Transmission valve tubing	变速阀油管	1	
26	Z050110160	Brake valve outlet tee	制动阀出气三通接头	1	
27	Z065220070	Front axle tee into tubing	前桥三通进油管	1	


方向机组合 STEERING MECHANISM MODULE

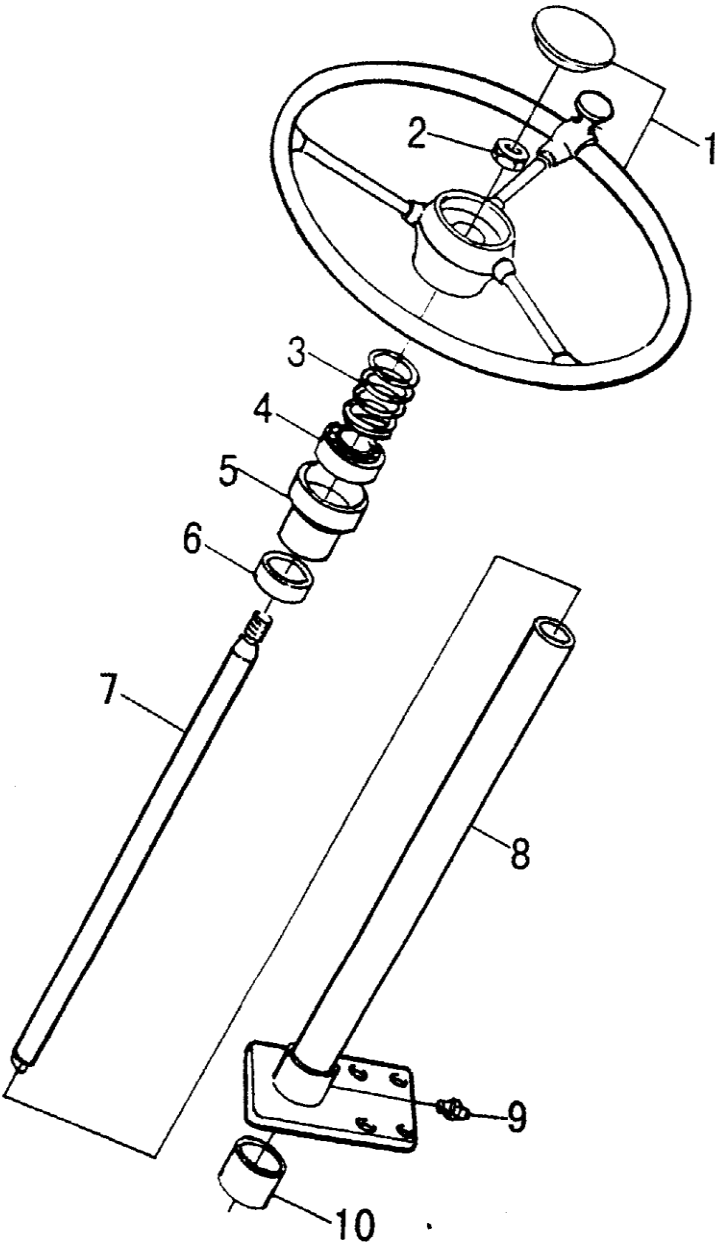

方向机组合 STEERING MECHANISM MODULE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W090120000	The steering wheel	方向盘	1	
2	GB6173-2000	Nut	螺母	1	
3	Z110050100	Spring	弹簧	1	
4	W110001650	Bearing	轴承	1	
5	W110002570	Horn relay ring	喇叭继电环	1	
6	Z110050110	Nesting	嵌入套	1	
7	Z110050010	Steering Shaft	转向轴	1	
8	Z110050060	Steering String	转向管柱	1	
9	B150101000	Butter nozzle	黄油嘴	1	
10	Z110050120	Axle sleeve	轴套	1	

传动系统 TRNSMISSION SYSTEM

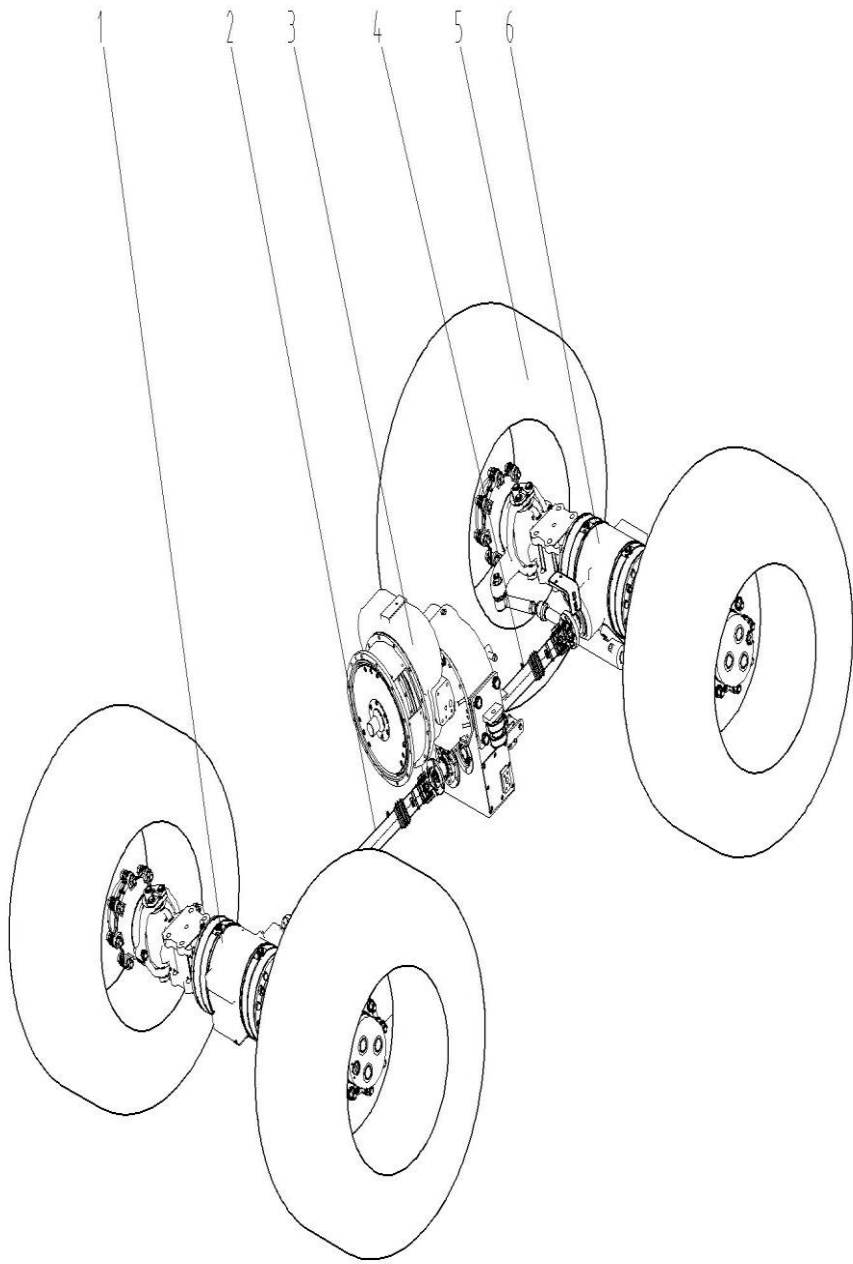


传动系统 TRNSMISSION SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remar k
1	W064500000	Front drive axle assembly	前驱动桥总成	1	
2	Z065150011	Front drive shaft	前传动轴	1	
3	W024200000	Gearbox	变矩器变速箱	1	
4	Z065150021	Rear drive shaft	后传动轴	1	
5	W110010620	Tire	轮胎(无内胎)	4	
6	W064600000	Rear drive axle assembly	后驱动桥总成	1	

变速箱总成


GEARBOX SSEMBLY

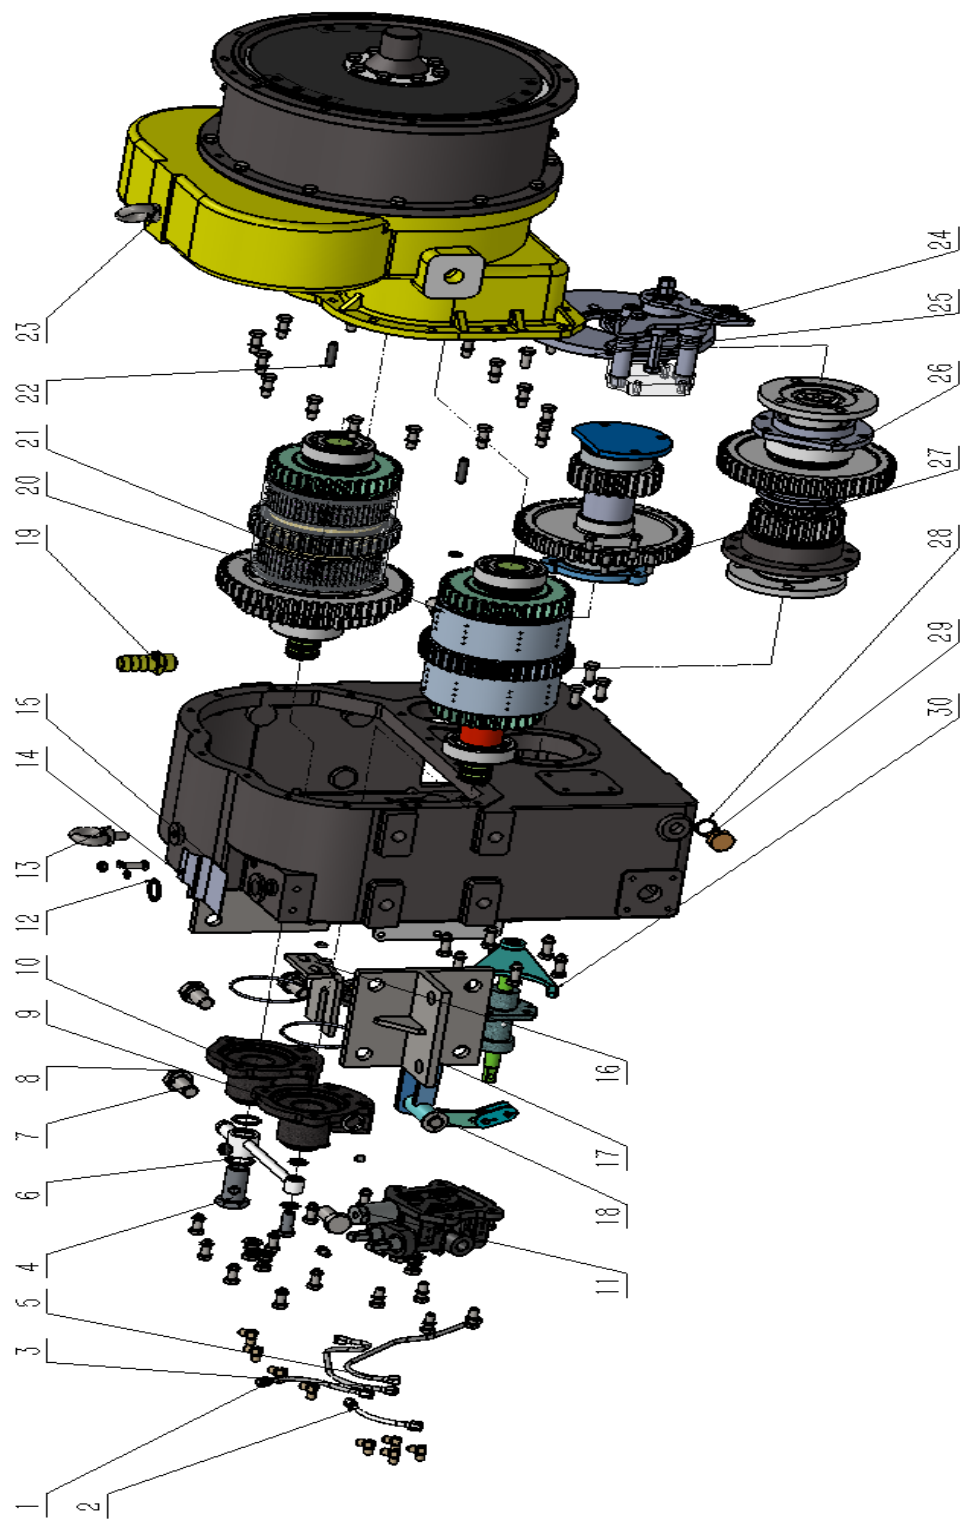

变速箱总成 GEARBOX SSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	03.04.230	Forward tubing	前进油管	1	
2	03.06.051	First gear tubing	一档油管	1	
3	03.04.250	Reverse fuel line	倒档油管	1	
4	ZL15.5-28	Hollow Bolt M27X2	空心螺栓 M27X2	1	
5	03.04.260	Second gear tubing	二档油管	1	
6	ZL30D.1-02	Lubricating pipe	润滑油管	1	
7	B040912030	Bolt M20X30	六角头螺栓	7	
8	B060101007	Washers 20	弹性垫圈 20	8	
9	ZL15.5.3-1D	End cap M14X1.5	端盖 M14X1.5	1	
10	ZL15.5.4-1D	End cap M27X2	端盖 M27X2	1	
11	ZL16FXG	Shift Valve	换挡阀	1	
12	B060812703	Combination pad 27	组合垫 27	3	
13	03.04.451	Hanger ring screws M12	吊环螺钉 M12	1	
14	W024200120	Box Body	箱体	1	
15	ZL15.5-30	Oil Baffle	挡油板	1	
16	ZL30W.6-03	Cable holding plate	拉线固定板	1	
17	W024200100	Gearbox left bracket	变速箱左支架	1	
18	W024200110	High and low speed bracket assembly	高低速支架总成	1	
19	YJ240F-24	Return Tubing Connector 25	回油管接头 25	1	
20	W024200010	Reverse Clutch Assembly	倒档离合器总成	1	
21	W024200020	Forward Clutch Housing Assembly	前进离合器壳体总成	1	
22	ZL15.5-35	Locating Pin	定位销	2	
23	W024200030	Torque converter assembly	变矩器总成	1	
24	W024200040	General drawing of caliper disc brake	钳盘制动器总图 (左)	1	
25	W024200050	Small brake disc	小刹车盘	1	
26	W024200060	Output shaft assembly	输出轴总成	1	
27	W024200070	Intermediate Shaft Assembly	中间轴总成	1	
28	B060812002	Combination pad 20	组合垫 20	1	
29	ZL15.5.7-1	Drain plug M20X1.5	放油螺塞 M20X1.5	1	
30	W024200080	Fork support assembly	拨叉支架总成	1	


变速箱总成 GEARBOX SSEMBLY

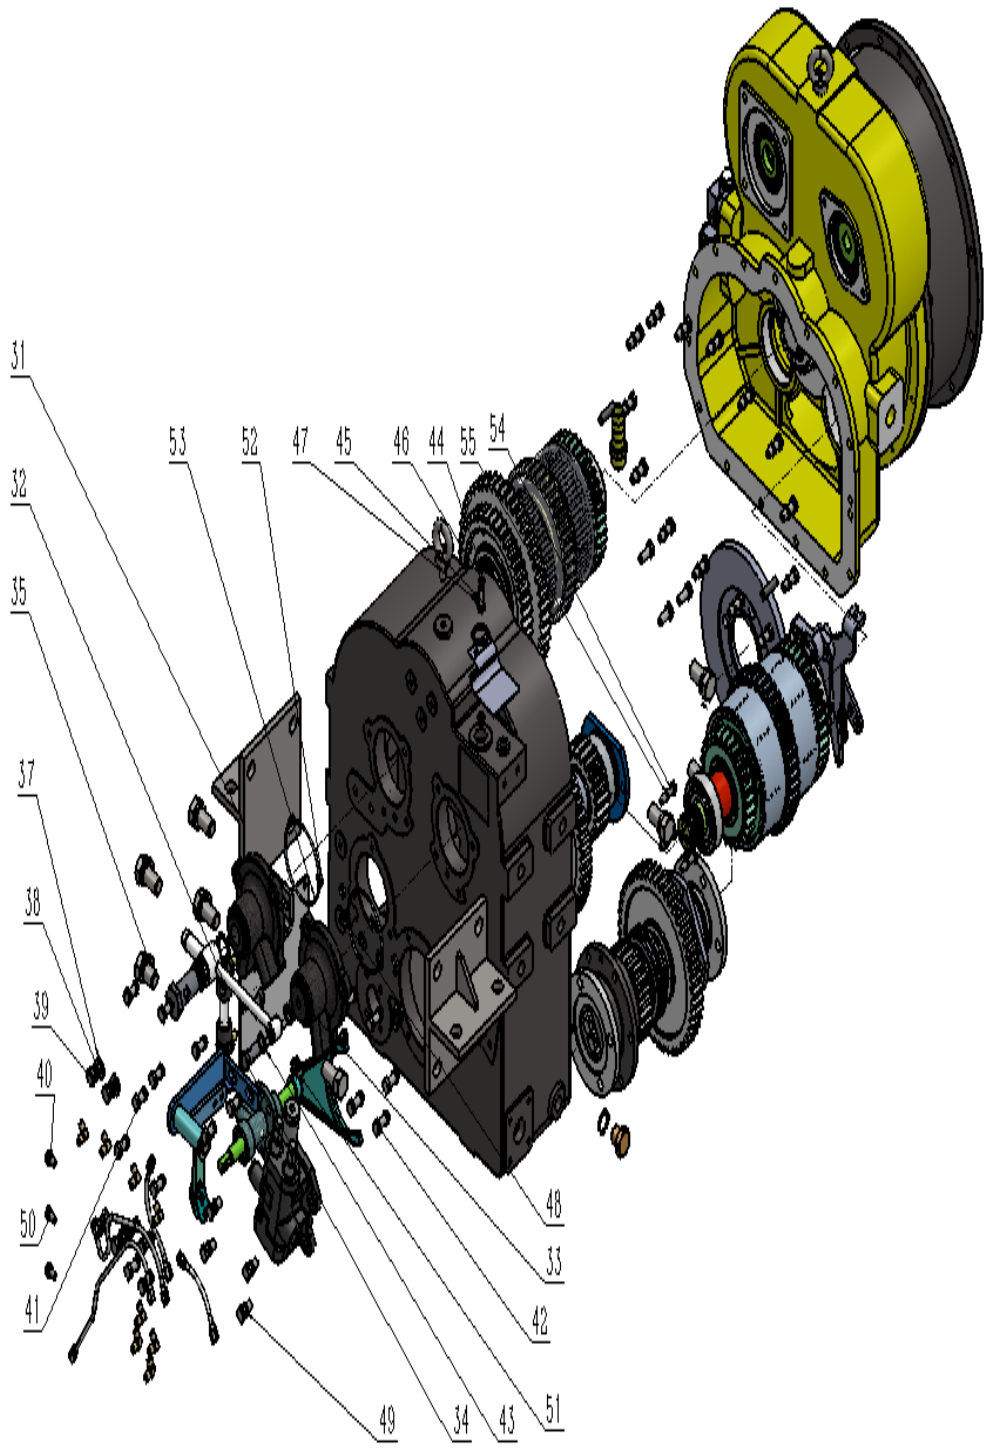

变速箱总成 GEARBOX SSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
31	W024200090	Gearbox right bracket	变速箱右支架	1	
32	ZL15.5.8	Oil Mark	油标	1	
33	W024200130	Window cover	窗口盖板	1	
34	ZL15.5-29	Hollow Bolt M14X1.5	空心螺栓 M14X1.5	1	
35	B040912030	Bolt M20X30	六角头螺栓	1	
36	ZL15.5-2	Right Angle joint	直角接头	8	
37	B061621225	Plain washers class A 12	平垫圈 A 级 12	4	
38	B060111203	Elastic Washer 12	弹性垫圈 12	4	
39	B040911225	Bolt M12X25	六角头螺栓	4	
40	B040710816	Bolt M8X16	六角头螺栓 M8×16	8	
41	B040711025	Bolt M10X25	六角头螺栓	20	
42	B040611030	Bolt M10X30	六角头螺栓	27	
43	B060801403	Combined Washer 14	组合垫圈 14	2	
44	03.04.342	Nut M8	六角螺母 M8	1	
45	B040910825	Bolt M8X25	六角头螺栓 M8×25	1	
46	B060110802	Elastic Washer 8	弹性垫圈 8	13	
47	B060810802	Combined Washer 8	组合垫 8	1	
48	JB/ZQ4446	Hexagon Socket R 3	内六角螺塞 R3	1	
49	B060111003	Elastic Washer 10	弹性垫圈 10	47	
50	B060110802	Elastic Washer 8	弹性垫圈 8	8	
51	03.04.342	RC1/8 plug	RC1/8 丝堵	4	
52	B160120106	O-ring 10.6X2.65	O 型密封圈	4	
53	B160120950	O-ring 95X2.65	O 型圈 95X2.65	2	
54	B040910835	Bolt M8X35	六角头螺栓 M8×35	4	
55	B060110802	Elastic Washer 8	弹性垫圈 8	4	

前进低档离合器 FORWARD LOW GEAR CLUTCH (W024200020)

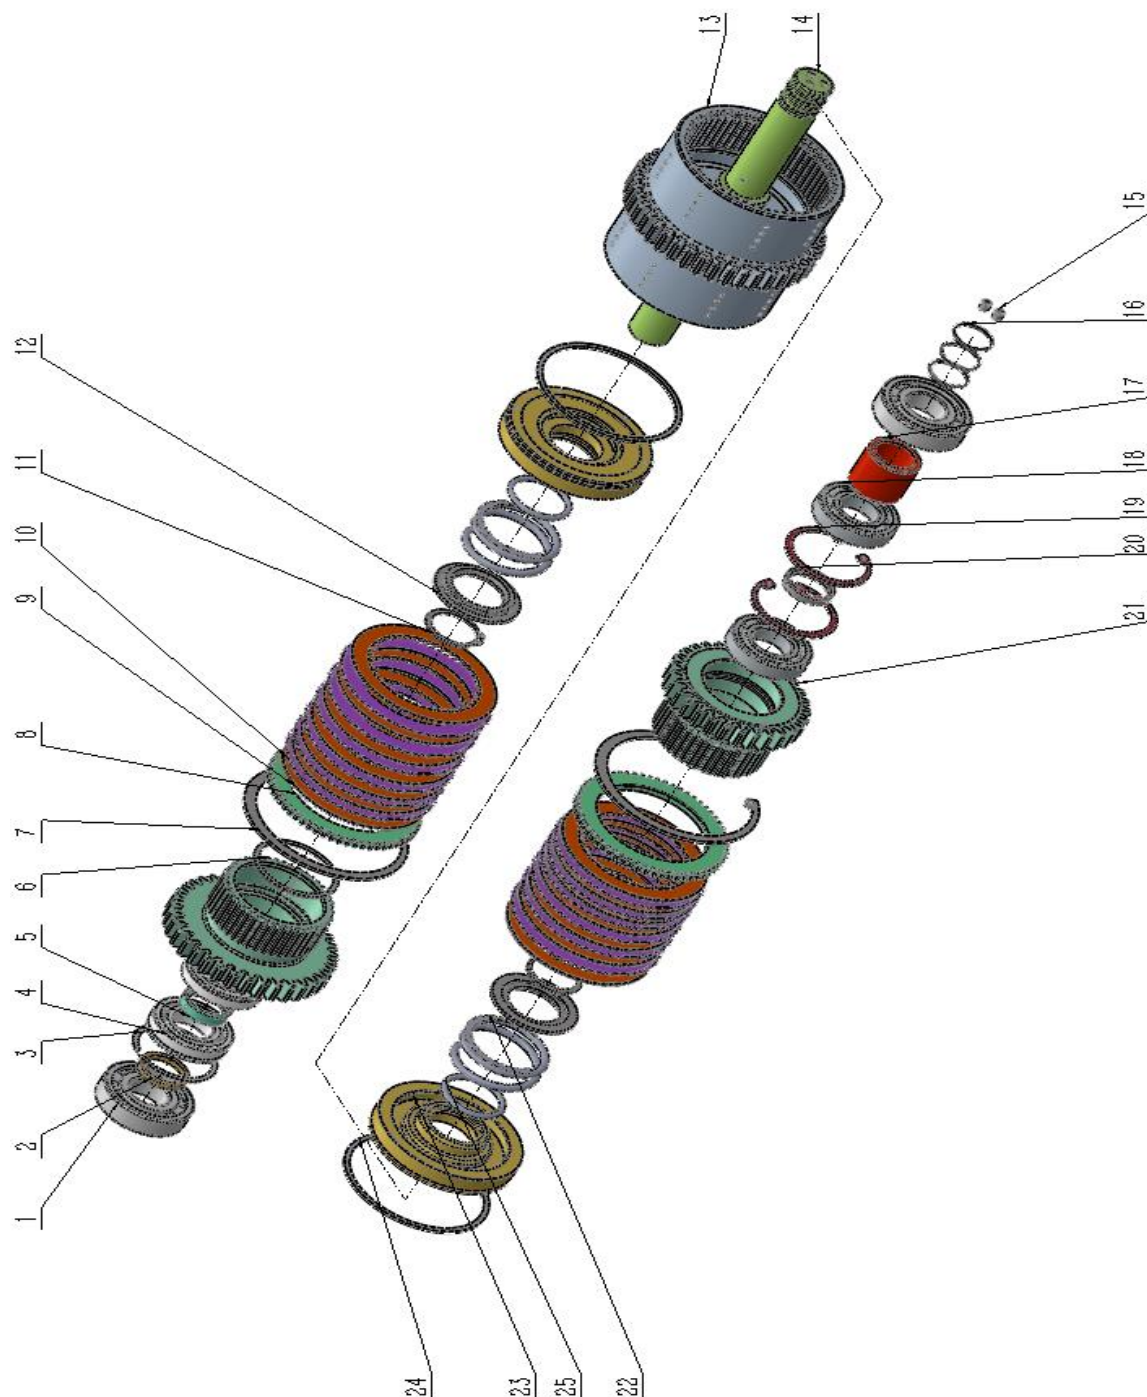


前进低档离合器 FORWARD LOW GEAR CLUTCH

(W024200020)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W030300068	Cylindrical roller bearing	圆 柱 滚 子 轴 承 NJ308M	2	
2	W024200140	SPACER ring	隔环	1	
3	03.04.343	Stop Ring 80	止动环 80	2	
4	B120120818N	Deep groove ball bearing	深沟球轴承 6208N	2	
5	W024200150	Set 12	隔套 12	1	
6	W024200160	Gear 35 teeth	齿轮 35 齿	1	
7	W030100620	Resilient retaining rings for holes, type A	孔用弹性挡圈 A 型 150	2	
8	ZL15.5.1-3	Piston press plate	活塞压板	2	
9	ZL15.5.1.3	Active	主动片	14	
10	ZL15.5.1-4	Passive	被动片	12	
11	W030100582	Elastic retaining ring for shaft type A 52	轴用弹性挡圈 A 型 52	2	
12	W024200170	Spring seat	弹簧座	2	
13	W024200180	Forward low gear clutch housing	前进低档离合器壳 体	1	
14	W024200190	Clutch shaft	离合器轴	1	
15	03.04.342	RC1/8 plug	RC1/8 丝堵	2	
16	ZL15.5-36	Seal ring 40	密封环 40	3	
17	W024200200	Compartment 45	隔套 45	1	
18	B120120818	Deep groove ball bearing	深沟球轴承 6208	2	
19	B070158003	Elastic retaining ring for holes 80	孔用弹性挡圈 80	2	
20	W024200210	SPACER ring	隔环 8	1	
21	W024200220	First Gear 29	一档齿轮 29	1	
22	W024200230	Spring	弹簧	2	
23	ZL15.5.1.1-1D	Piston	活塞	2	
24	ZL15.5.1.1-3	Piston outer seal ring	活塞外封环	2	
25	B160140530	O-ring 53X5.3	O 型圈 53X5.3	2	

倒退离合器总成 REVERSE CLUTCH ASSEMBLY (W024200010)

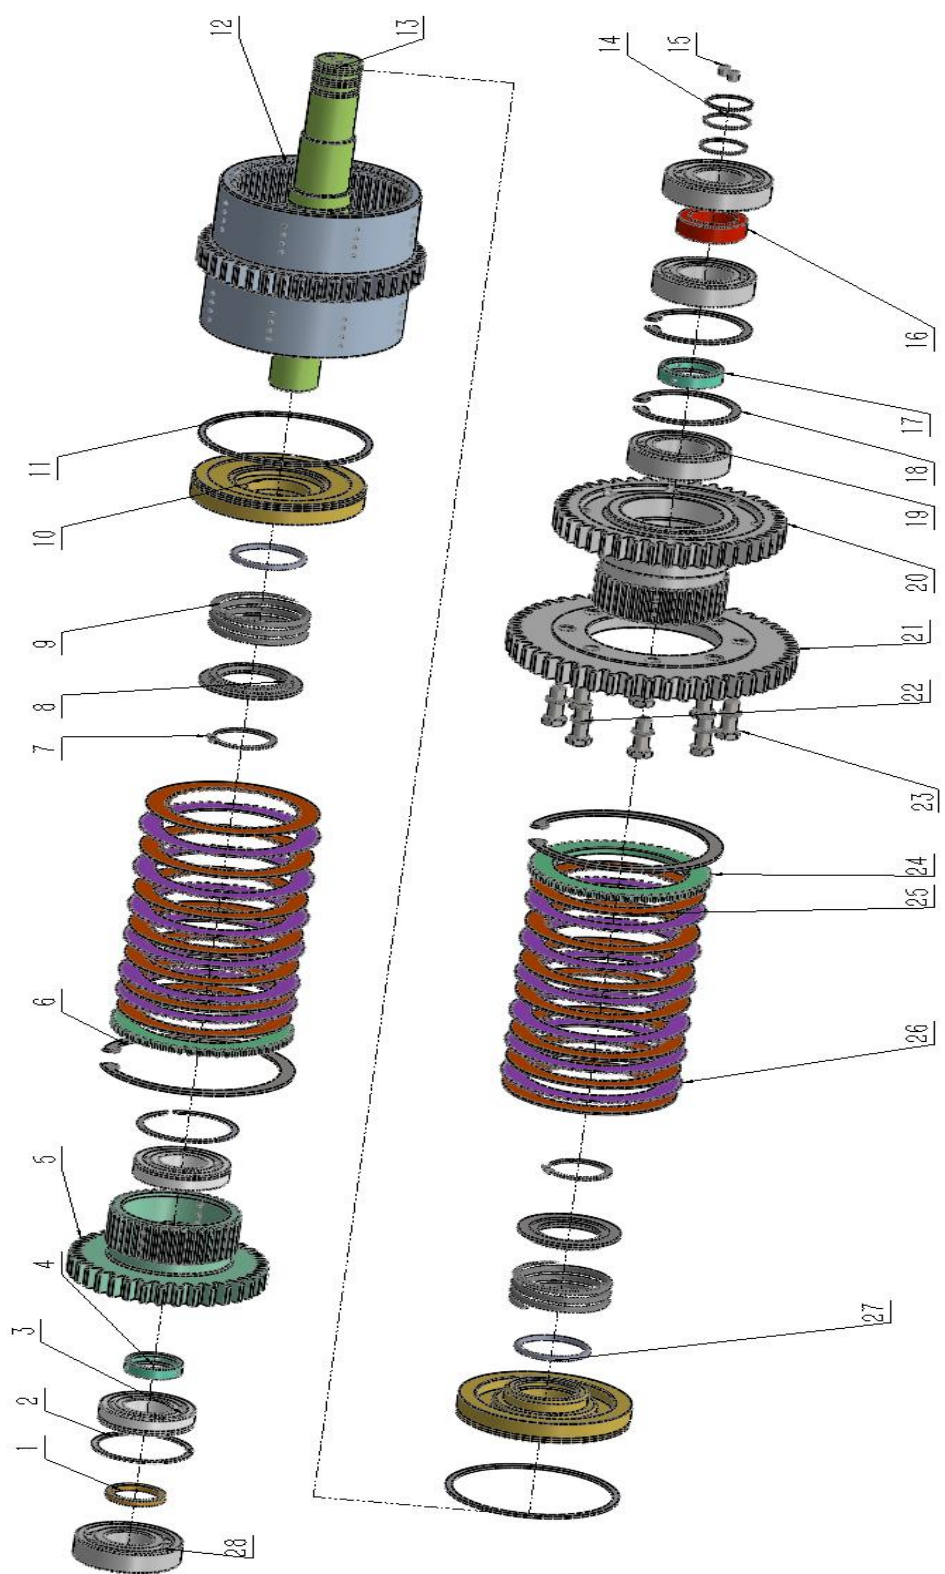


倒退离合器总成

REVERSE CLUTCH ASSEMBLY (W024200010)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W024200240	SPACER ring	隔环	1	
2	03.04.343	Stop Ring	止动环	2	
3	B120120818N	Deep groove ball bearing	深沟球轴承 6208N	2	
4	W024200250	Set 12	隔套 12	1	
5	W024200260	Gear 35 teeth	齿轮 35 齿	1	
6	W030100620	Resilient retaining rings for holes, type A	孔用弹性挡圈 A 型	2	
7	W030100582	Elastic retaining ring for shaft type A	轴用弹性挡圈 A 型	2	
8	W024200270	Spring seat	弹簧座	2	
9	W024200280	Spring	弹簧	2	
10	ZL15.5.1.1-1D	Piston	活塞	2	
11	ZL15.5.1.1-3D	Piston outer seal ring	活塞外封环	2	
12	W024200290	Reverse low clutch housing	倒退低档离合器壳体	1	
13	W024200300	Reverse clutch shaft	倒档离合器轴	1	
14	ZL15.5-36	Sealing ring	密封环	3	
15	03.04.342	Rc1-8 plug	Rc1-8 丝堵	2	
16	W024200310	Ring divider 18.5	隔环 18.5	1	
17	W024200320	Compartment 14	隔套 14	1	
18	B070158003	B-type elastic retaining ring for Hole	孔用弹性挡圈 B 型	2	
19	B1204522209	Cylindrical roller bearing	圆柱滚子轴承	2	
20	W024200330	Gear 41	齿轮 41	1	
21	W024200340	Gear 52	齿轮 52	1	
22	GB / T93-1987	Elastic Washer	弹性垫圈	8	
23	B040911235	Bolt M12X35	六角头螺栓	8	
24	ZL15.5.1-3	Piston press plate	活塞压板	2	
25	ZL15.5.1.3	Active	主动片	14	
26	ZL15.5.1-4	Passive	被动片	12	
27	B160140530	O-ring 53X5.3	O 型圈 53X5.3	2	
28	B120452308M	Cylindrical roller bearing	圆柱滚子轴承	2	


双变中间轴 **DOUBLE VARIABLE INTERMEDIATE**
AXIS (W024200070)

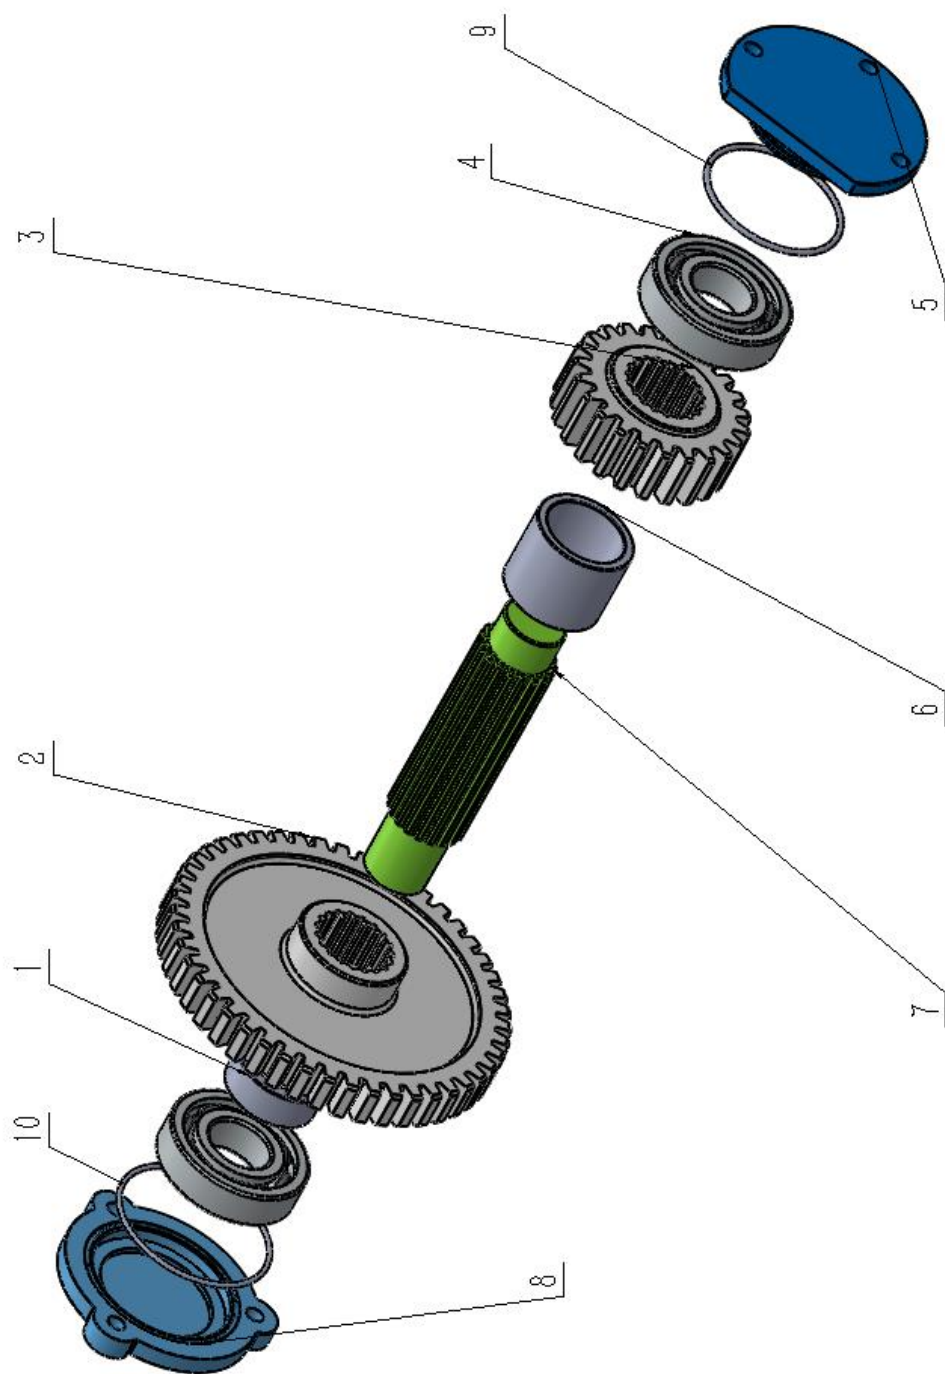

双变中间轴 **DOUBLE VARIABLE INTERMEDIATE**
AXIS (W024200070)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W024200350	Middle shaft short spacer sleeve	中间轴短隔套	1	
2	W024200360	Middle high-grade gear	中间高档齿轮	1	
3	W024200370	Middle Low Gear 23	中间低档齿轮 23	1	
4	B120130823	Deep groove ball bearing	深沟球轴承	2	
5	W024200380	Middle end cap	中间端盖	1	
6	W024200390	Middle shaft long spacer sleeve	中间轴长隔套	1	
7	W024200400	Intermediate shaft	中间轴	1	
8	ZL15.5-5D	Pressure Cap	压盖	1	
9	B160120901	O-ring 90X3.1	O 型圈 90X3.1	1	
10	B160120950	O-ring 95X2.65	O 型圈 95X2.65	1	


双变输出轴 DUAL VARIABLE OUTPUT SHAFT (W024200060)

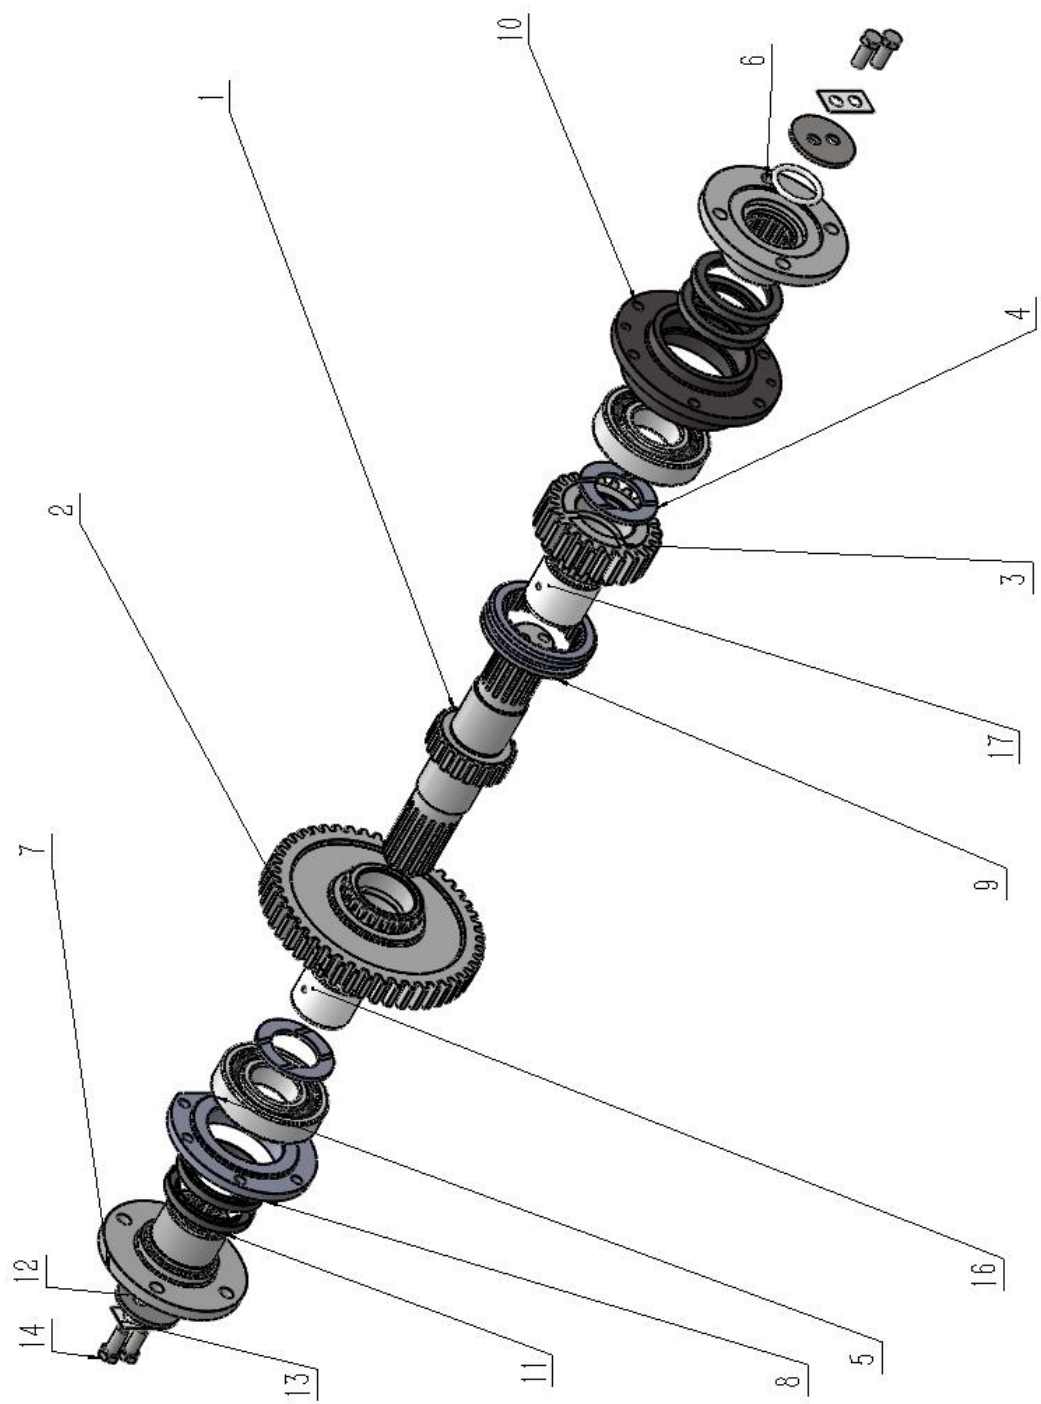

双变输出轴 DUAL VARIABLE OUTPUT SHAFT (W024200060)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W024200410	Output Shaft	输出轴	1	
2	W024200420	Output low gear	输出低档齿轮	1	
3	W024200430	Output high-grade gear	输出高档齿轮	1	
4	W024200440	Thrust ring	止推环	2	
5	W030400019	Deep groove ball bearing 6310	深沟球轴承 6310	2	
6	W024200450	Short output flange	短输出法兰	1	
7	W024200460	Output Flange	输出法兰	1	
8	W024200470	Output shaft front cover	输出轴前端盖	1	
9	W024200480	High and low sliding gear sets	高低档滑动齿套	1	
10	W024200490	Housing	轴承座	1	
11	03.01.314	Enveloping skeleton type (FB Type)	带副唇内包骨架型 (FB 型)65×90X12	4	
12	W024200500	Output shaft with baffle	输出轴用挡板	2	
13	W024200510	Locking Plate	锁片	2	
14	B040711230	Bolt M12X30	六角头螺栓 M12×30	4	
15	B160140520	O-ring 52X5.7	O 型圈 52X5.7	2	
16	W024200520	Short wear-resistant sleeve	短耐磨套	1	
17	W024200530	Long wear-resistant sleeve	长耐磨套	1	

双变变矩器 DOUBLE TORQUE CONVERTER (W024200030)

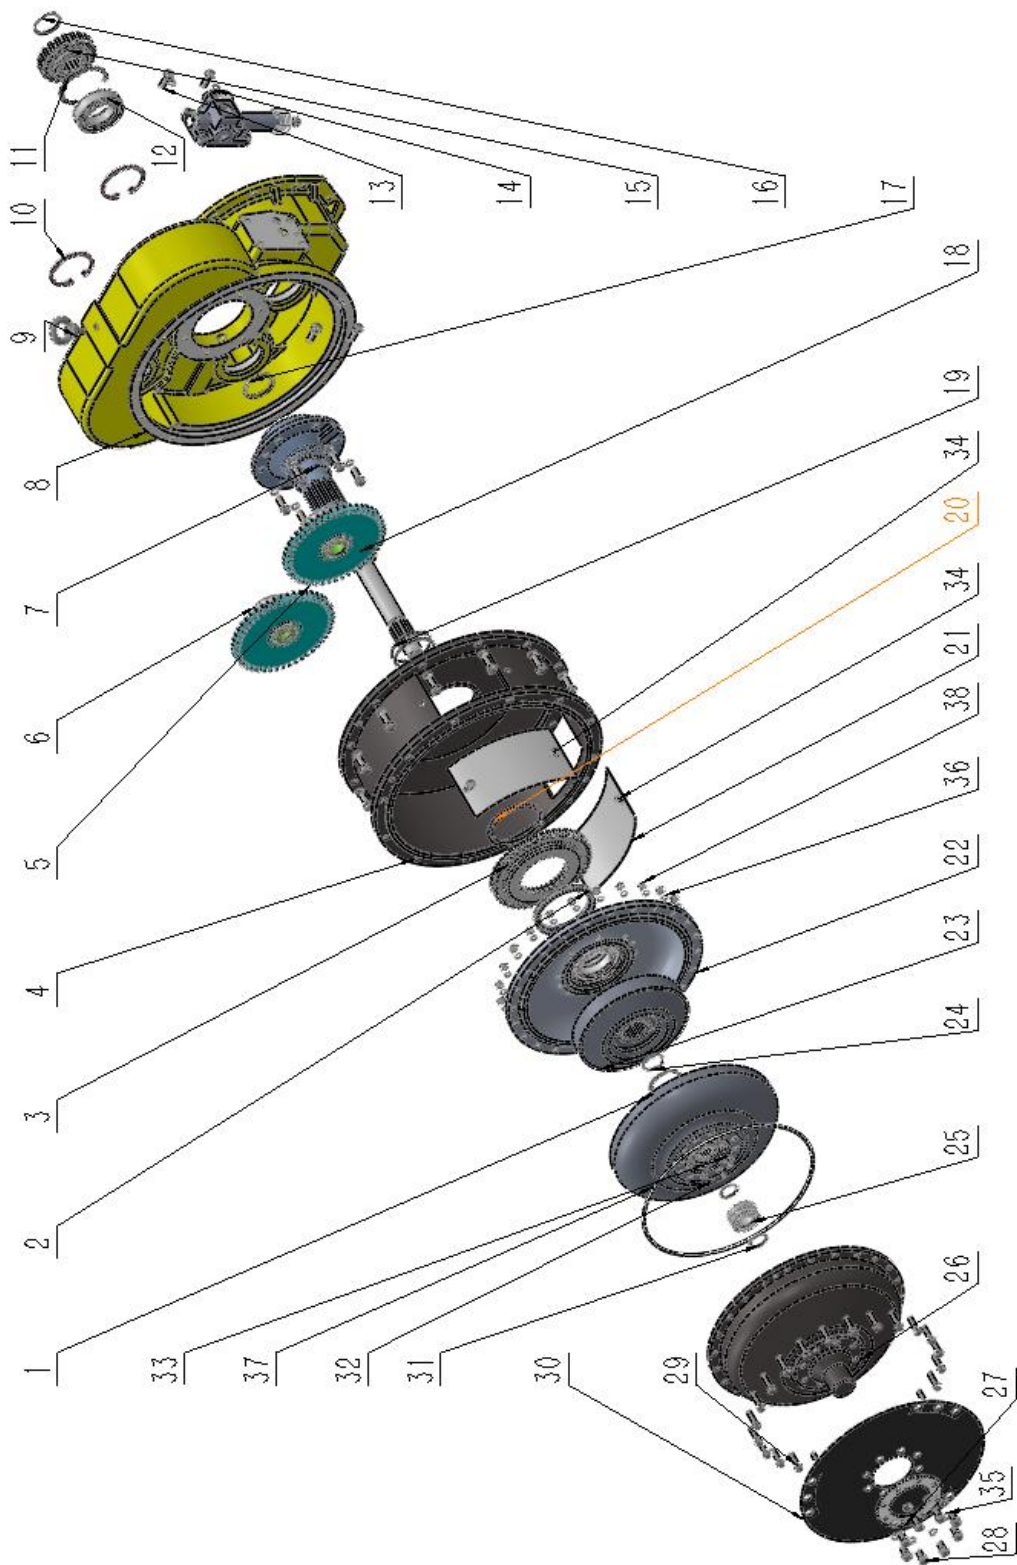


双变变矩器 DOUBLE TORQUE CONVERTER (W024200030)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W020510028	Shaft with elastic retaining ring	轴用弹性挡圈 60	1	
2	03.23.160	Skeleton Oil Seal 100x120x13	骨架油封 100x120x13	1	
3	W024200540	Driving Gear	主动齿轮	1	
4	W024200550	Section 160	中节 160	1	
5		Large oil pump shaft assembly	大泵口油泵轴组件	1	
6		Oil Pump Shaft Assembly	油泵轴组件	1	
7	W024200560	Guide wheel seat	导轮座	1	
8	W024200570	Torque converter housing	变矩器壳体	1	
9	03.04.451	Hanger ring screws M12	吊环螺钉 M12	1	
10	B070158003	Hole with elastic retaining ring	孔用弹性挡圈 80	2	
11	B070159003	Hole with elastic retaining ring	孔用弹性挡圈 A 型	1	
12	B1204522210	Cylindrical roller bearing	圆柱滚子轴承	1	
13	B040911030	Hexagon head bolts M10 × 30	六角头螺栓 M10×30	22	
14	W024200580	Imported pressure reducing valve	进口减压阀	1	
15	W024200590	Torque converter output gear 22	变矩器输出齿轮 22	1	
16	B070114802	Shaft with elastic retaining ring	轴用弹性挡圈	1	
17	W024200600	Seal ring 60	密封环 60	1	
18	W024200610	Turbine shaft	涡轮轴	1	
19	W024200620	Seal ring 80	密封环 80	2	
20	B070110002	Shaft with elastic retaining ring 100	轴用弹性挡圈 100	1	
21	W024200630	Cover plate	盖板	2	
22	W024200640	Pump Wheel Assembly (315)	泵轮总成 (315)	1	
23	W024200650	Guide wheel	导轮	1	
24	B070113802	Shaft with elastic retaining ring	轴用弹性挡圈 38	2	

25	03.21.146	Needle roller bearing NAV type	滚针轴承 NAV 型	1	
26	W024200660	Connection wheel	联接轮	1	
27	ZL30F.11-33	Backing Plate	垫板	1	
28	B040911020	Bolt M10X20	六角头螺栓	8	
29	B040810835	Bolt M8X35	六角头螺栓 M8×35	24	
30	W024200680	Elastic plate	弹性板(315 三组 9 孔)	1	
31	B070113002	Shaft with elastic retaining ring 30	轴用弹性挡圈 30	2	
32	B070155502	Elastic retaining ring for holes 55	孔用弹性挡圈 55	1	
33	W024200690	Turbine Assembly	涡轮总成	1	
34	B160113350	O-ring 335X3.55	O 型圈 335X3.55	1	
35	B060111003	Elastic washers 10	弹性垫圈 10	30	
36	B060110802	Elastic washers 8	弹性垫圈 8	24	
37	B052020807	Nut M8	六角螺母 M8	24	
38	B040910812	Bolt M8X12	六角头螺栓 M8×12	4	


大泵口油泵轴组件 **LARGE PUMP SHAFT ASSEMBLY**

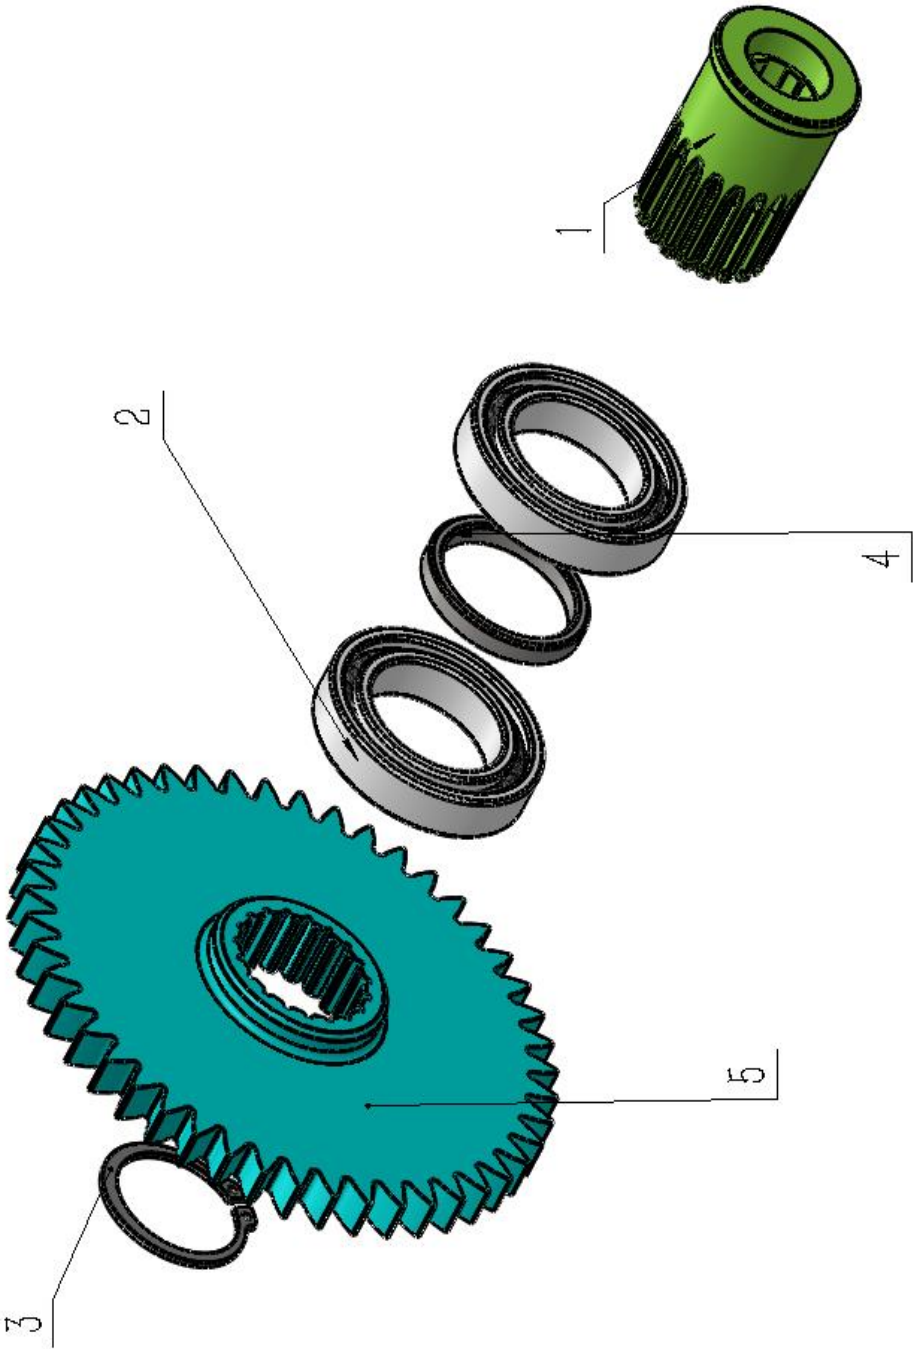

大泵口油泵轴组件 **LARGE PUMP SHAFT ASSEMBLY**

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W024200730	Oil pump shaft	油泵轴	1	
2	W020700390	Deep groove ball bearing 6010	深沟球轴承 6010	2	
3	W030100580	Shaft with elastic retaining ring	轴用弹性挡圈 50	1	
4	W024200710	Sleeve	轴套	1	
5	W024200700	Oil pump gear	油泵齿轮	1	

油泵轴组件 OIL PUMP SHAFT ASSEMBLY

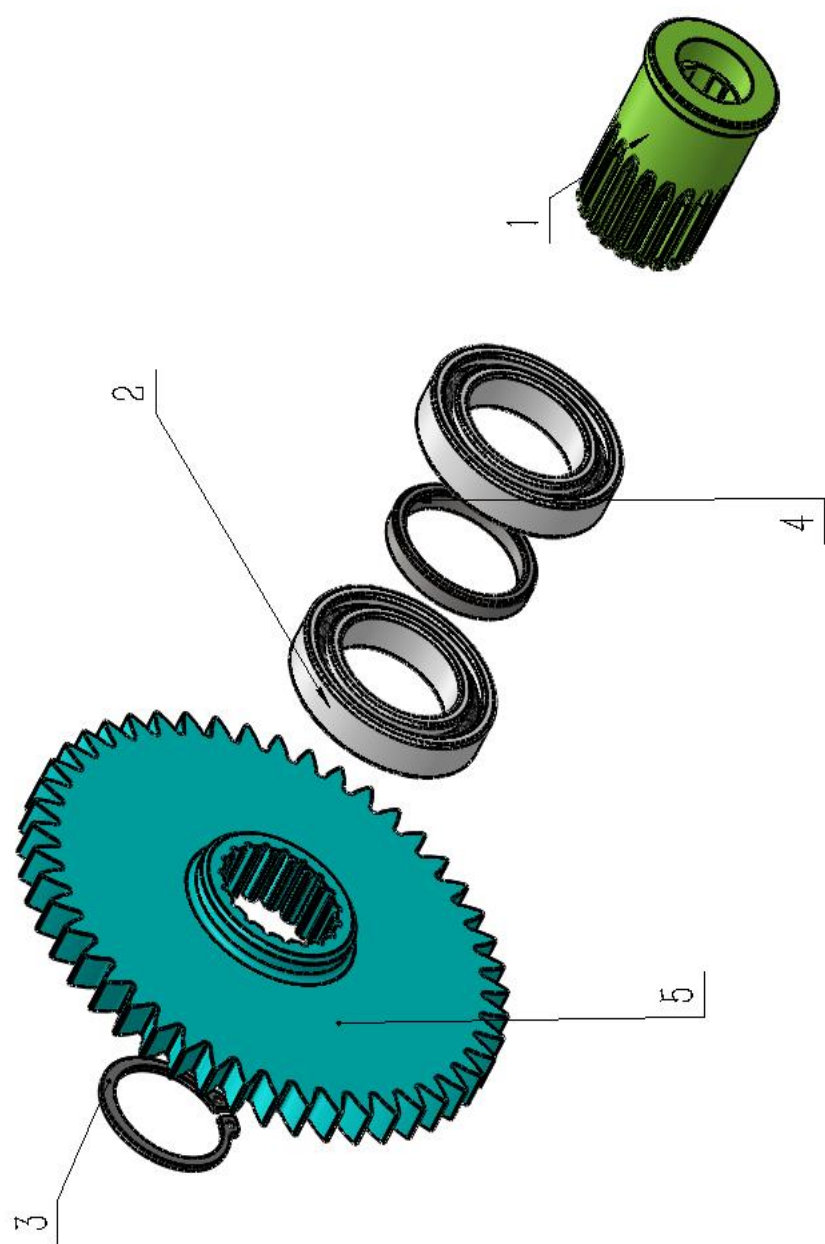


油泵轴组件 OIL PUMP SHAFT ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W024200720	Oil pump shaft	油泵轴	1	
2	W020700390	Deep groove ball bearing 6010	深沟球轴承 6010	2	
3	W030100580	Shaft with elastic retaining ring 50	轴用弹性挡圈 50	1	
4	W024200710	Sleeve	轴套	1	
5	W024200700	Oil pump gear	油泵齿轮	1	

驱动桥总成


DRIVE AXLE ASS'Y

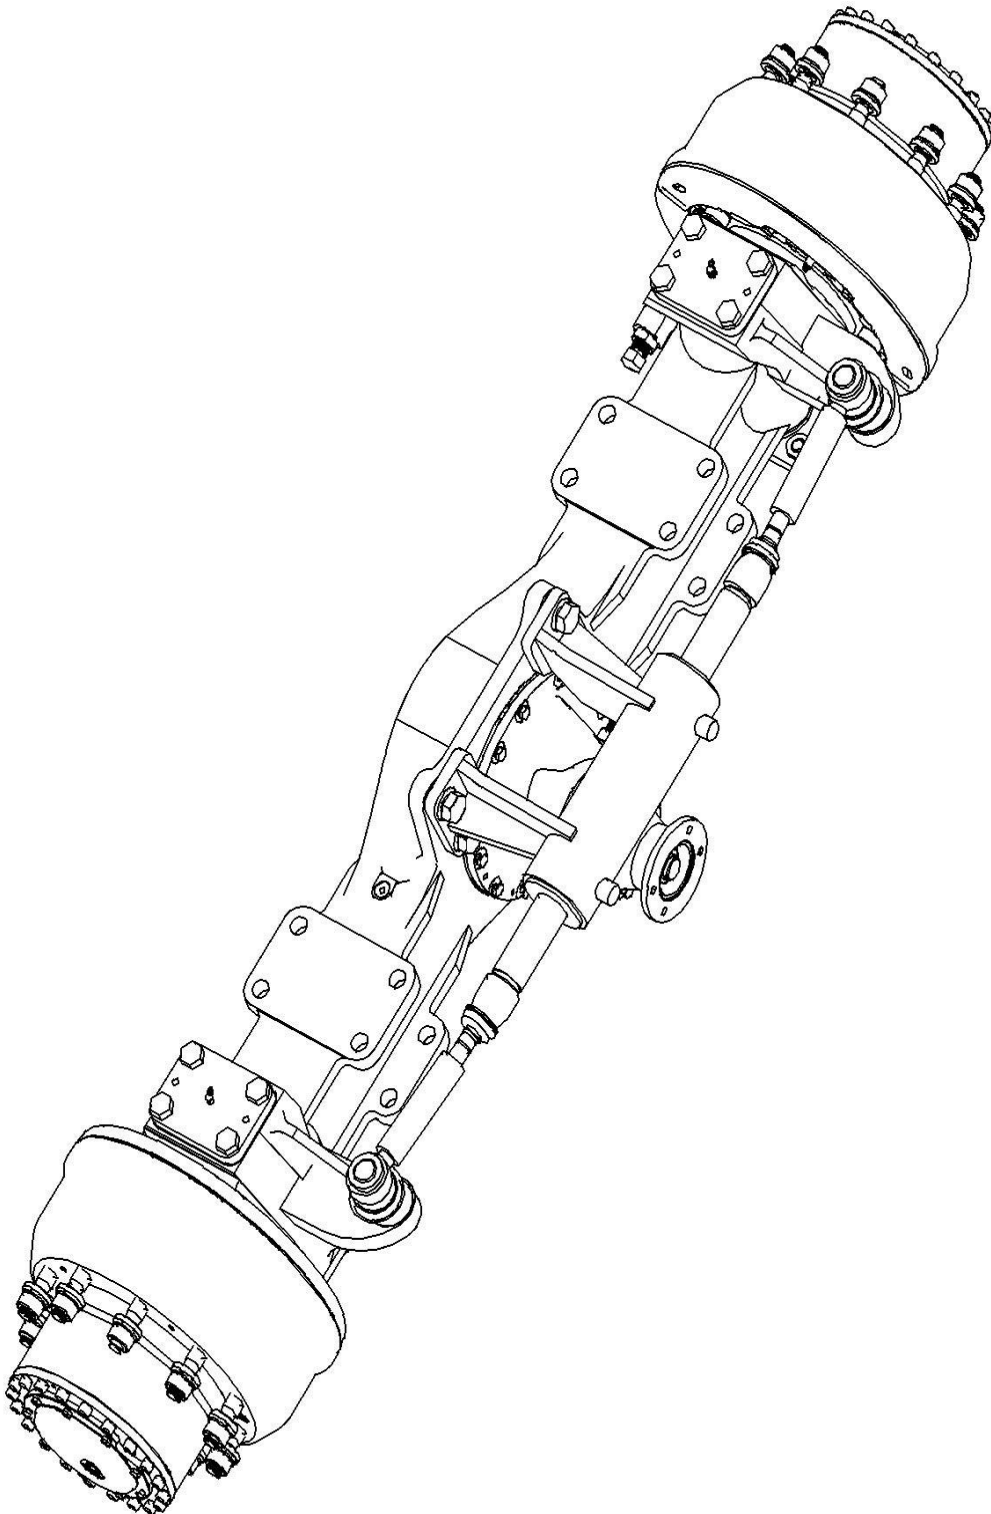

驱动桥总成 **DRIVE AXLE ASS'Y**

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W064500000	Front drive axle	前驱动桥	1	
2	W064600000	Rear drive axle assembly	后驱动桥总成	1	

驱动桥总成 DRIVE AXLE ASS'Y

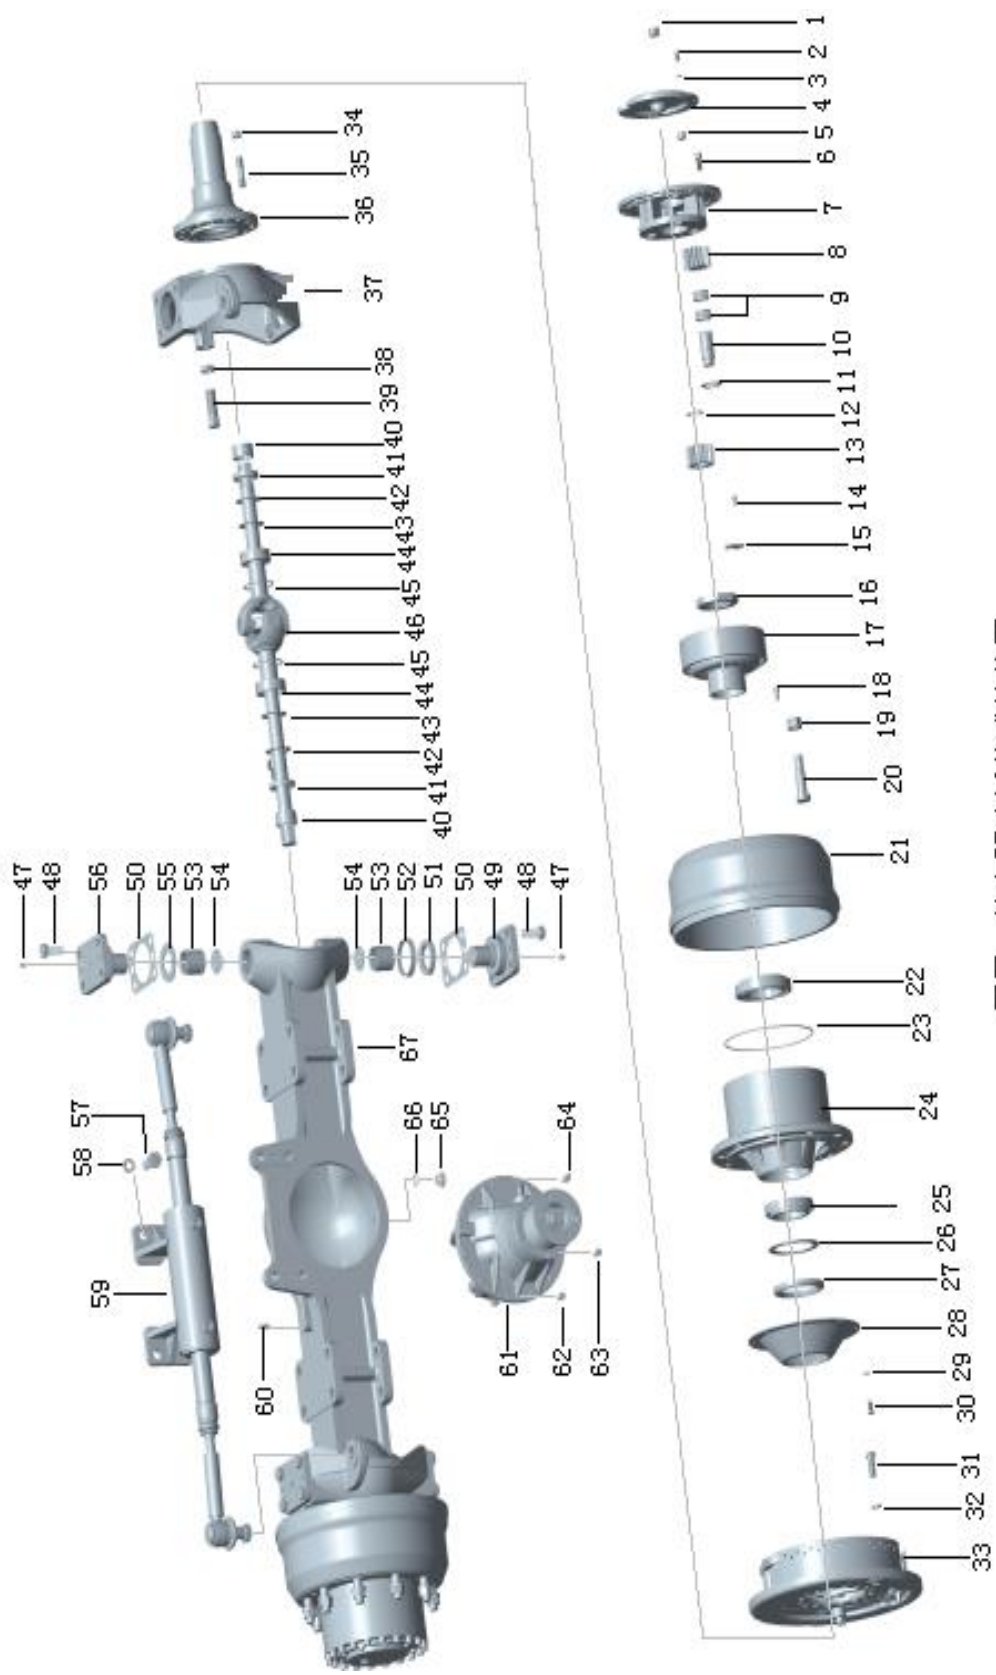

图五、转向驱动桥总成结构图

驱动桥总成 DRIVE AXLE ASS'Y

序号	零件图号	Part Name	零件名称	数量	备注
1	WGL100-02	Screw plug	螺塞 R3/4	3	
2	B040910820	Bolt M8X20	螺栓 M8X20	26	GB 件
3	B061520803	WASHER 8	垫圈 8	26	GB 件
4	WGL100.02.06	End Cap Assembly	端盖组合	2	
5	WGL100.02.05	Screw plug	螺塞组合 R1/2	2	
6	B040611230	Screws M12X30	螺钉 M12X30	40	GB 件
7	WGL100.02-10	Planetary Carriage	行星轮架	2	
8	WGL100.02-09	Planet wheel	行星轮	6	
9	WGL100.02.04	Needle roller bearing	滚针轴承	12	
10	WGL100.02-12	Planetary axle	行星轮轴	6	
11	WGL100.02-08	Planet Wheel Gasket	行星轮垫片	12	
12	B070214001	Stop Ring 40	挡圈 40	2	GB 件
13	WGL100.02-11	Sun Wheel	太阳轮	2	
14	B040910816	Bolt M8X16	螺栓 M8X16	4	GB 件
15	WGL100.02-13	Rim Lock	轮边锁片	2	
16	WGL100.02-06	Locking nut	锁紧螺母	2	
17	WGL100.02.03	Gear ring combination	齿圈组合	2	
18	B040911020	Screws M12X20	螺钉 M10X20	4	GB 件
19	ZL60D.24.2	Rim Nut Assembly	轮辋螺母组合	10	
20	WGL100.02.02-03	Rim Bolt	轮辋螺栓	10	
21	WGL100.02.02-01	Brake Drum	制动鼓	2	
22	B1204322020	Bearing32020	轴承 32020	2	GB 件
23	B160142233	Oring 233X3	O 型圈 233X3	2	
24	WGL100.02.02-02	Hub	轮毂	2	
25	B120432017	Bearing32017	轴承 32017	2	GB 件
26	WGL100.02-03	Oil seal gasket	轮边油封垫片	2	
27	B160420040	Oil Seal 105X135X14	油 封 105X135X14	2	
28	WGL100.02-04	Guard Shield	护罩	2	
29	B060801002	WASHER 10	垫圈 10	36	GB 件
30	B040911020	Bolt M10X20	螺栓 M10X20	16	GB 件
31	B040911660	Bolt M16X60	螺栓 M16X60	30	GB 件
32	B060411603	WASHER16	垫圈 16	32	GB 件


驱动桥总成 DRIVE AXLE ASS'Y

序号	零件图号	Part Name	零件名称	数量	备注
33	WGL100.02.01	Brake Assembly	制动器总成	2	GB 件
34	B051201614	Nut M16X1.5	螺母 M16X1.5	2	
35	WGL100.02-02	Setting Bolt	定位螺栓	2	
36	WZL100.03-02	Rim bearing shaft	轮边支承轴（前	2	
37	WZL100.03-01W	Left knuckle	左转向节	1	
	WZL100.03-01W	Right knuckle	右转向节	1	
38	WZL100-10	Limit Nut	限位螺母	2	
39	WZL100-09	Limit Bolt	限位螺栓	2	
40	WZL100-05	Axle sleeve	轴套(三)	4	
41	B160456812	Oil Seal45X68X12	油封 45X68X12	4	
42	WZL100.02-03	Oil Seal seat gasket	油封座垫片	4	GB 件
43	WZL100.02-02	Felt Ring	毡圈	4	
44	WZL100.02-01	Oil Seal Block	油封座	4	
45	B160140751	Oring 75X3.1	O 型圈 75X3.1	4	
46	WZL100.03.01	Front axle half shaft	前桥半轴总成	2	
47	B150101000	Oil Cup M10X1	油杯 M10X1	4	
48	GB/T5783-2000	Bolt M20X1.5X50	螺栓	8	
49	WZL100.01	Welding of lower pin	下支销焊合	2	
50	WZL100-06	Adjusting gasket	调整垫片	四组	
51	B120430400	Bearing	轴承 K81112	2	JB 件
52	B160859612	Oil Seal	油 85X96X12.8	2	
53	WZL100-04	Axle sleeve	轴套(二)	4	
54	WZL100-03	Baffle Plate	挡板	4	
55	WZL100-07	Gasket	垫片	2	
56	WZL100.05	Welding of upper pin	上支销焊合	2	
57	B041052450	Bolt M24X2X50	螺栓	4	
58	B061232401	Washers 24	垫圈 24	4	
59	W064500030	Double acting cylinder	双作用油缸	1	
60	Q9001	Bleed Valve Z1/8	放气阀 Z1/8	1	JB 件
61	WGL100.01	Main drive assembly	主传动总成	1	

驱动桥总成 **DRIVE AXLE ASS'Y**

序号	零件图号	Part Name	零件名称	数量	备注
62	GB/T119-86	Sales d10x30	销 D10X30	2	GB
63	B040911045	Bolt M10X45	螺栓 M10X45	2	GB
64	B040611030	Bolt M10X30	螺栓 M10X30	18	GB
65	50MA.02	Magnet oil level plug	磁铁油位塞	2	
66	B160121265	Oring 26.5X2.65	O 形圈	2	
67	WZL100-02D	Axle housing	桥壳	1	


主减总成 MASTER SUBCTION ASSEMBLY

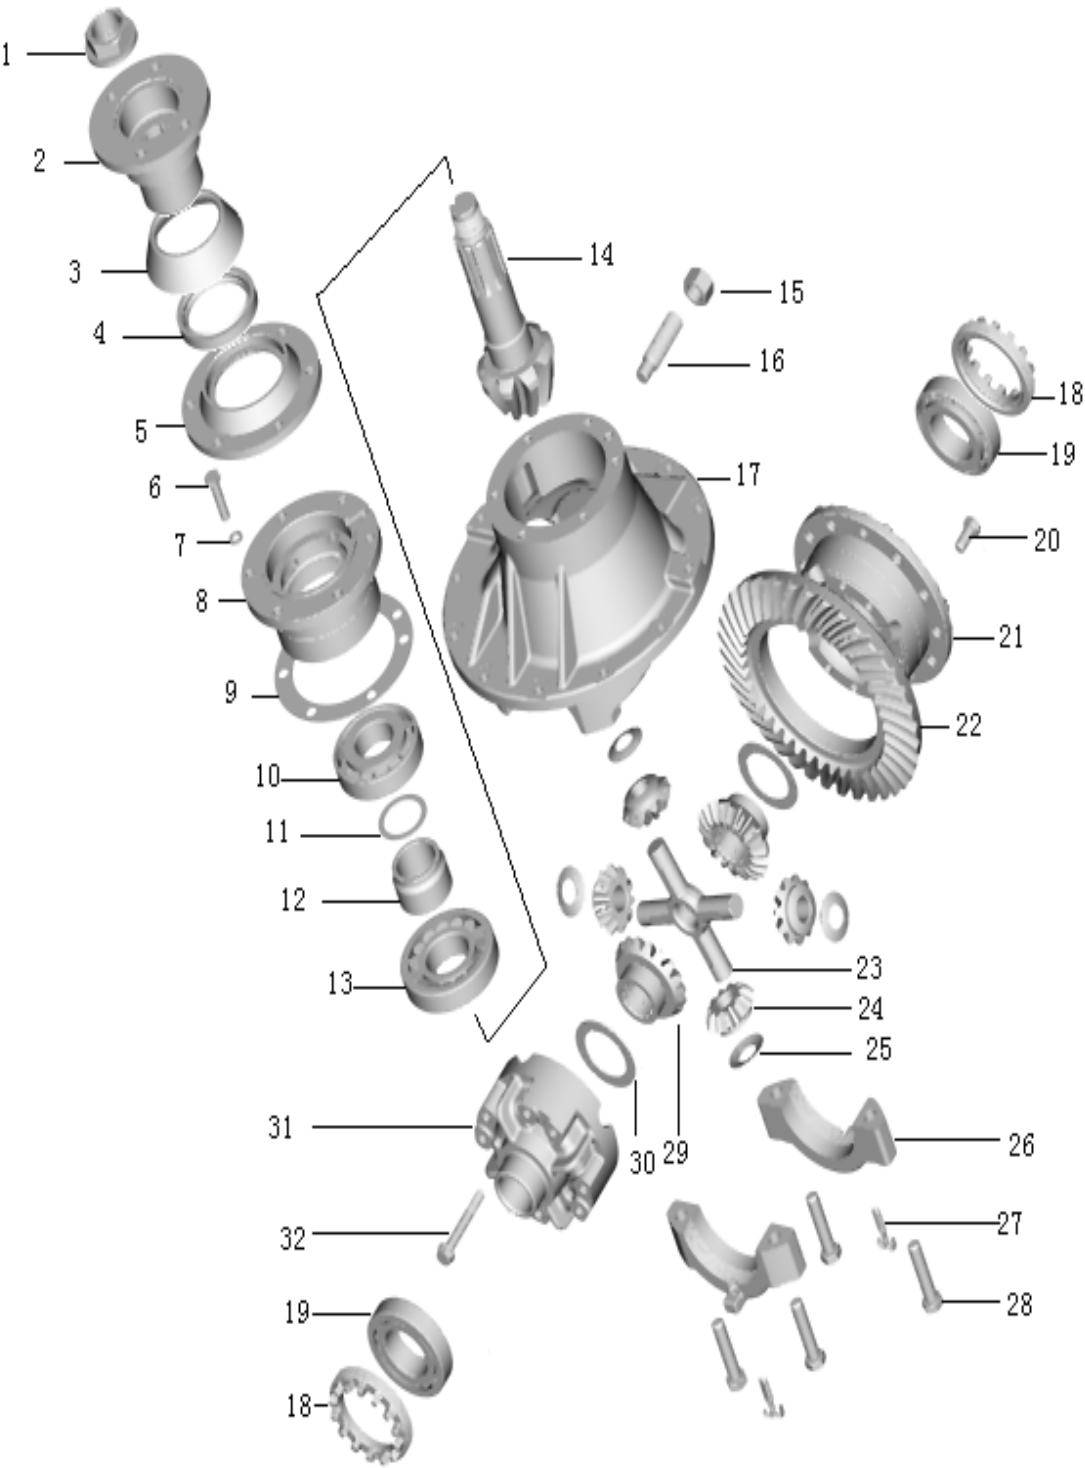

主减总成 MASTER SUBCTION ASSEMBLY

序号	零件图号	Part Name	零件名称	数量	备注
1	WGL100.01-01	Main reducer nut	主减速器螺母	1	
2	WGL100.01.01-01	Input Flange	输入法兰	1	
3	WGL100.01.01-02	Dust Cover	防尘罩	1	
4	W030709212	Oil Seal	油封 70X92X12	1	
5	WGL100.01-02	Sealing Cap	密封盖	1	
6	B040911045	Bolt M10X45	螺栓 M10X45	6	GB 件
7	B060801002	WASHERS 10	垫圈 10	6	GB 件
8	WGL100.01-03	Bearing sleeve	轴承套	1	
9	WGL100.01-04	Adjusting gasket	调整垫片	1 组	
10	B120430309	Bearing 30309 D	轴承 30309D	1	GB 件
11	WGL100.01-20	Adjusting gasket	调整垫片	1 组	
12	WGL100.01-19	Axle sleeve	轴套	1	
13	B120430310	Bearing 30310 D	轴承 30310D	1	GB 件
14	WGL100.01-06	Active bevel gear	主动伞齿轮	1	
15	GB/T6171-2000	Nut M20X1.5	螺母 M20X1.5	1	GB 件
16	WGL100.01-08	Thrust bolts	止推螺栓	1	
17	WGL100.01-05	Main reducer housing	主减速器壳	1	
18	WGL100.01-09	调整螺母	调整螺母	2	
19	B120432211	Bearing 32211	轴承 32211	2	GB 件
20	B041110002	Bolt M12X1.25X25	螺栓 M12X1.25X25	12	GB 件
21	WGL100.01-13	Differential housing	差速器大壳	1	
22	WGL100.01-07	Passive bevel gear	被动伞齿轮	1	
23	WGL100.01-14	Cross shaft	十字轴	1	
24	WGL100.01-16	Planetary bevel gear	行星锥齿轮	4	
25	WGL100.01-15	Bevel gear gasket	锥齿轮垫片	4	
26	WGL100.01-10	Housing	轴承座	2	
27	WGL100.01-11	Adjust nut locking pin	调整螺母锁紧销	2	
28	B041111465	Bolt M14X1.5	螺栓 M14X1.5X65	4	GB 件
29	WGL100.01-17	Half shaft gear	半轴齿轮	2	
30	WGL100.01-12	Half Shaft Gear Shim	半轴齿轮垫片	2	
31	WGL100.01-18	Differential case	差速器小壳	1	
32	WGL100.01-21	Differential Bolt	差速器螺栓	8	

轮辋 RIM

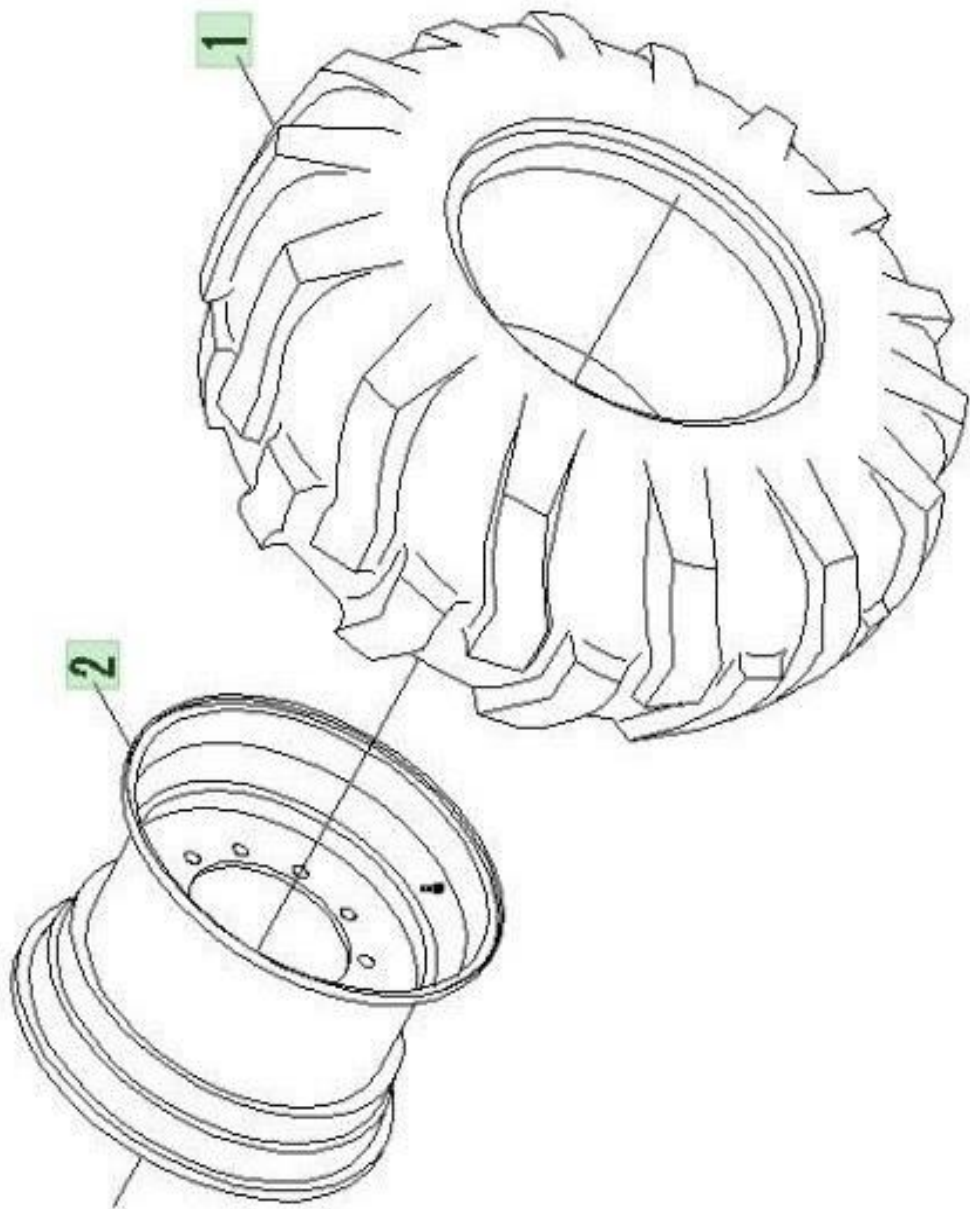


轮辋 RIM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	W110600272	Rim	轮辋	4	
2	W110010620	Tire	轮胎(无内胎)	4	

传动液压系统

TRANSMISSION HYDRAULIC SYSTEM

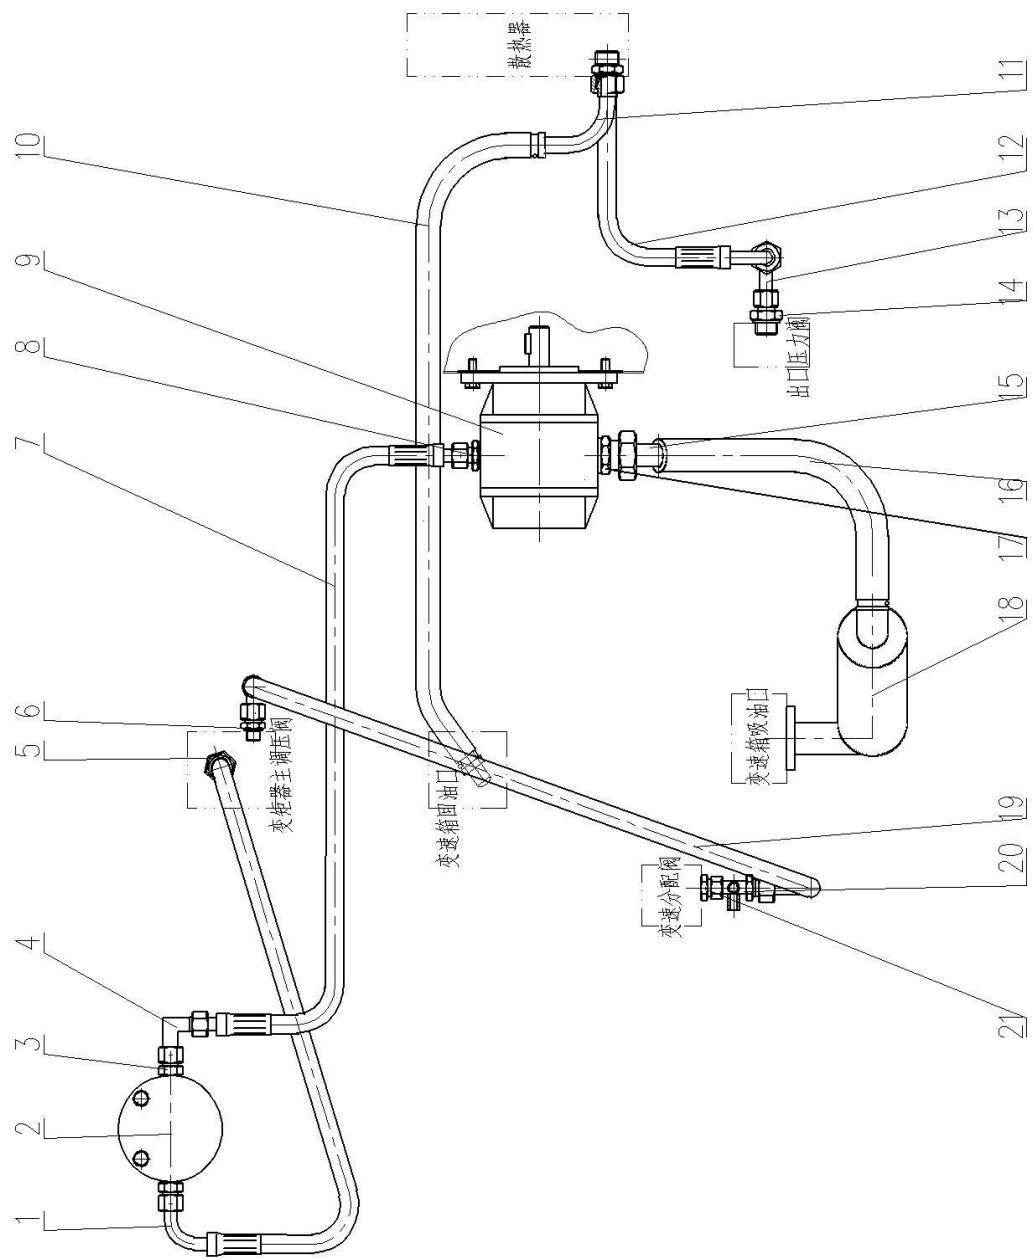


传动液压系统

TRANSMISSION HYDRAULIC SYSTEM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z065120220	Pressure reducing valve inlet pipe	减压阀进油管	1	
2	W113025130	Pressure filter	压力过滤器	1	
3	Z590110051	Joint	接头	4	
4	WZG078-003030	Right Angle combination joint	直角组合接头	2	
5	Z065120140	Direct connection	直通接头	1	
6	Z350170010	Pressure reducing valve outlet connector	减压阀出油口接头	1	
7	Z065120150	Pump out the tubing	泵出油管	1	
8	Z062240600	Joint	接头	1	
9	W061000050	Hydraulic gear pump	液压齿轮泵	1	
10	Z050120030	low pressure oil resistant hose.	3/4"低压耐油胶管	1	
11	Z060120011	Drive radiator connector	传动散热器接头	1	
12	Z065120010	Transmission heat sink oil pipe	传动散热油管	1	
13	Z390170160	Torque converter oil temperature tee joint	变矩器油温三通接头	1	
14	WZG074-003027	Direct connection	直通接头	1	
15	Z065120070	Gearbox oil outlet joint	变速箱出油接头	1	
16	Z065120170	Oil suction hose	吸油胶管	1	
17	Z065120130	Joint	接头	1	
18	Z065120200	Transmission oil filter screen	变速箱吸油滤网	1	
19	Z065120051	Transmission valve into the oil pipe	变速阀进油管	1	
20	Z065120250	Variable speed pressure three-way connector	变速压力三通接头	1	
21	W110251910	Joint	接头	1	


转向器 ORBIT ROLL VALVE

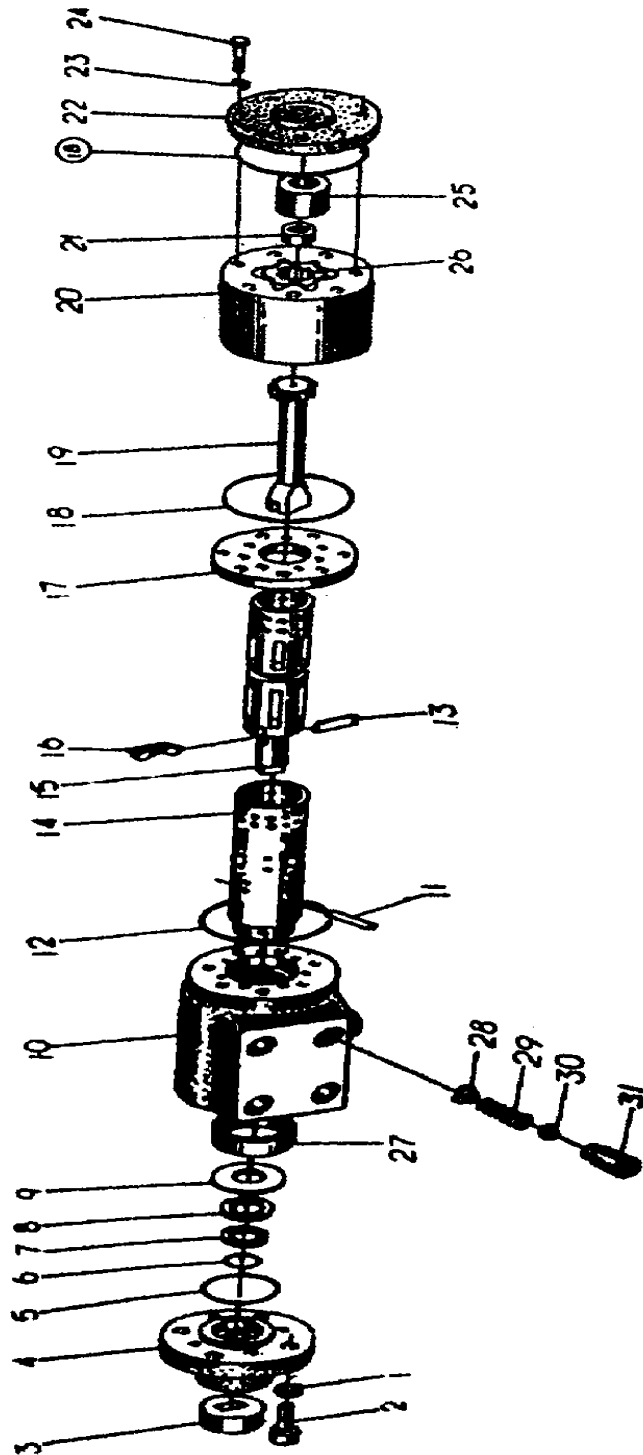

转向器 ORBIT ROLL VALVE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1		Hexagon socket head screw	内 六 角 螺 钉	4	
2		Washers 8	垫圈 8	4	
3		Connecting Block	连接块	1	
4		Connecting Block	前盖	1	
5		O-ring 43.7X2.65	O 型圈 43.7X2.65	1	
6		O-ring 26X2.4	O 型圈 26X2.4	1	
7		Type X seal ring	X 型密封圈	1	
8		Retaining ring	挡环	1	
9		Slip Ring	滑环	1	
10		Valve Body	阀体	1	
11		PULL OUT PIN	拔销	1	
12		O-ring 80X2.65	O 型圈 80X2.65	1	
13		SEPTA	隔片	2	
14		Valve Sleeve	阀套	1	
15		Valve core	阀芯	1	
16		Spring Leaf	弹簧片	6	
17		Cover	隔盖	1	
18		O-ring	O 型圈	2	
19		Linkage shaft	联动轴	1	
20		Stator	定子	1	
21		Limit Block	限位块	1	
22		Back cover	后盖	1	
23		Copper Pad	铜垫	7	
24		Bolt	螺栓	6	
25		Limit post cushion	限位柱垫	1	
26		Rotor	转子	1	
27		Retaining ring	挡圈	1	
28		Spring seat	弹簧座	1	
29		Spring	弹簧	1	
30		Steel Ball	钢球	1	
31		One-way body	单向阀体	1	


优先阀总成 PRIORITY VALVE ASSEMBLY

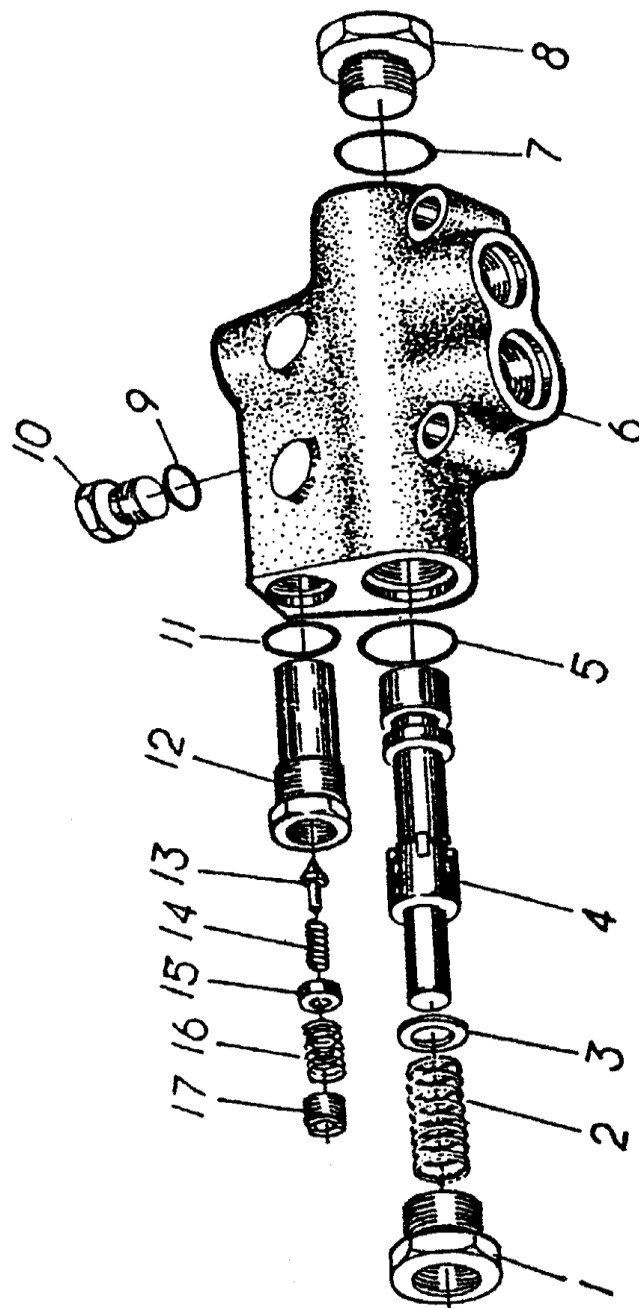

优先阀总成 **PRIORTY VALVE ASSEMBLY**

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Remark
1		Joint	接头	1	
2		Spring	弹簧	1	
3		Retaining ring	挡圈	1	
4		Valve stem	阀杆	1	
5		O-ring	O 型圈	1	
6		Valve Body	阀体	1	
7		O-ring	O 型圈	1	
8		Screws	螺钉	1	
9		O-ring	O 型圈	1	
10		Bleed Bolt	放气螺栓	1	
11		O-ring	O 型圈	1	
12		Pressure Sleeve	压套	1	
13		Pilot Valve	导阀	1	
14		Spring	导阀弹簧	1	
15		Retaining ring	挡环	1	
16		Spring	弹簧	1	
17		Bolt	螺栓	1	


齿轮泵总成
 GEAR PUMP ASSEMBLY

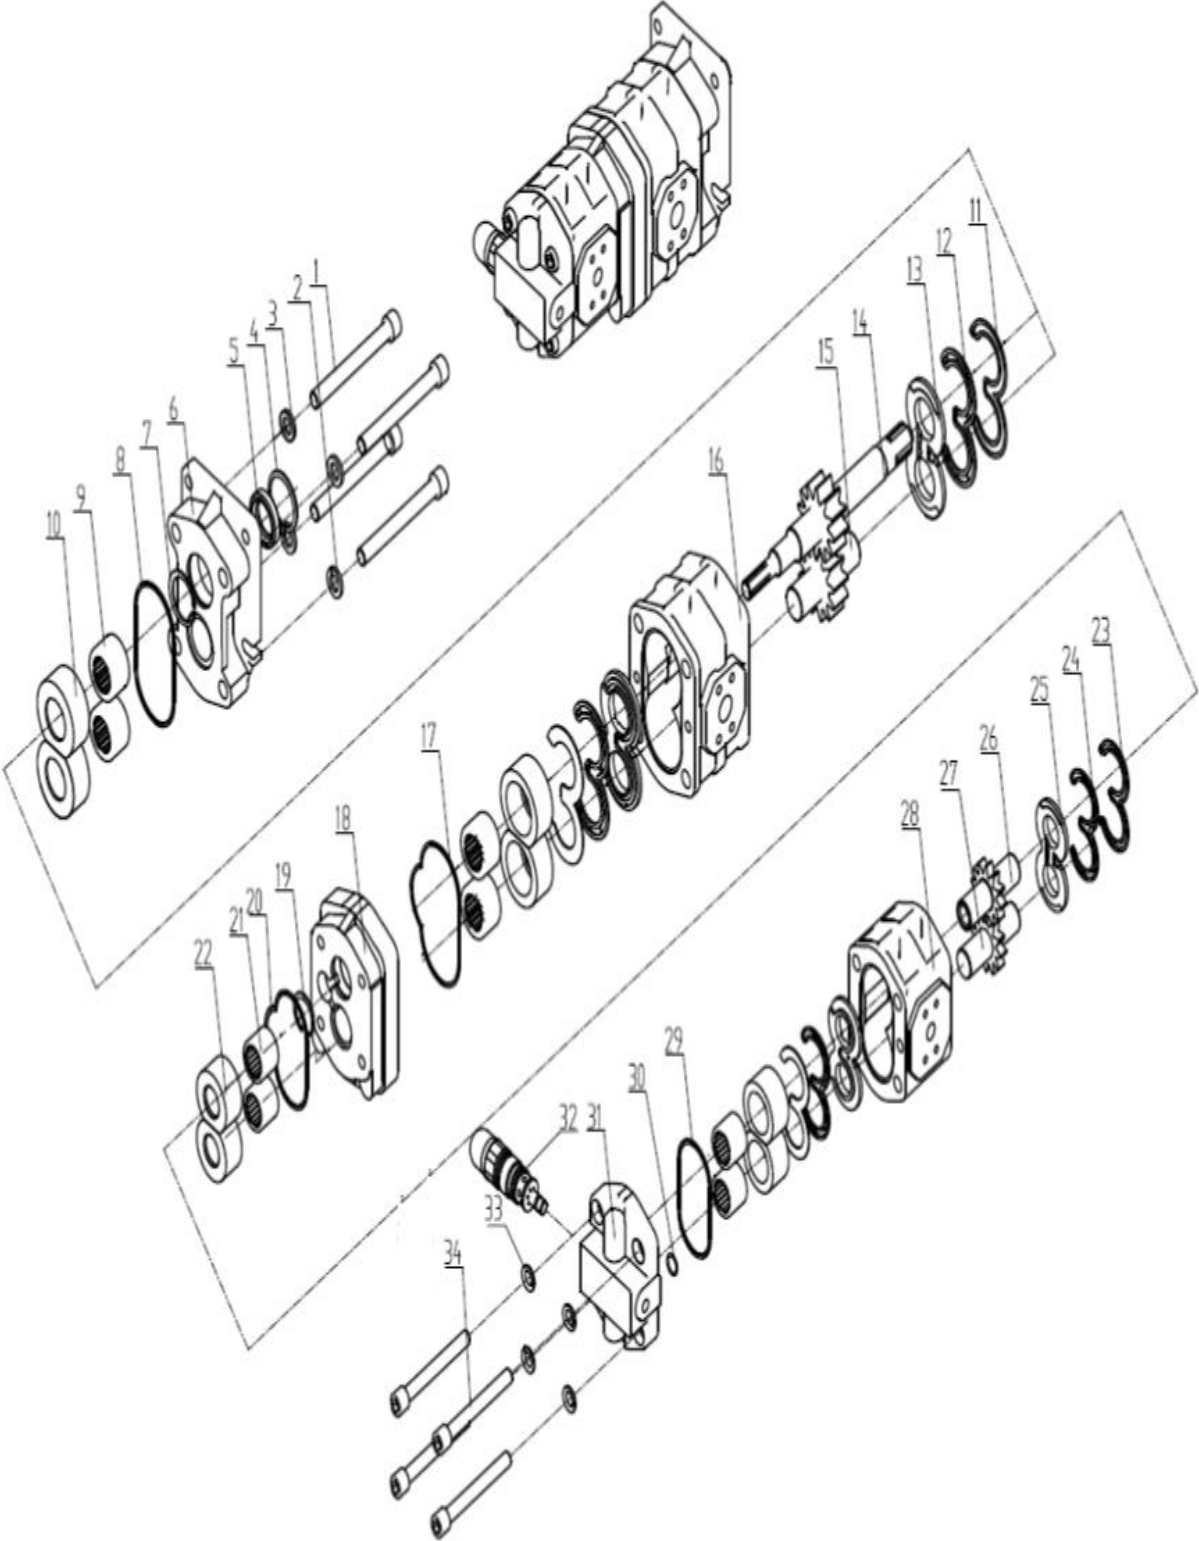

齿轮泵总成 GEAR PUMP ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	CBGj2/1-04	Screws M16x160	螺钉 M16x160	4	
2	B060411603	Washers	垫 圈 16	2	
3	CBZ2-2	Washers	垫 圈	2	
4	B070155602	Block Circle 56	挡圈 56	1	
5	B35x56x12 D (定制)	Rotary shaft lip seal ring	旋转轴唇形密封圈	2	
6	CBGj2/1-02	Front cover	前 盖	1	
7	B070155202	Block Circle 52	挡圈 52	1	
8	CBGj2-T1	Rectangular sealing ring	矩形密封圈	1	
9	644907	Bearing	轴 承	4	
10	CBGj2-08	Sleeve	轴套	4	
11	CBGj2-05	Ear-shaped baffle	耳形挡片	2	
12	CBGj2-03	Ear Seal	耳形密封	2	
13	CBGj2-07	Side panels	侧 板	2	
14	CBGj2/1-01	Driving Gear Shaft I	主动齿轮轴 I	1	
15	CBGj2-10	Driven gear shaft	从动齿轮轴	1	
16	CBGj2/1-05	Pump Body I	泵 体 I	1	
17	CBGj2/2-T1	Rectangular sealing ring	矩形密封圈	1	
18	CBGj2/1-03(Z)	Intermediate	中间体(左旋)	1	
19	B070154002	Block Circle 40	挡圈 40	1	
20	CBGj1/1-T1	Rectangular sealing ring	矩形密封圈	1	
21	644906	Bearing	轴 承	1	
22	CBGj1-10	Sleeve	轴套	4	
23	CBGj1-09	Ear-shaped baffle	耳形挡片	2	
24	CBGj1-08	Ear Seal	耳形密封	2	
25	CBGj1-07	Side panels	侧 板	2	
26	CBGj1/1-02	Drive Gear Shaft II	主动齿轮轴 II	1	
27	CBGj1-06	Driven gear shaft	从动齿轮轴	1	
28	CBGj2/1-XF-01	Pump Body II	泵 体 II	1	
29	CBGj1-T1	Rectangular sealing ring	矩形密封圈	1	
30	B160121292	O-ring 15X2.65	o 型圈 15X2.65	1	
31	CBGj2/1-XF-02	Back cover	后 盖	1	
32	W060900001-1	type direct acting relief valve	DBD 型直动式溢流阀	1	
33	B060131403	Washers 14	垫圈 14	4	
34	CBGj1-01	Bolt M14X123	螺栓 M14x123	4	


油门操纵系统 THROTTLE CONTROL SYSTEM

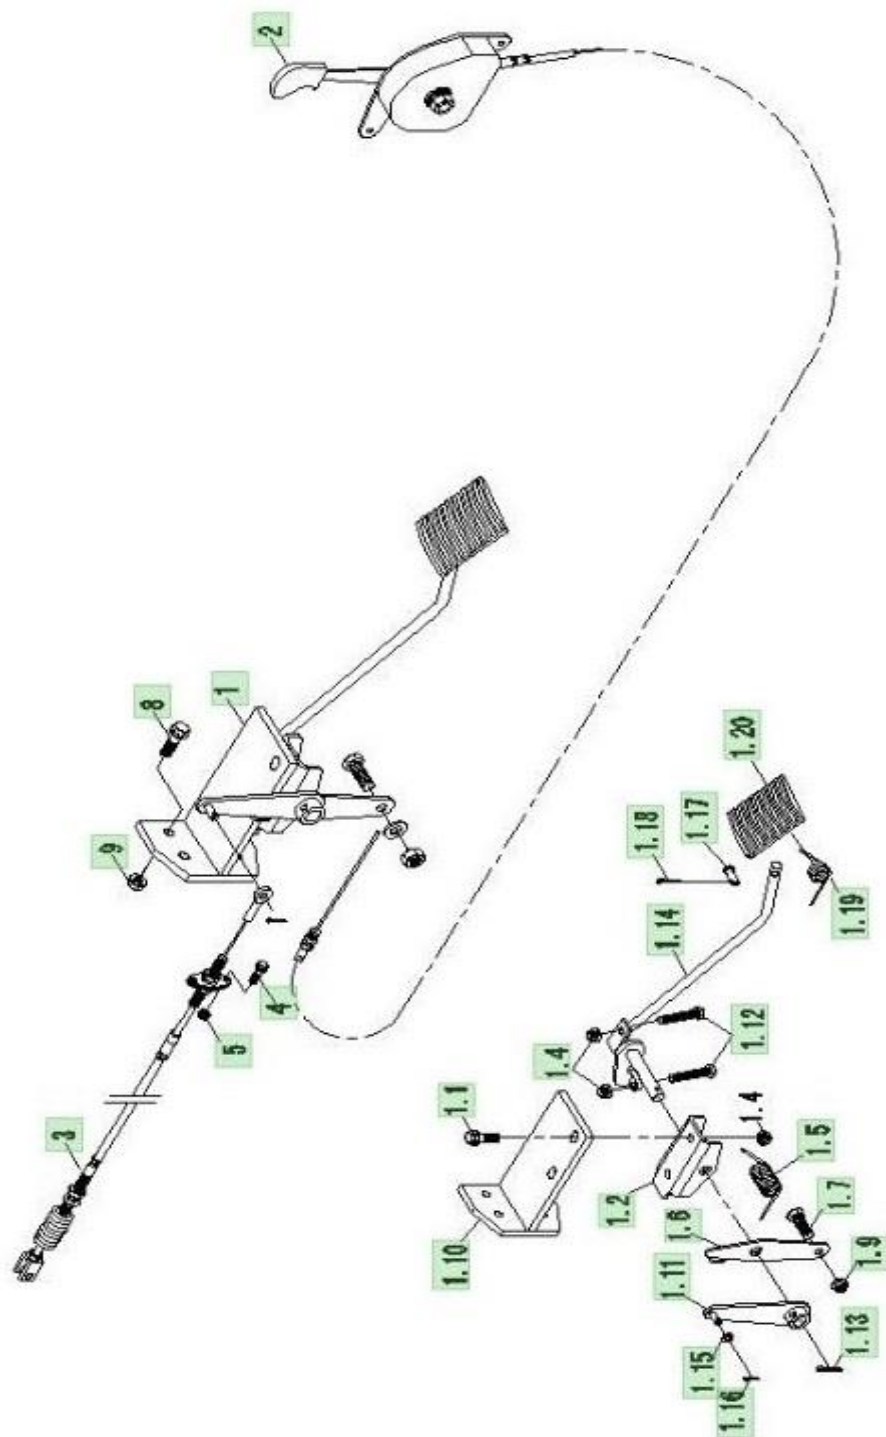

油门操纵系统 THROTTLE CONTROL SYSTEM

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Remark
1	B4616-05A010000	Gas pedal assembly	油门踏板总成	2	
1.1	B040710825	Bolt M8X25	螺栓 M8X25	2	
1.10	B4610-05A010300	Throttle bracket	油门支架	1	
1.11	B4610-05A010100	Foot throttle rocker arm welded	脚油门摇臂焊合	1	
1.12	B040710845	Bolt M8X45-	螺栓 M8X45-	2	
1.13	GBT879.1-5X20	Elastic cylinder pin	弹性圆柱销	1	
1.14	B4610-05A010200	Pedal rocker arm welded together	脚踏板摇臂焊合	1	
1.15	GBT97.1	Washer 16	垫圈 16	2	
1.16	GBT91	Pin 2X12	开口销 2X12	1	
1.17	GBT882	Pin 4X30	销轴 4X30	1	
1.18	GBT91	Pin 1.6X10	开口销 1.6X10	1	
1.19	B4610-05A010005	Double Spring	双联弹簧	1	
1.2	B4610-05A010001	Spring clamp plate	弹簧卡板	1	
1.20	B4610-05A010400	Soldering of pedals	脚踏板焊合	1	
1.4	B050330807	Nut M8	六角薄螺母 M8	4	
1.5	B4610-05A010002	Spring	弹簧	1	
1.6	B4610-05A010003	Hand throttle swing arm	手油门摇臂	1	
1.7	B4610-05A010004	Bolt	紧固螺栓	1	
1.9	B050330807	Nut M8	螺母 M8	1	
2	B4619-05A020000	Hand throttle assembly	手油门总成	1	
3	B4610-05A020000	Throttle cable assembly	油门拉线总成	1	
4	B040910520	Bolt M5X20	螺栓 M5X20	2	
5	B050330505	Nut M5	螺母 M5	2	
8	B040710816	Bolt M8X16	螺栓 M8X16	4	


熄火机构 FLAMEOUT MECHANISM

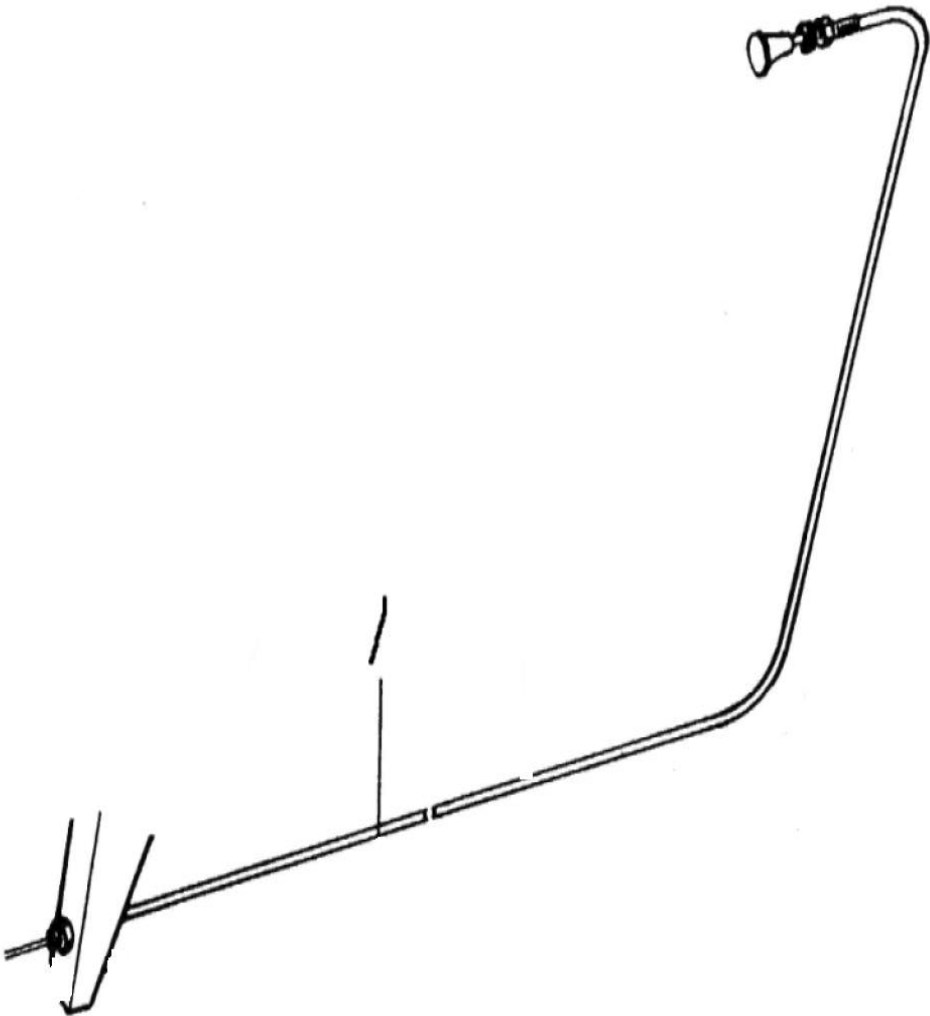

熄火机构 FLAMEOUT MECHANISM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z060170043	Flameout line flexible shaft	熄火线软轴	1	


座椅安装总成 SEAT INSTALLATION ASSEMBLY

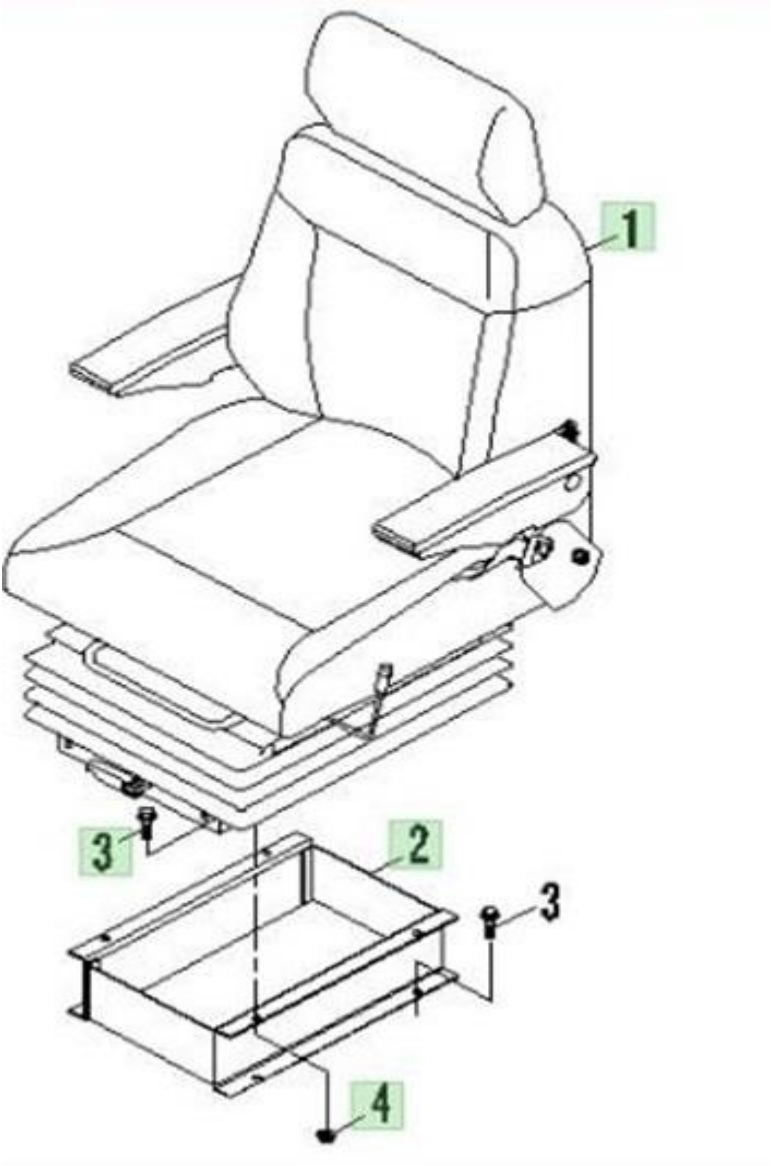

座椅安装总成 SEAT INSTALLATION ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B4616-44A010000	Seat Assembly	座椅总成	1	
2	Z065200012	Seat support	座椅支架	1	
3	B042520830	Bolt M8X30.	六角法兰面螺栓	8	
4	B052420808	Nut M8	螺母 M8	4	


驾驶室安装总成 CAB ASSEMBLY

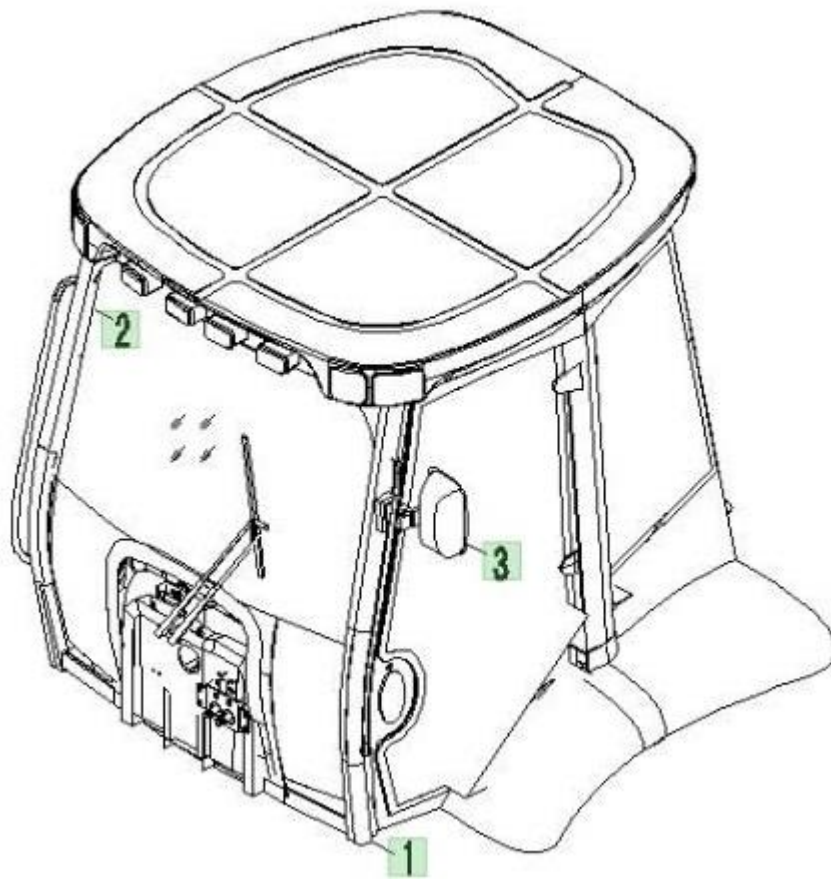

驾驶室安装总成 CAB ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B4610-45A010000	Cab skeleton assembly	驾驶室骨架总成	1	
2	B4610-45A020000	Cab interior assembly	驾驶室内饰总成	1	
3	B4611-45A030000	Cab exterior assembly	驾驶室外装总成	1	

驾驶室外装总成 CAB OUTER INSTALL ASSEMBLY

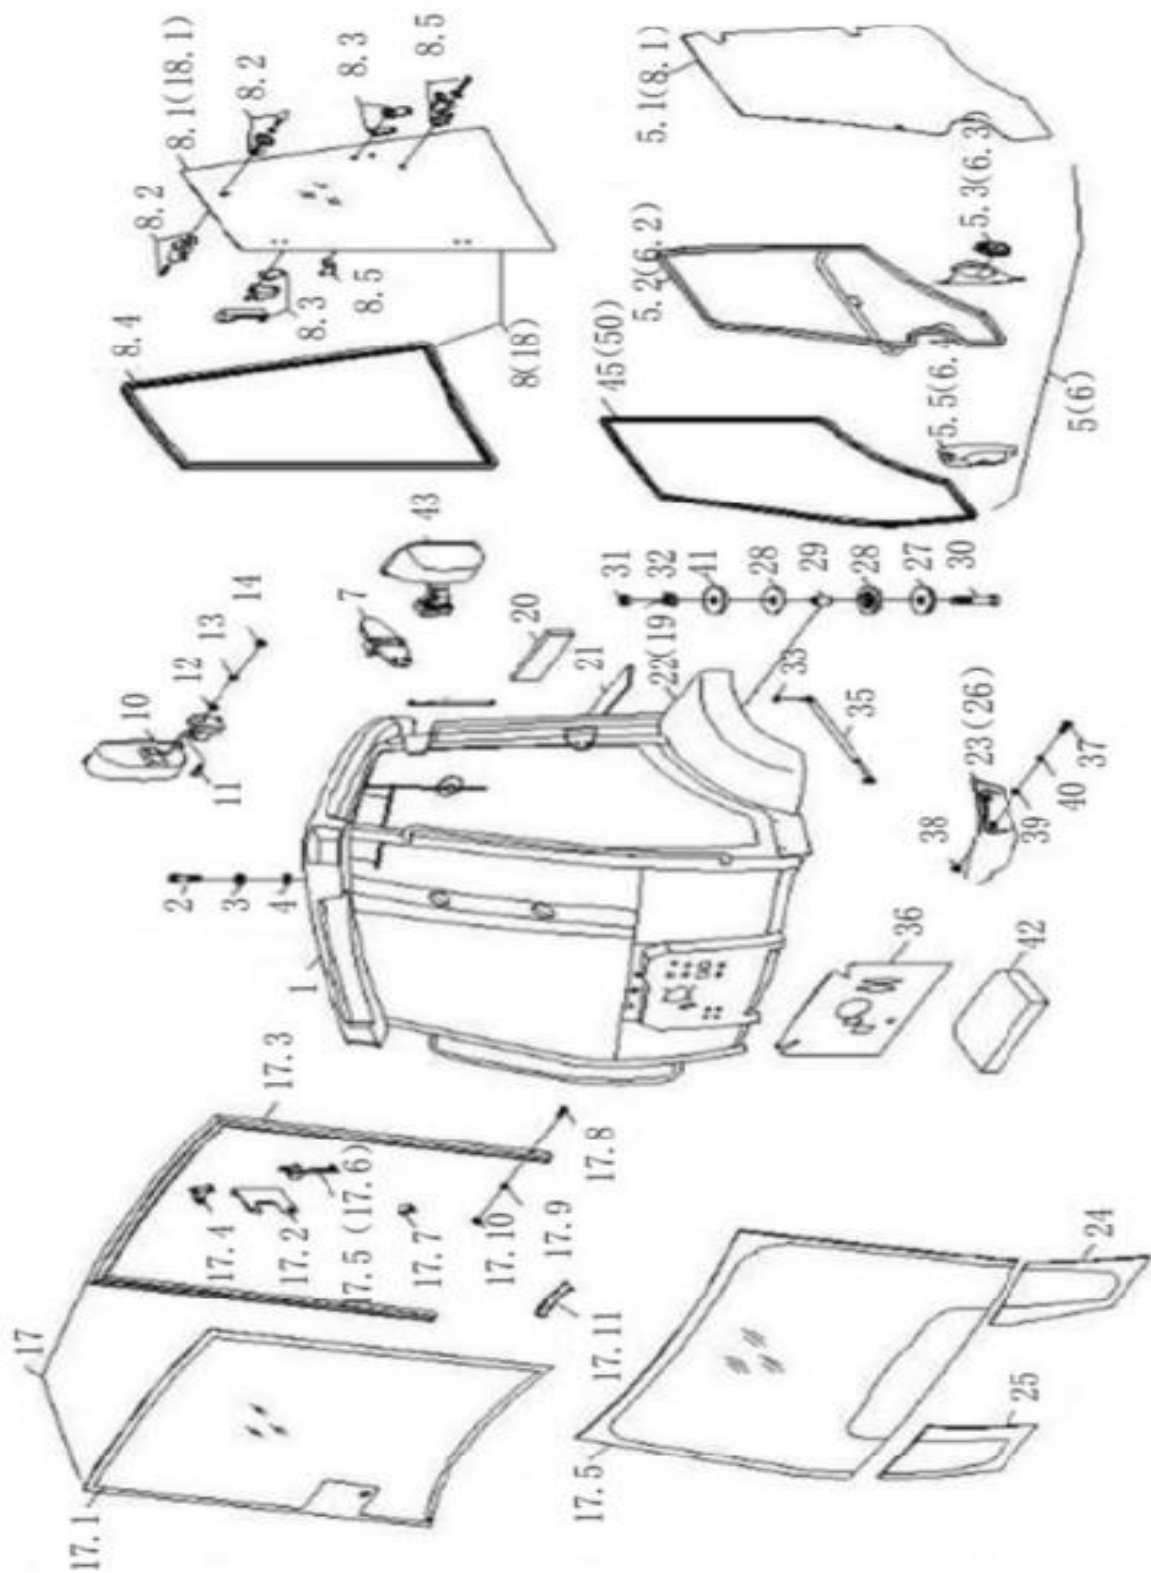


驾驶室外装总成 CAB OUTER INSTALL ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	Z062200011-12	Top cover	顶盖	1	
2	B040811650	Bolt M16X50	螺栓 M16X50	8	
3	B060411603	Washer 16	垫圈 16	8	
4	B4610-45A030013	Washer	防水垫圈	8	
5	B4610-45A030100	Left door assembly	左车门总成	1	
5.1	B4610-45A030101	Left door glass	左门玻璃	1	
5.2	B4610-45A031300	Left door frame welded	左车门骨架焊合	1	
5.3	B4610-45A031400	Lock Assembly	门锁总成	1	
5.5	B4610-45A030103	Left door lock trim panel	左门锁装饰板	1	
6	B4610-45A030200	Right door assembly	右车门总成	1	
6.1	B4610-45A030201	Right door glass	右门玻璃	1	
6.2	B4610-45A031500	Right door frame welded	右车门骨架焊合	1	
6.3	B4610-45A031600	Right Door Lock Assembly	右门锁总成	1	
6.4	B4610-45A030202	Right door lock trim panel	右门锁装饰板	1	
7	B4610-45A030300	Hinge assembly	铰链总成	4	
8	B4610-45A030400	Left window assembly	左侧窗总成	1	
8.1	B4610-45A030401	Left Window glass	左侧窗玻璃	1	
8.2	B4610-45A032000	Side window locking mechanism	侧窗上锁止机构	2	
8.3	B4610-45A032100	Locking mechanism in side window	侧窗中锁止机构	2	
8.5	B4610-45A032300	Bump Lock component	碰锁组件	2	
9	B4610-45A030900	Rear Window Air Spring	后视窗气弹簧	2	
10	Z062200010-3	Right rearview mirror assembly	右后视镜总成	1	
11	B040810670	Bolt M6X70	螺栓 M6X70	4	
12	B060410602	Washer 6	平垫圈 6	4	
13	B060110602	Washer 6	弹性垫圈 6	4	
14	B050360605	Nut M6	螺母 M6	4	
15	B4610-45A030001	Front windshield	前挡风玻璃	1	
16	Z062200011-15	Left Rearview Mirror Assembly	左后视镜总成	1	
17	B4610-45A030800	Rear Window Assembly	后视窗总成	1	
17.1	Z062200010-1	Rear window glass	后视窗玻璃	1	
17.10	B050330506	Nut M4	螺母 M4	2	
17.11	B4610-45A030805	Rear window sealant strip	后视窗密封胶条	1	
17.2	B4610-45A030802	Windshield wiper mounting plate	雨刮器固定板	1	
17.3	B4610-45A032400	Rear window skeleton welded	后视窗骨架焊合	1	

17.4	B4610-45A030803	Connecting rod lower support	连杆下支座	2	
17.5	B4610-45A032500	Left lock of rear window	后视窗左边锁	1	
17.6	B4610-45A032600	Rear window right lock	后视窗右边锁	1	
17.7	B4610-45A030804	Roller bearings	滚轮支座	2	
17.8	B010210420	Countersunk head screws	沉头螺钉 M4X20	2	
17.9	B060410401	Washer 4	垫圈 4	2	
18	B4610-45A030500	Right side window assembly	右侧窗总成	1	
18.1	B4610-45A030501	Right window glass	右侧窗玻璃	1	
19	Z062200011-14	Right Mudguard tile	右挡泥瓦	1	
20	B4610-45A030011	Air-conditioning air change panel	空调换风板	1	
21	B4611-45A030001	Rear decorative baffle	后装饰挡板	1	
22	Z062200011-13	Left mudguard tile	左挡泥瓦	1	
23	B4610-45A030005	Front lower left decorative corner panel	前左下装饰角板	1	
24	Z062200010-2	Front left lower windshield	前左下挡风玻璃	1	
25	B4610-45A030004	Front lower right windshield	前右下挡风玻璃	1	
26	B4610-45A030006	Front lower right trim corner panel	前右下装饰角板	1	
27	9F850-46A000007	Washer	大垫圈	4	
28	9F850-46A020000	Shock absorbers	减震器	8	
29	9F850-46A000011	Seat guide sleeve	座圈导套	4	
30	B040820160	Bolt M20x160	螺栓 M20X160	4	
31	B0502120179F850-	Lock nut M20	锁紧螺母 M20	4	
32	46A000005	Washer	垫圈	4	
33	B050360807	Nut M8	螺母 M8	2	
35	B4610-45A031000	Door Air Spring	车门气弹簧	2	
36	B4610-45A030012	Cabin Insulation Cotton	驾驶室隔热棉	1	
37	GBT81	PAN head screw	盘头螺钉	4	
38	B050330505	Nut M5	螺母 M5	4	
39	B060410501	Washer 5	垫圈 5	4	
40	B060110501	Washer 5	弹簧垫圈 5	4	
41	B4610-45A030007	Washer	大垫圈	4	
42	B4610-45A030014	Rubber pads	胶垫	6	
43	Z062200011-15	Left rearview mirror	左侧后视镜	1	
45	B4610-45A030102	Door seal	车门密封条	2	
50	B4610-45A030102	Door seal	车门密封条	2	


顶盖线路(24V)TOP COVER WIRING(24V)

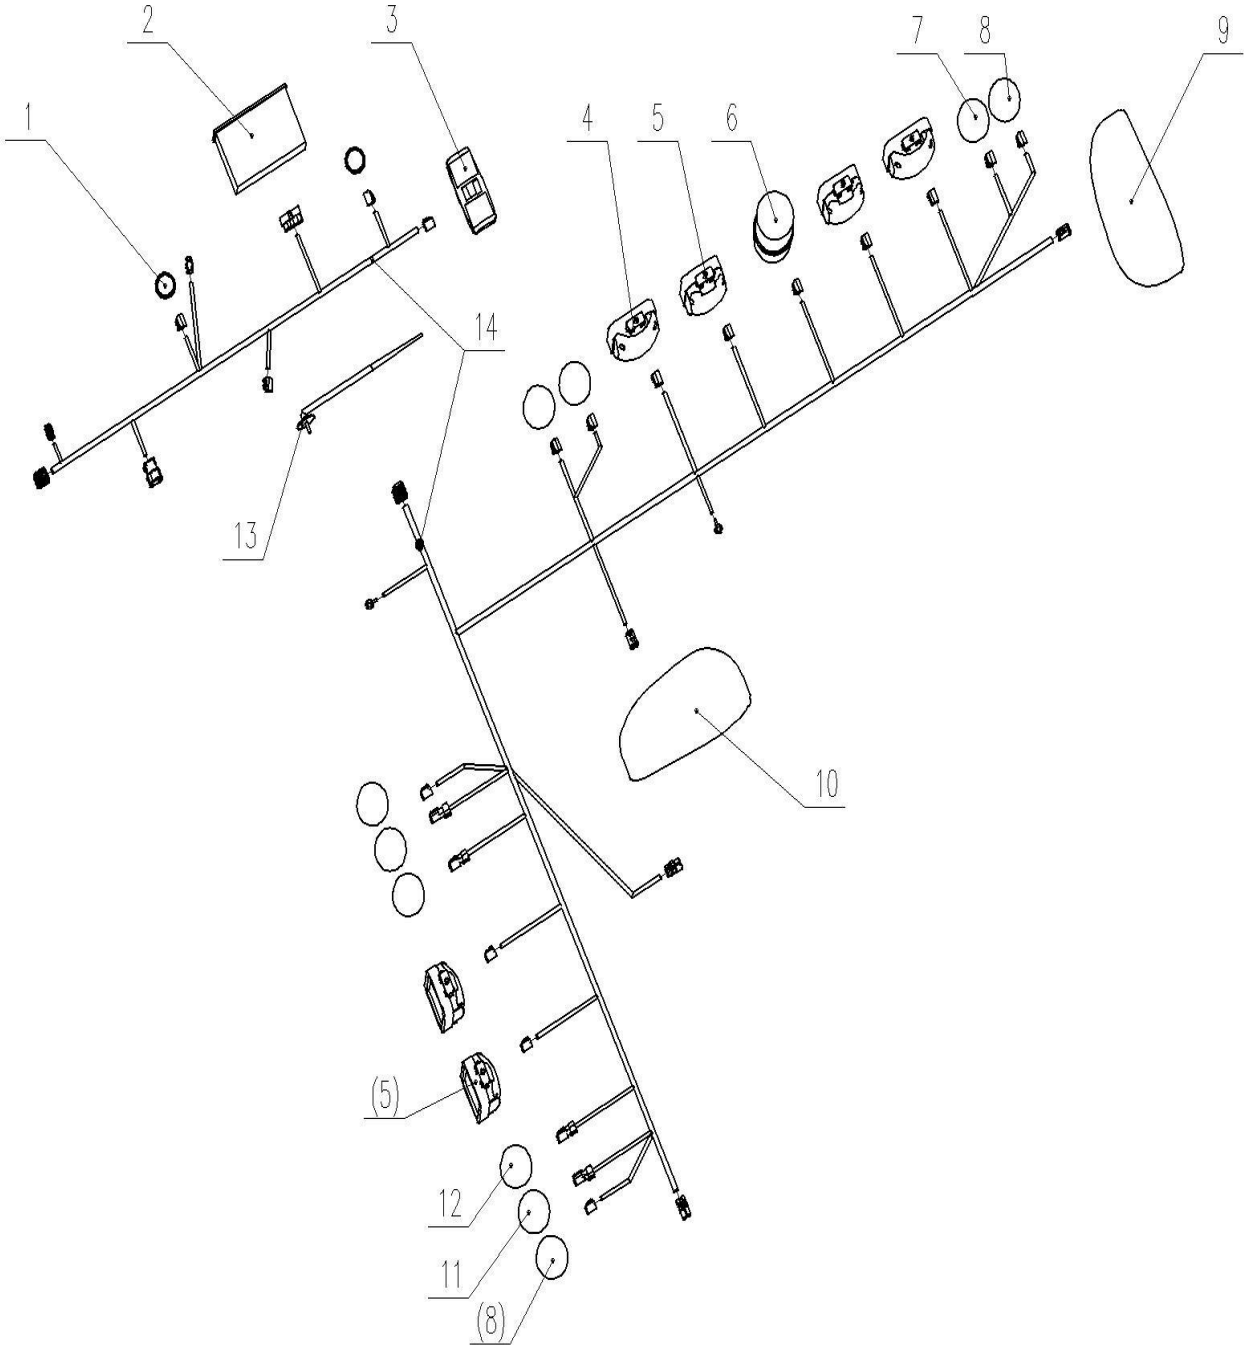

顶盖线路(24V)TOP COVER WIRING(24V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z062200011-38	Radio player horn	收放机喇叭	2	
2	B4610-66A030000	Radio player	收放机	1	
3	Z062200011-39	dome light	顶灯	1	
4	Z062200011-10	High and low beam work lights	远近光工作灯	2	
5	Z062200011-11	Work lights	工作灯	4	
6	Z062200011-40	Warning lights	警示灯	1	
7	Z062200011-7	position light	示廓灯	2	
8	Z062200011-6	turn signal	转向灯	4	
9	Z062200011-2	Left front combination lamp	左前组合灯	1	
10	Z062200011-3	Right front combination lamp	右前组合灯	1	
11	Z062200011-4	Reversing lights	制动行车灯	2	
12	Z062200011-5	Warning lights	倒车灯	2	
13	Z062200011-41	Radio player antenna	收放机天线	1	
14	WM16F.24	Top cover harness	顶盖线束	1	


顶盖线路(12V)TOP COVER WIRING(12V)

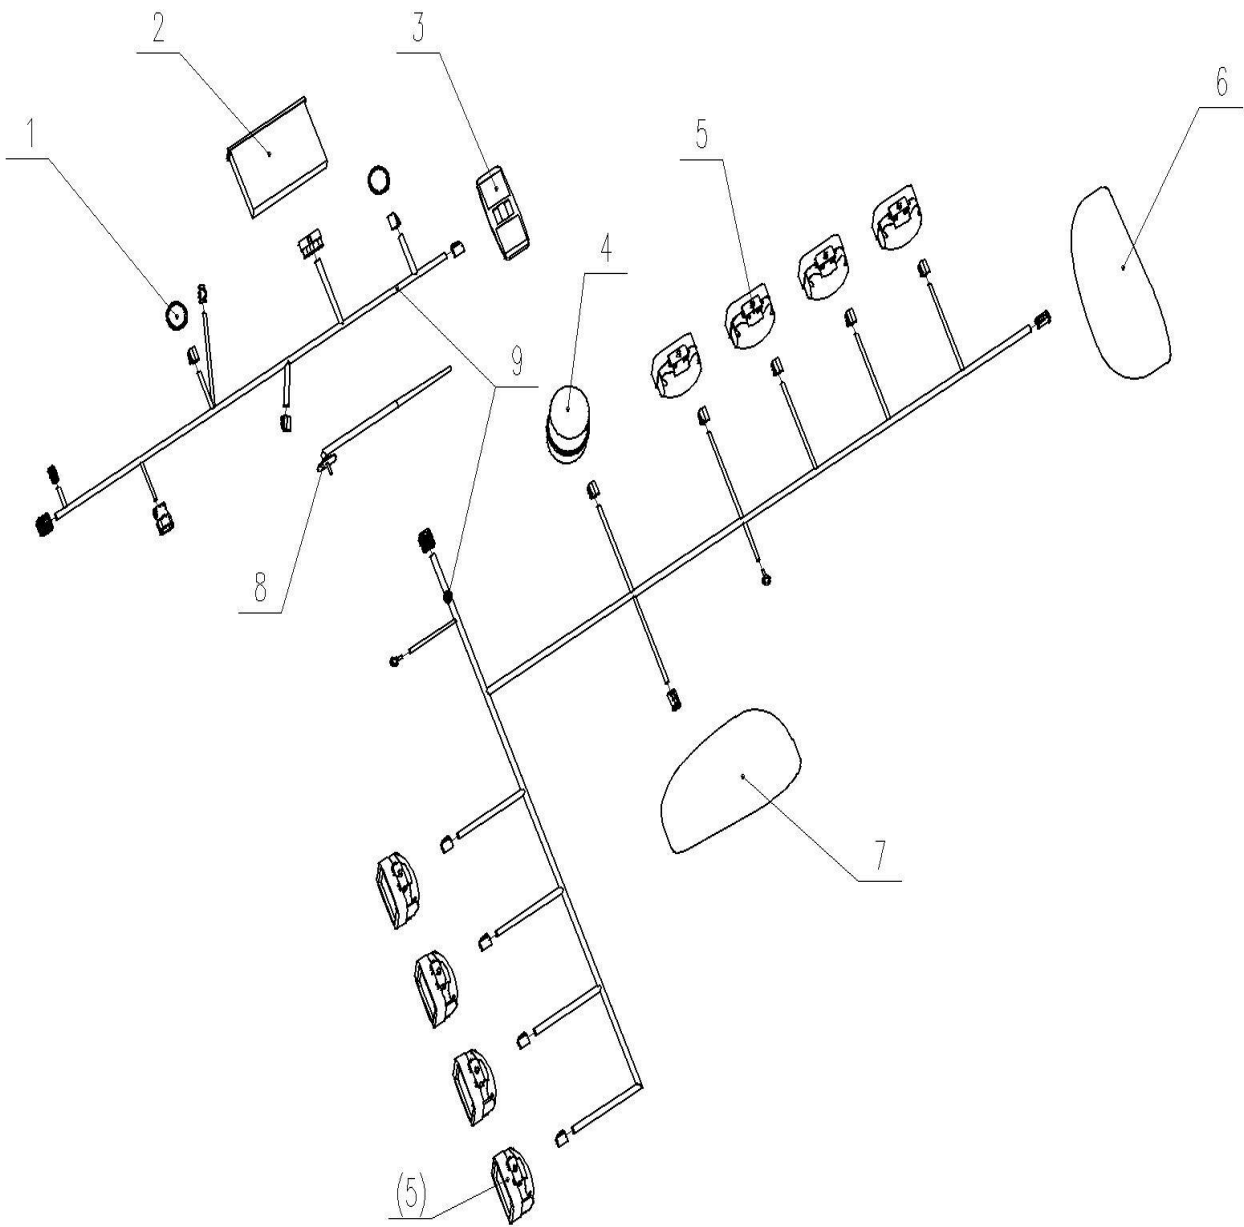

顶盖线路(12V)TOP COVER WIRING(12V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z062200011-38	Radio player horn	收放机喇叭	2	
2	B4610-66A030000	Radio player	收放机	1	
3	B4610-62A080000	dome light	顶灯	1	
4	W013500330	Warning lights	警示灯	1	
5	B4616-62A040000	Work lights	工作灯	8	
6	B4616-62A020000	Left front combination lamp	左前组合灯	1	
7	B4616-62A050000	Right front combination lamp	右前组合灯	1	
8	Z062200011-41	Radio player antenna	收放机天线	1	
9	WM16E	Top cover harness	顶盖线束	1	

底盘线路 CHASSIS WIRING

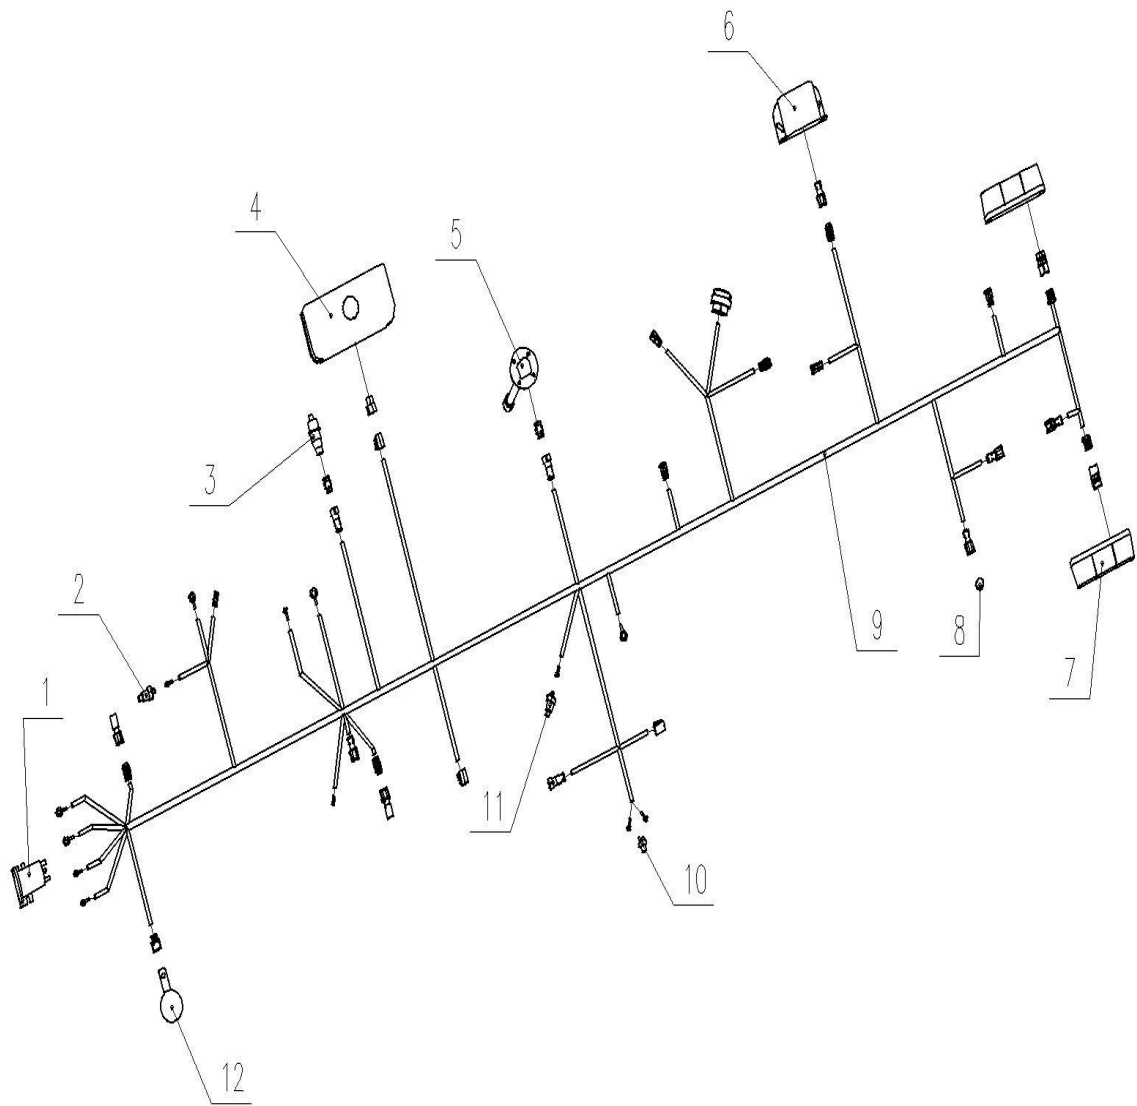


底盘线路(24V) CHASSIS WIRING (24V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q' TY	备注 Remark
1	W013500520	power relay	电源继电器	1	
2	W013500970-7	temperature sensor	温度传感器	1	
3	W013500970-4	Engine oil pressure alarm switch	发动机机油压报警开关	1	
4	W013500620	Windshield washer	风窗洗涤器	1	
5	W013500970-3	Liquid level sensor	液位传感器	1	
6	9F565-64A120000	Backup alarm	倒车报警器	1	
8	B4616-64A170000	Handle ball switch	手柄球开关	1	
9	Z063210180	Chassis harness	底盘线束	1	
10	W110000870	Reverse switch	倒车开关	1	
11	W013500970-7	temperature sensor	温度传感器	1	
12	W46000168	horn	喇叭	1	

底盘线路(12V) CHASSIS WIRING(12V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q' TY	备注 Remark
1	B4610-64A100000	Power relay	电源继电器	1	
4	B4616-64A020000	Windshield washer	风窗洗涤器	1	
5	W013500970-3	Liquid level sensor	液位传感器	1	
6	9F565-64A120000	Backup alarm	倒车报警器	1	
7	B4616-64A060000	Rear Tail Lamp Assembly	后尾灯总成	2	
8	B4616-64A170000	The engine is wired	手柄球开关	1	
9	Z065210182	Chassis harness	底盘线束	1	
10	W110000870	Reverse switch	倒车开关	1	
11	W013500970-7	temperature sensor	温度传感器	1	
12	B4616-64A110000	horn	喇叭	1	


仪表安装(24V) INSTRUMENT INSTALLATION(24V)

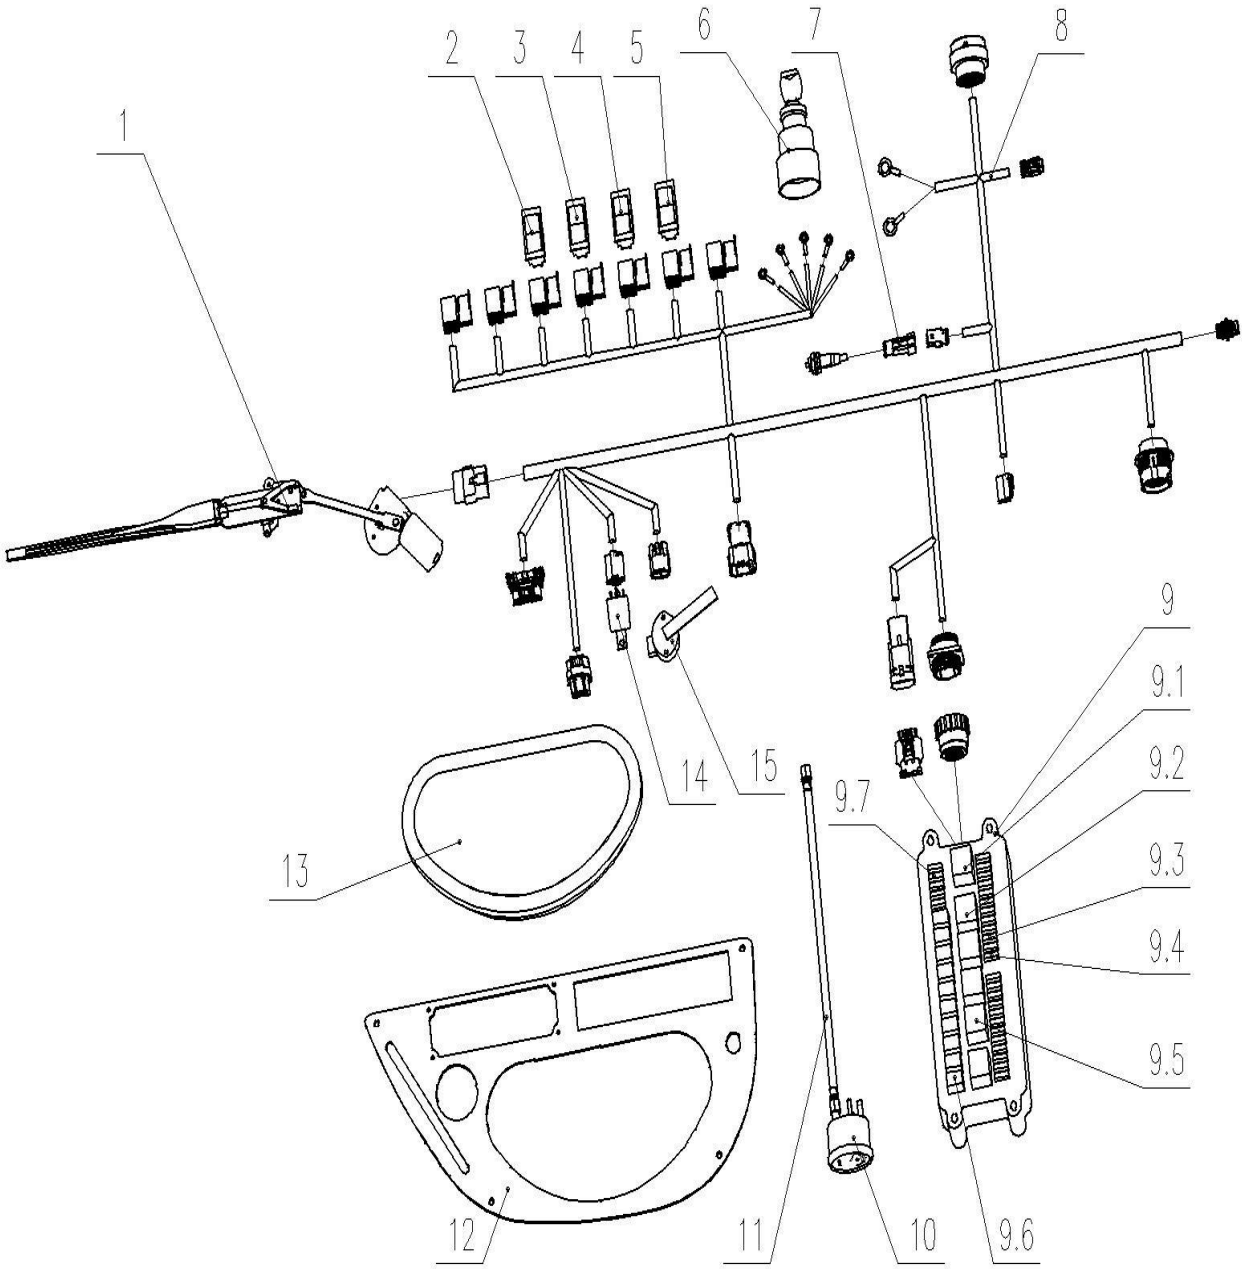

仪表安装(24V) INSTRUMENT INSTALLATION(24V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Rema rk
1	Z062200011-9	REAR WIPER	后雨刮器	1	
2	9F853-69A050200	Warning light switch	警示灯开关	1	
3	9F853-69A090200	Rear wiper switch	后雨刮开关	1	
4	9F653-66G120000	Rear work light switch	后工作灯开关	1	
5	B4616-66A100000	Side shift switch	侧移开关	1	
6	9F850-66A050000	key switch	钥匙开关	1	
7	W013500762-2	Hand brake switch	手刹开关	1	
8	Z063210170	Instrument harness	仪表线束	1	
9	W013500670	Central control box	中央控制盒	1	
9.1	W013500670-1	Wiper intermittent relay	雨刮间歇继电器	1	
9.2	W013500670-2	Composite alarm flasher	复合报警闪光器	1	
9.3	W110002320	10Afuse	10A 保险片	11	
9.4	W110002321	20Afuse	20A 保险片	15	
9.5	W013500670-3	Relay	继电器	3	
9.6	W013500670-4	Relay	继电器	9	
9.7	W110002322	30Afuse	30A 保险片	3	
10	W110000270	Transmission pressure gauge	变速油压表	1	
11	W110001012	Transmission pressure gauge tube	变速压力表管	1	
12	Z063210115	Instrument mounting plate	仪表台面板	1	
13	W013500970	Instrument panel assembly	仪表台总成	1	


仪表安装(12V) INSTRUMENT INSTALLATION(12V)

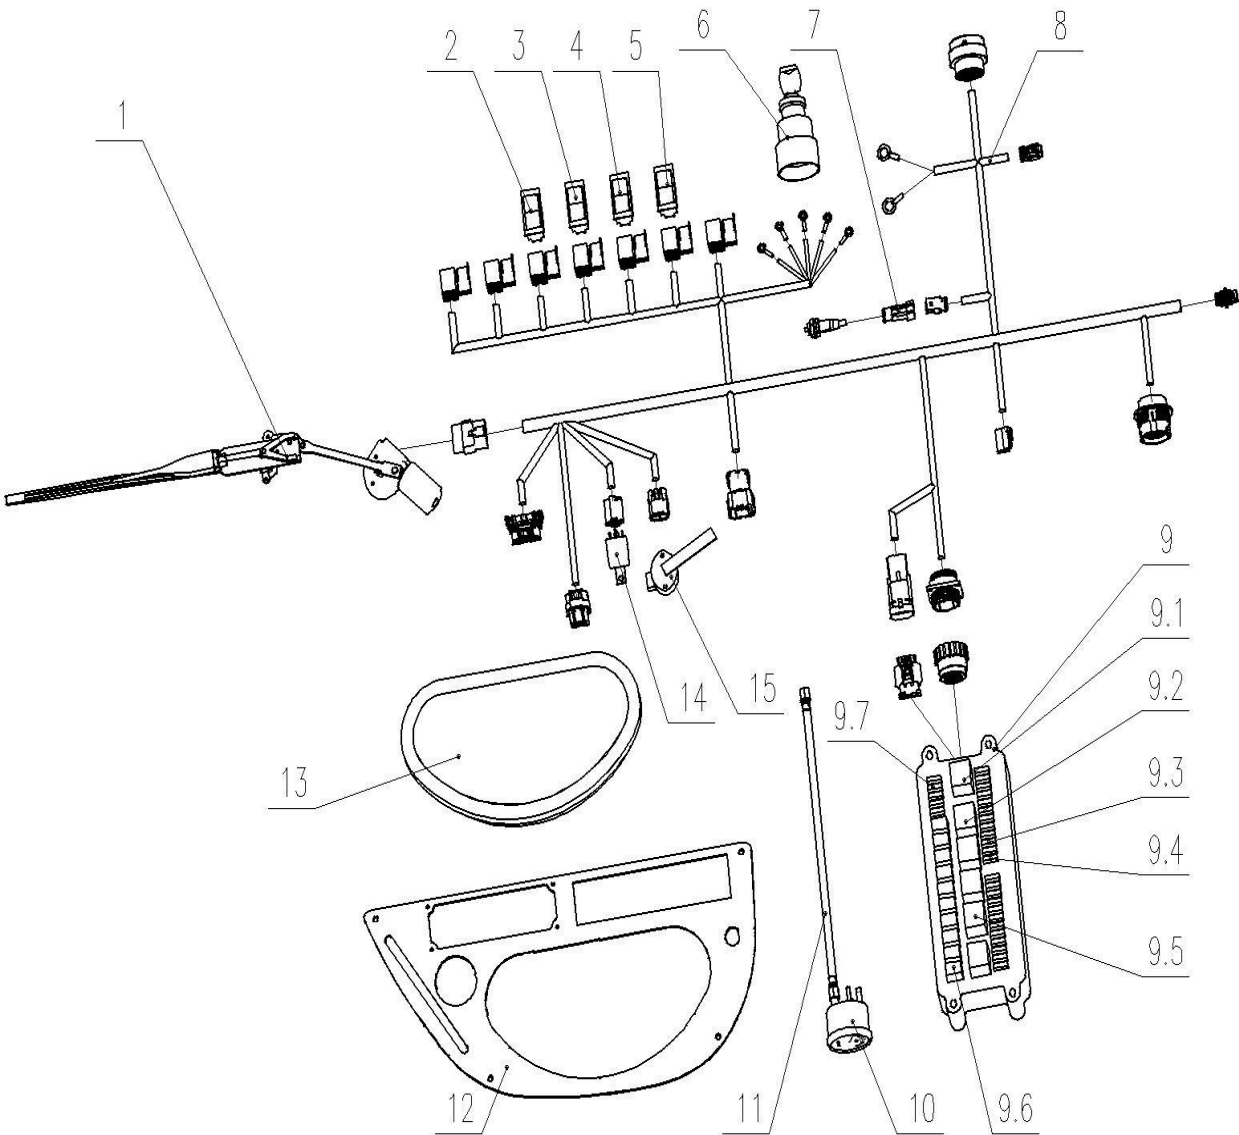

仪表安装(12V) INSTRUMENT INSTALLATION(12V)

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Remark
1	B4610-66A050000	REAR WIPER	后雨刮器	1	
2	9F853-69A050200	Warning light switch	警示灯开关	1	
3	9F853-69A090200	Rear wiper switch	后雨刮开关	1	
4	9F653-66G120000	Rear work light switch	后工作灯开关	1	
5	B4616-66A100000	Side shift switch	侧移开关	1	
6	9F850-66A050000	key switch	钥匙开关	1	
7	W013500762-2	Hand brake switch	手刹开关	1	
8	Z065210172	Instrument harness	仪表线束	1	
9	B4616-66A060000	Central control box	中央控制盒	1	
9.1	B4616-66A060001	Wiper intermittent relay	雨刮间歇继电器	1	
9.2	B4616-66A060002	Composite alarm flasher	复合报警闪光器	1	
9.3	W110002320	10Afuse	10A 保险片	11	
9.4	W110002321	20Afuse	20A 保险片	15	
9.5	B4616-66A060003	Relay	继电器	3	
9.6	B4616-66A060004	Relay	继电器	9	
9.7	W110002322	30Afuse	30A 保险片	3	
10	W110000270	Transmission pressure gauge	变速油压表	1	
11	W110001012	Transmission pressure gauge tube	变速压力表管	1	
12	Z063210117	Instrument mounting plate	仪表台面板	1	
13	W013500971	Instrument panel assembly	仪表台总成	1	
14	W013900382	Relay	继电器	1	
15	W013800480	Electronic accelerator	电子油门	1	


控制台线路(24V)CONSOLE LINE (24V)

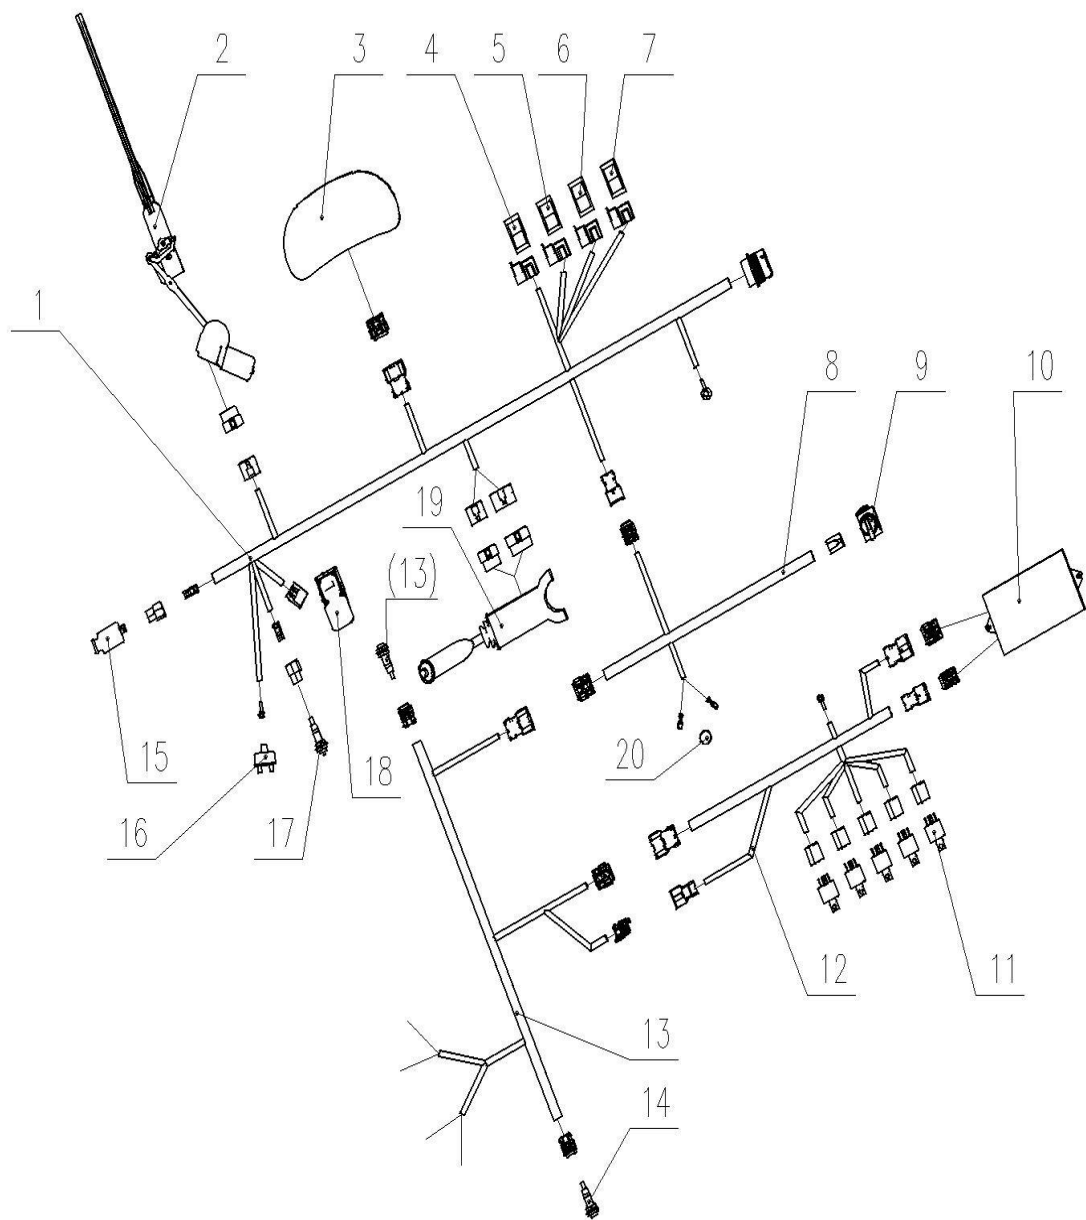

控制台线路(24V)CONSOLE LINE (24V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z063210160	Console wiring harness	控制台线束	1	
2	Z062200011-8	Front wiper	前雨刮	1	
3	Z062200011-42	Front Display Panel	前显示面板	1	
4	B4616-63A090000	Hazard alarm switch	危险报警开关	1	
5	B4616-63A080000	Light switch	灯光开关	1	
6	B4616-63A070000	Front work light switch	前工作灯开关	1	
7	W110003340	Quick change switch	快换开关	1	
8	Z065210061	Switch wiring harness	开关线束	1	
9	W013900360	Three mode switch	三模式开关	1	
10	W013900600	Three mode reversing switch	三模式换向模块	1	
11	W013900380	Relay	继电器	5	
12	Z065210041	Relay harness	继电器线束	1	
13	Z065210071	Electromagnetic valve harness	电磁阀线束	1	
14	W013900390	proximity switch	接近开关	2	
15	B4610-66A040000	outlet	电源插座	1	
16	W013500970-6	Air pressure alarm switch	气压报警开关	1	
17	B4610-63A040000	brake light switch	制动灯行程开关	1	
19	W013500410	Right handle	右侧手柄	1	
20	B4616-64A170000	Handle ball switch	手柄球开关	1	


控制台线路(12V)CONSOLE LINE (12V)

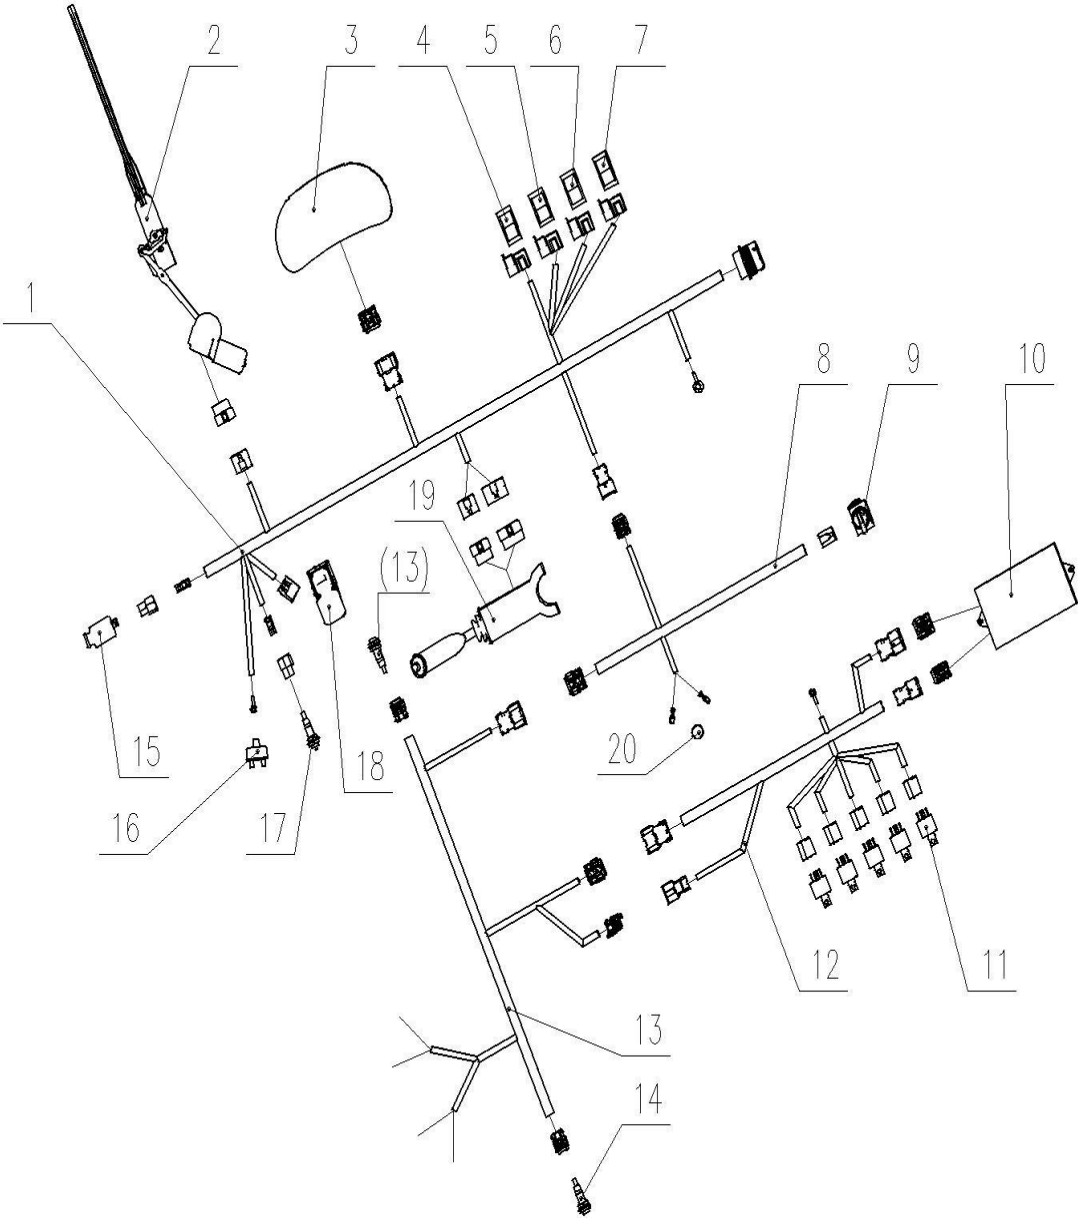

控制台线路(12V)CONSOLE LINE (12V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	Z065210162	Console wiring harness	控制台线束	1	
2	B4616-63A030000	Front wiper	前雨刮	1	
3	B4616-63A050000	Front Display Panel	前显示面板	1	
4	B4616-63A090000	Hazard alarm switch	危险报警开关	1	
5	B4616-63A080000	Light switch	灯光开关	1	
6	B4616-63A070000	Front work light switch	前工作灯开关	1	
7	W110003340	Quick change switch	快换开关	1	
8	Z065210061	Switch wiring harness	开关线束	1	
9	W013900360	Three mode switch	三模式开关	1	
10	W013900601	Three mode reversing switch	三模式换向模块	1	
11	W013900381	Relay	继电器	5	
12	Z065210041	Relay harness	继电器线束	1	
13	Z065210071	Electromagnetic valve harness	电磁阀线束	1	
14	W013900390	proximity switch	接近开关	2	
15	B4610-66A040000	outlet	电源插座	1	
16	W013500970-6	Air pressure alarm switch	气压报警开关	1	
17	B4610-63A040000	brake light switch	制动灯行程开关	1	
18	W110000144	Electronic accelerator pedal	电子油门踏板	1	
19	W013500410	Right handle	右侧手柄	1	
20	B4616-64A170000	Handle ball switch	手柄球开关	1	


电瓶组系统(24V) BATTERY CASES SYSTEM(24V)

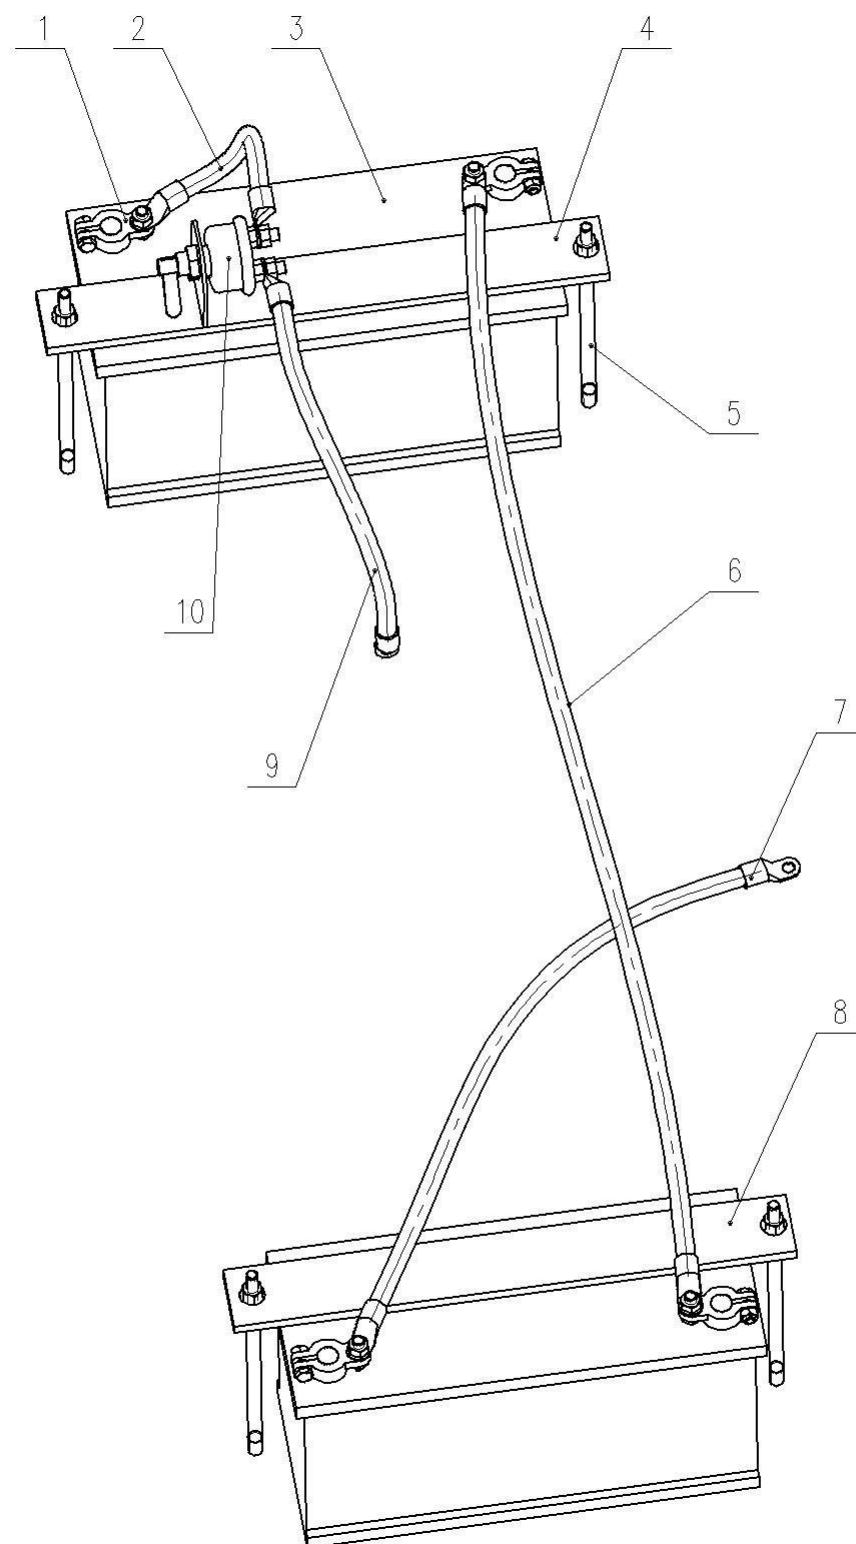

电瓶组系统(24V) BATTERY CASES SYSTEM(24V)

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W110001770	Battery clamp	电瓶夹子	4	
2	Z050210060	battery cable	电瓶线	1	
3	W110001434	storage battery	蓄电池	2	
4	Z065210020	Battery pressure plate	电瓶压板	1	
5	Z593210071	Tighten the stud	压紧螺柱	4	
6	Z062210220	battery cable	电瓶线	1	
7	Z110180080	battery cable	电瓶线	1	
8	Z065210030	platen	压板	1	
9	Z050210070	battery cable	电瓶线	1	
10	W110000147	Main power switch	电源总开关	1	


电瓶组系统(12V) BATTERY CASES SYSTEM(12V)

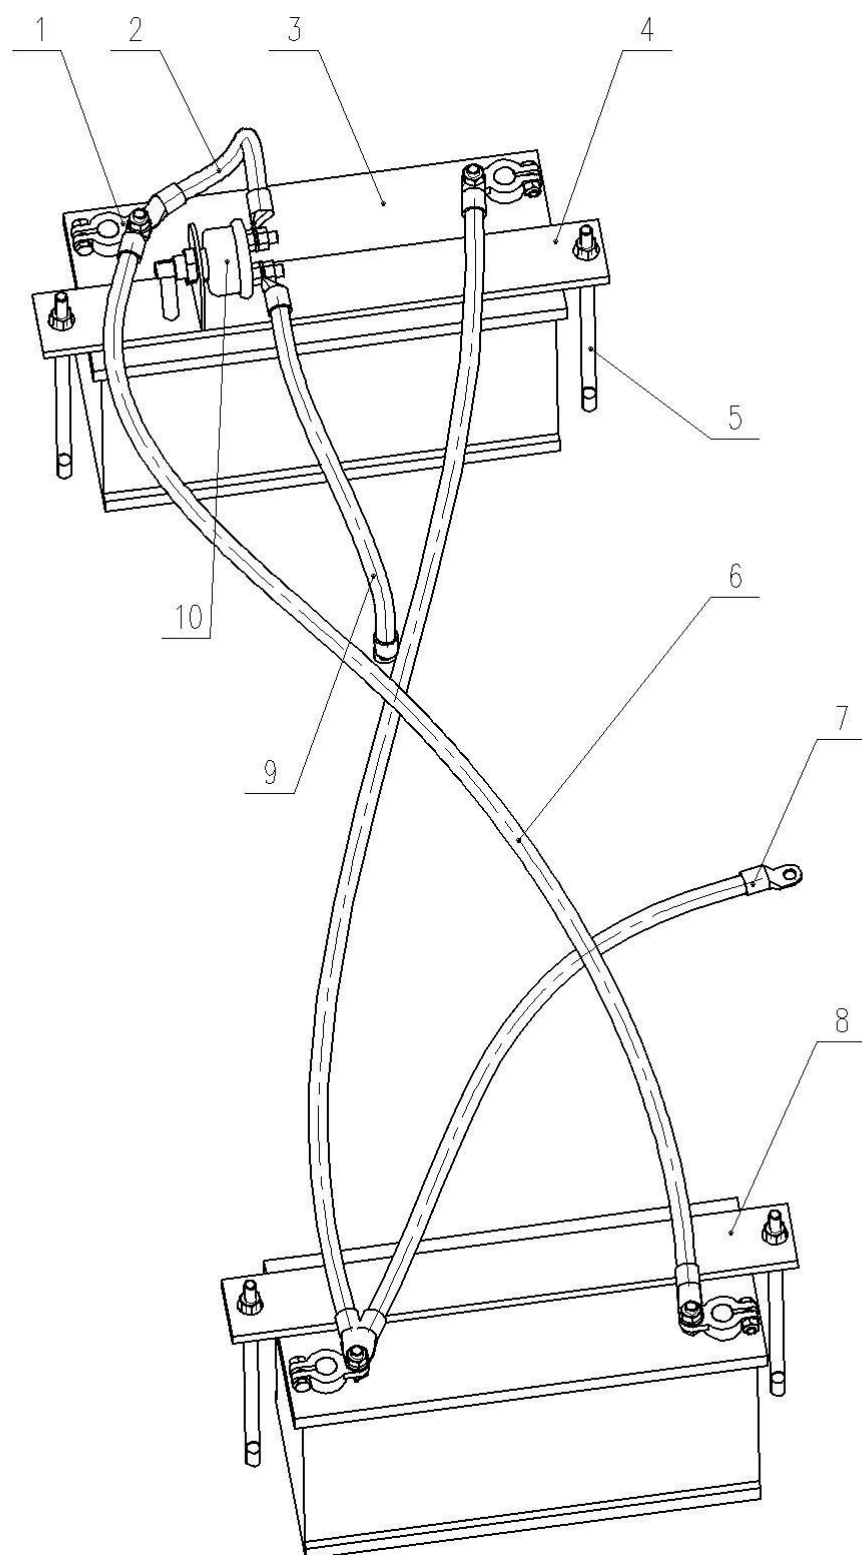

电瓶组系统(12V) BATTERY CASES SYSTEM(12V)

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
1	W110001770	Battery clamp	电瓶夹子	4	
2	Z050210060	battery cable	电瓶线	1	
3	W110001434	storage battery	蓄电池	2	
4	Z065210020	Battery pressure plate	电瓶压板	1	
5	Z593210071	Tighten the stud	压紧螺柱	4	
6	Z062210220	battery cable	电瓶线	2	
7	Z110180080	battery cable	电瓶线	1	
8	Z065210030	platen	压板	1	
9	Z050210070	battery cable	电瓶线	1	
10	W110000147	Main power switch	电源总开关	1	

底盘液压系统(一) CHASSIS HYDRAULIC SYSTEM (ONE)

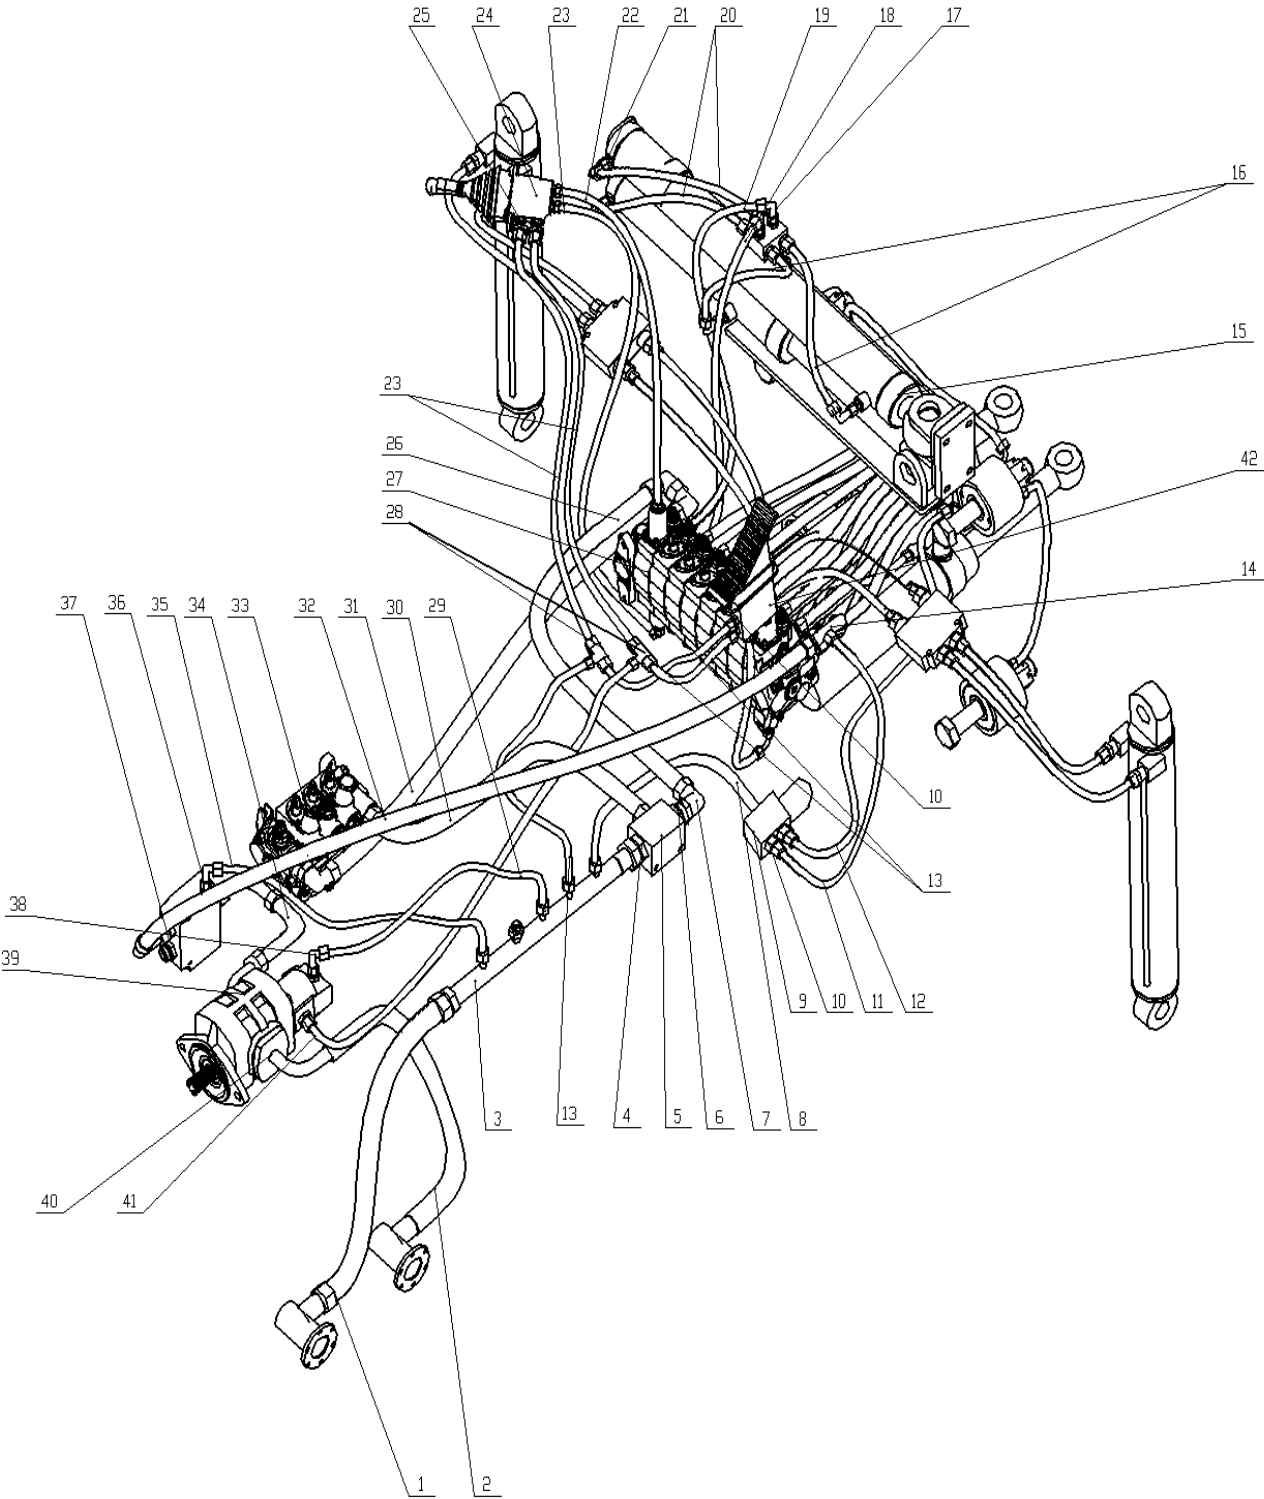


底盘液压系统(一) CHASSIS HYDRAULIC SYSTEM (ONE)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z064240225	Fuel tank return pipe	油箱回油管	1	
2	Z065060160	Pump suction pipe	泵吸油管	1	
3	Z064240362	Back to the tubing	回油管	1	
4	QLWZG074-004542	Direct connection	直通接头	1	
5	B4616-59A050001	Back to the oil block	后回油块	1	
6	QLWZG074-003642	Direct connection	直通接头	2	
7	QLWZG078-003636	Right Angle combination joint	直角组合接头	2	
8	Z064240280	Clamping valve return pipe	夹紧阀回油管	1	
9	W074200040	Clamp solenoid valve	夹紧电磁阀	1	
10	Z050251090	Joint	接头	7	
11	Z060250261	Pilot valve tubing	先导阀油管	1	
12	Z064240300	Pilot valve tubing	先导阀进油管	1	
13	Z064130300	Pilot valve tubing	先导阀进回油管	3	
14	Z064240160	Tap valve into oil nozzle	挖掘阀进油接管	1	
15	W053025750	Sliding frame push-pull cylinder	滑架推拉缸	1	
16	Z064240600	Slip cylinder tubing 2	滑移缸油管 2	2	
17	QLWZG078-001616	Right Angle combination joint	直角组合接头	1	
18	Z0613820010	Slip cylinder inlet pipe 1	滑移缸进油管 1	1	
19	Z064300110	Slip cylinder inlet pipe 2	滑移缸进油管 2	1	
20	Z064300030	Pipe	液压锁油管	2	
21	W110003210	joint	接头	10	
22	Z050610110	Pilot valve tubing	先导阀进油管	1	
23	Z064300090	Pilot valve tubing	先导阀进油管	3	
24	W071900007	Monolithic pilot valve	单片先导阀	1	
25	Z050251090	Joint	过渡接头	4	
26	Z064240200	Excavate valve return pipe	挖掘阀回油管	1	
27	W076400005	Excavate the valve	挖掘阀	1	
28	Z050251320	Three-way connecto	三通接头	2	
29	Z050251470	tubing	先导阀进油管	1	
30	Z062240212	Working valve return pipe	工作阀回油管	1	
31	Z064240240	Work valve into the oil pipe	工作阀进油管	1	
32	Z065240100	Excavate valve into oil pipe	挖掘阀进油管	1	
33	W070300400	Load valve	装载阀	1	
34	Z062060170	Priority valve into the fuel line	优先阀进油管	1	
35	Z060250261	Pilot valve tubing	油管 II	1	
36	W110250960	Joint	过渡接头	1	
37	QLWZG074-003027	Joint	过渡接头	2	

38	QLWZG077-001614	Right angle adjustable joint	直角可调接头	1	
39	W060900001	Gear oil pump (double)	齿轮油泵(双联)	1	
40	Z065060130	Steering pump suction port	转向泵吸油口	1	
41	Z050610110	Pilot valve into the fuel line	先导阀进油管	1	
42	W071900006	Single-foot pilot valve	单脚踏式先导阀	1	


底盘液压系统(二) CHASSIS HYDRAULIC SYSTEM (TWO)

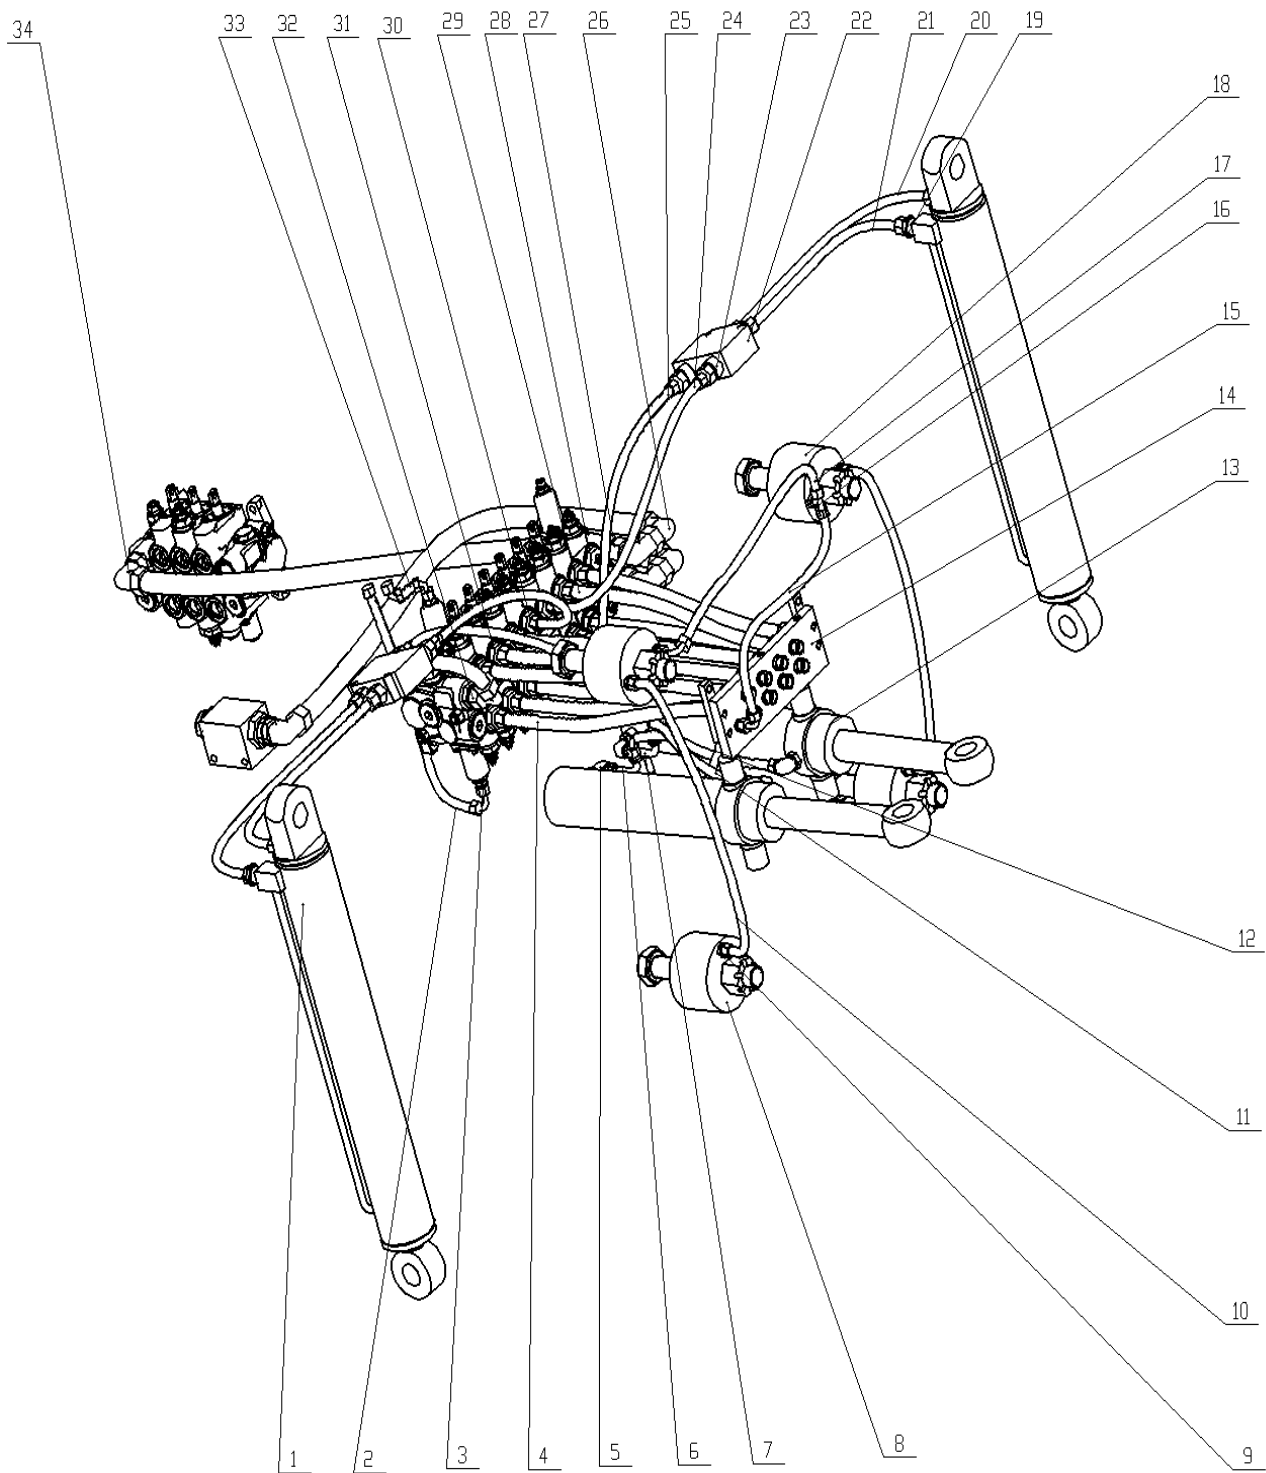

底盘液压系统(二) CHASSIS HYDRAULIC SYSTEM (TWO)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	W053025040	Outrigger jars	支腿缸	2	
2	Z050610070	Posterior lumen tubing	后腔油管	1	
3	QLWZG074-001614	Direct connection	直通接头	2	
4	Z062240700	Tubing	油管	8	
5	Z190180370	Direct connection	直通接头	4	
6	Z062241405	Left turn cylinder large cavity connector	左回转缸大腔接头	1	
7	Z062241455	Right rotary cylinder large cavity connector	右回转缸大腔接头	1	
8	W053025010	Clamping cylinder II	夹紧缸 II	2	
9	Z590190940	Transition joint	过渡接头	6	
10	Z050251051	Clamp tubing	夹紧油管	2	
11	Z062241483	Rotary cylinder tubing	回转缸油管	2	
12	Z062240693	Tubing 2	回转联出油管 2	2	
13	W053025175	Rotary cylinder	回转缸	2	
14	Z050420011	Oil Road block	油路块	1	
15	Z050250922	Clamp tubing	夹紧油管	1	
16	Z050251720	Three-way combined connector	三通组合接头	1	
17	Z050251012	Clamp cylinder tubing	夹紧缸油管	1	
18	W053025010	Clamping cylinder I	夹紧缸 I	2	
19	Z050251730	Transition joint	过渡接头	4	
20	Z064240600	Hydraulic lock tubing	液压锁油管	2	
21	Z064240620	Hydraulic lock tubing	液压锁油管	2	
22	W073025010	Two-way hydraulic lock	双向液压锁	2	
23	W110251890	Transition joint	接头	8	
24	Z062240721	Tubing	支腿联上出油管	2	
25	Z062240741	Direct connection	直通接头	2	
26	QLWZG078-003636	Tubin Right Angle	直角组合接头	2	
27	QLWZG074-003633	Direct connection	直通接头	2	
28	QLWZG074-001830	Direct connection	直通接头	2	
29	Z062240693	tubing	回转联出油管	2	
30	QLWZG074-001630	Direct connection	直通接头	4	
31	Z020100200	Direct connection	直通接头	8	
32	QLWZG074-003030	Direct connection	直通接头	3	
33	Z050610030	Tubing	油管	1	
34	QLWZG078-003030	Tubin Right Angle	直角组合接头	3	


挖掘液压系统(一) EXCAVATE THE HYDRAULIC SYSTEM (ONE)

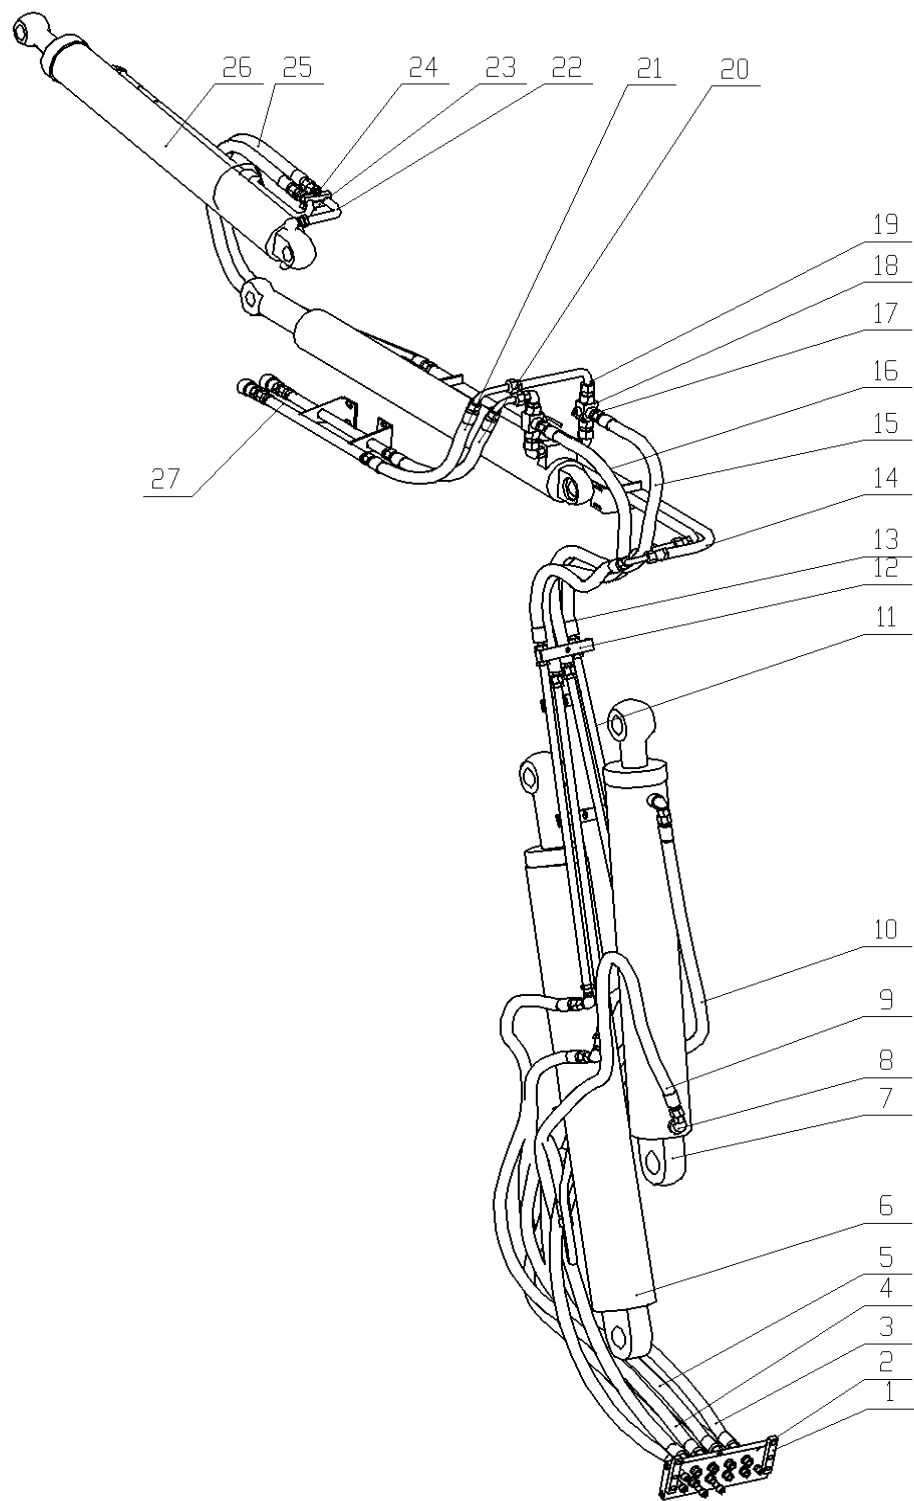

挖掘液压系统(一) EXCAVATE THE HYDRAULIC SYSTEM (ONE)

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	Z050251045	Fixing plate	固定板	2	
2	Z050420011	Oil Road block	油路块	1	
3	Z062580115	Hard tubing tubing 1	硬管油管 1	3	
4	Z062580215	Hard tubing tubing3	硬管油管 3	1	
5	Z062580015	Boom cylinder large cavity tubing	大臂缸大腔油管	2	
6	W053025800	Big Arm cylinder	大臂缸	1	
7	W053025850	Bucket rod cylinder	斗杆缸	1	
8	Z060100580	Right angle adjustable joint	直角可调接头	4	
9	Z062580075	Large cavity into the tubing	大腔进油管	1	
10	Z062580095	Small cavity into the tubing	小腔进油管	1	
11	Z062580135	Middle hard tube	中间硬管	1	
12	Z062580510	Pipe clamp plate	管卡板	1	
13	Z062580275	Tubing	进油管	2	
14	Z062580290	Excavate hard oil pipe into cylinder	挖掘缸进油硬管	1	
15	Z062580535	Tubing	油管	2	
16	Z062580255	Tubing	进油管	1	
17	Z350170030	Joint	接头	4	
18	W079600055	Three-way ball valve	三通球阀	2	
19	Z062880035	Flex and break hard pipe	伸缩破碎硬管	1	
20	Z062880010	Tubing	油管	1	
21	Z062880050	Tubing	油管	1	
22	Z061250925	Excavate cylinder large cavity hard tube	挖掘缸大腔硬管	1	
23	Z061250955	Pipe Card	管卡	1	
24	B042520835	Transition joint	螺栓 M8×35	2	
25	Z062250050	Excavate the cylinder	挖掘缸进油管	2	
26	W053025055	Direct connection	挖掘缸	1	
27	Z050380402	Additional device hard tube	附加装置硬管	1	


挖掘液压系统（二） EXCAVATE THE HYDRAULIC SYSTEM (TWO)

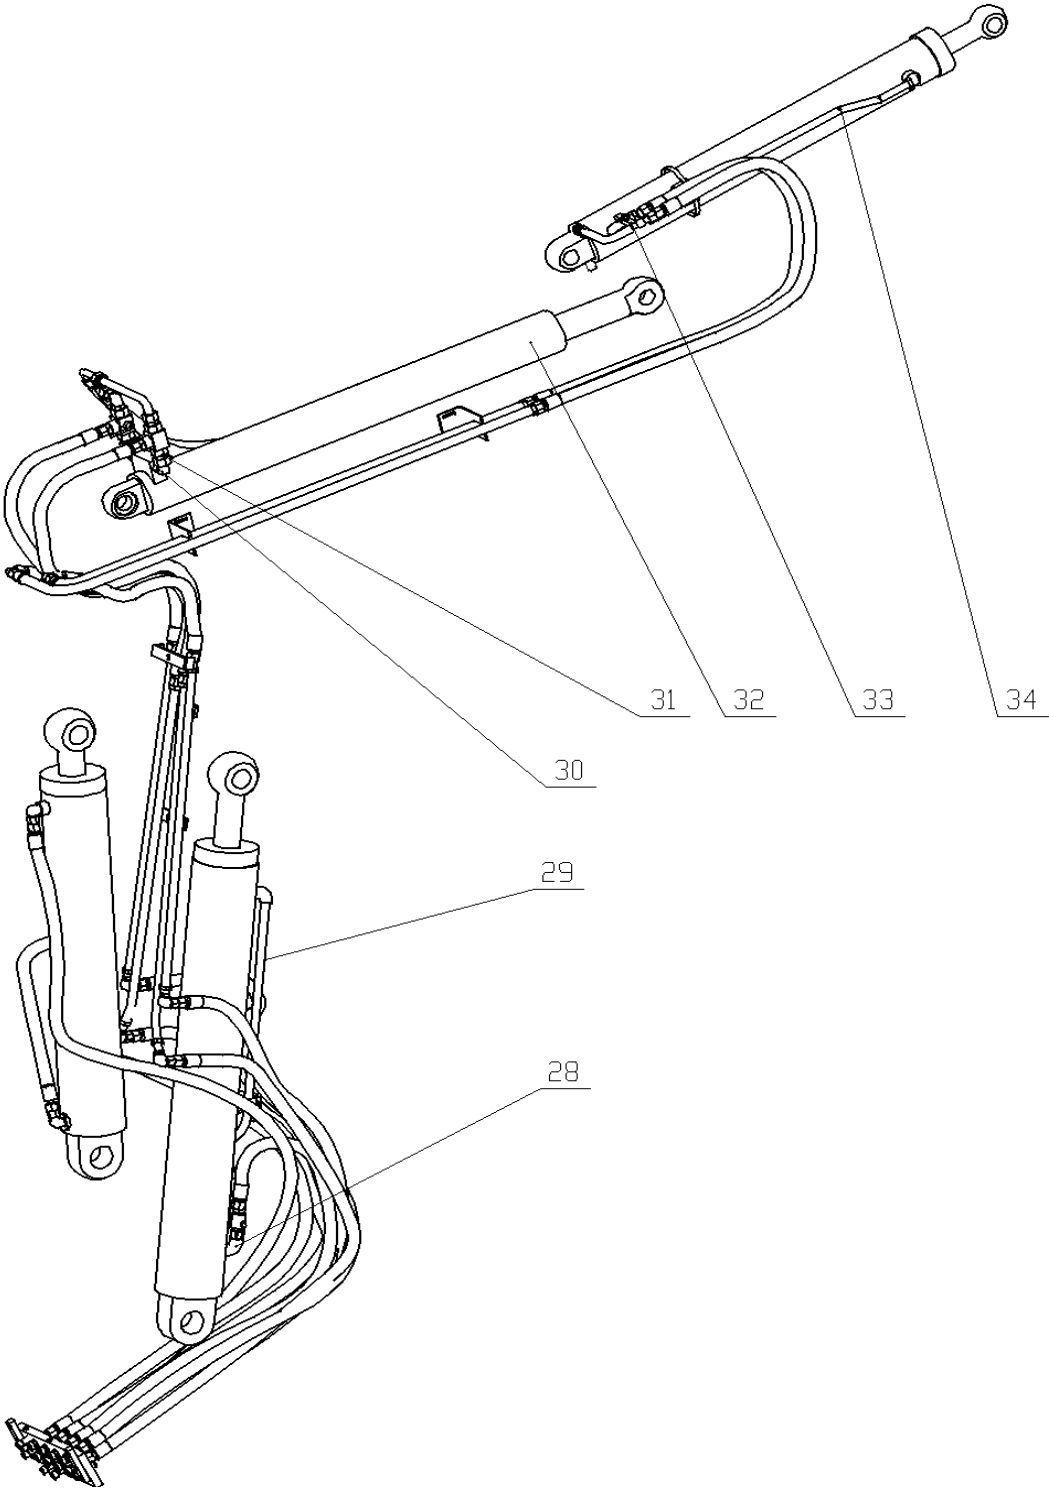

挖掘液压系统（二） EXCAVATE THE HYDRAULIC SYSTEM（TWO）

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
28	Z062580035	Arm cylinder large cavity hard tube	大臂缸大腔硬管	1	
29	Z062580055	Big arm cylinder small lumen hard tube	大臂缸小腔硬管	1	
30	Z060100580	Right angle adjustable joint	直角可调接头	1	
31	Z061250850	Transition joint	过渡接头	1	
32	W053025151	Retractable cylinder	伸缩油缸	1	
33	Z061250945	Pressure Plate	压板	1	
34	Z061250526	Small lumen hard tube	挖掘缸小腔硬管	1	


挖掘阀支架 BACKHOE VALVE FRAME

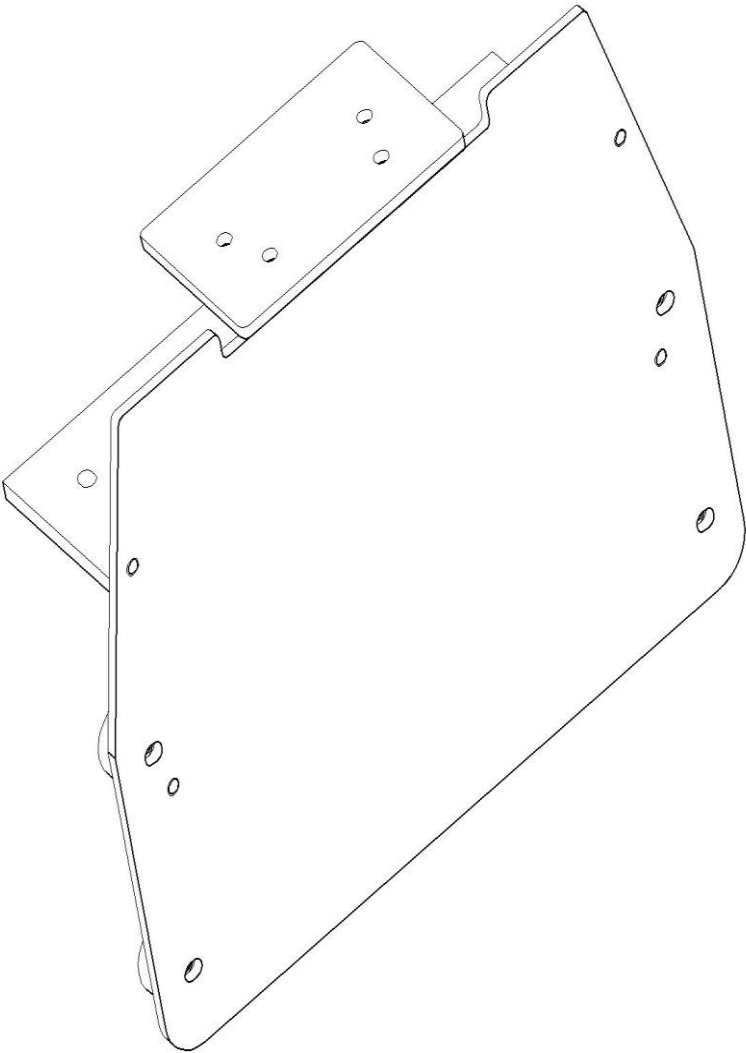

挖掘阀支架 BACKHOE VALVE FRAME

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z065240010	Excavate the control valve bracket	挖掘控制阀支架	1	


油缸及阀 CYLINDER AND VALVE

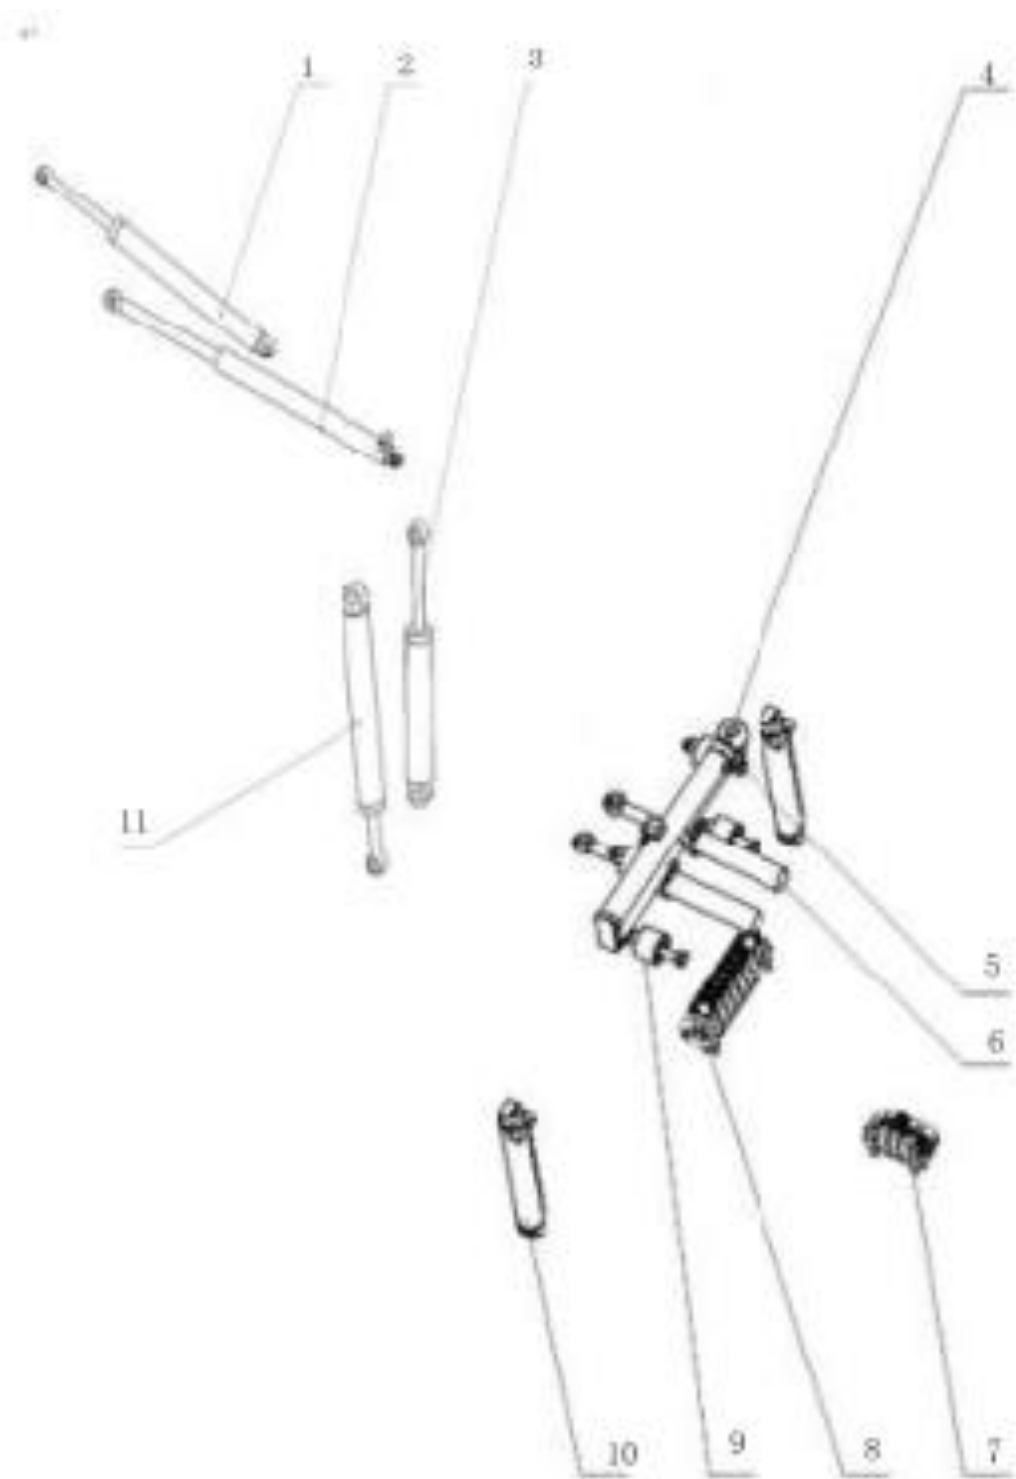

油缸及阀 CYLINDER AND VALVE

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Remark
1	W053025055	Excavate the cylinder	挖掘缸	1	
2	W053025151	Retractable cylinder	伸缩油缸	1	
3	W053025850	Excavate the cylinder	斗杆缸	1	
4	W053025750	Sliding frame push-pull cylinder	滑架推拉缸	1	
5	W053025010	Clamping cylinder I	夹紧缸I	2	
6	W053025175	Rotary cylinder	回转缸	2	
7	W070300400	Triple loading valve	三联装载阀	1	
8	W076400005	Excavate the valve	挖掘阀	1	
9	W053025100	Clamping cylinderII	夹紧缸II	2	
10	W053025040	Outtrigger jars	支腿缸	2	
11	W053025800	Big Arm cylinder	大臂缸	1	

挖掘阀总成 BACKHOE VALVE ASSEMBLY

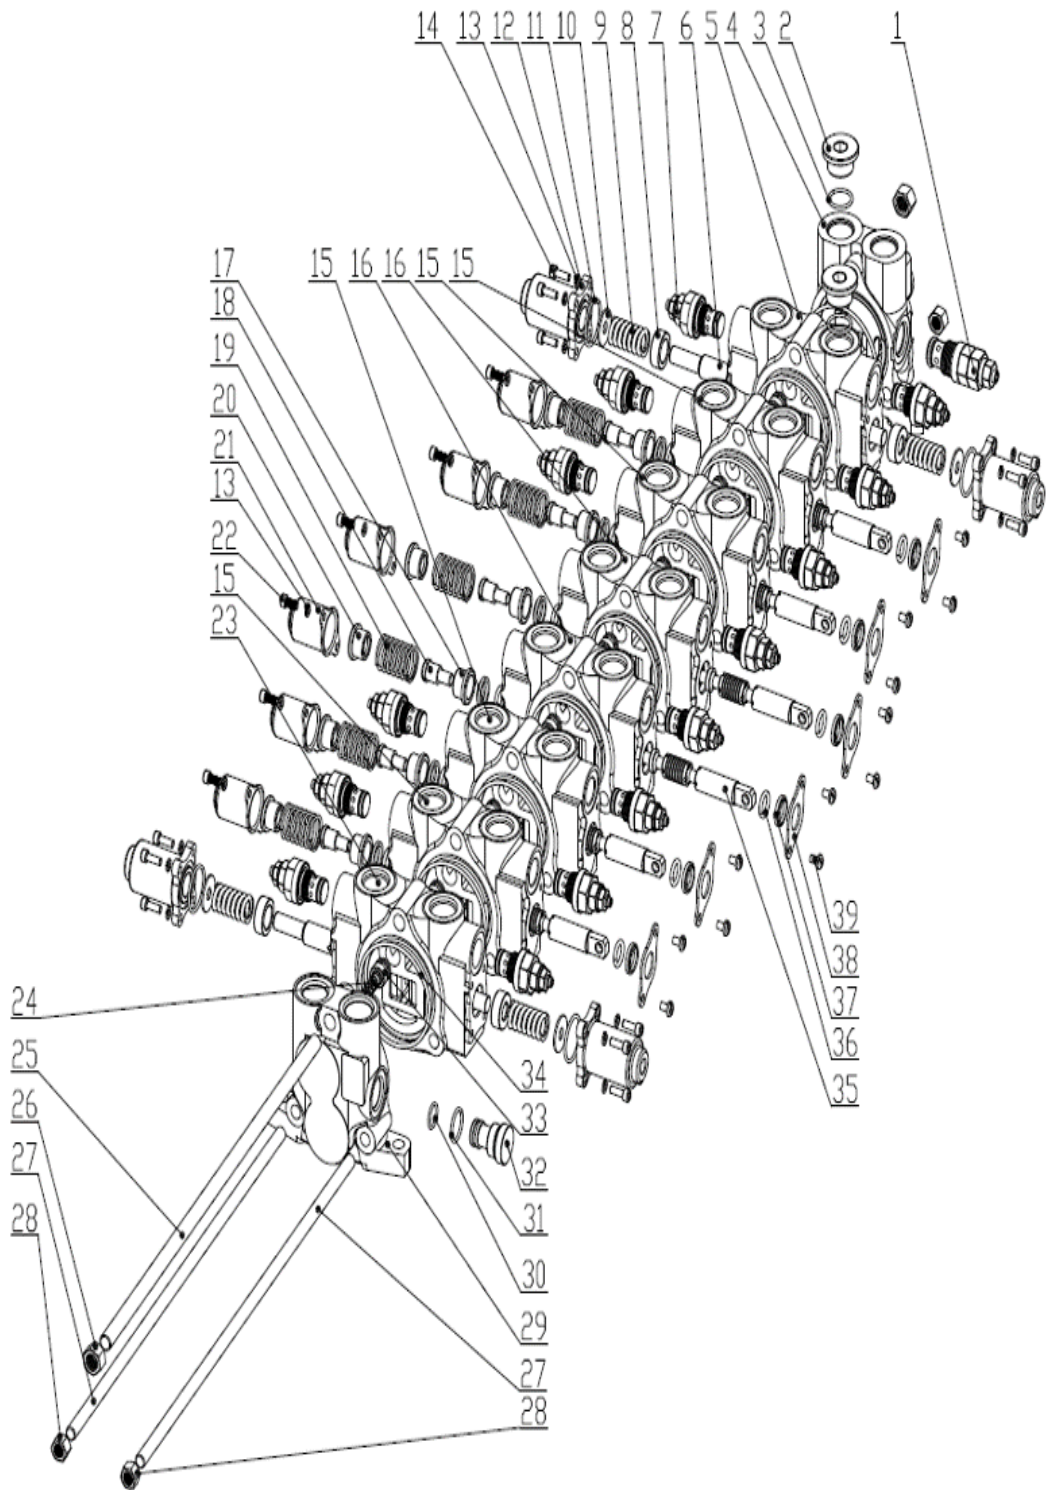


挖掘阀总成 BACKHOE VALVE ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	XDYF25-01b-00	Main Relief Valve	主溢流阀	1	
2	ACV-L25F-21	Screw plug	螺塞	3	
3	B160121290	O-ring 26.6X2.9	O 型圈/26.6x2.9	3	
4	CDB-F20D-1.01d1	Inlet valve body	进油阀体	1	
5	CDB-F20-2.07y2	Valve Body	阀体	1	
6	ZL20DYJ-4.01y	O-stem	O 型阀杆	2	
7	XDYF20-02/03.20	Secondary Relief Valve	二次溢流阀	14	
8	ZL20DYJ-2.23	Spring seat	弹簧座	4	
9	ZL20DYJ-2.24	Spring	弹簧	4	
10	ZL20DYJ-2.25	Limit Gasket	限位垫片	4	
11	B160110345	O-ring 34.5X2.65	O 型圈/34.5x2.65	4	
12	ZL20DYJ-2.26	End Cap II	端盖II	4	
13	GB93/6	PAD/6	弹垫/6	28	
14	GB70/M6x18	Hexagon socket screw/M6X18	内六角螺 M6x18	16	
15	CDB-F20-3.04c	Valve Body	阀体	4	
16	CDB-F20-3.04a	Valve Body	阀体	2	
17	CDB20-2.03	Spring seat	弹簧座	6	
18	CDB20-2.05	Setting screw	定位螺钉	6	
19	CDB-F20-2.04a	Spring	弹簧	6	
20	CDB20-2.20	Spring seat	弹簧座	6	
21	CDB-F20-2.06	Positioning end cap	定位端盖	6	
22	GB70/M6x14	Hexagon socket screw/M6X14	内六角螺钉	12	
23	CDB-F20-3.04y2	Valve Body	阀体	1	
24	CDB-F20-2.01	Spring	弹簧	8	
25	CDB-F20-7.00	Stud Bolt/M14X1.5X525	双头螺栓	1	
26	GB6171	Nut M14X1.5	螺母/M14x1.5	2	
27	CDB-F20-6.00.8	Stud Bolt/M12X1.25X525	双头螺栓/M12x1	2	
28	GB6176	Nut M12X1.25	螺母/M12x1.25	4	
29	CDB-F20-5.00b	Return valve body	回油阀体	1	
30	B160131222	O-ring 22X2.4	O 型圈/22x2.4	1	
31	B160120236	O-ring 23.6X2.65	O 型圈/23.6x2.65	1	
32	CDB-F20D-1.02	Screw plug	螺塞	1	
33	CDB-F20-2.02	Check Valve	单向阀	8	
34	B160110875	O-ring 87.5X3.55	O 型圈/87.5x3.55	9	
35	CDB20-4.01-02	O-stem	O 型阀杆	6	
36	B160121185	O-ring 18.64X3.53	O 型圈	12	
37	CDB-F20-2.10	Nylon retainer/25x3.2	尼龙挡圈/25x3.2	12	
38	CDB-F20-2.11	Backing Plate	垫板	12	

39	GB67/M6x10	Half Dome Head Screw/M6X10	半圆头螺钉 /M6x10	12	
----	------------	-------------------------------	-----------------	----	--


回转油缸 SWING CYLINDER

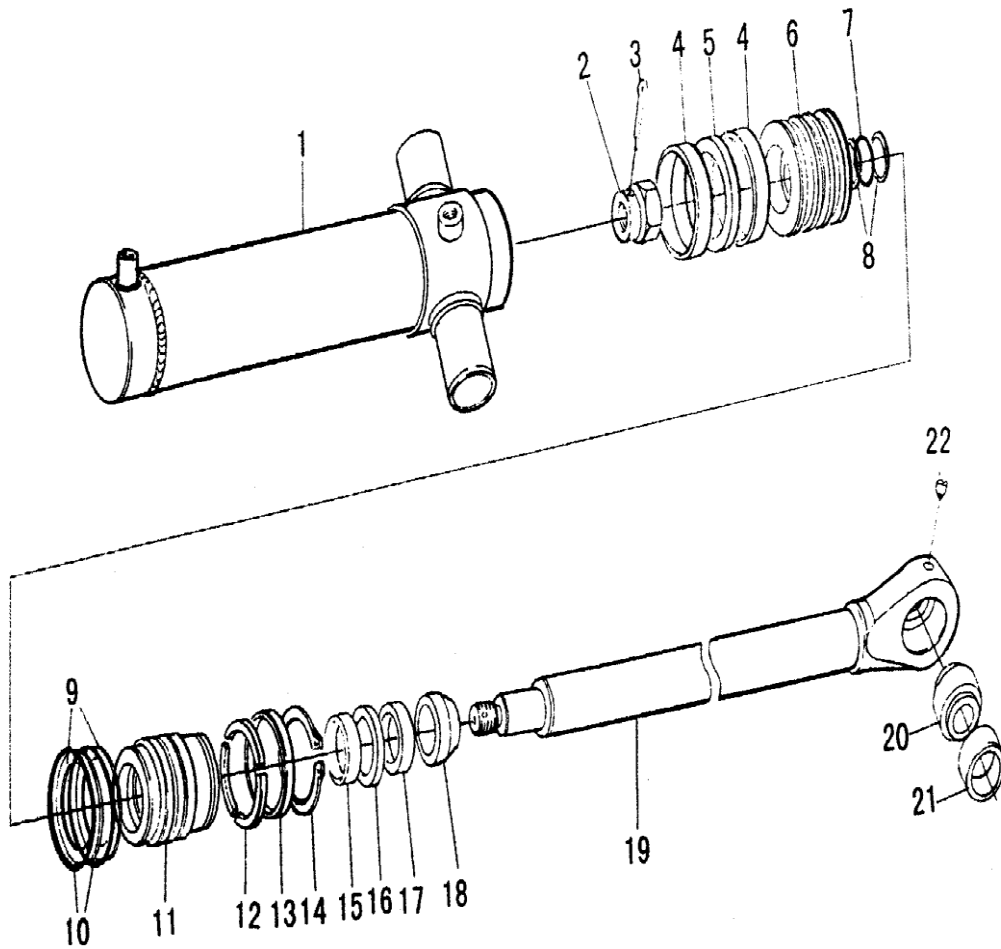

回转油缸 SWING CYLINDER

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025175-1	Cylinder block assembly	缸体组件	1	
2	W053025175-2	Lock nut	锁紧螺母	1	
3	W053025175-3	Pin	开口销	1	
4	W053025175-4	Guide ring	导向环	2	
5	W053025176	Circle of Grays	格莱圈	1	
6	W053025175-6	Piston	活塞	1	
7	B160130316	O-ring 32.5X2.65	O 型圈 32.5X2.65	1	
8	W053025175-8	Block Circle D32X27X1.5	挡圈 D32X27X1.5	1	
9	W053025175-9	Block Circle D80X75X1.5	挡圈 D80X75X1.5	2	
10	B160131020	O-ring 100X2.65	O 型圈 100X2.65	2	
11	W053025175-11	Guide sleeve	导向套	1	
12	W053025175-12	Snap key	卡键	3	
13	W053025175-13	Block sleeve	挡套	1	
14	W053025175-14	Axle collar	轴用挡圈	1	
15	W053025175-15	Axle collar	导向环	1	
165	W053025176	Steé Feng	斯特封	1	
17	W053025176	U-RING	U 型密封圈	1	
18	W053025176	Dust Ring	防尘圈	1	
19	W053025175-19	Piston rod	活塞杆	1	
20	B120524028	Joint Bearing 40	关节轴承 40	1	
21	B070156202	Block sleeve 62	挡圈 62	1	
22	W053025175-22	Oil Cup	油杯	1	
	W053025176	Sealed package	密封包	1	


挖掘缸 BACKHOE CYLINDER

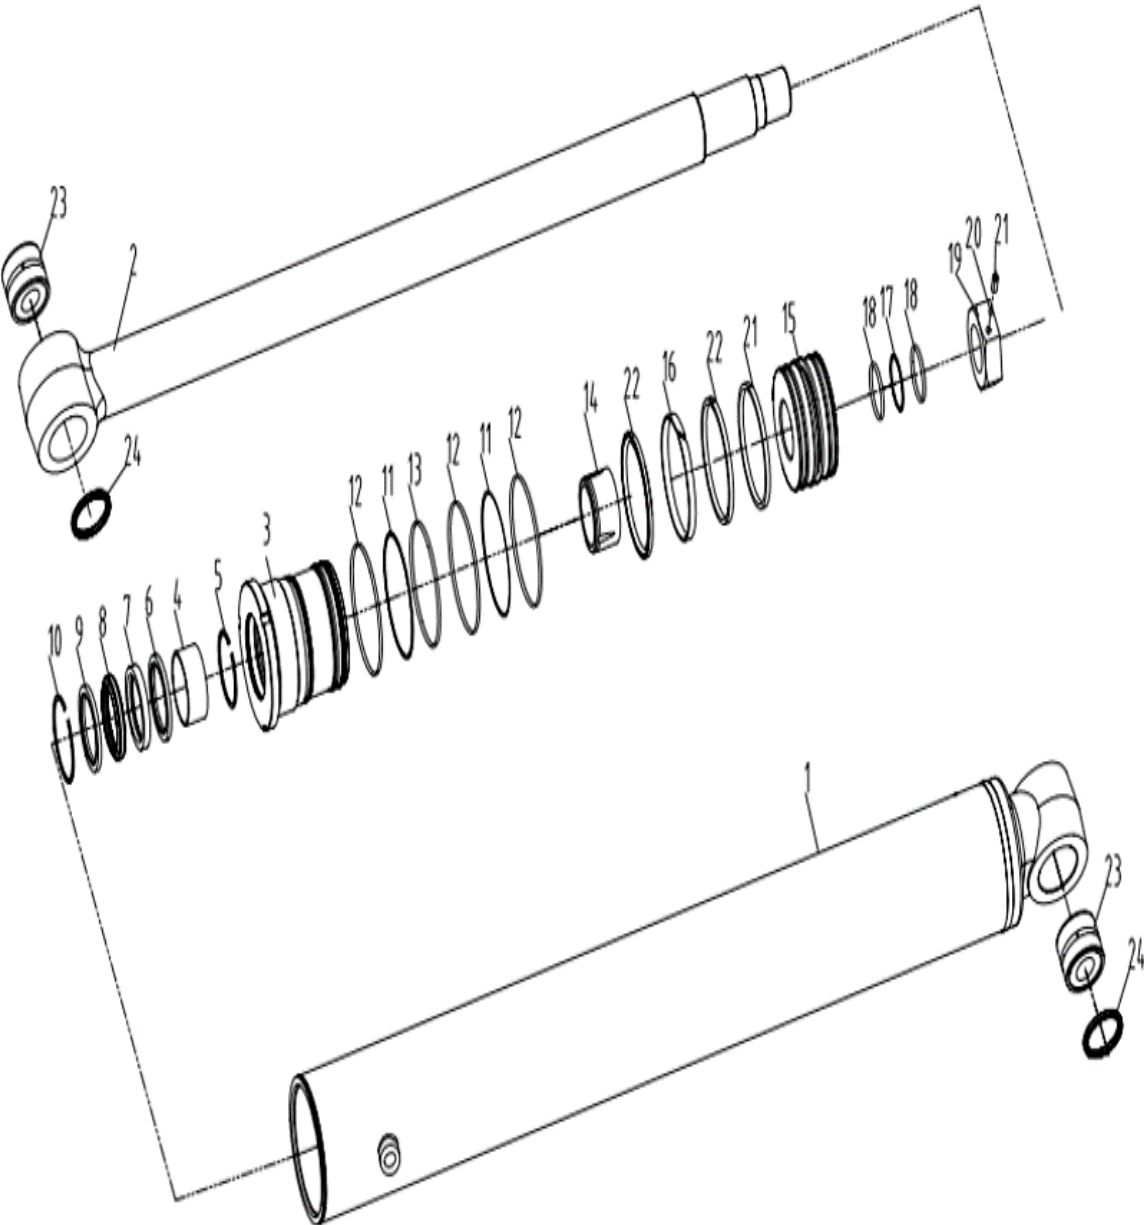

挖掘缸 BACKHOE CYLINDER

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025055-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025055-3	Piston rod assembly	活塞杆总成	1	
3	W053025055-4	Cylinder head	缸盖	1	
4	W053025055-5	Bushings	衬套	1	
5	W053025055-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025051-1.1	Seals-buffers	密封件-缓冲	1	
7	W053025051-1.2	Seals-piston rod	密封件-活塞杆	1	
8	W053025051-1.3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025051-1.4	Seals-dust proof	密封件-防尘	1	
10	W053025055-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160110840	O-rings	O 形圈 84.4X3.1	2	
12	W053025055-8	Stop ring-o-ring	挡圈-O 形圈	3	
13	B160120900	O- Ring	O 形圈 90X2.65	1	
14	W053025055-9	Buffer sleeve	缓冲套	1	
15	W053025055-10	Piston	活塞	1	
16	W053025051-1.5	Seals-piston rod	密封件-活塞	1	
17	B160110346	O- Ring	O 形圈 34.4X3.1	1	
18	W053025055-11	Stop ring-o-ring	挡圈-O 形圈	2	
19	W053025055-12	Piston back mother	活塞背母	1	
20	W053025055-16	Steel Ball	钢球	1	
21	W053025055-17	Screw	螺钉	2	
22	W053025055-18	Support Ring	支承环	1	
23	B120524028	Joint Bearing	关节轴承 40	2	
24	B070156202	Elastic retaining ring	弹性挡圈 62	2	
25	W053025051	Seal repair kit	密封件维修包	1	


斗杆油缸 CROWD CYLINDER

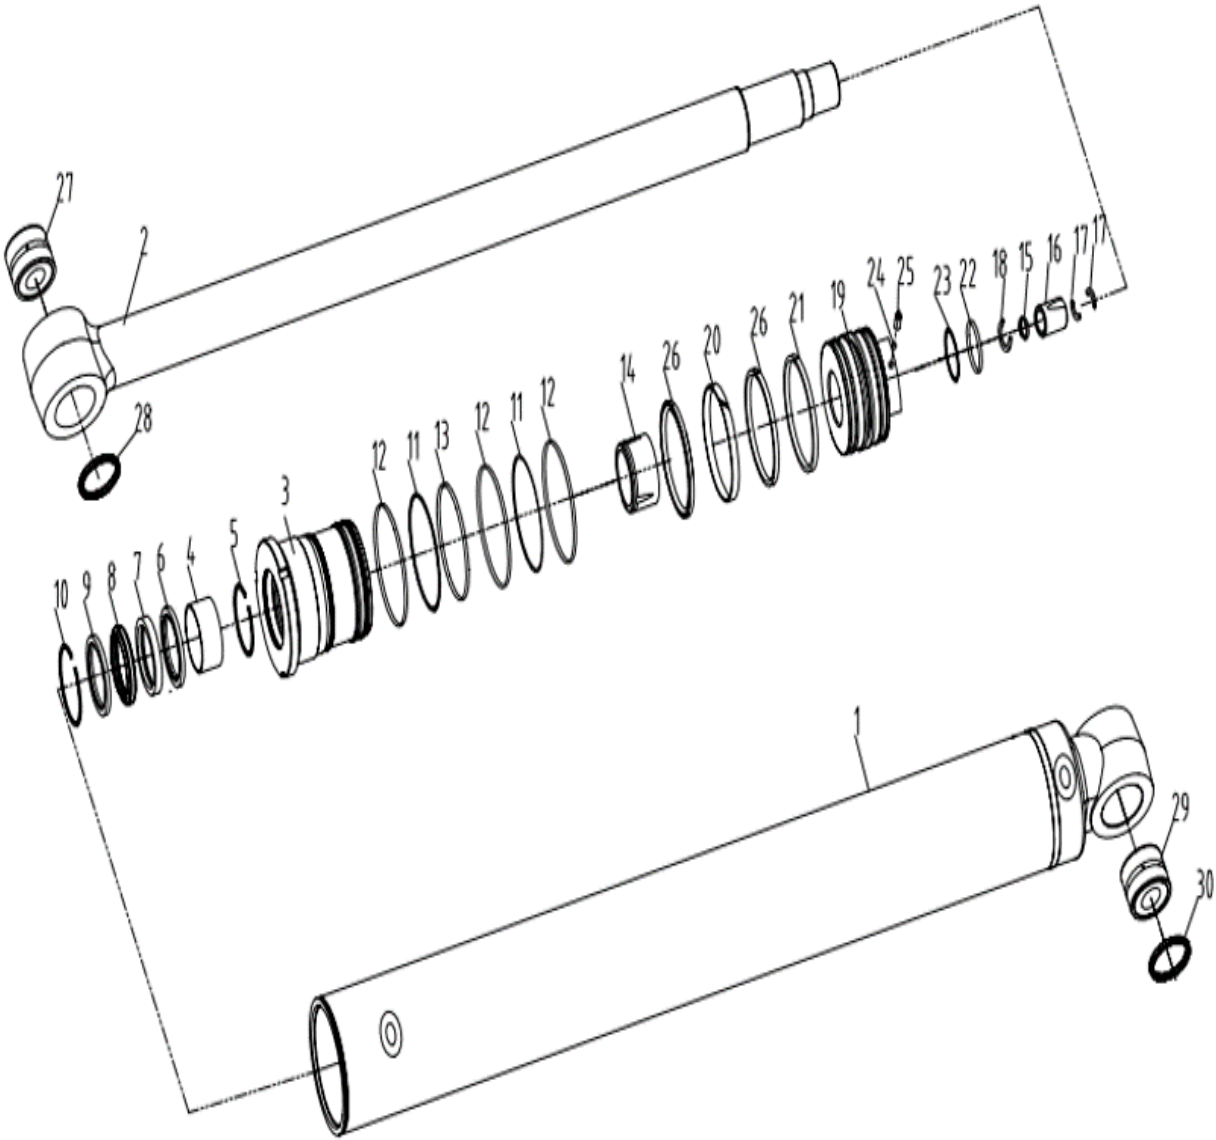

斗杆油缸 CROWD CYLINDER

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025850-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025850-3	Piston rod assembly	活塞杆总成	1	
3	W053025850-4	Cylinder head	缸盖	1	
4	W053025850-5	Bushings	衬套	1	
5	W053025850-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025850-1.1	Seals-buffers	密封件-缓冲	1	
7	W053025850-1.2	Seals-piston rod	密封件-活塞杆	1	
8	W053025850-1.3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025850-1.4	Seals-dust proof	密封件-防尘	1	
10	W053025850-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160131190	O-rings	O 形圈 19.4X3.1	2	
12	W053025850-8	Stop ring-o-ring	挡圈-O 形圈	3	
13	B160131252	O- Ring	O 形圈 125X2.65	1	
14	W053025850-9	Buffer sleeve	缓冲套	1	
15	W053025850-1.5	Air Cushion Seal	气垫密封	1	
16	W053025850-10	Buffer sleeve	缓冲套	1	
17	W053025850-11	Stop rings	止动环	2	
18	W053025850-12	Stop rings	止动环	1	
19	W053025850-13	Piston	活塞	1	
20	W053025850-1.6	Seals-piston rod	密封件-活塞	1	
21	W053025850-14	Environmental pollution	纳污环	1	
22	B160110346	O- Ring	O 形圈 34.4X3.1	1	
23	W053025850-15	Stop ring-o-ring	挡圈-O 形圈	1	
24	W053025850-16	Steel Ball	钢球	1	
25	W053025850-17	Screw	螺钉	1	
26	W053025850-18	Support Ring	支承环	2	
27	B120525035	Joint Bearing	关节轴承 50	1	
28	B070157503	Elastic retaining ring	弹性挡圈 75	1	
29	B120526044	Joint Bearing	关节轴承 60	1	
30	B070159003	Elastic retaining ring	弹性挡圈 90	1	
31	W053025850-1	Seal repair kit	密封件维修包	1	


大臂油缸 BOOM CYLINDER

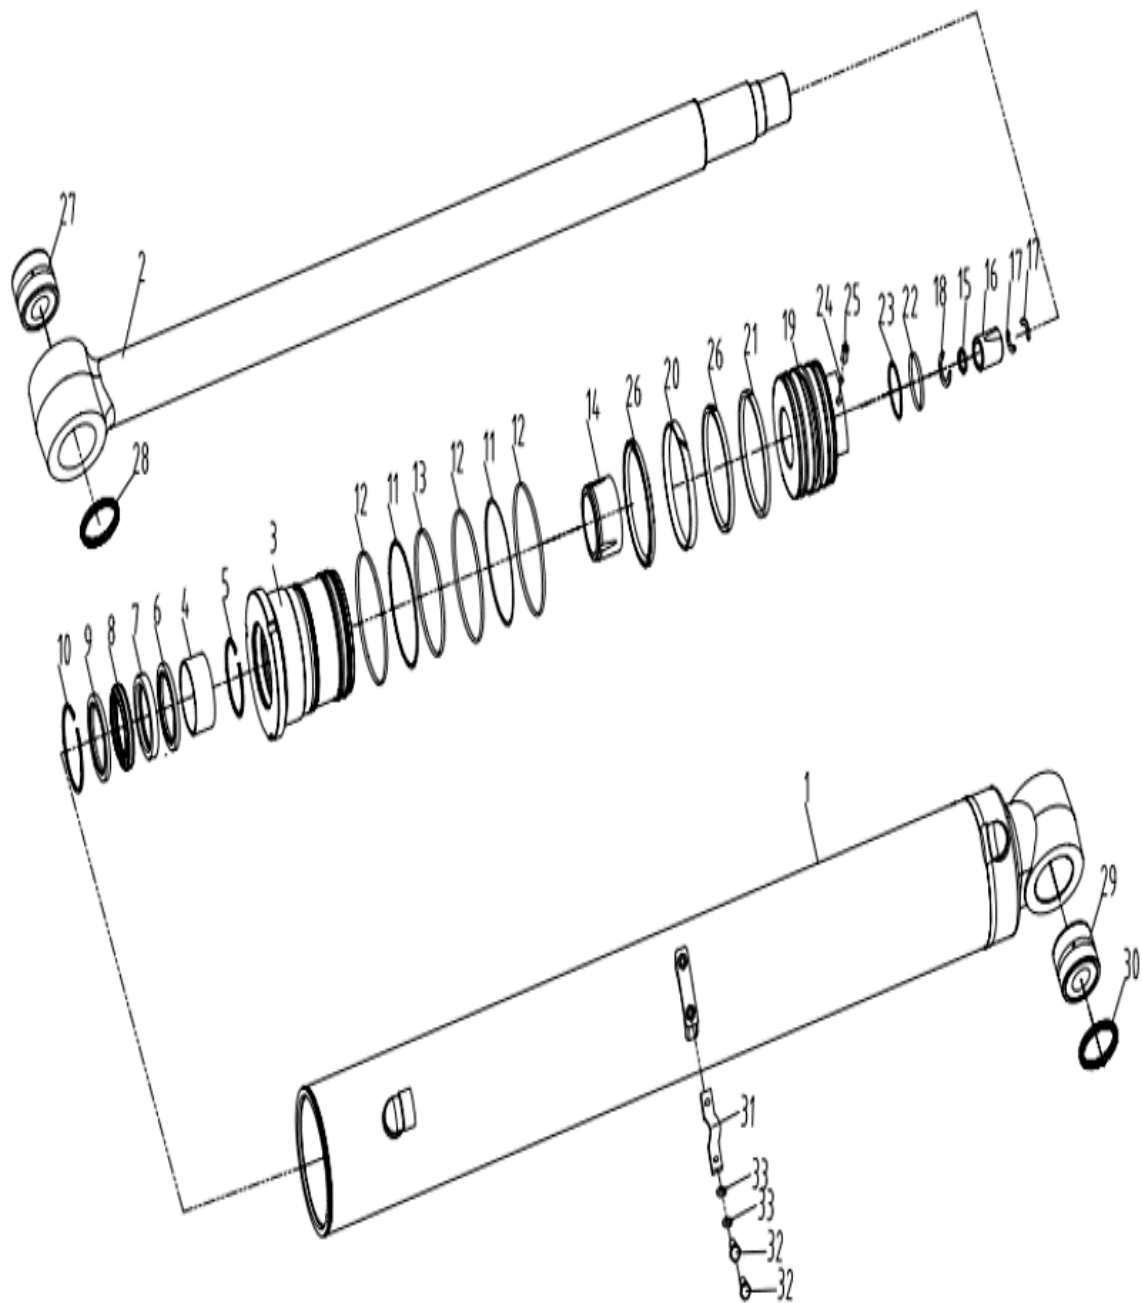

大臂油缸 BOOM CYLINDEDR

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025800-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025800-3	Piston rod assembly	活塞杆总成	1	
3	W053025800-4	Cylinder head	缸盖	1	
4	W053025800-5	Bushings	衬套	1	
5	W053025800-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025800-1.1	Seals-buffers	密封件-缓冲	1	
7	W053025800-1.2	Seals-piston rod	密封件-活塞杆	1	
8	W053025800-1.3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025800-1.4	Seals-dust proof	密封件-防尘	1	
10	W053025800-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160131190	O-rings	O 形圈 119.4X3.1	2	
12	W053025800-8	Stop ring-o-ring	挡圈-O 形圈	3	
13	B160131252	O- Ring	O 形圈 125X2.65	1	
14	W053025800-9	Buffer sleeve	缓冲套	1	
15	W053025800-1.5	Air Cushion Seal	气垫密封	3	
16	W053025800-10	Buffer sleeve	缓冲套	1	
17	W053025800-11	Stop rings	止动环	2	
18	W053025800-12	Stop rings	止动环	1	
19	W053025800-13	Piston	活塞	1	
20	W053025800-1.6	Seals-piston rod	密封件-活塞	1	
21	W053025800-14	Environmental pollution	纳污环	1	
22	B160110346	O- Ring	O 形圈 34.4X3.1	1	
23	W053025800-15	Stop ring-o-ring	挡圈-O 形圈	1	
24	W053025800-16	Steel Ball	钢球	1	
25	W053025800-17	Screw	螺钉	1	
26	W053025800-18	Support Ring	支承环	2	
27	B120525035	Joint Bearing	关节轴承 50	1	
28	B070157503	Elastic retaining ring	弹性挡圈 75	1	
29	B120526044	Joint Bearing	关节轴承 60	1	
30	B070159003	Elastic retaining ring	弹性挡圈 90	1	
31	W053025800-19	Pipe Clip	管夹	1	
32	B040710816	Bolts	螺栓 M8×16	2	
33	B061620816	Gasket	垫片	2	
34	W053025800-1	Seal repair kit	密封件维修包	1	


支腿油缸 STABILIZER CYLINDER

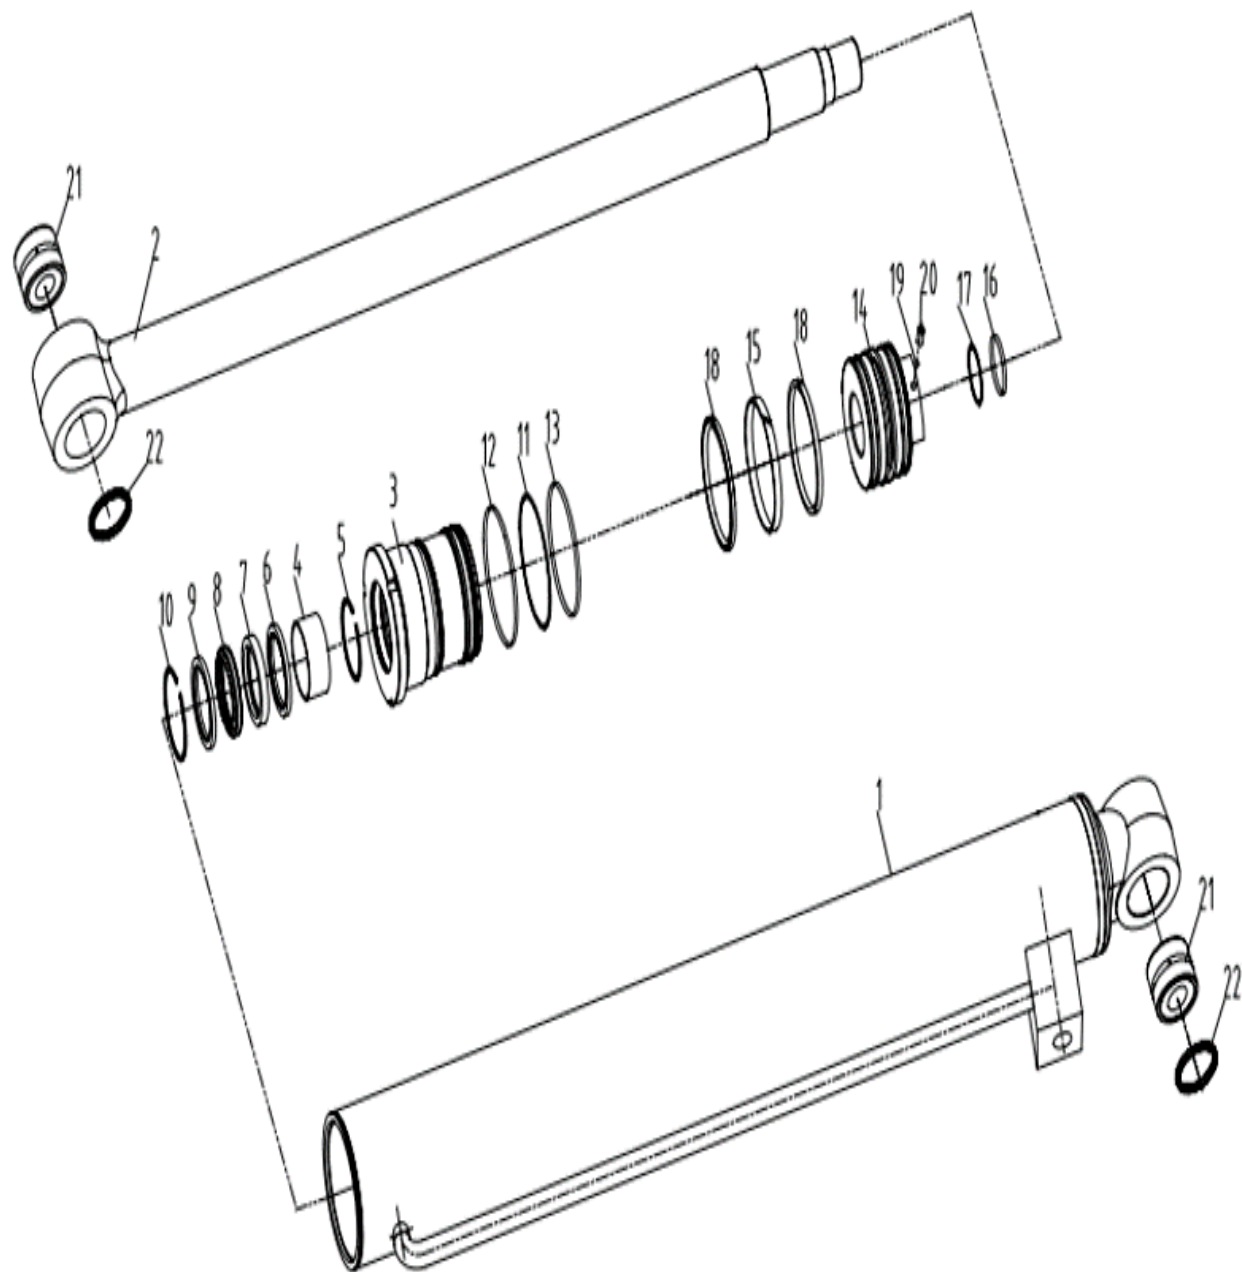

支腿油缸 STABILIZER CYLINDER

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025040-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025040-3	Piston rod assembly	活塞杆总成	1	
3	W053025040-4	Cylinder head	缸盖	1	
4	W053025040-5	Bushings	衬套	1	
5	W053025040-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025041-1.1	Seals-buffers	密封件-缓冲	1	
7	W053025041-1.2	Seals-piston rod	密封件-活塞杆	1	
8	W053025041-1.3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025041-1.4	Seals-dust proof	密封件-防尘	1	
10	W053025040-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160130740	O-rings	O 形圈 74.4X3.1	2	
12	W053025040-8	Stop ring-o-ring	挡圈-O 形圈	3	
13	B160130840	O- Ring	O 形圈 80X2.65	1	
14	W053025040-9	Buffer sleeve	缓冲套	1	
15	W053025040-10	Piston	活塞	1	
16	W053025040-1.5	Seals-piston rod	密封件-活塞	1	
17	B160140540	O- Ring	O 形圈 54.4X3.1	1	
18	W053025040-11	Stop ring-o-ring	挡圈-O 形圈	2	
19	W053025040-12	Support Ring	支承环	2	
20	W053025040-16	Steel Ball	钢球	1	
21	W053025040-17	Screw	螺钉	1	
22	W053025040-18	Support Ring	支承环	1	
23	B120524028	Joint Bearing	关节轴承 40	2	
24	B070156202	Elastic retaining ring	弹性挡圈 62	2	
25	W053025041	Seal repair kit	密封件维修包	1	


夹紧油缸 GRPING CYINDER

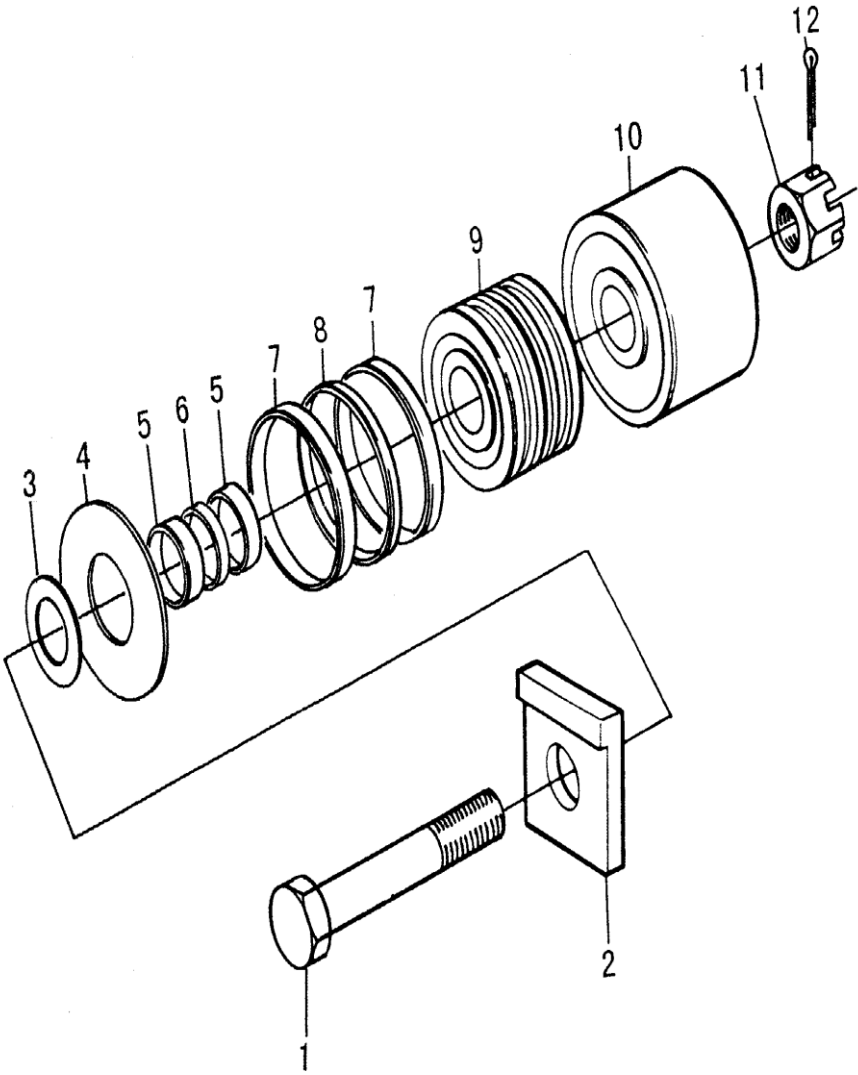

夹紧油缸 GRPING CYINDER

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025012	Bolt M36X2	螺栓	1	
2	Z050030830	Skateboards	滑板	1	
3	W053025010-2	PAD 1	垫 1	1	
4	W053025010-3	PAD 2	垫 2	2	
5	W053025010-4	Retaining ring	挡圈	1	
6	W053025011	Seals	密封件	2	
7	W053025010-6	Support Ring	支撑环	1	
8	W053025011	Seals	密封件	1	
9	W053025010-8	Piston	活塞	1	
10	W053025010-9	Cylinder barrel	缸筒	1	
11	W053025010-10	Slotted nut	开槽螺母	1	
12	W053025010-11	Sell 5X50	销 5X50		

伸缩油缸 RETRACTABLE CYLINDER

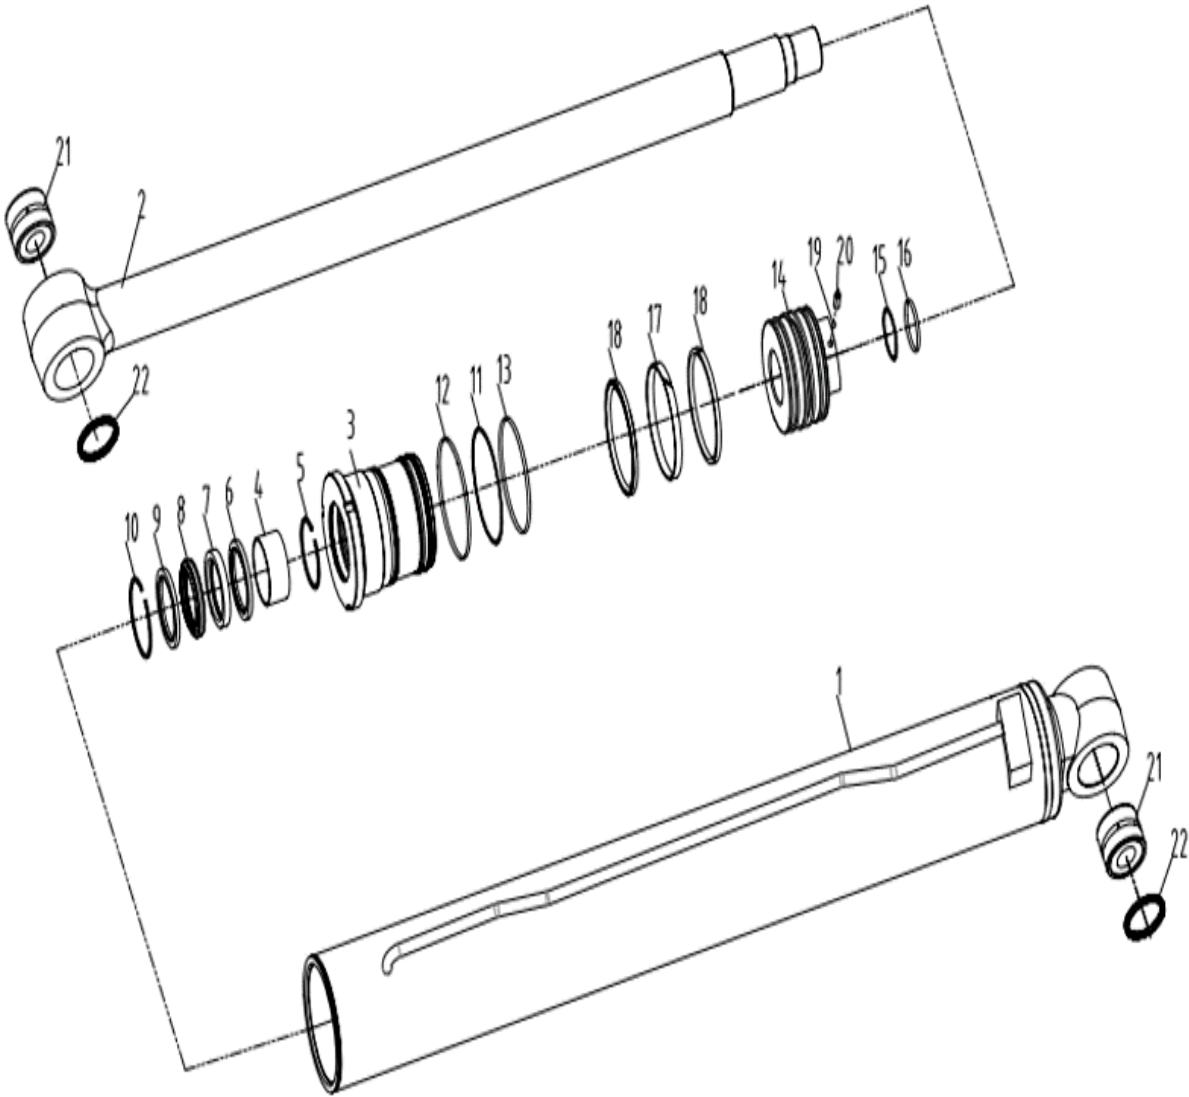


伸缩油缸 RETRACTABLE CYLINDER

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	W053025151-2	Cylinder cylinder assembly	缸筒总成	1	
2	W053025151-3	Piston rod assembly	活塞杆总成	1	
3	W053025151-4	Cylinder head	缸盖	1	
4	W053025151-5	Bushings	衬套	1	
5	W053025151-6	Steel wire retaining ring	钢丝挡圈	1	
6	W053025152-1	Seals-buffers	密封件-缓冲	1	
7	W053025152-2	Seals-piston rod	密封件-活塞杆	1	
8	W053025152-3	Stop ring-u-shaped ring	挡圈-U 形圈	1	
9	W053025152-4	Seals-dust proof	密封件-防尘	1	
10	W053025151-7	Steel wire retaining ring	钢丝挡圈-孔用	1	
11	B160110840	O-rings	O 形圈 84X3.1	1	
12	W053025151-8	Stop ring-o-ring	挡圈-O 形圈	1	
13	B160120900	O- Ring	O 形圈 90X2.65	1	
14	W053025151-9	Piston	活塞	1	
15	B160130590	O- Ring	O 形圈 59.4X3.1	1	
16	W053025151-10	Stop ring-o-ring	挡圈-O 形圈	1	
17	W053025151-11	Seals-pistons	密封件-活塞	1	
18	W053025151-12	Support Ring	支承环	2	
19	W053025151-13	Steel Ball	钢球	1	
20	W053025151-14	Screw	螺钉	1	
21	B120524028	Joint Bearing	关节轴承 40	2	
22	B070156202	Elastic retaining ring	弹性挡圈 62	2	
23	W053025152	Seal repair kit	密封件维修包	1	

装载装置操纵机构

OPERATING MECHANISM OF WORKING DECICE

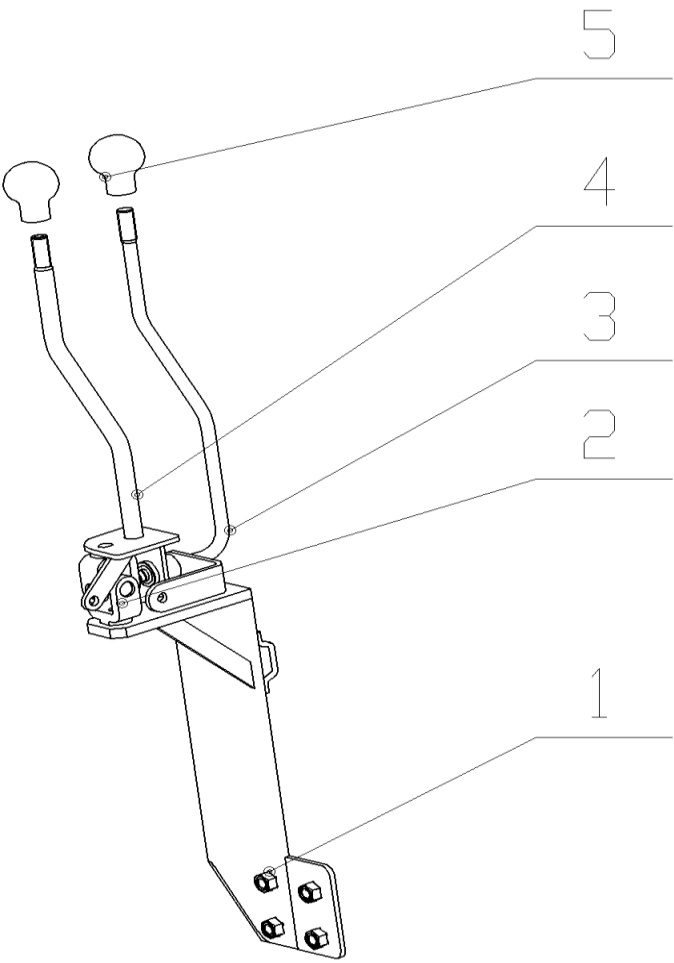


装载装置操纵机构

OPERATING MECHANISM OF WORKING DECICE

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B4616-85A010001-1	Loading control bracket	装载操纵支架	1	
2	B4616-85A010001-4	Universal joint	万向节	1	
3	B4616-85A010001-2	Triple joystick	三联操纵杆	1	
4	B4616-85A010001-3	Load the joystick	装载操纵杆	1	
5	W013900460	Handle Ball	手柄球	2	


挖掘装置操纵机构 BOOM LOCK MECHANISM

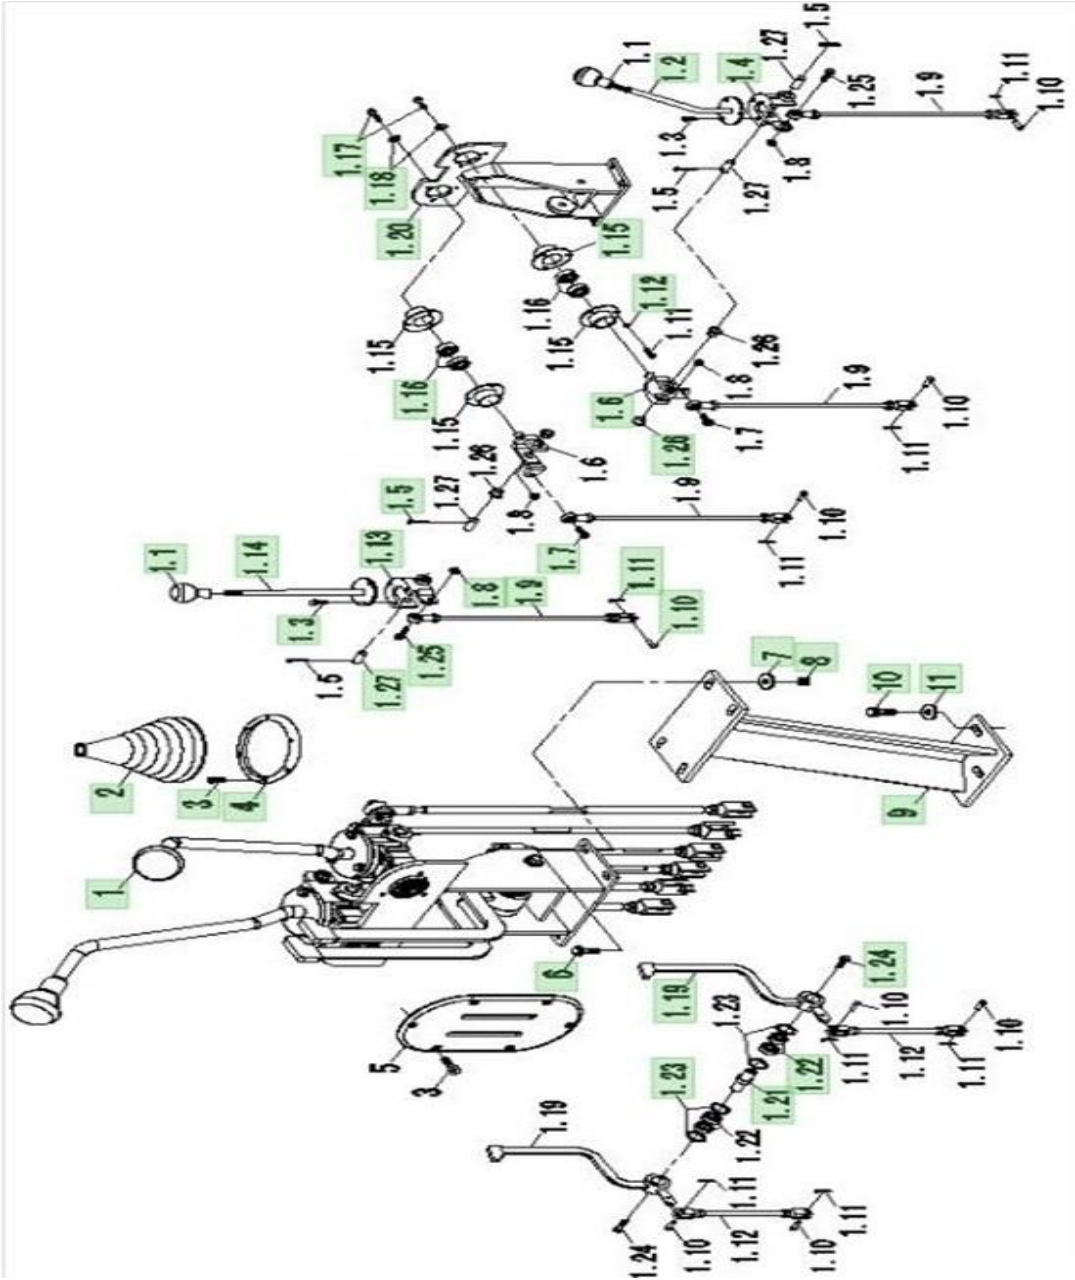

挖掘装置操纵机构 BOOM LOCK MECHANISM

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B4611-87A010000	Excavation control mechanism	挖掘操纵机构	1	
1.1	GBT882	Pin	销轴	8	
1.2	B4610-87A010100	Left stick	左操纵杆	1	
1.3	B040710616	Bolt M6X16	螺栓	12	
1.4	B4610-85A010001	Left swing rack	左摆动架	1	
1.5	GBT91	Pin	开口销	4	
1.6	B4610-85A010006	Swinging body	摆动体	2	
1.7	B040710835	Bolt M8X35	螺栓 M8X35	2	
1.8	B050340807	Nut M8	螺母 M8	4	
1.9	B4610-87A010800	Bucket rod pulling wire assembly	斗杆拉线总成	4	
1.10	B4610-87A010900	Handle	手柄	2	
1.11	GBT91	Pin	开口销	8	
1.12	B4610-87A010700	Outrigger Pull Line Assembly	支腿拉线总成	2	
1.13	B4610-87A010010	Right swing rack	右摆动架	1	
1.14	B4610-87A010400	Right Stick	右操纵杆	1	
1.15	B4610-85A010005	Housing	轴承座	4	
1.16	B120121712	Bearing 6203	轴承 6203	4	
1.17	B040710816	Bolt M8X16	螺栓 M8X16	2	
1.18	B4610-85A010004	Washer	垫圈	2	
1.19	B4610-87A010300	Left leg operated weld	左支腿操纵焊合	2	
1.20	B4611-87A010100	The bracket is welded	支架焊合	1	
121	B4610-87A010006	Step shaft	阶梯轴	1	
1.22	B120121710	Deep groove ball bearing 6003	深沟球轴承 6003	4	
1.23	GBT893.1	Block Circle	挡圈	4	
1.24	B040711030	Bolt M10X30	螺栓 M10X30	2	
1.25	B040910840	Bolt M8X40	螺栓 M8X40	2	
1.26	B4610-85A010002	Sleeve	轴套	4	
1.27	B4610-85A010003	Axis	轴	4	
2	B4610-85A000001	Dust jacket	防尘套	2	
3	GBT65	Slotted cylindrical head screws	开槽圆柱头螺钉	14	
4	B4610-85A000002	Pressure Plate	压板	4	
5	B4610-87A000003	Rubber sheets	橡胶板	1	
6	B040710825	Bolt M8X25	螺栓 M8X25	4	
7	GBT96.1	Washer 8	垫圈 8	8	
9	B4611-87A020000	Fixed Plate welded	固定板焊合	1	
10	B040911025	Bolt M10X25	螺栓 M10X25	3	
11	GBT96.1	Washer	大垫圈	3	


摆臂组合 BACKHOE SWING ARM MODULE

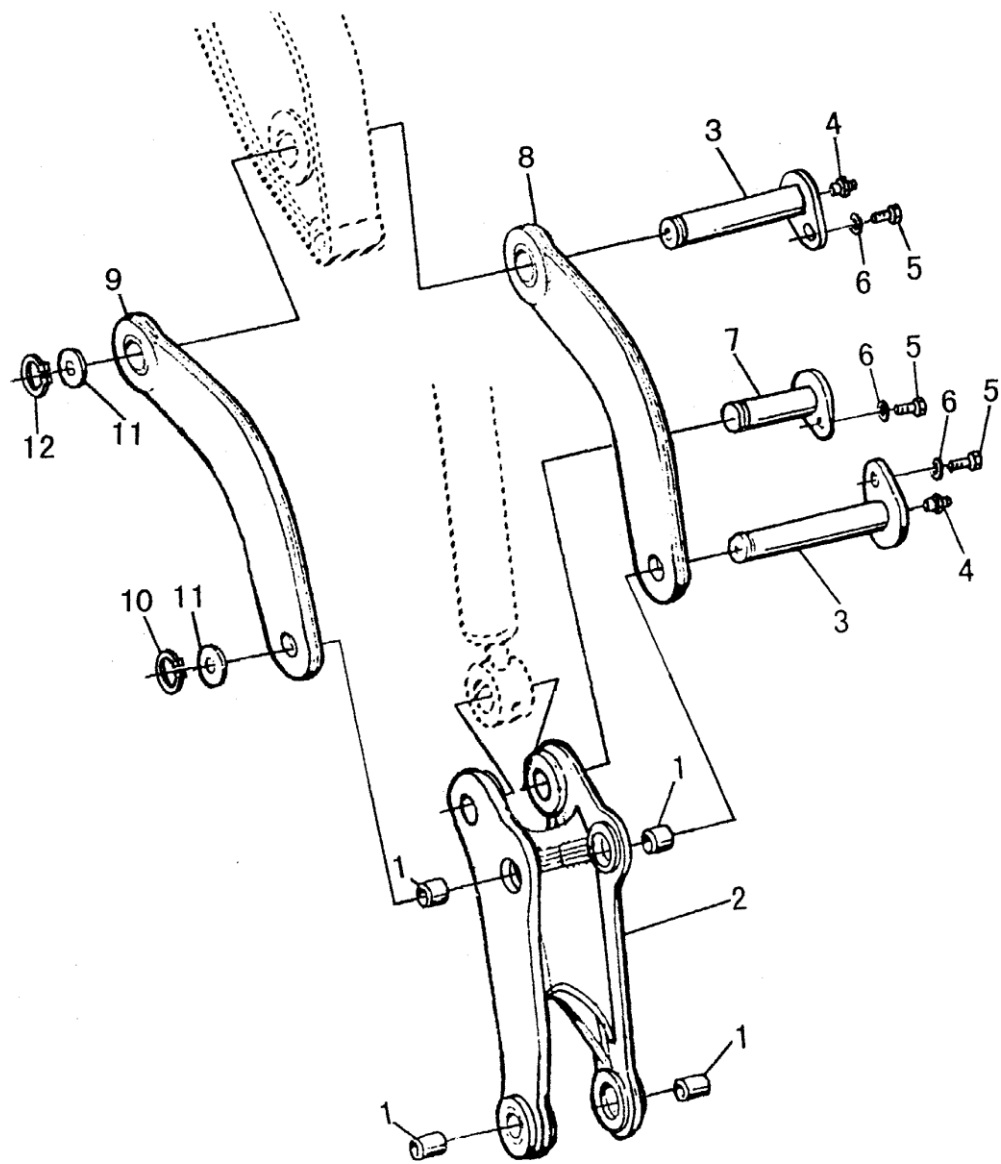

摆臂组合 BACKHOE SWING ARM MODULE

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Remark
1	Z050260750	Swing arm bush	摆臂套	4	
2	Z050260605	Swing arm	摆臂	1	
3	Z050260790	Pin for swing garm	摆臂销轴总成	2	
4	B150101000	Oil cup M10X1	油杯 M10X1	10	
5	B040911235	Bolt M12X35	螺栓 M12X35	6	
6	B060211203	Washer 12	垫圈 12	6	
7	Z050260700	Pin for swing garm	摆臂销轴总成	1	
8	Z050260730	Ear-plate	耳板	1	
9	Z050260740	Ear-plate	耳板	1	
10	B070255002	Stop Ring, 50	挡圈 50	2	
11	Z050260820	Adjustment Pads	调整垫	2	

挖斗组合 BACKHOE BUCKET MODULE

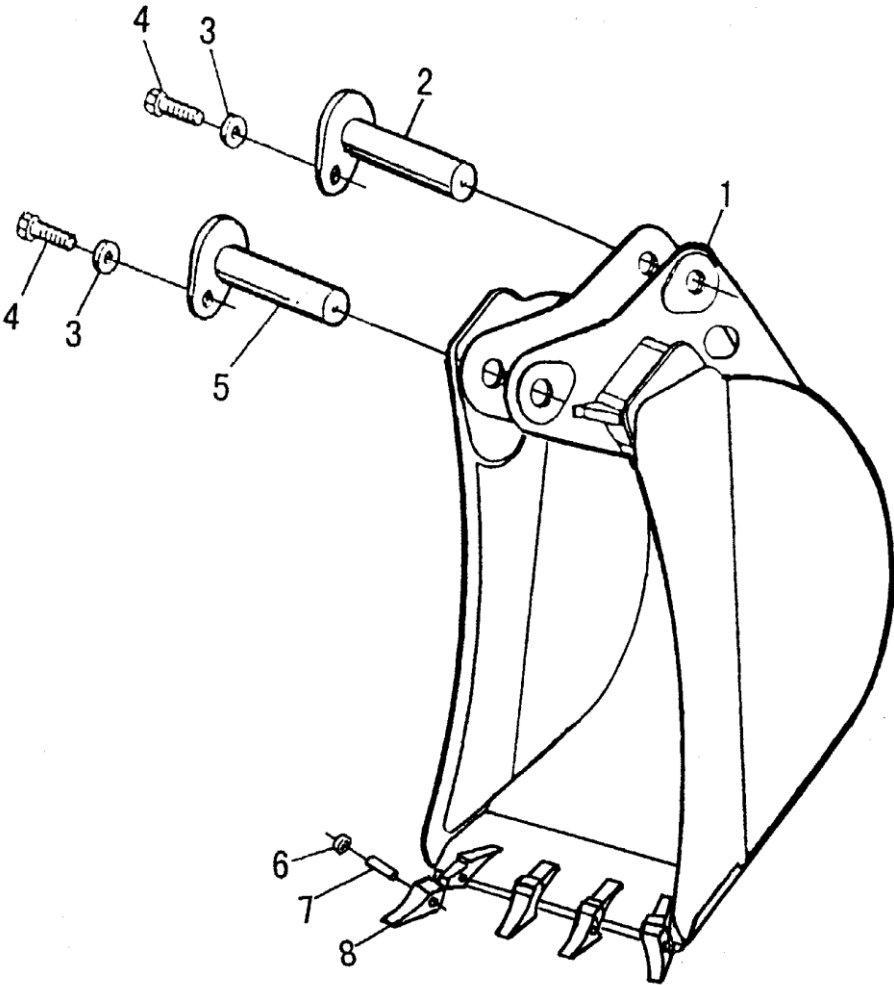


挖斗组合 BACKHOE BUCKET MODULE

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	Z061260001	Bucket	挖斗（标准）	1	
2	Z050260760	Lower pin shaft	挖斗下销轴总成	1	
3	B042521235	Bolt M12X35	六角法兰面螺栓	2	
4	B060111203	Washers	垫圈	2	
5	Z050260850	Upper pin shaft	挖斗上销轴总成	1	
6	Z050260520	Clip	挡圈(轴用)	4	
7	Z050260510	Pin	销	4	
8	Z050260500	Bucket teeth	齿尖	4	

挖掘大臂组合


BACKHOE BOOM MODULE

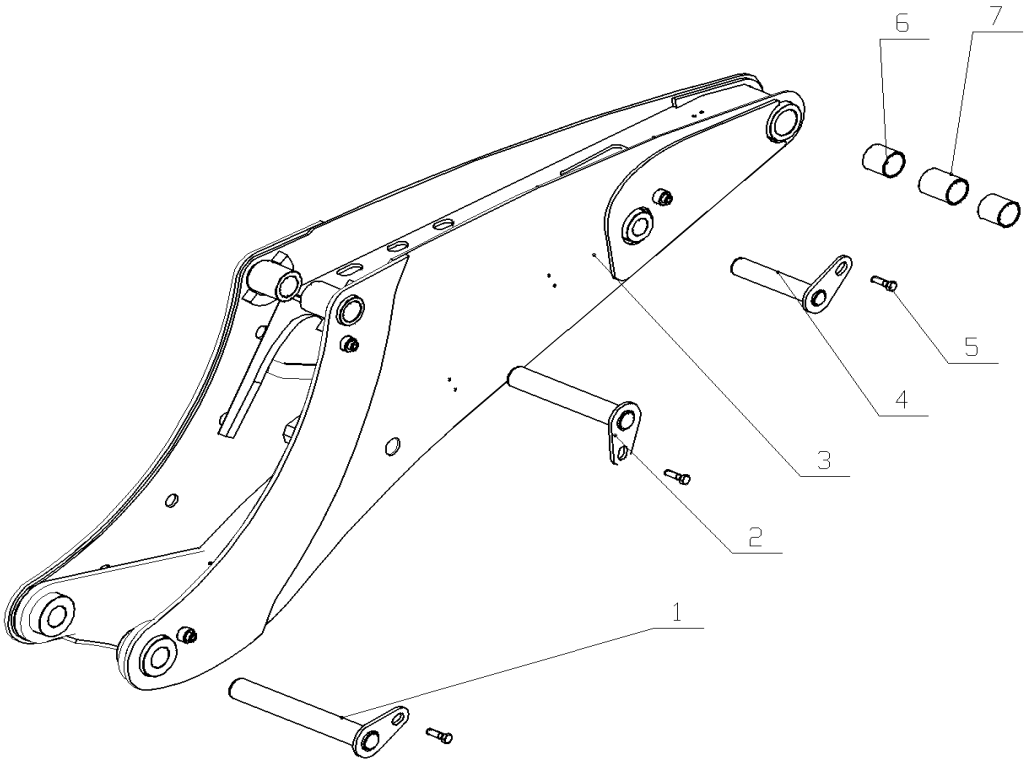

挖掘大臂组合 BACKHOE BOOM MODULE

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	Z062260390A	Lower Arm pin shaft assembly	大臂下销轴组件	1	
2	Z062260400A	Lower pin shaft of bucket rod cylinder	斗杆缸下销轴	1	
3	Z062260012	Big Arms	大臂	1	
4	Z062260411A	ARM cylinder upper pin assembly	大臂缸上销轴组件	1	
5	B042521625	Bolt M16X25	螺栓 M16X25	3	
6	Z050260940	Bushing II	斗杆轴套 II	2	
7	Z050260930	Bucket Rod Spacer III	斗杆隔套III	1	

伸缩斗杆组合 TELESCOPIC ROD

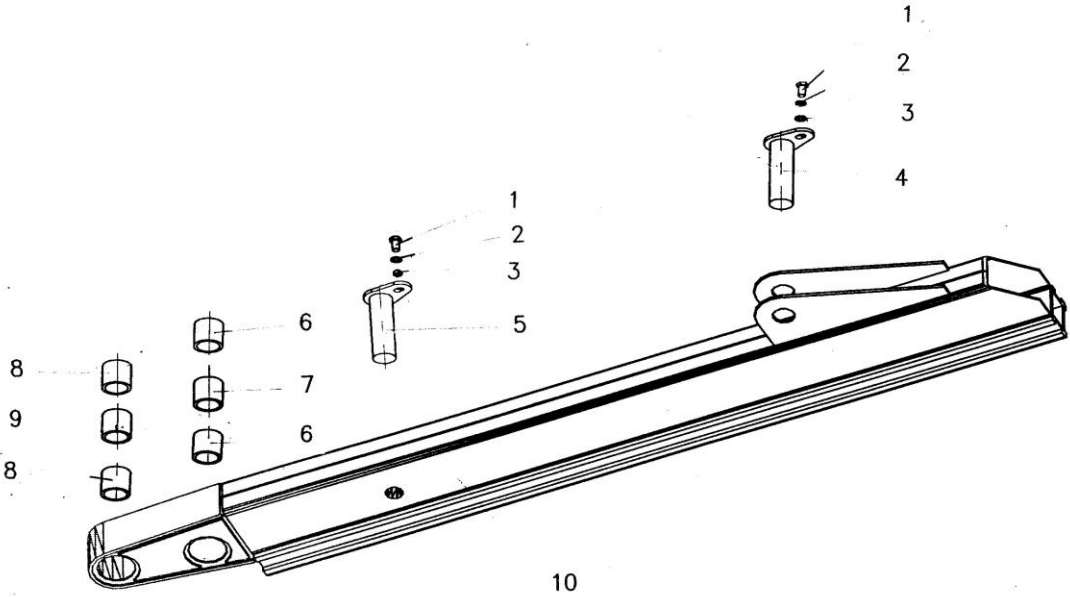


伸缩斗杆组合 TELESCOPIC ROD

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	B040911235	Bolt M12*35	螺栓 M12X35	2	
2	B060211203	Washer 12	垫圈 12	2	
3	B060111203	Spring washerR 12	弹簧垫圈 12	2	
4	Z050260925	Excavating cylinder on pin shaft	挖掘缸上销轴	1	
5	Z050260505	Telescopic cylinder lower pin shaft	伸缩缸下销轴	1	
6	Z050260750	ARM swing	摆臂套	2	
7	Z050260840	Bucket rod spacer	斗杆隔套	1	
8	Z050260880	Bushing of bucket rod	斗杆轴套	2	
9	Z050260890	Bucket rod spacer	斗杆隔套	1	
10	Z050260346	Telescopic arm bucket rod	伸缩臂斗杆	1	

伸缩臂座体组合


TELESCOPIC BOOM

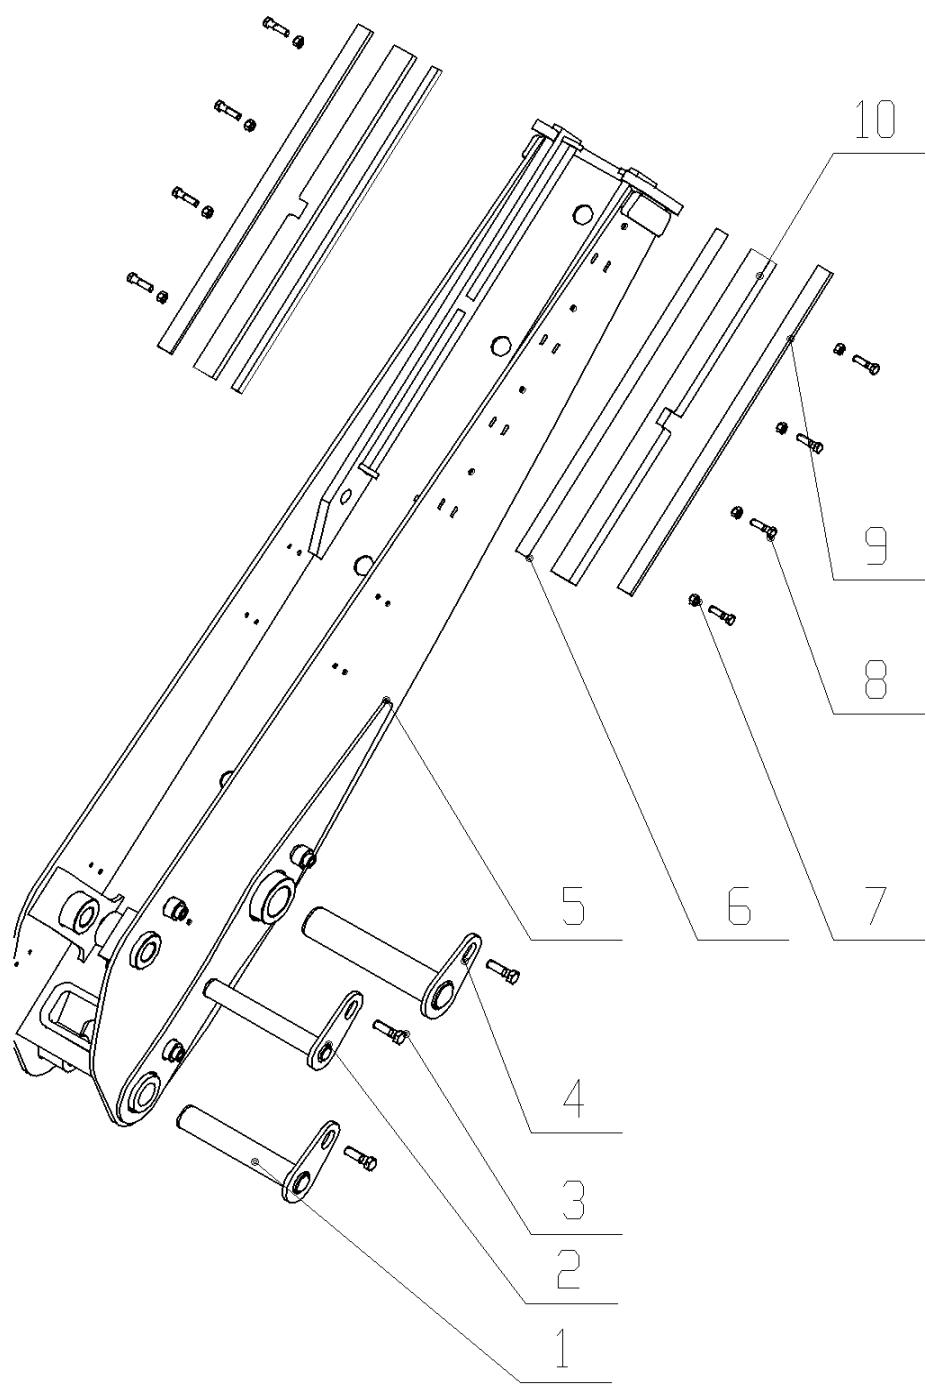

伸缩臂座体组合 TELESCOPIC BOOM

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'T Y	Rema rk
1	Z062260420A	Pin Assembly on bucket rod cylinder	斗杆缸上销轴组件	1	
2	Z062260440A	Telescopic cylinder rear pin assembly	伸缩缸后销轴组件	1	
3	B042521625	Bolt M16X25	螺栓 M16X25	3	
4	Z062260430A	Upper arm pin shaft assembly	大臂上销轴组件	1	
5	Z062260210A	Bucket rod slide frame	斗杆滑架	1	
6	Z050261684	Nylon slider	尼龙滑块	2	
7	B050111212	Nots M12	螺母 M12	8	
8	B042521235	Bolt M12×35	螺栓 M12×35	8	
9	Z050261683	Nylon slider	尼龙滑块	2	
10	Z050260499	Slider	滑块	2	


摆动架总成 OSCILLATION FRAME ASSEMBLY

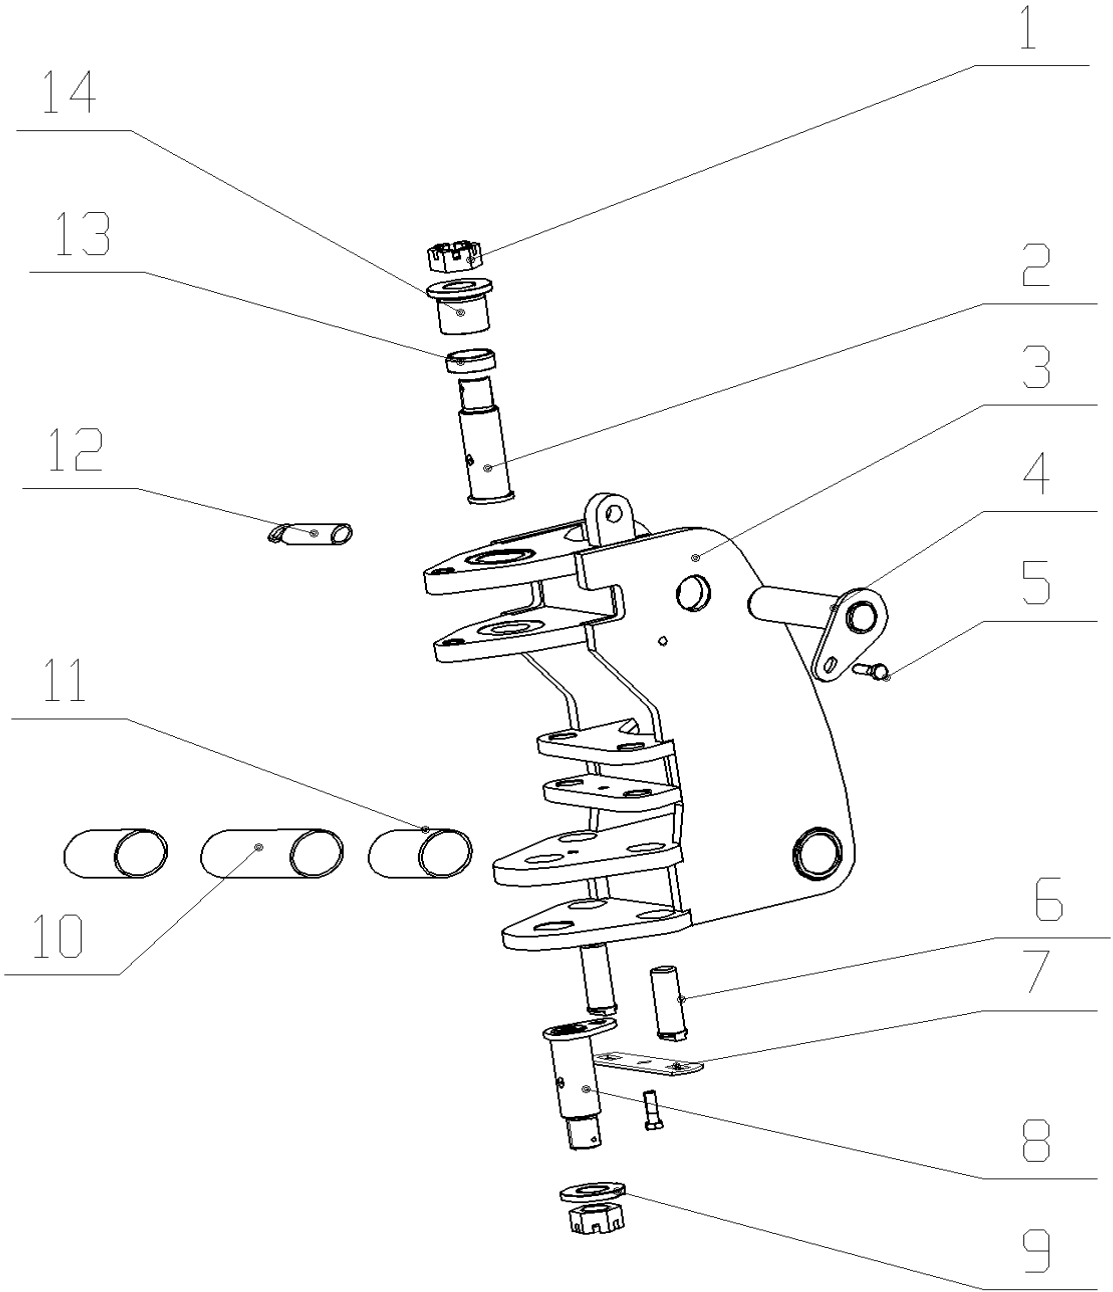

摆动架总成 OSCILLATION FRAME ASSEMBLY

序号 ITEM	零件号 PART NO.	零件名称	Part Name	数量 Q'TY	备注 Remark
1	Z310390070	Nuts M48 × 2	螺母 M48×2	2	
2	Z061240170	Pin shaft with upper hinge	上铰接销轴	1	
3	Z061240012	Slewing frame	回转架	1	
4	Z061240101A	Upper arm cylinder lower pin assembly	大臂缸下销轴组件	1	
5	B042521635	Bolt M16×35	螺栓 M16×35	2	
6	Z050240181	Rotary cylinder front pin shaft	回转缸前销轴	2	
7	B042521235	Fixed shaft plate	定轴板	1	
8	Z050240250	Pin shaft with lower hinge	下铰接销轴	1	
9	Z061240180A	On the mat	上垫	2	
10	Z061240220	A condom	隔套	1	
11	Z050240261	Slewing frame bushing	回转架衬套	2	
12	Z061240010	Lock pin shaft	锁止销轴	1	
13	Z061240121	Lower support sleeve	下支撑套	1	
14	Z061240210	Upper support sleeve	上支撑套	1	
	Z3B00303200				


滑动架 SLIDING FRAME

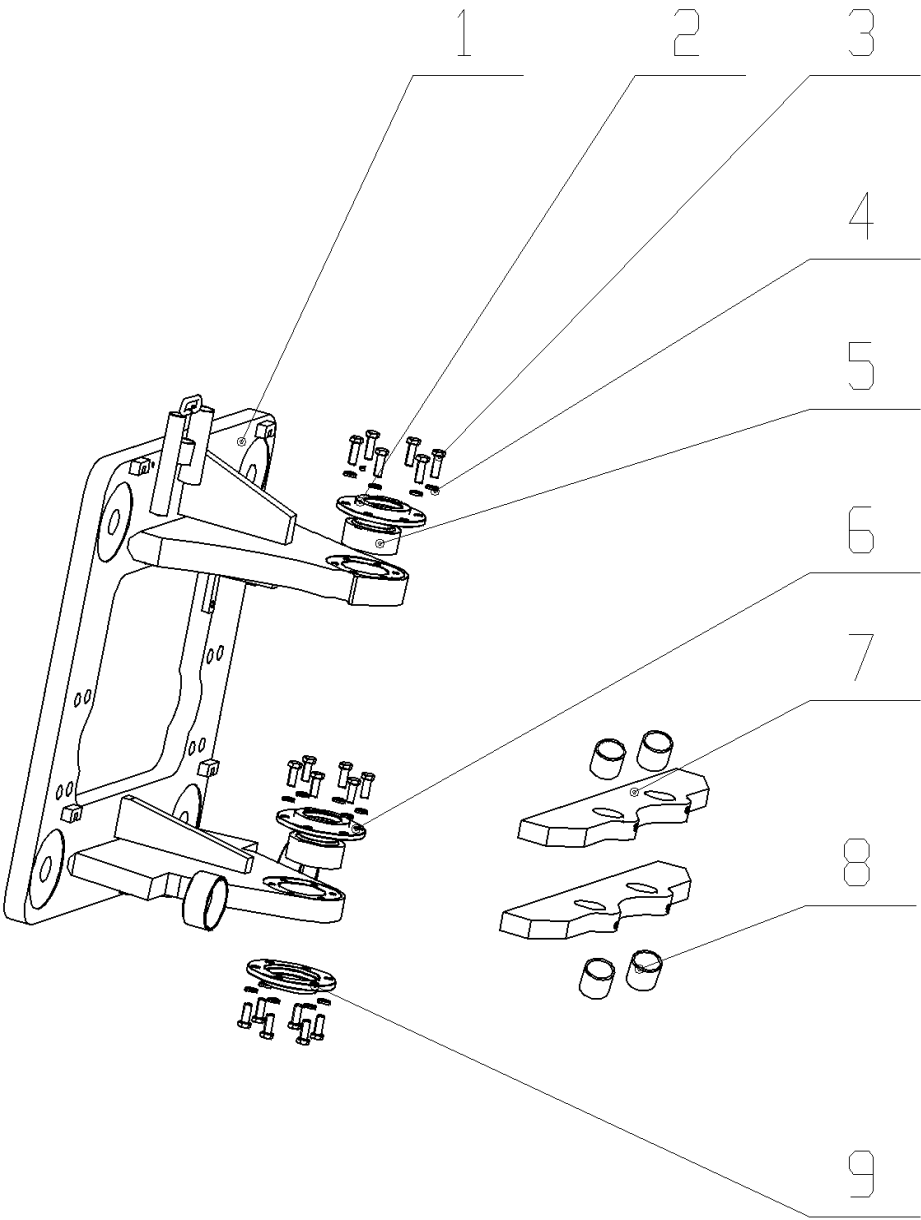

滑动架 SLIDING FRAME

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z062340012	Sliding frame	滑动架	1	
2	Z062340160	Upper bearing capSpring	上轴承盖	1	
3	B042521230	Bolt M12×30	螺栓 M12×30	18	
4	B061431201	Washers	垫圈	18	
5	B120526044	Joint Bearing	关节轴承	2	
6	Z3D405005	Lower upper bearing cap	下上轴承盖	1	
7	Z062340120	Cylinder support	油缸支座	2	
8	Z062340170	Rotary cylinder liner	回转缸套	4	
9	Z3D405004	Lower lower bearing cap	下下轴承盖	1	

滑架推拉座 SLIDING FRAME PUSH-PULL SEAT

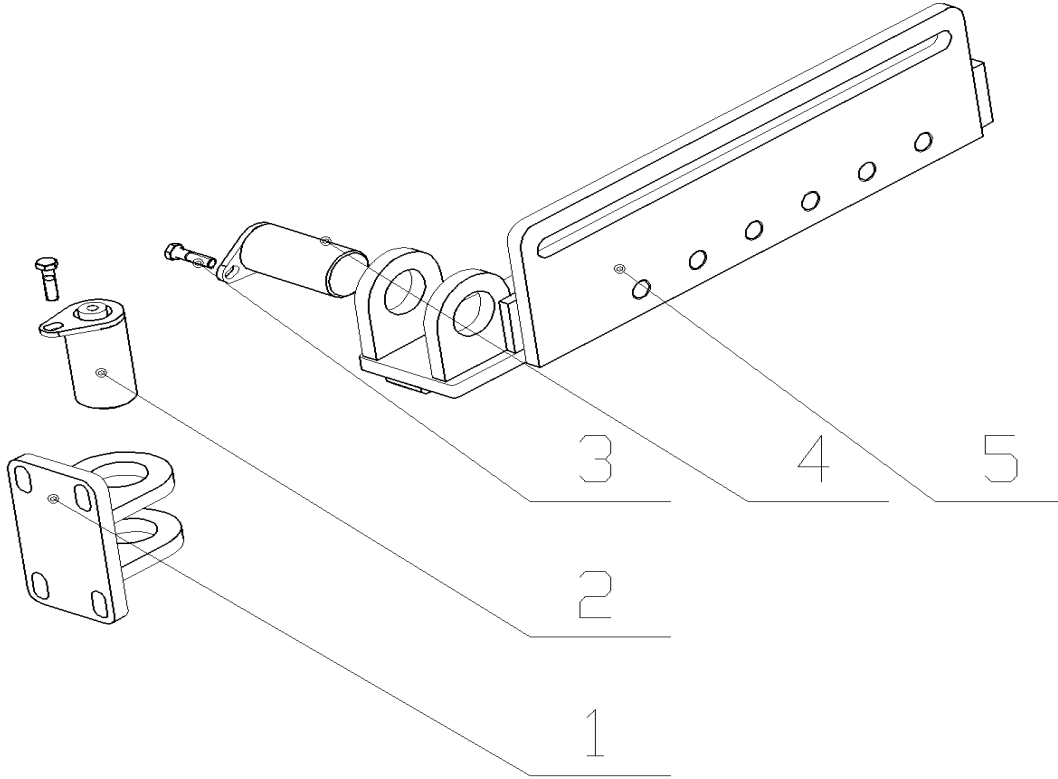


滑架推拉座 SLIDING FRAME PUSH-PULL SEAT

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z050340500	Cylinder block 1	油缸座 1	1	
2	Z050340750	Pin	销轴	1	
3	B040711025	Bolt M10×25	螺栓 M10×25	2	
4	Z050340780	Pin	销轴	1	
5	Z050340550	Cylinder block 2	油缸座 2	1	

柴油机装置


DIESL ENGING MOUNT

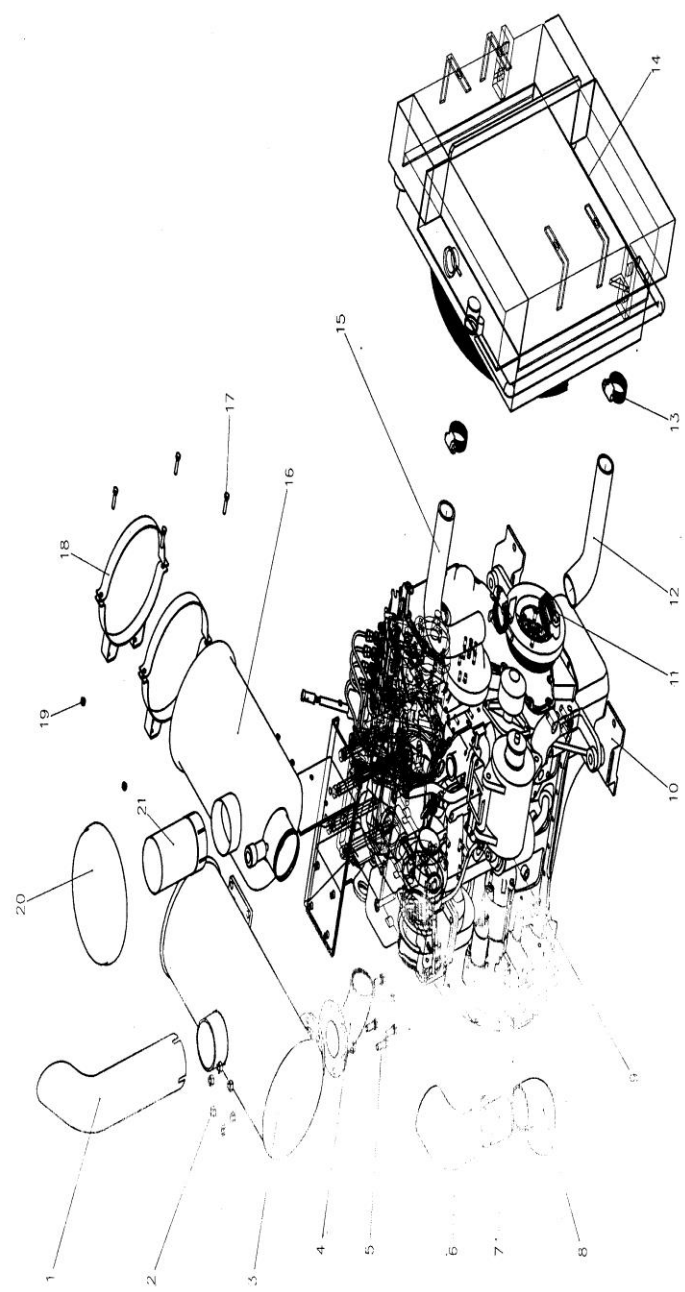

柴油机装置 DIESEL ENGINING MOUNT

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	Z061350360	Pipe of muffler	消音器尾管	1	
2	HEX NUT M12	Hex nut M12	六角锁紧螺母	6	
3	W017100150	Muffler	消音器	1	
4		Inlet pipe of muffler	消音器进气管	1	
5		Bolt M12×35	螺栓 M12×35	6	
6		Outlet pipe for air filter	空滤器出气管 I	1	
7	Z061350061	Middle pipe	中间接管	1	
8	Z061350050	Outlet pipe for air filter	空滤器接管	1	
9	W017100000	Engine	柴油机	1	
10	Z350140010	Anti-vibration block for engine	柴油机减震垫	2	
11	JB/T 8870-1999	Clamp 70	喉箍 70×89	2	
12	Z065350020	Intake pipe	进水管	1	
13		Clamp	喉箍	2	
14	W013900060	Water tanks	水箱	1	
15	Z065350010	Out take pipe	回水管	1	
16	W017100230	Air filter	空滤器	4	
17		Bolt	螺栓	1	
18		Air filter clamp	空滤器卡箍	2	
19		Note	螺母	4	
20	W017100240	Air filter cap	空滤器帽	1	
21		Air filter nozzle	空滤器接管	1	

柴油箱 Diesel tank

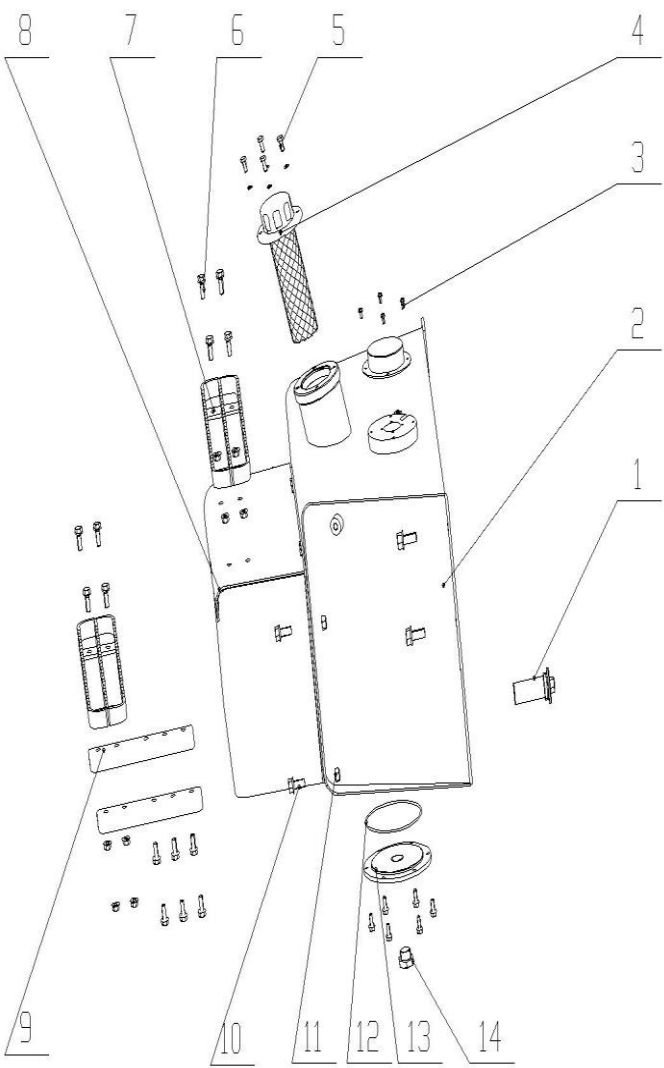


柴油箱 Diesel tank

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	Z590130190	Oil filter screen	吸油滤网	1	
2	Z065080010	Diesel tank	柴油箱	1	
3	B040710516	Bolt M5X16	螺栓 M5X16	4	
4	W110001460	Fuel filter	加油滤清器	1	
5	B040910820	Bolt M8X20	螺栓 M8X20	10	
6	B040911035	Bolt M10X35	螺栓 M10X35	12	
7	Z065080060	Pedal Assembly	踏板组件	2	
8	Z065070110	Battery box	电瓶箱	1	
9	Z065080050	Angle iron	角铁	2	
10	B040911635	Bolt M16X35	螺栓 M16X35	4	
11	B052421414	Nut M16	六角螺母 M14	4	
12	B160141451	O- ring 145X2.65	O 型圈 145X2.65	1	
13	Z063070410	Flange plate	法兰盘	1	
14		Drain Plug	放油螺塞	1	

机油箱


ENGINE OIL RESEERVOIR

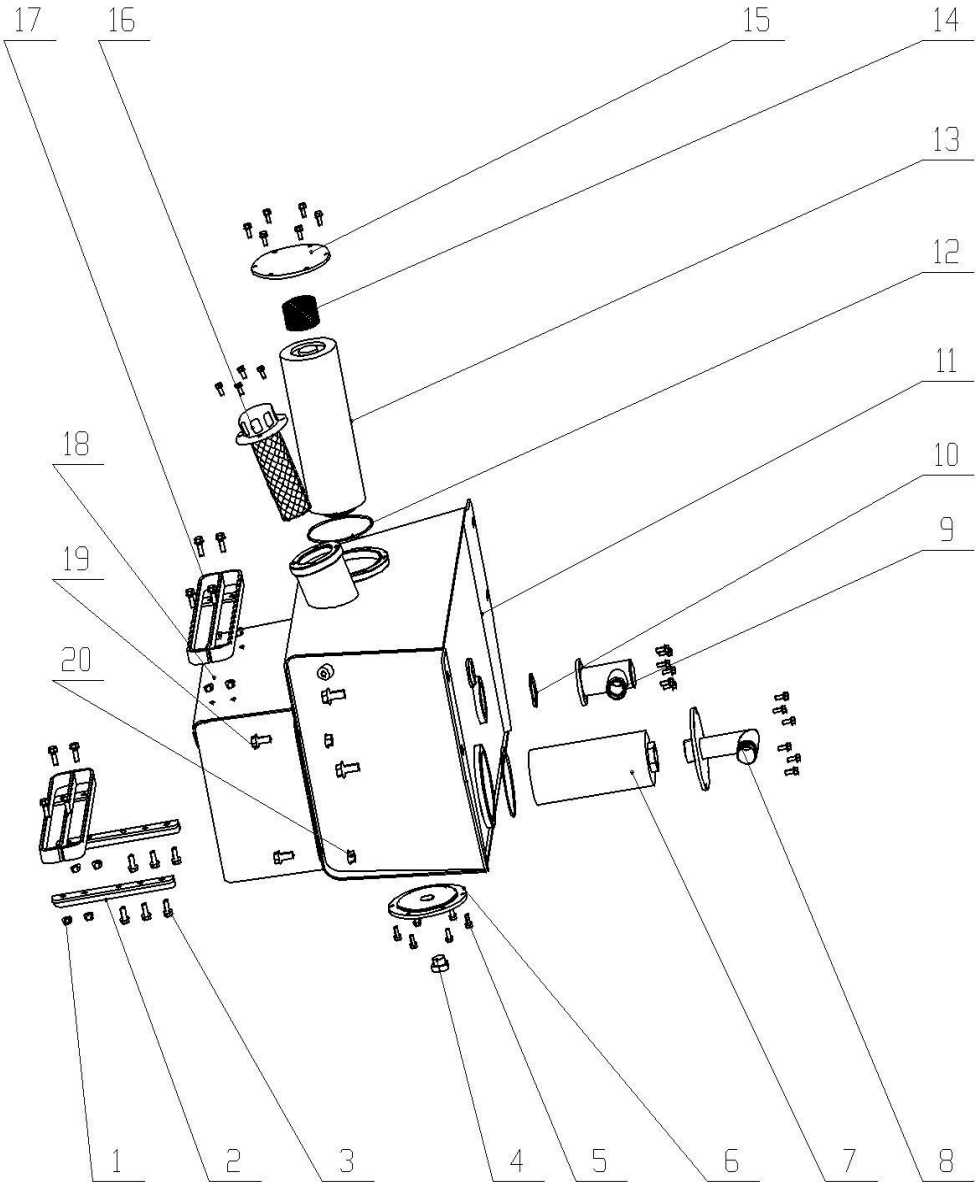

机油箱 ENGINE OIL RESEERVOIR

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	B050211008	Nut M10	螺母 M10	14	
2	Z065080050	Angle iron	角铁	2	
3	B042521035	Bolt M10X35	螺栓 M10X35	14	
4		Screw Block	螺堵	1	
5	B010310820	Bolt M8X20	螺栓 M8X20	28	
6	Z063070410	Clean the flange	清洗法兰	1	
7	W013900050	Oil filter screen	吸油滤网	1	
8	Z063070430	Oil Suction Pipe	吸油管	1	
9	Z061070201	Oil Return Port	回油口	1	
10	B160130670	O-ring 67×3.55	O 型圈 67×3.55	1	
11	Z065070010	Oil Tank	机油箱体	1	
12	B160141452	O-ring 145×3.55	O 型圈 145×3.55	3	
13	W013500320	Hydraulic oil filter element	液压油滤芯	1	
14	Z590200130	Spring	弹簧	1	
15	Z590200140	Screen top cover	滤网顶盖	1	
16	W110001460	Fuel filter	加油滤清器	1	
17	Z065080060	Pedal Assembly	踏板组件	2	
18	Z065070110	Battery box	电瓶箱	1	
19	B040911635	Bolt M16X35	螺栓 M16X35	4	
20	B050211614	Nut M10	螺母 M16	4	


发动机罩总成 **ENGINE HOOD ASSEMBLY**

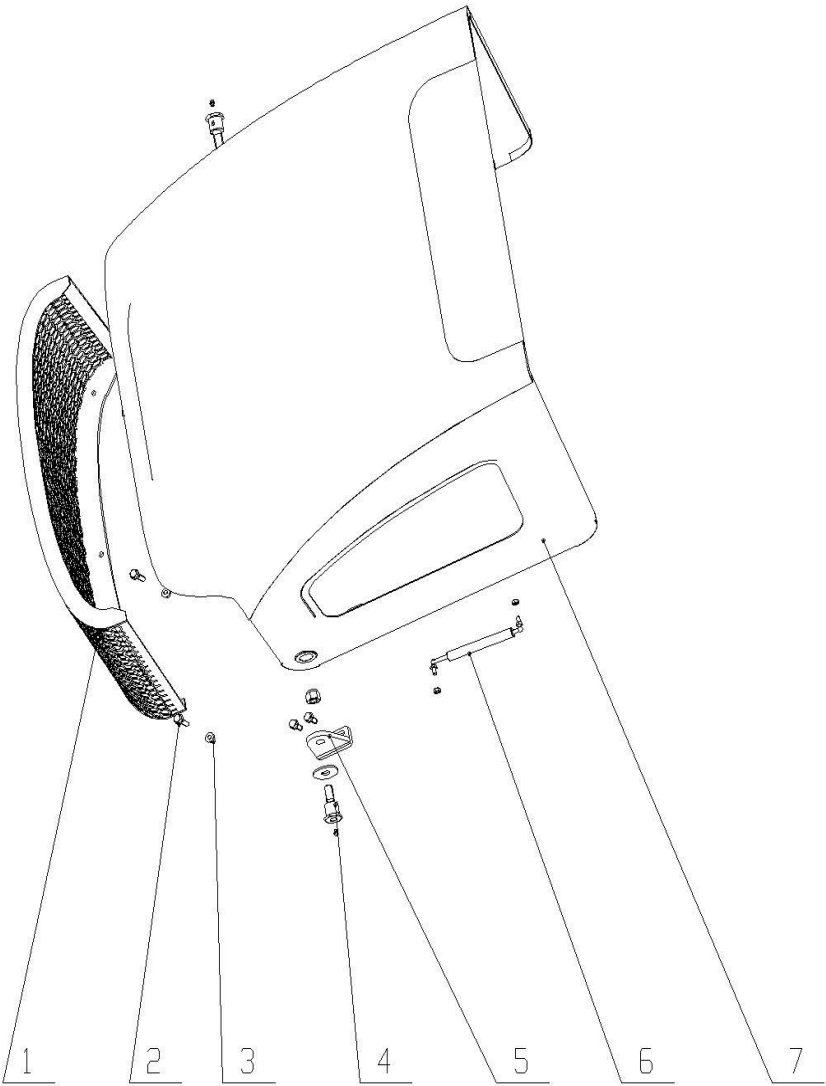

发动机罩总成 ENGINE HOOD ASSEMBLY

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'T Y	备注 Remark
1	Z061053010	Fixed cover	固定罩	1	
2	B042521035	Bolt M10X35	六角螺栓 M10X35	7	
3	B050211008	Nut M10	尼龙六角锁紧螺母	7	
4	Z061052261	Axis of rotation	旋转轴	2	
5	Z061050800	Hood swivel seat	机罩旋转座	2	
6	W110060290	Air Spring	气弹簧	2	
7	Z061053103	Rotating hood	旋转罩	1	

变速操纵杆 CONTROL SYSTEM

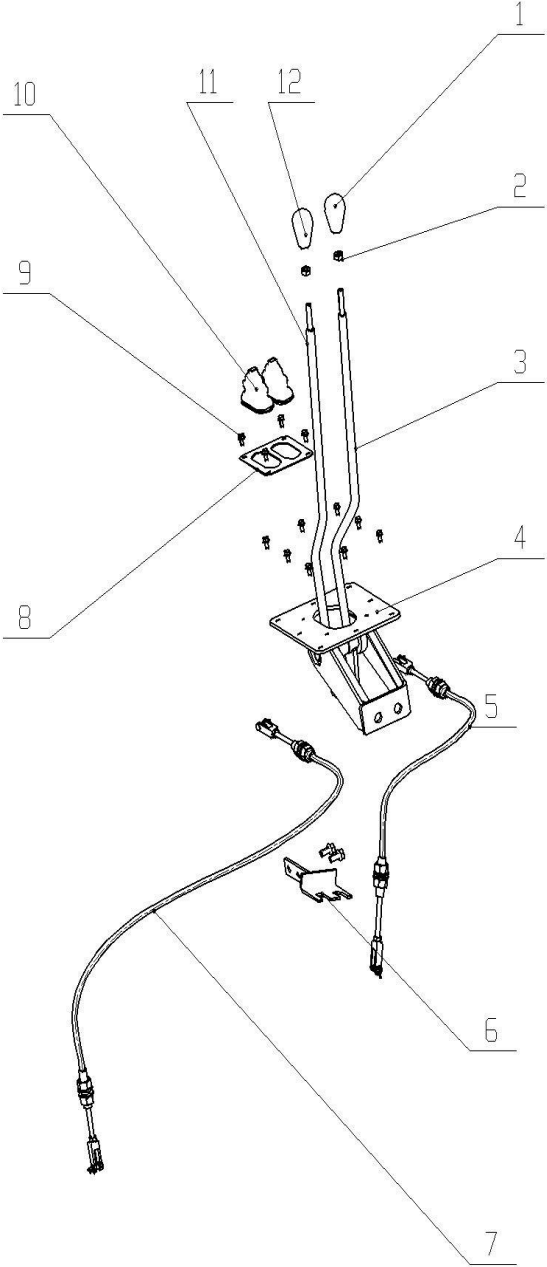


变速操纵杆

CONTROL SYSTEM

序号	零件号	Part Name	零件名称	数量	备注
ITEM	PART NO.			Q'TY	Remark
1	W013900130	High and low speed ball handle	高低速手柄球	1	
2	B051911008	Nut M10	螺母 M10	2	
3	Z065360041	High and low speed stick	高低速杆	1	
4	Z065360061	Base	底座	1	
5	Z065360140	Gear flexible shaft	档位软轴	1	
6	Z260060010	Flexible shaft bracket	软轴支架	1	
7	Z065360150	High and low speed soft shaft	高低速软轴	1	
8	Z065360160	Pressure Plate	压板	1	
9	B040711020	Bolt M10X20	螺栓 M10X20	12	
10	W013900180	Dust Jacket	防尘套	2	
11	Z065360011	Shift Lever	变速杆	1	
12	W013900140	A ball with a gearshift handle	变速手柄球	1	


空调系统(24V) AIR CONDITION SYSTEM(24V)

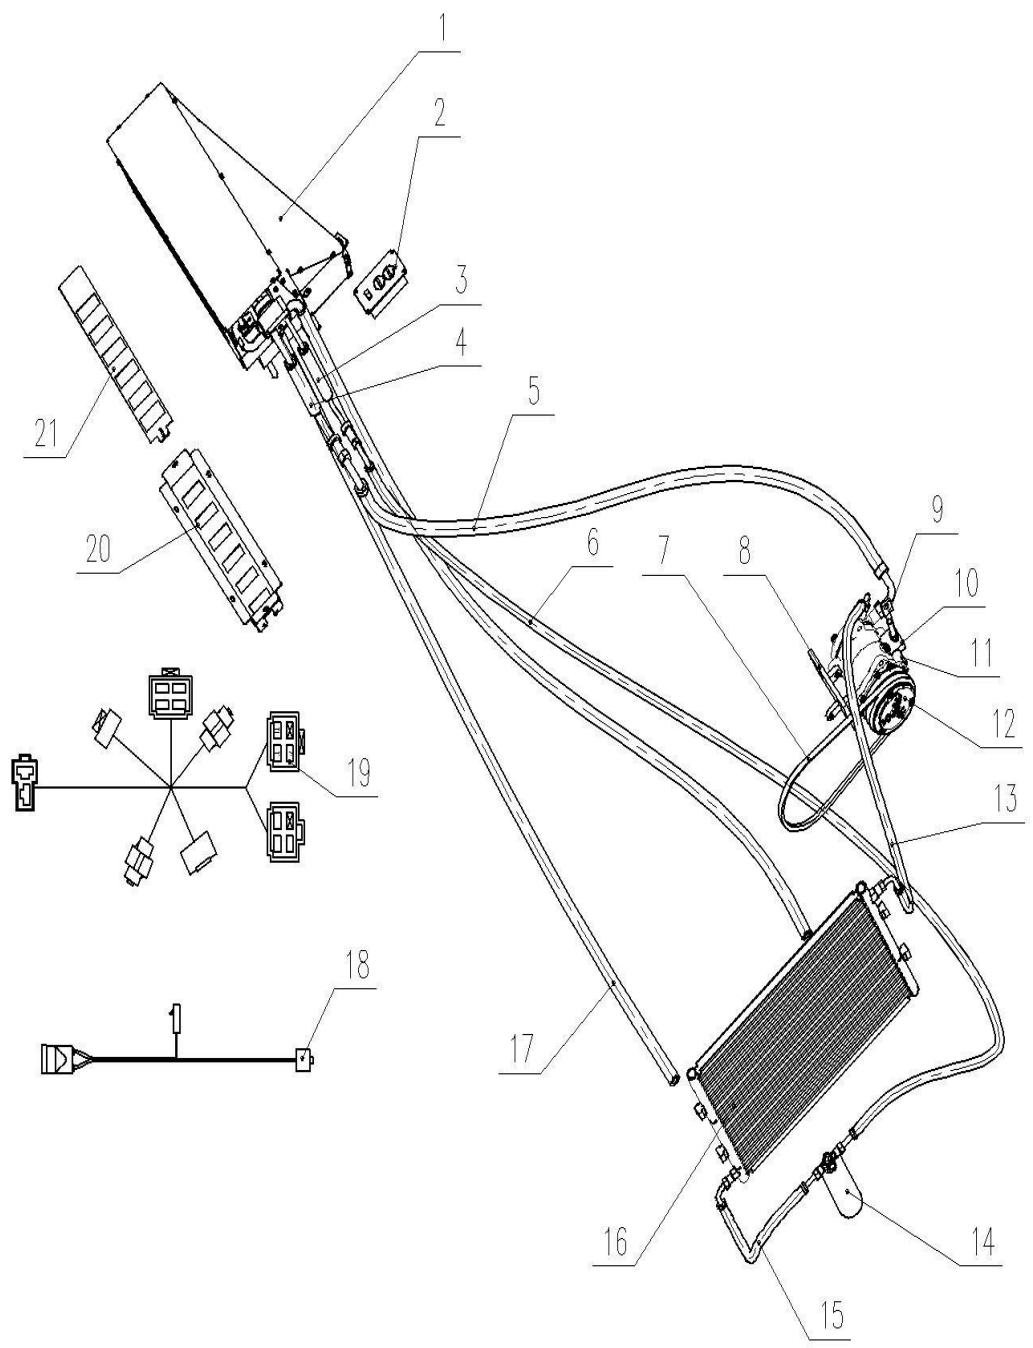

空调系统(24V) AIR CONDITION SYSTEM(24V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	K07WM03	Evaporator assembly	蒸发器总成	1	
2	K13TY07-02	control panel	控制面板	1	
3	K08TY03-59	Evaporator inlet pipe1	蒸发器进液管 1	1	
4	K08TY04-73	Evaporator outlet pipe	蒸发器出气管	1	
5	K08TY05-19	Compressor return pipe	压缩机回气管	1	
6	K08TY02-44	Evaporator inlet pipe2	蒸发器进液管 2	1	
7	W013800791	V-belt	三角带	1	
8	Z050590230	Compressor bracket	压缩机支架	1	
9	Z050590170	Compressor strut	压缩机撑杆	1	
10	Z050590100	Adjust Block	调节块	1	
11	Z062590090	Heel	垫块	1	
12	K04TY21-02(F1)	Compressor	压缩机	1	
13	K08TY01-56	Compressor exhaust pipe	压缩机排气管	1	
14	K09WM03-01A	Drying bottle assembly	干燥瓶组件	1	
15	K08TY06-54	Cold storage pipe	冷储管	1	
16	K05KB82	Condenser	冷凝器	1	
17	K81TY3702-6000	Heating hose	暖风胶管	2	
18	K12TY02-01	Pressure switch harness	压力开关线束	1	
19	K12TY01-04	Evaporator wiring harness	蒸发器线束	1	
20	Z062200050	Internal and external circulation air vents	内外循环风口	1	
21	Z062200090	Recirculation damper assembly	循环风门组件	1	
22	K07WM03-08	Water pipe transition pipe	水管过渡管	2	

空调系统(12V) AIR CONDITION SYSTEM(12V)

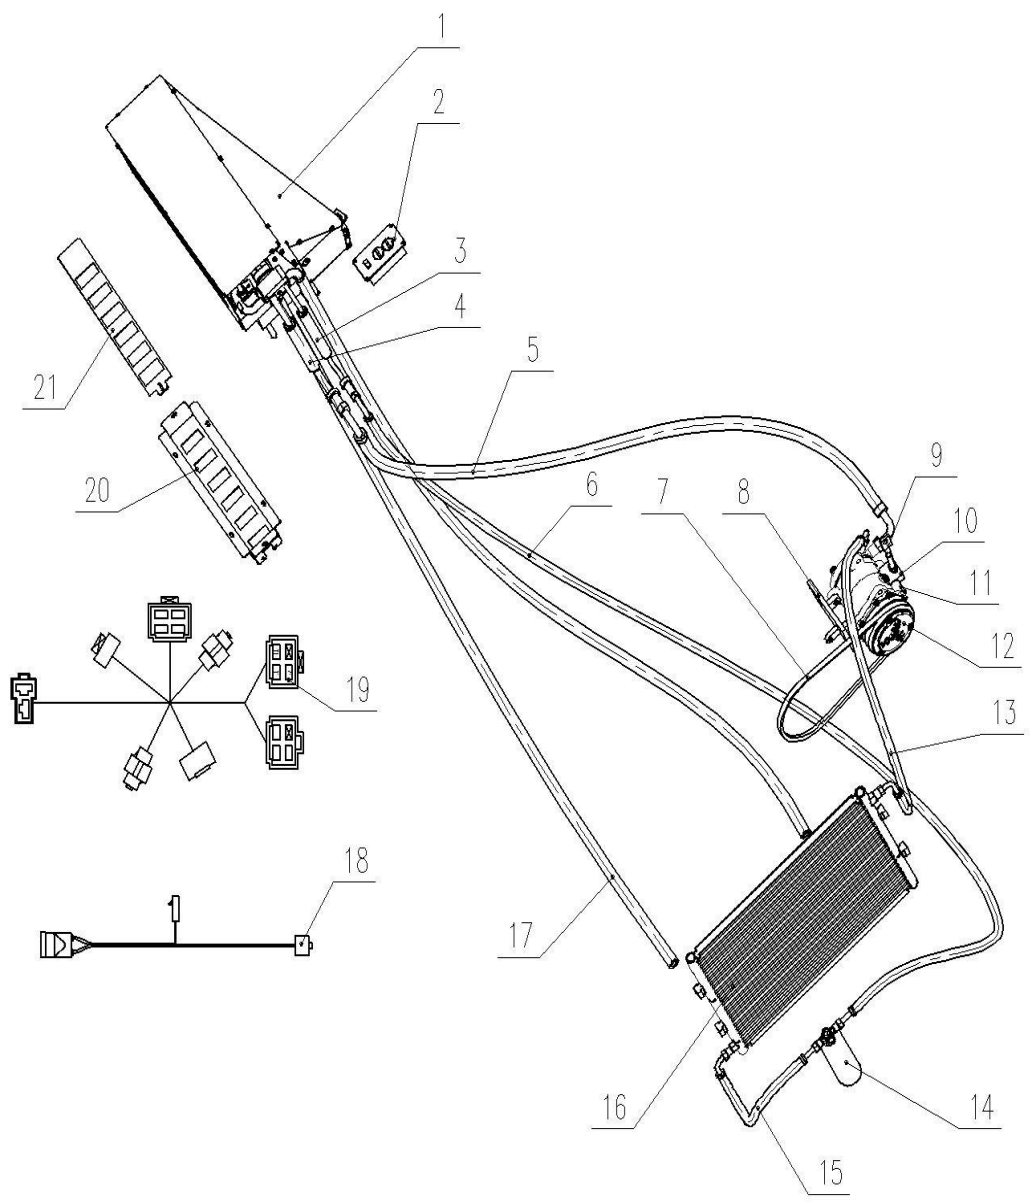

空调系统(12V) AIR CONDITION SYSTEM(12V)

序号 ITEM	零件号 PART NO.	Part Name	零件名称	数量 Q'TY	备注 Remark
1	K07WM03	Evaporator assembly	蒸发器总成	1	
2	K13TY07-01	control panel	控制面板	1	
3	K08TY03-59	Evaporator inlet pipe1	蒸发器进液管 1	1	
4	K08TY04-73	Evaporator outlet pipe	蒸发器出气管	1	
5	K08TY05-19	Compressor return pipe	压缩机回气管	1	
6	K08TY02-44	Evaporator inlet pipe2	蒸发器进液管 2	1	
7	W013800890	V-belt	三角带	1	
8	Z062590130	Compressor bracket	压缩机支架	1	
9	Z062590040	Compressor strut	压缩机撑杆	1	
10	Z062590110	Adjust Block	调节块	1	
11	Z062590090	Heel	垫块	1	
12	K04TY21-01(F1)	Compressor	压缩机	1	
13	K08TY01-44/a	Compressor exhaust pipe	压缩机排气管	1	
14	K09WM03-01	Drying bottle assembly	干燥瓶组件	1	
15	K08TY06-45	Cold storage pipe	冷储管	1	
16	K05KB64	Condenser	冷凝器	1	
17	K81TY3702-6000	Heating hose	暖风胶管	2	
18	K12TY02-01	Pressure switch harness	压力开关线束	1	
19	K12TY01-03	Evaporator wiring harness	蒸发器线束	1	
20	Z062200050	Internal and external circulation air vents	内外循环风口	1	
21	Z062200090	Recirculation damper assembly	循环风门组件	1	
22	K07WM03-08	Water pipe transition pipe	水管过渡管	2	