


Model Number:
AJO36BXS4CH/AA

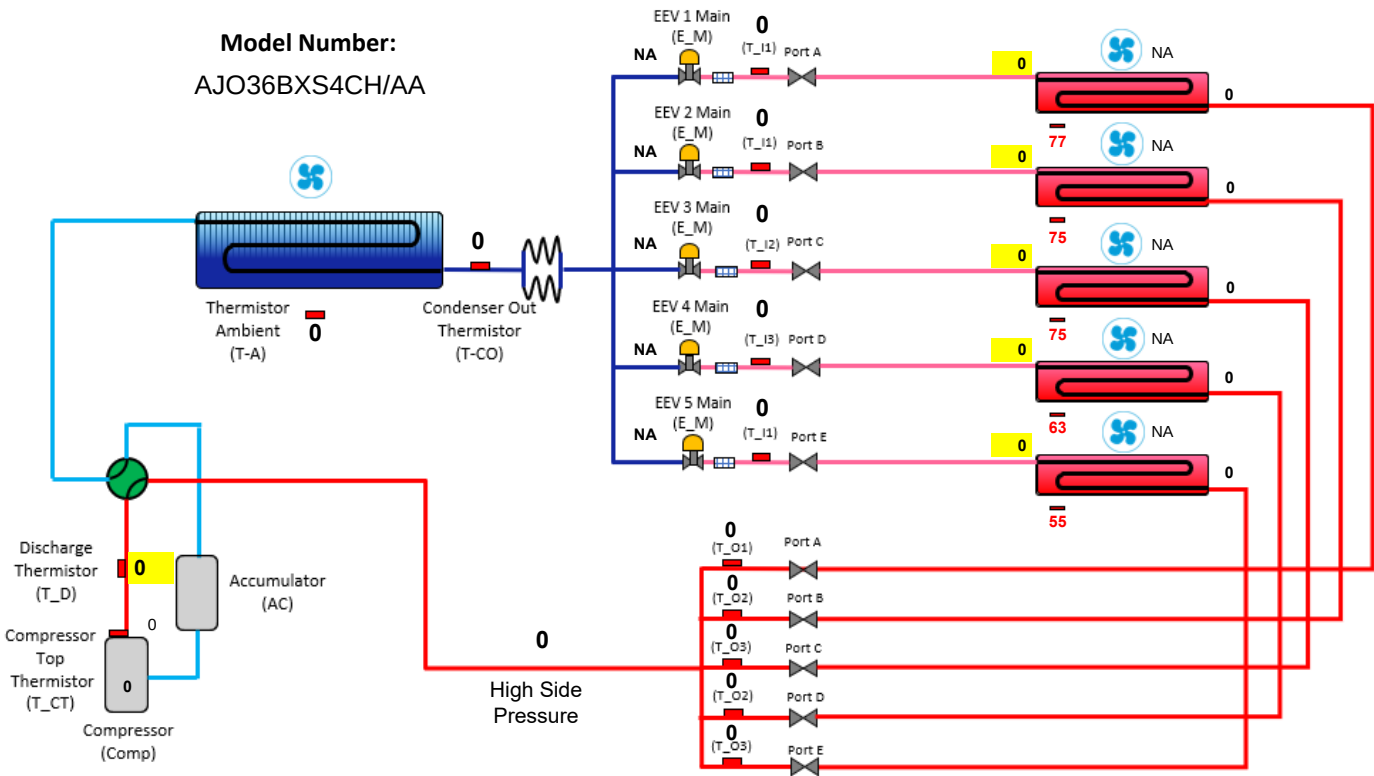

Comments:

K 4 Button Pushes	Information displayed
1	Compressor Frequency
2	Target Frequency
3	EEV 0 Steps
4	EEV 1 steps
5	EEV 2 Steps
6	EEV 3 steps
7	EEV 4 Steps
8	Fan RPM
9	Discharge Temperature
10	OLP Temperature
11	Condenser Out Temperature
12	Outdoor Temperature
13	Running Current
14	Target Discharge Temperature
15	Total Capacity of indoor units
16	Safety Control

0
0
NA
NA
NA
NA
0
0
0
0
0
0
0
0
0

Indoor Capacity Set Point

A 9k
B 7k
C 15k
D 15k

15k

Heating Operating Data

Basic Service

Operational modes - OLP (overload protection)

❑ Initiated in heat mode if the indoor coil temperature reaches 127°F


❑ Compressor frequency held

❑ If the coil temp rises to 132°F the compressor frequency is reduced

❑ Rate of reduction determined by fuzzy logic


❑ When indoor coil temp drops to 108°F compressor will ramp up but at a reduced rate

- 1hz every 30-90 seconds

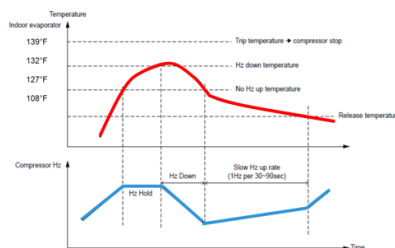

■ Discharge temperature protection control

- Prevent abnormal discharge temperature to protect the compressor & system.

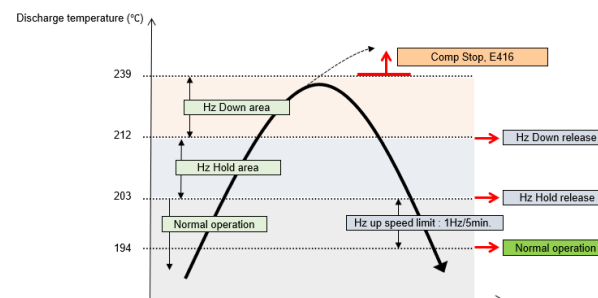

※ The values are subject to change according to the model.

Heating operation:

The compressor modulates to maintain a high side saturation temperature between 108 & 132 degrees. The corresponding head pressure is in the range of 360 psig - 500 psig.

The EEV modulates to maintain approximately 9 degrees of sub-cooling.

Low Side saturation temperature/Condenser out temperature is "typically" 5-10 degrees lower than outside air temperature.

If the discharge temperature gets too high the compressor will reduce its frequency.

Discharge temperature should be close to target discharge temperature.

If there is more than 100% connected capacity of Indoor units the excess air may negatively effect the ability to build head pressure.

IDU's should produce a 30+ degree temperature rise in heating mode with the fan set to high speed.