

Cut slices and base from a thin, pliable plastic.

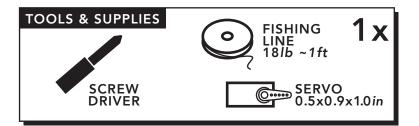


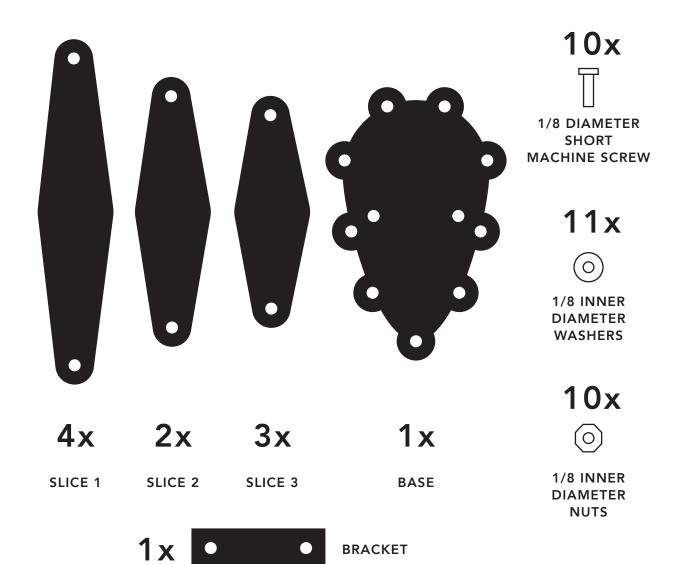




2


Align slices and bases, then fasten with screws, washers, and nuts.

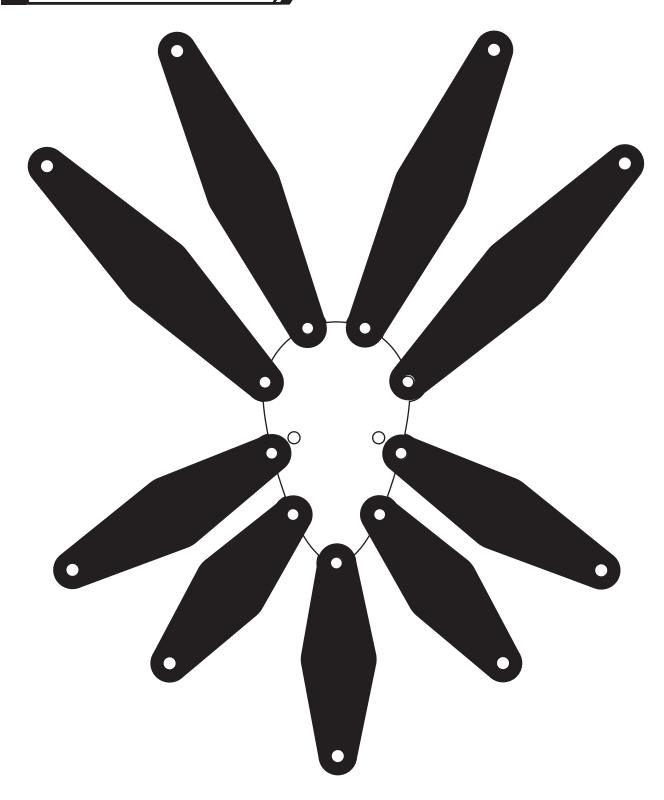

Place servo on base aligned with holes. Fasten with bracket.

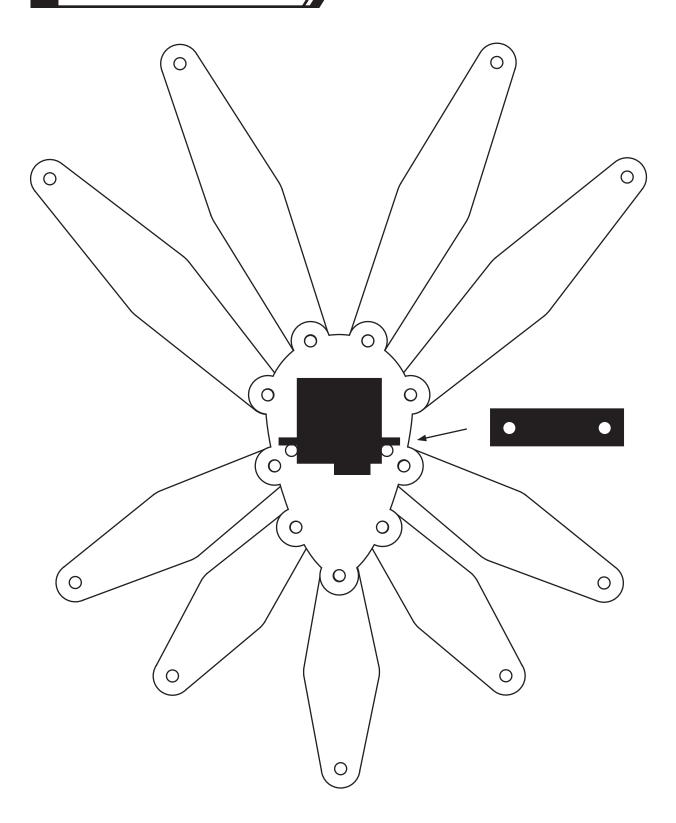

Bring all slices together at the top, and fasten with a screw.

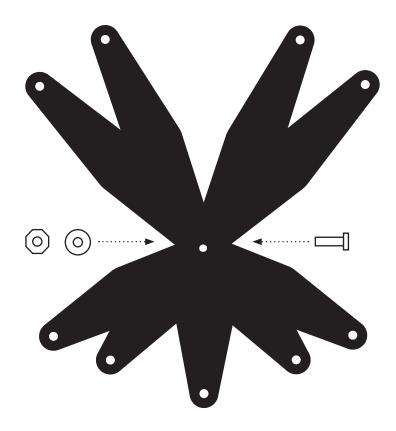

Tie servo horn to the top screw. And you're done!

