COMPENDIUM OF ERT WASTE SAMPLING PROCEDURES

Sampling Equipment Decontamination

Drum Sampling

Tank Sampling

Chip, Wipe, and Sweep Sampling

Waste Pile Sampling

Interim Final

Environmental Response Team Emergency Response Division

Office of Emergency and Remedial Response U.S. Environmental Protection Agency Washington, DC 20460



Notice

This document has been reviewed in accordance with U.S. Environmental Protection Agency policy and approved for publication. Mention of trade names or commercial products does not constitute endorsement or recommendation for use.

The policies and procedures established in this document are intended solely for the guidance of government personnel, for use in the Superfund Removal Program. They are not intended, and cannot be relied upon, to create any rights, substantive or procedural, enforceable by any party in litigation with the United States. The Agency reserves the right to act at variance with these policies and procedures and to change them at any time without public notice.

Depending on circumstances and needs, it may not be possible or appropriate to follow these procedures exactly in all situations due to site conditions, equipment limitations, and limitations of the standard procedures. Whenever these procedures cannot be followed as written, they may be used as general guidance with any and all modifications fully documented in either QA Plans, Sampling Plans, or final reports of results.

Each Standard Operating Procedure in this compendium contains a discussion on quality assurance/quality control (QA/QC). For more information on QA/QC objectives and requirements, refer to the *Quality Assurance/Quality Control Guidance for Removal Activities*, OSWER directive 9360.4-01, EPA/540/G-90/004.

Questions, comments, and recommendations are welcomed regarding the Compendium of ERT Waste Sampling Procedures. Send remarks to:

Mr. William A. Coakley
Removal Program QA Coordinator
U.S. EPA - ERT
Raritan Depot - Building 18, MS-101
2890 Woodbridge Avenue
Edison, NJ 08837-3679

For additional copies of the Compendium of ERT Waste Sampling Procedures, please contact:

National Technical Information Service (NTIS)
U.S. Department of Commerce
5285 Port Royal Road
Springfield, VA 22161
(703) 487-4600

Table of Contents

Secti	ion			Page
1.0	SAM	IPLING I	EQUIPMENT DECONTAMINATION: SOP #2006	
	1.1	Scope	e and Application	· . 1
	1.2	Metho	od Summary	1
	1.3	Samp	le Preservation, Containers, Handling, and Storage	1
	1.4		ferences and Potential Problems	1
	1.5		oment/Apparatus	1
	1.6	Reage		2
	1.7	Proce	cdures	2
		1.7.1	Decontamination Methods	2
		1.7.2	Field Sampling Equipment Cleaning Procedures	3
	1.8		lations	3
	1.9		ty Assurance/Quality Control	3
	1.10		Validation	4
	1.11	Healti	h and Safety	4
2.0	DRU	DRUM SAMPLING: SOP #2009		
	2.1	Scope	and Application	5
	2.2		od Summary	5
	2.3		le Preservation, Containers, Handling, and Storage	5
	2.4		erences and Potential Problems	5
	2.5	2.5 Equipment/Apparatus		
		2.5.1	Bung Wrench	6
		2.5.2	Drum Deheader	6
		2.5.3	Hand Pick, Pickaxe, and Hand Spike	6
		2.5.4	Backhoe Spike	6
		2.5.5	Hydraulic Drum Opener	6
		2.5.6	Pneumatic Devices	6
	2.6	Reage		6
	2.7	Proced	dures	7
		2.7.1	Preparation	7
		2.7.2	Drum Inspection	7
		2.7.3	Drum Staging	7
		2.7.4	Drum Opening	8
		2.7.5	Drum Sampling	9
	2.8 2.9			11
	2.10	Data V	y Assurance/Quality Control Validation	11
	2.10		and Safety	11
		Cartii	and builty	11

Sectio	<u>n</u>			Page
3.0	TANK	SAMPLING: SOP #2010		
	3.1	Scope and Application		13
	3.2	Method Summary		13
	3.3	Sample Preservation, Containers, Handling, and Storage		13
	3.4	Interferences and Potential Problems		13
	3.5	Equipment/Apparatus		14
	3.6	Reagents		14
	3.7	Procedures		14
		3.7.1 Preparation	i i	14
		3.7.2 Preliminary Inspection		14
		3.7.3 Sampling Procedures		15
		3.7.4 Sampling Devices		15
	3.8	Calculations		18
	3.9	Quality Assurance/Quality Control		18
	3.10	Data Validation		18
	3.11	Health and Safety		18
4.0	CHIP	, WIPE, AND SWEEP SAMPLING: SOP #2011		
	U	, <u></u>	**	
	4.1	Scope and Application		21
	4.2	Method Summary		21
	4.3	Sample Preservation, Containers, Handling, and Storage		21
	4.4	Interferences and Potential Problems		21
	4.5	Equipment/Apparatus		21 22
	4.6	Reagents		22
	4.7	Procedures		LL
		4.7.1 Preparation		22
		4.7.2 Chip Sample Collection		22
•		4.7.3 Wipe Sample Collection	4	22
		4.7.4 Sweep Sample Collection		23
	4.8	Calculations		23
	4.9	Quality Assurance/Quality Control		23
	4.10	Data Validation		24
	4.11	Health and Safety		24
5.0	WASTE PILE SAMPLING: SOP #2017			
	5.1	Scope and Application		25
	5.2	Method Summary		25
	5.3	Sample Preservation, Containers, Handling, and Storage		25
	5.4	Interferences and Potential Problems		25
	5.5	Equipment/Apparatus	•	26
	5.6	Reagents		26

Section				Pa	ge
	5.7	Proced	ures		26
		5.7.1	Preparation		26
ş.		5.7.2	Sample Collection		26
	5.8	Calcula	ations		29
	5.9	Quality	Assurance/Quality Control		29
	5.10	Data V	alidation		29
	5.11	Health	and Safety		29
APPEN	DIX A	- Drum	Data Sheet Form		31
APPEN	DIX B -	Figure	3		35
APPEN	DIX C -	Calcula	ations		51
REFER	ENCES				55

.

List of Exhibits

Exhibit		SOP	<u>Page</u>
Table 1:	Recommended Solvent Rinse for Soluble Contaminants	#2006	4
Drum Data Sh	eet Form	#2009	33
Figure 1:	Univeral Bung Wrench	#2009	36
Figure 2:	Drum Deheader	#2009	37
Figure 3:	Hand Pick, Pickaxe, and Hand Spike	#2009	38
Figure 4:	Backhoe Spike	#2009	39
Figure 5:	Hydraulic Drum Opener	#2009	40
Figure 6:	Pneumatic Bung Remover	#2009	41
Figure 7:	Glass Thief	#2009	42
Figure 8:	COLIWASA	#2009	43
Figure 9:	Bacon Bomb Sampler	#2010	44
Figure 10:	Sludge Judge	#2010	45
Figure 11:	Subsurface Grab Sampler	#2010	46
Figure 12:	Bailer	#2010	47
Figure 13:	Sampling Augers	#2017	48
Figure 14:	Sampling Trier	#2017	49
Figure 15:	Grain Sampler	#2017	50
Calculation Sh	eet: Various Volume Calculations	#2010	52

Acknowledgments

Preparation of this document was directed by William A. Coakley, the Removal Program QA Coordinator of the Environmental Response Team, Emergency Response Division. Additional support was provided under U.S. EPA contract #68-03-3482 and U.S. EPA contract #68-WO-0036.

1.0 SAMPLING EQUIPMENT DECONTAMINATION: SOP #2006

1.1 SCOPE AND APPLICATION

This Standard Operating Procedure (SOP) describes methods used for preventing or reducing cross-contamination, and provides general guidelines for sampling equipment decontamination procedures at a hazardous waste site. Preventing or minimizing cross-contamination in sampled media and in samples is important for preventing the introduction of error into sampling results and for protecting the health and safety of site personnel.

Removing or neutralizing contaminants that have accumulated on sampling equipment ensures protection of personnel from permeating substances, reduces or eliminates transfer of contaminants to clean areas, prevents the mixing of incompatible substances, and minimizes the likelihood of sample cross-contamination.

1.2 METHOD SUMMARY

Contaminants can be physically removed from equipment, or deactivated by sterilization or disinfection. Gross contamination of equipment requires physical decontamination, including abrasive and non-abrasive methods. These include the use of brushes, air and wet blasting, and high-pressure water cleaning, followed by a wash/rinse process using appropriate cleaning solutions. Use of a solvent rinse is required when organic contamination is present.

1.3 SAMPLE PRESERVATION, CONTAINERS, HANDLING, AND STORAGE

This section is not applicable to this SOP.

1.4 INTERFERENCES AND POTENTIAL PROBLEMS

 The use of distilled/deionized water commonly available from commercial vendors may be acceptable for decontamination of sampling equipment provided that it has been verified by laboratory analysis to be analyte free.

- An untreated potable water supply is not an acceptable substitute for tap water. Tap water may be used from any municipal water treatment system for mixing of decontamination solutions.
- Acids and solvents utilized in the decontamination sequence pose the health and safety risks of inhalation or skin contact, and raise shipping concerns of permeation or degradation.
- The site work plan must address disposal of the spent decontamination solutions.
- Several procedures can be established to minimize contact with waste and the potential for contamination. For example:
 - Stress work practices that minimize contact with hazardous substances.
 - Use remote sampling, handling, and container-opening techniques when appropriate.
 - Cover monitoring and sampling equipment with protective material to minimize contamination.
 - Use disposable outer garments and disposable sampling equipment when appropriate.

1.5 EQUIPMENT/APPARATUS

- appropriate personal protective clothing
- non-phosphate detergent
- selected solvents
- long-handled brushes
- drop cloths/plastic sheeting
- trash container
- paper towels
- galvanized tubs or buckets
- tap water

- distilled/deionized water
- metal/plastic containers for storage and disposal of contaminated wash solutions
- pressurized sprayers for tap and deionized/distilled water
- sprayers for solvents
- trash bags
- aluminum foil
- · safety glasses or splash shield
- emergency eyewash bottle

1.6 REAGENTS

There are no reagents used in this procedure aside from the actual decontamination solutions and solvents. In general, the following solvents are utilized for decontamination purposes:

- 10% nitric acid(1)
- acetone (pesticide grade)⁽²⁾
- hexane (pesticide grade)⁽²⁾
- methanol

(1) Only if sample is to be analyzed for trace metals.

(2) Only if sample is to be analyzed for organics.

1.7 PROCEDURES

As part of the health and safety plan, develop and set up a decontamination plan before any personnel or equipment enter the areas of potential exposure. The equipment decontamination plan should include:

- the number, location, and layout of decontamination stations
- which decontamination apparatus is needed
- the appropriate decontamination methods
- methods for disposal of contaminated clothing, apparatus, and solutions

1.7.1 Decontamination Methods

All personnel, samples, and equipment leaving the contaminated area of a site must be decontaminated. Various decontamination methods will either physically remove contaminants, inactivate contaminants by disinfection or sterilization, or do both.

In many cases, gross contamination can be removed by physical means. The physical decontamination techniques appropriate for equipment decontamination can be grouped into two categories: abrasive methods and non-abrasive methods.

Abrasive Cleaning Methods

Abrasive cleaning methods work by rubbing and wearing away the top layer of the surface containing the contaminant. The following abrasive methods are available:

- Mechanical: Mechanical cleaning methods use brushes of metal or nylon. The amount and type of contaminants removed will vary with the hardness of bristles, length of brushing time, and degree of brush contact.
- Air Blasting: Air blasting is used for cleaning large equipment, such as bulldozers, drilling rigs or auger bits. The equipment used in air blast cleaning employs compressed air to force abrasive material through a nozzle at high velocities. The distance between the nozzle and the surface cleaned, as well as the pressure of air, the time of application, and the angle at which the abrasive strikes the surface, determines cleaning efficiency. Air blasting has several disadvantages: it is unable to control the amount of material removed, it can aerate contaminants, and it generates large amounts of waste.
- Wet Blasting: Wet blast cleaning, also used to clean large equipment, involves use of a suspended fine abrasive delivered by compressed air to the contaminated area. The amount of materials removed can be carefully controlled by using very fine abrasives. This method generates a large amount of waste.

Non-Abrasive Cleaning Methods

Non-abrasive cleaning methods work by forcing the contaminant off of a surface with pressure. In general, less of the equipment surface is removed using non-abrasive methods. The following non-abrasive methods are available:

- High-Pressure Water: This method consists of a high-pressure pump, an operator-controlled directional nozzle, and a high pressure hose. Operating pressure usually ranges from 340 to 680 atmospheres (atm) which relates to flow rates of 20 to 140 liters per minute.
- Ultra-High-Pressure Water: This system produces a pressurized water jet (from 1,000 to 4,000 atm). The ultra-high-pressure spray removes tightly-adhered surface film. The water velocity ranges from 500 m/sec (1,000 atm) to 900 m/sec (4,000 atm). Additives can enhance the method. This method is not applicable for hand-held sampling equipment.

Disinfection/Rinse Methods

- Disinfection: Disinfectants are a practical means of inactivating infectious agents.
- Sterilization: Standard sterilization methods involve heating the equipment. Sterilization is impractical for large equipment.
- Rinsing: Rinsing removes contaminants through dilution, physical attraction, and solubilization.

1.7.2 Field Sampling Equipment Cleaning Procedures

Solvent rinses are not necessarily required when organics are not a contaminant of concern and may be eliminated from the sequence specified below. Similarly, an acid rinse is not required if analysis does not include inorganics.

- 1. Where applicable, follow physical removal procedures specified in section 1.7.1.
- Wash equipment with a non-phosphate detergent solution.
- 3. Rinse with tap water.
- 4. Rinse with distilled/deionized water.
- 5. Rinse with 10% nitric acid if the sample will be analyzed for trace organics.

- 6. Rinse with distilled/deionized water.
- 7. Use a solvent rinse (pesticide grade) if the sample will be analyzed for organics.
- 8. Air dry the equipment completely.
- 9. Rinse again with distilled/deionized water.

Selection of the solvent for use in the decontamination process is based on the contaminants present at the site. Use of a solvent is required when organic contamination is present on-site. Typical solvents used for removal of organic contaminants include acetone, hexane, or water. An acid rinse step is required if metals are present on-site. If a particular contaminant fraction is not present at the site, the nine-step decontamination procedure listed above may be modified for site specificity. The decontamination solvent used should not be among the contaminants of concern at the site.

Table 1 on page 4 lists solvent rinses which may be required for elimination of particular chemicals. After each solvent rinse, the equipment should be air dried and rinsed with distilled/deionized water.

Sampling equipment that requires the use of plastic tubing should be disassembled and the tubing replaced with clean tubing, before commencement of sampling and between sampling locations.

1.8 CALCULATIONS

This section is not applicable to this SOP.

1.9 QUALITY ASSURANCE/ QUALITY CONTROL

One type of quality control sample specific to the field decontamination process is the rinsate blank. The rinsate blank provides information on the effectiveness of the decontamination process employed in the field. When used in conjunction with field blanks and trip blanks, a rinsate blank can detect contamination during sample handling, storage and sample transportation to the laboratory.

Table 1: Recommended Solvent Rinse for Soluble Contaminants

SOLVENT	SOLUBLE CONTAMINANTS
Water	 Low-chain hydrocarbons Inorganic compounds Salts Some organic acids and other polar compounds
Dilute Acids	 Basic (caustic) compounds Amines Hydrazines
Dilute Bases for example, detergent and soap	 Metals Acidic compounds Phenol Thiols Some nitro and sulfonic compounds
Organic Solvents ⁽¹⁾ - for example, alcohols, ethers, ketones, aromatics, straight-chain alkanes (e.g., hexane), and common petroleum products (e.g., fuel, oil, kerosene)	Nonpolar compounds (e.g., some organic compounds)

^{(1) -} WARNING: Some organic solvents can permeate and/or degrade protective clothing.

A rinsate blank consists of a sample of analyte-free (i.e, deionized) water which is passed over and through a field decontaminated sampling device and placed in a clean sample container.

Rinsate blanks should be run for all parameters of interest at a rate of 1 per 20 for each parameter, even if samples are not shipped that day. Rinsate blanks are not required if dedicated sampling equipment is used.

1.10 DATA VALIDATION

This section is not applicable to this SOP.

1.11 HEALTH AND SAFETY

When working with potentially hazardous materials, follow U.S. EPA, OSHA and specific health and safety procedures.

Decontamination can pose hazards under certain circumstances even though performed to protect

health and safety. Hazardous substances may be incompatible with decontamination methods. For example, the decontamination solution or solvent may react with contaminants to produce heat, explosion, or toxic products. Decontamination methods may be incompatible with clothing or equipment; some solvents can permeate or degrade protective clothing. Also, decontamination solutions and solvents may pose a direct health hazard to workers through inhalation or skin contact, or if they combust.

The decontamination solutions and solvents must be determined to be compatible before use. Any method that permeates, degrades, or damages personal protective equipment should not be used. If decontamination methods pose a direct health hazard, measures should be taken to protect personnel or the methods should be modified to eliminate the hazard.

2.0 DRUM SAMPLING: SOP #2009

2.1 SCOPE AND APPLICATION

The purpose of this Standard Operating Procedure (SOP) is to provide technical guidance on safe and cost-effective response actions at hazardous waste sites containing drums with unknown contents. Container contents are sampled and characterized for disposal, bulking, recycling, grouping, and/or classification purposes.

2.2 METHOD SUMMARY

Prior to sampling, drums must be inventoried, staged, and opened. An inventory entails recording visual qualities of each drum and any characteristics pertinent to the contents' classification. Staging involves the organization. and sometimes consolidation of drums which have similar wastes or characteristics. Opening of closed drums can be performed manually or remotely. Remote drum opening is recommended for worker safety. The most widely used method of sampling a drum involves the use of a glass thief. This method is quick, simple, relatively inexpensive, and requires no decontamination.

2.3 SAMPLE PRESERVATION, CONTAINERS, HANDLING, AND STORAGE

Samples collected from drums are considered waste samples. No preservatives should be added since there is a potential reaction of the sample with the preservative. Samples should, however, be cooled to 4°C and protected from sunlight in order to minimize any potential reaction due to the light sensitivity of the sample.

Sample bottles for collection of waste liquids, sludges, or solids are typically wide-mouth amber jars with Teflon-lined screw caps. Actual volume required for analysis should be determined in conjunction with the laboratory performing the analysis.

Follow these waste sample handling procedures:

1. Place sample container in two Ziploc plastic bags.

- 2. Place each bagged container in a 1-gallon covered can containing absorbent packing material. Place the lid on the can.
- 3. Mark the sample identification number on the outside of the can.
- Place the marked cans in a cooler, and fill remaining space with absorbent packing material.
- 5. Fill out chain of custody form for each cooler, place in plastic, and affix to inside lid of cooler.
- 6. Secure and custody seal the lid of cooler.
- Arrange for the appropriate transportation mode consistent with the type of hazardous waste involved.

2.4 INTERFERENCES AND POTENTIAL PROBLEMS

The practice of tapping drums to determine their contents is neither safe nor effective and should not be used if the drums are visually overpressurized or if shock-sensitive materials are suspected. A laser thermometer may be used instead.

Drums that have been overpressurized, to the extent that the head is swollen several inches above the level of the chime, should not be moved. A number of devices have been developed for venting critically swollen drums. One method that has proven to be effective is a tube and spear device. A light aluminum tube (3 meters long) is positioned at the vapor space of the drum. A rigid, hooking device attached to the tube goes over the chime and holds the tube securely in place. The spear is inserted in the tube and positioned against the drum wall. A sharp blow on the end of the spear drives the sharpened tip through the drum and the gas vents along the grooves. The venting should be done from behind a wall or barricade. This device can be cheaply and easily designed and constructed where needed. Once the pressure has been relieved, the bung can be removed and the drum sampled.

2.5 EQUIPMENT/APPARATUS

The following are standard materials and equipment required for sampling:

- personal protection equipment
- wide-mouth glass jars with Teflon cap liner, approximately 500 mL volume
- uniquely numbered sample identification labels with corresponding data sheets
- 1-gallon covered cans half-filled with absorbent (vermiculite)
- chain of custody forms
- decontamination materials
- glass thief tubes or Composite Liquid Waste Samplers (COLIWASA)
- laser thermometer
- drum opening devices

Drum opening devices include the following:

2.5.1 Bung Wrench

A common method for opening drums manually is using a universal bung wrench. These wrenches have fittings made to remove nearly all commonly encountered bungs. They are usually constructed of cast iron, brass, or a bronze-beryllium, non-sparking alloy formulated to reduce the likelihood of sparks. The use of a non-sparking bung wrench does not completely eliminate the possibility of a spark being produced. (See Figure 1, Appendix B.)

2.5.2 Drum Deheader

When a bung is not removable with a bung wrench, a drum can be opened manually by using a drum deheader. This tool is constructed of forged steel with an alloy steel blade and is designed to cut the lid of a drum off or part way off by means of a scissors-like cutting action. A limitation of this device is that it can be attached only to closed head drums. Drums with removable heads must be opened by other means. (See Figure 2, Appendix B.)

2.5.3 Hand Pick, Pickaxe, and Hand Spike

These tools are usually constructed of brass or a non-sparking alloy with a sharpened point that can penetrate the drum lid or head when the tool is swung. The hand picks or pickaxes that are most commonly used are commercially available; whereas the spikes are generally uniquely fabricated 4-foot long poles with a pointed end. (See Figure 3, Appendix B.)

2.5.4 Backhoe Spike

The most common means used to open drums remotely for sampling is the use of a metal spike attached or welded to a backhoe bucket. In addition to being very efficient, this method can greatly reduce the likelihood of personal exposure. (See Figure 4, Appendix B.)

2.5.5 Hydraulic Drum Opener

Another remote method for opening drums is with remotely operated hydraulic devices. One such device uses hydraulic pressure to pierce through the wall of a drum. It consists of a manually operated pump which pressurizes soil through a length of hydraulic line. (See Figure 5, Appendix B.)

2.5.6 Pneumatic Devices

A pneumatic bung remover consists of a compressed air supply that is controlled by a heavyduty, two-stage regulator. A high-pressure air line of desired length delivers compressed air to a pneumatic drill, which is adapted to turn a bung fitting selected to fit the bung to be removed. An adjustable bracketing system has been designed to position and align the pneumatic drill over the bung. This bracketing system must be attached to the drum before the drill can be operated. Once the bung has been loosened, the bracketing system must be removed before the drum can be sampled. This remote bung opener does not permit the slow venting of the container, and therefore appropriate precautions must be taken. It also requires the container to be upright and relatively level. Bungs that are rusted shut cannot be removed with this device. (See Figure 6, Appendix B.)

2.6 REAGENTS

Reagents are not typically required for preserving drum samples. However, reagents are used for decontaminating sampling equipment. Decontamination solutions are specified in ERT SOP #2006, Sampling Equipment Decontamination.

2.7 PROCEDURES

2.7.1 Preparation

- 1. Determine the extent of the sampling effort, the sampling methods to be employed, and which equipment and supplies are needed.
- 2. Obtain necessary sampling and monitoring equipment.
- 3. Decontaminate or preclean equipment, and ensure that it is in working order.
- 4. Prepare scheduling and coordinate with staff, clients, and regulatory agency, if appropriate.
- 5. Perform a general site survey prior to site entry in accordance with the site-specific health and safety plan.
- Use stakes, flagging, or buoys to identify and mark all sampling locations. If required, the proposed locations may be adjusted based on site access, property boundaries, and surface obstructions.

2.7.2 Drum Inspection

Appropriate procedures for handling drums depend on the contents. Thus, prior to any handling, drums should be visually inspected to gain as much information as possible about their contents. Those in charge of inspections should be on the look-out for:

- drum condition, corrosion, rust, and leaking contents
- symbols, words, or other markings on the drum indicating hazards (i.e., explosive, radioactive, toxic, flammable)
- signs that the drum is under pressure
- shock sensitivity

Monitor around the drums with radiation instruments, organic vapor monitors (OVA) and combustible gas indicators (CGI).

Classify the drums into categories, for instance:

- radioactive
- leaking/deteriorating
- bulging
- drums containing lab packs
- explosive/shock sensitive

All personnel should assume that unmarked drums contain hazardous materials until their contents have been categorized, and that labels on drums may not accurately describe their contents.

If it is presumed that there are buried drums onsite, geophysical investigation techniques such as magnetometry, ground penetrating radar, and metal detection can be employed in an attempt to determine depth and location of the drums. See ERT SOP #2159, General Surface Geophysics.

2.7.3 Drum Staging

Prior to sampling, the drums should be staged to allow easy access. Ideally, the staging area should be located just far enough from the drum opening area to prevent a chain reaction if one drum should explode or catch fire when opened.

While staging, physically separate the drums into the following categories: those containing liquids, those containing solids, lab packs, or gas cylinders, and those which are empty. This is done because the strategy for sampling and handling drums/containers in each of these categories will be different. This may be achieved by:

- Visual inspection of the drum and its labels, codes, etc. Solids and sludges are typically disposed of in open-top drums. Closed-head drums with a bung opening generally contain liquid.
- Visual inspection of the contents of the drum during sampling followed by restaging, if needed.

Once a drum has been excavated and any immediate hazard has been eliminated by overpacking or transferring the drum's contents, affix a numbered tag to the drum and transfer it to a staging area. Color-coded tags, labels, or bands should be used to mark similar waste types. Record a description of each drum, its condition, any unusual markings, and the location where it was buried or stored, on a drum data sheet (Appendix A). This data sheet becomes the principal

recordkeeping tool for tracking the drum onsite.

Where there is good reason to suspect that some drums contain radioactive, explosive, and shock-sensitive materials, these drums should be staged in a separate, isolated area. Placement of explosives and shock-sensitive materials in diked and fenced areas will minimize the hazard and the adverse effects of any premature detonation of explosives.

Where space allows, the drum opening area should be physically separated from the drum removal and drum staging operations. Drums are moved from the staging area to the drum opening area one at a time using forklift trucks equipped with drum grabbers or a barrel grappler. In a large-scale drum handling operation, drums may be conveyed to the drum opening area using a roller conveyor.

2.7.4 Drum Opening

There are three basic techniques available for opening drums at hazardous waste sites:

- Manual opening with non-sparking bung wrenches,
- Drum deheading, and
- Remote drum puncturing or bung removal.

The choice of drum opening techniques and accessories depends on the number of drums to be opened, their waste contents, and physical condition. Remote drum opening equipment should always be considered in order to protect worker safety. Under OSHA 1910.120, manual drum opening with bung wrenches or deheaders should be performed only with structurally sound drums having contents that are known to be (1) not shock sensitive, (2) non-reactive, (3) non-explosive, and (4) non-flammable.

Manual Drum Opening with a Bung Wrench

Manual drum opening with bung wrenches (Figure 1, Appendix B) should not be performed unless the drums are structurally sound (no evidence of bulging or deformation) and their contents are known to be non-explosive. If opening the drum with bung wrenches is deemed reasonably cost-effective and safe, then follow these procedures to minimize the hazard:

- 1. Fully outfit field personnel with protective gear.
- 2. Position drum upright with the bung up, or, for drums with bungs on the side, lay the drum on its side with the bung plug up.
- Wrench the bung with a slow, steady pulling motion across the drum. If the length of the bung wrench handle provides inadequate leverage for unscrewing the plug, attach a "cheater bar" to the handle to improve leverage.

Manual Drum Opening with a Drum Deheader

Drums are opened with a drum deheader (Figure 2, Appendix B) by first positioning the cutting edge just inside the top chime and then tightening the adjustment screw so that the deheader is held against the side of the drum. Moving the handle of the deheader up and down while sliding the deheader along the chime will cut off the entire top. If the top chime of a drum has been damaged or badly dented, it may not be possible to cut off the entire top. Since there is always the possibility that a drum may be under pressure, make the initial cut very slowly to allow for the gradual release of any built-up pressure. A safer technique would be to use a remote method to puncture the drum prior to using the deheader.

Self-propelled drum openers which are either electrically or pneumatically driven can be used for quicker and more efficient deheading.

Manual Drum Opening with a Hand Pick, Pickaxe, or Spike

When a drum must be opened and neither a bung wrench nor a drum deheader is suitable, the drum can be opened for sampling by using a hand pick, pickaxe, or spike (Figure 3, Appendix B). Often the drum lid or head must be hit with a great deal of force in order to penetrate it. The potential for splash or spraying is greater than with other opening methods and, therefore, this method of drum opening is not recommended, particularly when opening drums containing liquids. spikes used have been modified by the addition of a circular splash plate near the penetrating end. This plate acts as a shield and reduces the amount of splash in the direction of the person using the spike. Even with this shield, good splash gear is essential.

Since drums cannot be opened slowly with these tools, spray from drums is common requiring appropriate safety measures. Decontaminate the pick or spike after each drum is opened to avoid cross-contamination and/or adverse chemical reaction from incompatible materials.

Remote Drum Opening with a Backhoe Spike

Remotely operated drum opening tools are the safest available means of drum opening. Remote drum opening is slow, but is much safer compared to manual methods of opening.

Drums should be "staged" or placed in rows with adequate aisle space to allow ease in backhoe maneuvering. Once staged, the drums can be quickly opened by punching a hole in the drum head or lid with the spike.

The spike (Figure 4, Appendix B) should be decontaminated after each drum is opened to prevent cross-contamination. Even though some splash or spray may occur when this method is used, the operator of the backhoe can be protected by mounting a large shatter-resistant shield in front of the operator's cage. This, combined with the required level of personal protection gear, should be sufficient to protect the operator. Additional respiratory protection can be afforded by providing the operator with an on-board airline system.

Remote Drum Opening with Hydraulic Devices

A piercing device with a metal point is attached to the end of a hydraulic line and is pushed into the drum by hydraulic pressure (Figure 5, Appendix B). The piercing device can be attached so that the sampling hole can be made on either the side or the head of the drum. Some of the metal piercers are hollow or tube-like so that they can be left in place if desired and serve as a permanent tap or sampling port. The piercer is designed to establish a tight seal after penetrating the container.

Remote Drum Opening with Pneumatic Devices

Pneumatically-operated devices utilizing compressed air have been designed to remove drum bungs remotely (Figure 6, Appendix B).

2.7.5 Drum Sampling

After the drum has been opened, monitor headspace gases using an explosimeter and organic vapor analyzer. In most cases it is impossible to observe the contents of these sealed or partially sealed vessels. Since some layering or stratification is likely in any solution left undisturbed over time, take a sample that represents the entire depth of the vessel.

When sampling a previously sealed vessel, check for the presence of a bottom sludge. This is easily accomplished by measuring the depth to the apparent bottom, then comparing it to the known interior depth.

Glass Thief Sampler

The most widely used implement for sampling is a glass tube commonly referred to as a glass thief (Figure 7, Appendix B). This tool is simple, cost effective, quick, and collects a sample without having to decontaminate. Glass thieves are typically 6mm to 16mm I.D. and 48 inches long.

Procedures for using a glass thief are as follows:

- 1. Remove cover from sample container.
- Insert glass tubing almost to the bottom of the drum or until a solid layer is encountered. About one foot of tubing should extend above the drum.
- 3. Allow the waste in the drum to reach its natural level in the tube.
- 4. Cap the top of the sampling tube with a tapered stopper or thumb, ensuring liquid does not come into contact with stopper.
- 5. Carefully remove the capped tube from the drum and insert the uncapped end in the sample container.
- Release stopper and allow the glass thief to drain until the container is approximately 2/3 full.
- 7. Remove tube from the sample container, break it into pieces and place the pieces in the drum.

- 8. Cap the sample container tightly and place prelabeled sample container in a carrier.
- Replace the bung or place plastic over the drum.
- Log all samples in the site logbook and on field data sheets.
- 11. Package samples and complete necessary paperwork.
- 12. Transport sample to decontamination zone to prepare it for transport to the analytical laboratory.

In many instances a drum containing waste material will have a sludge layer on the bottom. Slow insertion of the sample tube down into this layer and then a gradual withdrawal will allow the sludge to act as a bottom plug to maintain the fluid in the tube. The plug can be gently removed and placed into the sample container by the use of a stainless steel lab spoon.

It should be noted that in some instances disposal of the tube by breaking it into the drum may interfere with eventual plans for the removal of its contents. This practice should be cleared with the project officer or other disposal techniques evaluated.

COLIWASA Sampler

Some equipment is designed to collect a sample from the full depth of a drum and maintain it in the transfer tube until delivery to the sample bottle. These designs include primarily the Composite Liquid Waste Sampler (COLIWASA) and modifications thereof. The COLIWASA (Figure 8, Appendix B) is a much cited sampler designed to permit representative sampling of multiphase wastes from drums and other containerized wastes. One configuration consists of a 152 cm by 4 cm I.D. section of tubing with a neoprene stopper at one end attached by a rod running the length of the tube to a locking mechanism at the other end.

Manipulation of the locking mechanism opens and closes the sampler by raising and lowering the neoprene stopper. One model of the COLIWASA is shown in Appendix B; however, the design can be modified and/or adapted somewhat to meet the needs of the sampler.

The major drawbacks associated with using a COLIWASA concern decontamination and costs. The sampler is difficult, if not impossible to decontaminate in the field and its high cost in relation to alternative procedures (glass tubes) make it an impractical throwaway item. It still has applications, however, especially in instances where a true representation of a multiphase waste is absolutely necessary.

Follow these procedures for using the COLIWASA:

- Put the sampler in the open position by placing the stopper rod handle in the T-position and pushing the rod down until the handle sits against the sampler's locking block.
- 2. Slowly lower the sampler into the liquid waste. Lower the sampler at a rate that permits the levels of the liquid inside and outside the sampler tube to be about the same. If the level of the liquid in the sample tube is lower than that outside the sampler, the sampling rate is too fast and will result in a non-representative sample.
- 3. When the sampler stopper hits the bottom of the waste container, push the sampler tube downward against the stopper to close the sampler. Lock the sampler in the closed position by turning the T-handle until it is upright and one end rests tightly on the locking block.
- 4. Slowly withdraw the sample from the waste container with one hand while wiping the sampler tube with a disposable cloth or rag with the other hand.
- 5. Carefully discharge the sample into a suitable sample container by slowly pulling the lower end of the T-handle away from the locking block while the lower end of the sampler is positioned in a sample container.
- 6. Cap the sample container tightly and place prelabeled sample container in a carrier.
- Replace the bung or place plastic over the drum.
- 8. Log all samples in the site logbook and on field data sheets.

- 9. Package samples and complete necessary paperwork.
- 10. Transport sample to decontamination zone to prepare it for transport to the analytical laboratory.

2.8 CALCULATIONS

This section is not applicable to this SOP.

2.9 QUALITY ASSURANCE/ QUALITY CONTROL

The following general quality assurance procedures apply:

- Document all data on standard chain of custody forms, field data sheets, or within site logbooks.
- Operate all instrumentation in accordance with operating instructions as supplied by the manufacturer, unless otherwise specified in the work plan. Equipment checkout and calibration activities must occur prior to sampling/operation, and they must be documented.

2.10 DATA VALIDATION

This section is not applicable to this SOP.

2.11 HEALTH AND SAFETY

When working with potentially hazardous materials, follow U.S. EPA, OSHA, and specific health and safety procedures.

The opening of closed containers is one of the most hazardous site activities. Maximum efforts should be made to ensure the safety of the sampling team. Proper protective equipment and a general awareness of the possible dangers will minimize the risk inherent in sampling operations. Employing proper drum-opening techniques and equipment will also safeguard personnel. Use remote sampling equipment whenever feasible.

3.0 TANK SAMPLING: SOP #2010

3.1 SCOPE AND APPLICATION

The purpose of this Standard Operating Procedure (SOP) is to provide protocols for sampling tanks and other confined spaces from outside the vessel.

3.2 METHOD SUMMARY

The safe collection of a representative sample should be the criterion for selecting sample locations. A representative sample can be collected using techniques or equipment that are designed for obtaining liquids or sludges from various depths. The structure and characteristics of storage tanks present problems with collection of samples from more than one location; therefore, the selection of sampling devices is an important consideration.

Depending on the type of vessel and characteristics of the material to be sampled, one can choose a bailer, glass thief, bacon bomb sampler, sludge judge, COLIWASA, or subsurface grab sampler to collect the sample. For depths of less than 5-feet, a bailer, COLIWASA, or sludge judge can be used. A sludge judge, subsurface grab sampler, bailer, or bacon bomb sampler can be used for depths greater than 5-feet. A sludge judge or bacon bomb can be used to determine if the tank consists of various strata.

All sample locations should be surveyed for air quality prior to sampling. At no time should sampling continue with an LEL reading greater than 25%.

All personnel involved in tank sampling should be advised as to the hazards associated with working in unfavorable conditions.

3.3 SAMPLE PRESERVATION, CONTAINERS, HANDLING, AND STORAGE

Samples collected from tanks are considered waste samples and, as such, addition of preservatives is not required due to the potential reaction of the sample with the preservative. Samples should, however, be cooled to 4°C and protected from sunlight in order to minimize any potential reaction due to the light sensitivity of the sample.

Sample bottles for collection of waste liquids, sludges, or solids are typically wide-mouth amber jars with Teflon-lined screw caps. Actual volume required for analysis should be determined in conjunction with the laboratory performing the analysis.

Waste sample handling procedures should be as follows:

- Place sample container in two Ziploc plastic bags.
- 2. Place each bagged container in a 1-gallon covered can containing absorbent packing material. Place the lid on the can.
- Mark the sample identification number on the outside of the can.
- 4. Place the marked cans in a cooler, and fill remaining space with absorbent packing material.
- 5. Fill out a chain of custody form for each cooler, place it in plastic, and affix it to the inside lid of the cooler.
- 6. Secure and custody seal the lid of cooler.
- 7. Arrange for the transportation appropriate for the type of hazardous waste involved.

3.4 INTERFERENCES AND POTENTIAL PROBLEMS

Sampling a storage tank requires a great deal of manual dexterity, often requiring the sampler to climb to the top of the tank upon a narrow vertical or spiral stairway or ladder while wearing protective clothing and carrying sampling equipment.

Before climbing onto the vessel, perform a structural survey of the tank to ensure the sampler's

safety and accessibility prior to initiating field activities.

As in all opening of containers, take extreme caution to avoid ignition or combustion of volatile contents. All tools used must be constructed of a non-sparking material and electronic instruments must be intrinsically safe.

All sample locations should be surveyed for air quality prior to sampling. At no time should sampling continue with an LEL reading greater than 25%.

3.5 EQUIPMENT/APPARATUS

Storage tank materials include liquids, sludges, still bottoms, and solids of various structures. The type of sampling equipment chosen should be compatible with the waste. Samplers commonly used for tanks include: the bacon bomb sampler, the sludge judge, glass thief, bailer, COLIWASA, and subsurface grab sampler.

- sampling plan
- safety equipment
- tape measure
- weighted tape line or equivalent
- camera/film
- stainless steel bucket or bowl
- sample containers
- Ziploc plastic bags
- logbook
- labels
- field data sheets
- chain of custody forms
- flashlight (explosion proof)
- coolers
- ice
- decontamination supplies
- bacon bomb sampler
- sludge judge
- glass thief
- bailer
- COLIWASA
- subsurface grab sampler
- water/oil level indicator
- OVA (organic vapor analyzer or equivalent)
- explosimeter/oxygen meter
- high volume blower

3.6 REAGENTS

Reagents are not typically required for the preservation of waste samples. However, reagents will be utilized for decontamination of equipment. Decontamination solutions required are specified in ERT SOP #2006, Sampling Equipment Decontamination.

3.7 PROCEDURES

3.7.1 Preparation

- 1. Determine the extent of the sampling effort, the sampling methods to be employed, and which equipment and supplies are needed.
- 2. Obtain necessary sampling and monitoring equipment.
- 3. Decontaminate or preclean equipment, and ensure that it is in working order.
- 4. Prepare scheduling and coordinate with staff, clients, and regulatory agency, if appropriate.
- 5. Perform a general site survey prior to site entry in accordance with the site-specific health and safety plan.
- 6. Identify and mark all sampling locations.

3.7.2 Preliminary Inspection

- 1. Inspect the external structural characteristics of each tank and record in the site logbook. Potential sampling points should be evaluated for safety, accessibility, and sample quality.
- 2. Prior to opening a tank for internal inspection, the tank sampling team should:
 - Review safety procedures and emergency contingency plans with the Safety Officer,
 - Ensure that the tank is properly grounded,
 - Remove all sources of ignition from the immediate area.
- 3. Each tank should be mounted using appropriate means. Remove manway covers using non-sparking tools.

- 4. Collect air quality measurements for each potential sample location using an explosimeter/oxygen meter for a lower explosive limit (LEL/O₂) reading and an OVA/HNU for an organic vapor concentration. Both readings should be taken from the tank headspace, above the sampling port, and in the breathing zone.
- Prior to sampling, the tank headspace should be cleared of any toxic or explosive vapor concentration using a high volume blower. No work should start if LEL readings exceed 25%. At 10% LEL, work can continue but with extreme caution.

3.7.3 Sampling Procedures

- 1. Determine the depth of any and all liquid-solid interface, and depth of sludge using a weighted tape measure, probe line, sludge judge, or equivalent.
- 2. Collect liquid samples from 1-foot below the surface, from mid-depth of liquid, and from 1-foot above the bottom sludge layer. This can be accomplished with a subsurface grab sampler or bacon bomb. For liquids less than 5-feet in depth, use a glass thief or COLIWASA to collect the sample.

If sampling storage tanks, vacuum trucks, or process vessels, collect at least one sample from each compartment in the tank. Samples should always be collected through an opened hatch at the top of the tank. Valves near the bottom should not be used, because of their questionable or unknown integrity. If such a valve cannot be closed once opened, the entire tank contents may be lost to the ground surface. Also, individual strata cannot be sampled separately through a valve near the bottom.

- Compare the three samples for visual phase differences. If phase differences appear, systematic iterative sampling should be performed. By halving the distance between two discrete sampling points, one can determine the depth of the phase change.
- If another sampling port is available, sample as above to verify the phase information.

- Measure the outside diameter of the tank and determine the volume of wastes using the depth measurements. (See Appendix C for calculations.)
- 6. Sludges can be collected using a bacon bomb sampler, glass thief, or sludge judge.
- 7. Record all information on the sample data sheet or site logbook. Label the container with the appropriate sample tag.
- 8. Decontaminate sampling equipment as per ERT SOP #2006, Sampling Equipment Decontamination.

3.7.4 Sampling Devices

Bacon Bomb Sampler

The bacon bomb sampler (Figure 9, Appendix B) is designed to collect material from various levels within a storage tank. It consists of a cylindrical body, usually made of chrome-plated brass and bronze with an internal tapered plunger that acts as a valve to admit the sample. A line attached to the top of the plunger opens and closes the valve. A line is attached to the removable top cover which has a locking mechanism to keep the plunger closed after sampling.

- 1. Attach the sample line and the plunger line to the sampler.
- 2. Measure and then mark the sampling line at the desired depth.
- 3. Gradually lower the bacon bomb sampler by the sample line until the desired level is reached.
- 4. When the desired level is reached, pull up on the plunger line and allow the sampler to fill before releasing the plunger line to seal off the sampler.
- Retrieve the sampler by the sample line. Be careful not to pull up on the plunger line and thereby prevent accidental opening of the bottom valve.
- 6. Rinse or wipe off the exterior of the sampler body.

- 7. Position the sampler over the sample container and release its contents by pulling up on the plunger line.
- 8. Cap the sample container tightly and place prelabeled sample container in a carrier.
- 9. Replace the bung or place plastic over the tank.
- 10. Log all samples in the site logbook and on field data sheets and label all samples.
- 11. Package samples and complete necessary paperwork.
- 12. Transport sample to decontamination zone to prepare it for transport to the analytical laboratory.

Sludge Judge

A sludge judge (Figure 10, Appendix B) is used for obtaining an accurate reading of solids which can settle, in any liquid, to any depth. The sampler consists of 3/4-inch plastic pipe in 5-foot sections, marked at 1-foot increments, with screw-style fittings. The top section includes a nylon line for raising the sampler.

- Lower the sludge judge to the bottom of the tank.
- When the bottom has been reached, and the pipe has filled to surface level, tug slightly on the rope as you begin to raise the unit. This will seat the check valve, trapping the column of material.
- 3. When the unit has been raised clear of the tank liquid, the amount of sludge in the sample can be read using the 1-foot increments marked on the pipe sections.
- 4. By touching the pin extending from the bottom section against a hard surface, the material is released from the unit.
- 5. Cap the sample container tightly and place prelabeled sample container in a carrier.
- 6. Replace the bung or place plastic over the tank.
- 7. Log all samples in the site logbook and on field data sheets and label all samples.

- 8. Package samples and complete necessary paperwork.
- 9. Transport sample to decontamination zone to prepare it for transport to the analytical laboratory.

Subsurface Grab Sampler

Subsurface grab samplers (Figure 11, Appendix B) are designed to collect samples of liquids at various depths. The sampler is usually constructed of aluminum or stainless steel tubing with a polypropylene or Teflon head that attaches to a 1-liter sample container.

- Screw the sample bottle onto the sampling head.
- 2. Lower the sampler to the desired depth.
- 3. Pull the ring at the top which opens the spring-loaded plunger in the head assembly.
- 4. When the bottle is full, release the ring, lift sampler, and remove sample bottle.
- 5. Cap the sample container tightly and place prelabeled sample container in a carrier.
- 6. Replace the bung or place plastic over the tank.
- Log all samples in the site logbook and on field data sheets and label all samples.
- 8. Package samples and complete necessary paperwork.
- 9. Transport sample to decontamination zone to prepare it for transport to the analytical laboratory.

Glass Thief

The most widely used implement for sampling is a glass tube commonly referred to as a glass thief (Figure 7, Appendix B). This tool is simple, cost effective, quick, and collects a sample without having to decontaminate. Glass thieves are typically 6mm to 16mm I.D. and 48 inches long.

- 1. Remove cover from sample container.
- 2. Insert glass tubing almost to the bottom of the

tank or until a solid layer is encountered. About 1 foot of tubing should extend above the tank.

- Allow the waste in the tank to reach its natural level in the tube.
- 4. Cap the top of the sampling tube with a tapered stopper or thumb, ensuring liquid does not come into contact with stopper.
- 5. Carefully remove the capped tube from the tank and insert the uncapped end in the sample container. Do not spill liquid on the outside of the sample container.
- 6. Release stopper and allow the glass thief to drain until the container is approximately 2/3 full.
- 7. Remove tube from the sample container, break it into pieces and place the pieces in the tank.
- 8. Cap the sample container tightly and place prelabeled sample container in a carrier.
- 9. Replace the bung or place plastic over the tank.
- 10. Log all samples in the site logbook and on field data sheets and label all samples.
- 11. Package samples and complete necessary paperwork.
- 12. Transport sample to decontamination zone to prepare it for transport to the analytical laboratory.

In many instances a tank containing waste material will have a sludge layer on the bottom. Slow insertion of the sample tube down into this layer and then a gradual withdrawal will allow the sludge to act as a bottom plug to maintain the fluid in the tube. The plug can be gently removed and placed into the sample container by the use of a stainless steel lab spoon.

Bailer

The positive-displacement volatile sampling bailer (manufactured by GPI or equivalent) (Figure 12, Appendix B) is perhaps the most appropriate for collecting water samples for volatile analysis. Other bailer types (messenger, bottom fill, etc.) are less

desirable, but may be mandated by cost and site conditions. Generally, bailers can provide an acceptable sample, providing that the sampling personnel use extra care in the collection process.

- Make sure clean plastic sheeting surrounds the tank,
- 2. Attach a line to the bailer.
- 3. Lower the bailer slowly and gently into the tank so as not to splash the bailer into the tank contents.
- 4. Allow the bailer to fill completely and retrieve the bailer from the tank.
- 5. Begin slowly pouring from the bailer.
- Cap the sample container tightly and place prelabeled sample container in a carrier.
- 7. Replace the bung or place plastic over the tank.
- 8. Log all samples in the site logbook and on field data sheets and label all samples.
- 9. Package samples and complete necessary paperwork.
- 10. Transport sample to decontamination zone to prepare it for transport to an analytical laboratory.

COLIWASA

Some equipment is designed to collect a sample from the full depth of a tank and maintain it in the transfer tube until delivery to the sample bottle. These designs include primarily the Composite Liquid Waste Sampler (COLIWASA) (Figure 8. Appendix B) and modifications thereof. COLIWASA is a much cited sampler designed to permit representative sampling of multiphase wastes from tanks and other containerized wastes. One configuration consists of a 152 cm by 4 cm I.D. section of tubing with a neoprene stopper at one end attached by a rod running the length of the tube to a locking mechanism at the other end. Manipulation of the locking mechanism opens and closes the sampler by raising and lowering the neoprene stopper.

The major drawbacks associated with using a COLIWASA concern decontamination and costs. The sampler is difficult if not impossible to decontaminate in the field and its high cost in relation to alternative procedures (glass tubes) make it an impractical throwaway item. It still has applications, however, especially in instances where a true representation of a multiphase waste is absolutely necessary.

- 1. Put the sampler in the open position by placing the stopper rod handle in the T-position and pushing the rod down until the handle sits against the sampler's locking block.
- 2. Slowly lower the sampler into the liquid waste. Lower the sampler at a rate that permits the levels of the liquid inside and outside the sampler tube to be about the same. If the level of the liquid in the sample tube is lower than that outside the sampler, the sampling rate is too fast and will result in a non-representative sample.
- 3. When the sampler stopper hits the bottom of the waste container, push the sampler tube downward against the stopper to close the sampler. Lock the sampler in the closed position by turning the T-handle until it is upright and one end rests tightly on the locking block.
- 4. Slowly withdraw the sample from the waste container with one hand while wiping the sampler tube with a disposable cloth or rag with the other hand.
- 5. Carefully discharge the sample into a suitable sample container by slowly pulling the lower end of the T-handle away from the locking block while the lower end of the sampler is positioned in a sample container.
- 6. Cap the sample container tightly and place prelabeled sample container in a carrier.
- 7. Replace the bung or place plastic over the tank.
- 8. Log all samples in the site logbook and on field data sheets and label all samples.
- 9. Package samples and complete necessary paperwork.
- 10. Transport sample to decontamination zone to

prepare it for transport to the analytical laboratory.

3.8 CALCULATIONS

Refer to Appendix C for calculations to determine tank volumes.

3.9 QUALITY ASSURANCE/ QUALITY CONTROL

There are no specific quality assurance activities which apply to the implementation of these procedures. However, the following general QA procedures apply:

- All data must be documented on field data sheets or within site logbooks.
- All instrumentation must be operated in accordance with operating instructions as supplied by the manufacturer, unless otherwise specified in the work plan. Equipment checkout and calibration activities must occur prior to sampling/operation and they must be documented.

3.10 DATA VALIDATION

This section is not applicable to this SOP.

3.11 HEALTH AND SAFETY

When working with potentially hazardous materials, follow U.S. EPA, OSHA, and specific health and safety procedures. More specifically, the hazards associated with tank sampling may cause bodily injury, illness, or death to the worker. Failure to recognize potential hazards of waste containers is the cause of most accidents. It should be assumed that the most unfavorable conditions exist, and that the danger of explosion and poisoning will be present. Hazards specific to tank sampling are:

- Hazardous atmospheres can be flammable, toxic, asphyxiating, or corrosive.
- If activating electrical or mechanical equipment would cause injury, each piece of equipment should be manually isolated

- to prevent inadvertent activation while workers are occupied.
- Communication is of utmost importance between the sampling worker and the standby person to prevent distress or injury going unnoticed. The Illuminating Engineers Society Lighting Handbook requires suitable illumination to provide sufficient visibility for work.
- Noise reverberation may disrupt verbal communication with standby personnel.

- Tank vibration may affect multiple body parts and organs of the sampler depending on vibration characteristics.
- General hazards include falling scaffolding, surface residues (which could cause electrical shock, incompatible material reactions, slips, or falls), and structural objects (including baffles/trays in horizontal/vertical tanks, and overhead structures).

4.0 CHIP, WIPE, AND SWEEP SAMPLING: SOP #2011

4.1 SCOPE AND APPLICATION

This Standard Operating Procedure (SOP) outlines the recommended protocol and equipment for collection of representative chip, wipe, and sweep samples to monitor potential surficial contamination.

This method of sampling is appropriate for surfaces contaminated with non-volatile species of analytes (i.e., PCB, PCDD, PCDF, metals, cyanide, etc.) Detection limits are analyte specific. Sample size should be determined based upon the detection limit desired and the amount of sample requested by the analytical laboratory. Typical sample area is 1 square foot. However, based upon sampling location, the area may need modification due to area configuration.

4.2 METHOD SUMMARY

Since surface situations vary widely, no universal sampling method can be recommended. Rather, the method and implements used must be tailored to suit a specific sampling site. The sampling location should be selected based upon the potential for contamination as a result of manufacturing processes or personnel practices.

Chip sampling is appropriate for porous surfaces and is generally accomplished with either a hammer and chisel, or an electric hammer. The sampling device should be laboratory cleaned and wrapped in clean, autoclaved aluminum foil until ready for use. To collect the sample, a measured and marked off area is chipped both horizontally and vertically to an even depth of 1/8 inch. The sample is then transferred to the proper sample container.

Wipe samples are collected from smooth surfaces to indicate surficial contamination; a sample location is measured and marked off. Sampling personnel wear a new pair of surgical gloves to open a sterile gauze pad, and then soak it with solvent. The solvent used is dependent on the surface being sampled. This pad is then stroked firmly over the sample surface, first vertically, then horizontally, to ensure complete coverage. The pad is then transferred to the sample container.

Sweep sampling is an effective method for the collection of dust or residue on porous or non-porous surfaces. To collect such a sample, an appropriate area is measured off. Then, while wearing a new pair of disposable surgical gloves, sampling personnel use a dedicated brush to sweep material into a dedicated dust pan. The sample is then transferred to the proper sample container.

Samples collected by all three methods are sent to the laboratory for analysis.

4.3 SAMPLE PRESERVATION, CONTAINERS, HANDLING, AND STORAGE

Samples should be stored out of direct sunlight to reduce photodegredation and shipped on ice (4°C) to the laboratory performing the analysis. Appropriately-sized, laboratory-cleaned, glass sample jars should be used for sample collection. The amount of sample required is determined in concert with the analytical laboratory.

4.4 INTERFERENCES AND POTENTIAL PROBLEMS

This method has few significant interferences or problems. Typical problems result from rough porous surfaces which may be difficult to wipe, chip, or sweep.

4.5 EQUIPMENT/APPARATUS

- lab-clean sample containers of proper size and composition
- field and travel blanks
- site logbook
- sample analysis request forms
- chain of custody forms
- custody seals
- sample labels
- disposable surgical gloves
- sterile wrapped gauze pad (3 in. x 3 in.)
- appropriate pesticide (HPLC) grade solvent

- medium-sized, laboratory-cleaned paint brush
- medium-sized, laboratory-cleaned chisel
- autoclaved aluminum foil
- camera
- hexane (pesticide/HPLC grade)
- iso-octane
- distilled/deionized water

4.6 REAGENTS

Reagents are not required for preservation of chip, wipe or sweep samples. However, reagents will be utilized for decontamination of sampling equipment. Decontamination solutions are specified in ERT SOP #2006, Sampling Equipment Decontamination.

4.7 PROCEDURES

4.7.1 Preparation

- 1. Determine the extent of the sampling effort, the sampling methods to be employed, and the types and amounts of equipment and supplies needed.
- 2. Obtain necessary sampling and monitoring equipment.
- 3. Decontaminate or preclean equipment, and ensure that it is in working order.
- 4. Prepare scheduling and coordinate with staff, clients, and regulatory agencies, if appropriate.
- 5. Perform a general site survey prior to site entry in accordance with the site-specific health and safety plan.
- Mark all sampling locations. If required, the proposed locations may be adjusted based on site access, property boundaries, and surface obstructions.

4.7.2 Chip Sample Collection

Sampling of porous surfaces is generally accomplished by using a chisel and hammer or electric hammer. The sampling device should be laboratory cleaned or field decontaminated as per ERT SOP# 2006, Sampling Equipment Decontamination. It is then wrapped in cleaned,

autoclaved aluminum foil. The sampler should remain in this wrapping until it is needed. Each sampling device should be used for only one sample.

- 1. Choose appropriate sampling points; measure off the designated area and photo document.
- 2. To facilitate later calculations, record surface area to be chipped.
- 3. Don a new pair of disposable surgical gloves.
- 4. Open a laboratory-cleaned chisel or equivalent sampling device.
- 5. Chip the sample area horizontally, then vertically to an even depth of approximately 1/8 inch.
- 6. Place the sample in an appropriately-prepared sample container with a Teflon-lined cap.
- 7. Cap the sample container, attach the label and custody seal, and place in a double plastic bag. Record all pertinent data in the site logbook. Complete the sampling analysis request form and chain of custody form before taking the next sample.
- Store samples out of direct sunlight and cool to 4°C.
- 9. Leave contaminated sampling device in the sampled material, unless decontamination is practical.
- 10. Follow proper decontamination procedures, then deliver sample(s) to the laboratory for analysis.

4.7.3 Wipe Sample Collection

Wipe sampling is accomplished by using a sterile gauze pad, adding a solvent in which the contaminant is most soluble, then wiping a predetermined, pre-measured area. The sample is packaged in an amber jar to prevent photodegradation and packed in coolers for shipment to the lab. Each gauze pad is used for only one wipe sample.

1. Choose appropriate sampling points; measure off the designated area and photo document.

- 2. To facilitate later calculations, record surface area to be wiped.
- 3. Don a new pair of disposable surgical gloves.
- 4. Open new sterile package of gauze pad.
- 5. Soak the pad with the appropriate solvent.
- 6. Wipe the marked surface area using firm strokes. Wipe vertically, then horizontally to ensure complete surface coverage.
- 7. Place the gauze pad in an appropriately prepared sample container with a Teflon-lined cap.
- 8. Cap the sample container, attach the label and custody seal, and place in a double plastic bag. Record all pertinent data in the site logbook. Complete the sampling analysis request form and chain of custody form before taking the next sample.
- Store samples out of direct sunlight and cool to 4°C.
- 10. Follow proper decontamination procedures, then deliver sample(s) to the laboratory for analysis.

4.7.4 Sweep Sample Collection

Sweep sampling is appropriate for bulk contamination. This procedure utilizes a dedicated, hand-held sweeper brush to acquire a sample from a pre-measured area.

- Choose appropriate sampling points; measure off the designated area and photo document.
- 2. To facilitate later calculations, record the surface area to be swept.
- 3. Don a new pair of disposable surgical gloves.
- 4. Sweep the measured area using a dedicated brush; collect the sample in a dedicated dust pan.
- 5. Transfer sample from dust pan to sample container.
- 6. Cap the sample container, attach the label and

custody seal, and place in a double plastic bag. Record all pertinent data in the site logbook. Complete the sampling analysis request form and chain of custody form before taking the next sample.

- Store samples out of direct sunlight and cool to 4°C.
- 8. Leave contaminated sampling device in the sample material, unless decontamination is practical.
- Follow proper decontamination procedures, then deliver sample(s) to the laboratory for analysis.

4.8 CALCULATIONS

Results are usually provided in mg/g, $\mu g/g$ or another appropriate weight per unit weight measurement. Results may also be given in a mass per unit area.

4.9 QUALITY ASSURANCE/ QUALITY CONTROL

The following general quality assurance procedures apply:

- All data must be documented on standard chain of custody forms, field data sheets or within the site logbook.
- All instrumentation must be operated in accordance with operating instructions as supplied by the manufacturer, unless otherwise specified in the work plan. Equipment checkout and calibration activities must occur prior to sampling/operation, and they must be documented.

The following specific quality assurance activities apply to wipe samples:

 A blank should be collected for each sampling event. This consists of a sterile gauze pad, wet with the appropriate solvent, and placed in a prepared sample container. The blank will help identify potential introduction of contaminants via the sampling methods, the pad, solvent or sample container.

 Spiked wipe samples can also be collected to better assess the data being generated. These are prepared by spiking a piece of foil of known area with a standard of the analyte of choice. The solvent containing the standard is allowed to evaporate, and the foil is wiped in a manner identical to the other wipe samples.

Specific quality assurance activities for chip and sweep samples should be determined on a site-specific basis.

4.10 DATA VALIDATION

Review the quality control samples and use the data to qualify the environmental results.

4.11 HEALTH AND SAFETY

When working with potentially hazardous materials, follow U.S. EPA, OSHA and specific health and safety procedures.

5.0 WASTE PILE SAMPLING: SOP #2017

5.1 SCOPE AND APPLICATION

The objective of this Standard Operating Procedure (SOP) is to outline the equipment and methods used in collecting representative samples from waste piles, sludges or other solid or liquid waste mixed with soil.

5.2 METHOD SUMMARY

Stainless steel shovels or scoops should be used to clear away surface material before samples are collected. For samples at depth, a decontaminated auger may be required to advance the hole, then another decontaminated auger used for sample collection. For a sample core, thin-wall tube samplers or grain samplers may be used. Near surfaces samples can be collected with a clean stainless steel spoon or trowel.

All samples collected, except those for volatile organic analysis, should be placed into a Teflon-lined or stainless steel pail and mixed thoroughly before being transferred to an appropriate sample container.

5.3 SAMPLE PRESERVATION, CONTAINERS, HANDLING, AND STORAGE

Chemical preservation of solids is generally not recommended. Refrigeration to 4°C is usually the best approach, supplemented by a minimal holding time.

Wide mouth glass containers with Teflon-lined caps are typically used for waste pile samples. Sample volume required is a function of the analytical requirements and should be specified in the work plan.

5.4 INTERFERENCES AND POTENTIAL PROBLEMS

There are several variables involved in waste sampling, including shape and size of piles, compactness, and structure of the waste material. Shape and size of waste material or waste piles vary greatly in areal extent and height. Since state and federal regulations often require a specified number of samples per volume of waste, size and shape must be used to calculate volume and to plan for the correct number of samples. Shape must also be accounted for when planning physical access to the sampling point and when selecting the appropriate equipment to successfully collect the sample at that location.

Material to be sampled may be homogeneous or heterogeneous. Homogeneous material resulting from known situations may not require an extensive sampling protocol. Heterogeneous and unknown wastes require more extensive sampling and analysis to ensure the different components are being represented.

The term "representative sample" is commonly used to denote a sample that has the properties and composition of the population from which it was collected, in the same proportions as found in the population. This can be misleading unless one is dealing with a homogenous waste from which one sample can represent the whole population.

The usual options for obtaining the most "representative sample" from waste piles are simple or stratified random sampling. Simple random sampling is the method of choice unless (1) there are known distinct strata; (2) one wants to prove or disprove that there are distinct strata; or (3) one is limited in the number of samples and desires to minimize the size of a "hot spot" that could go unsampled. If any of these conditions exist, stratified random sampling would be the better strategy.

This strategy, however, can be employed only if all points within the pile can be accessed. In such cases, the pile should be divided into a three-dimensional grid system; the grid sections assigned numbers; and the sampling points chosen using random-number tables or random-number generators. The only exceptions to this are situations in which representative samples cannot be collected safely or where the investigative team is trying to determine worst-case conditions.

If sampling is limited to certain portions of the pile, a statistically based sample will be representative only of that portion, unless the waste is homogenous.

5.5 EQUIPMENT/APPARATUS

Waste pile solids include powdered, granular, or block materials of various sizes, shapes, structure, and compactness. The type of sampler chosen should be compatible with the waste. Samplers commonly used for waste piles include: stainless steel scoops, shovels, trowels, spoons, and stainless steel hand augers, sampling triers, and grain samplers.

Waste pile sampling equipment check list:

- sampling plan
- maps/plot plan
- safety equipment, as specified in the health and safety plan
- compass
- tape measure
- survey stakes or flags
- camera and film
- stainless steel, plastic, or other appropriate homogenization bucket or bowl
- 1-quart mason jars w/Teflon liners
- Ziploc plastic bags
- logbook
- labels
- chain of custody forms and seals
- field data sheets
- cooler(s)
- ice
- decontamination supplies/equipment
- canvas or plastic sheet
- spade or shovel
- spatula
- scoop
- plastic or stainless steel spoons
- trowel
- continuous flight (screw) auger
- bucket auger
- post hole auger
- extension rods
- T-handle
- thin-wall tube sampler
- sampling trier
- grain sampler

5.6 REAGENTS

No chemical reagents are used for the preservation of waste pile samples; however, decontamination solutions may be required. If decontamination of equipment is required, refer to ERT Standard Operating Procedure (SOP) #2006, Sampling Equipment Decontamination, and the site-specific work plan.

5.7 PROCEDURES

5.7.1 Preparation

- 1. Determine the extent of the sampling effort, the sampling methods to be employed, and which equipment and supplies are required.
- 2. Obtain necessary sampling and monitoring equipment.
- 3. Decontaminate or preclean equipment, and ensure that it is in working order.
- 4. Prepare schedules, and coordinate with staff, client, and regulatory agencies, if appropriate.
- 5. Perform a general site survey prior to site entry in accordance with the site-specific health and safety plan.
- 6. Use stakes or flagging to identify and mark all sampling locations. Specific site factors, including extent and nature of contaminants, should be considered when selecting sample locations. If required, the proposed locations may be adjusted based on site access, property boundaries, and surface obstructions.

5.7.2 Sample Collection

SAMPLING WITH SHOVELS AND SCOOPS

Collection of samples from surface portions of the pile can be accomplished with tools such as spades, shovels, and scoops. Surface material can be removed to the required depth with this equipment, then a stainless steel or plastic scoop can be used to collect the sample.

Accurate, representative samples can be collected with this procedure depending on the care and

precision demonstrated by sample team members. Use of a flat, pointed mason trowel to cut a block of the desired material can be helpful when undisturbed profiles are required. A stainless steel scoop, lab spoon, or plastic spoon will suffice in most other applications. Care should be exercised to avoid the use of devices plated with chrome or other materials. Plating is particularly common with implements such as garden trowels.

Use the following procedure to collect surface samples:

- Carefully remove the top layer of material to the desired sample depth with a precleaned spade.
- 2. Using a precleaned stainless steel scoop, plastic spoon, or trowel, remove and discard a thin layer of material from the area which came in contact with the spade.
- If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, plastic lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container. and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval into the homogenization container and mix thoroughly. compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.

SAMPLING WITH AUGERS AND THIN-WALL TUBE SAMPLERS

This system consists of an auger, a series of extensions, a "T" handle, and a thin-wall tube sampler (Figure 13, Appendix B). The auger is used to bore a hole to a desired sampling depth, and is then withdrawn. The sample may be collected directly from the auger. If a core sample is to be collected, the auger tip is then replaced with a thin-wall tube sampler. The system is then lowered down the borehole, and driven into the pile at the completion depth. The system is withdrawn

and the core collected from the thin-wall tube sampler.

Several augers are available. These include: bucket, continuous flight (screw), and post hole augers. Bucket augers are better for direct sample recovery since they provide a large volume of sample in a short time. When continuous flight augers are used, the sample can be collected directly from the flights, which are usually at 5-foot intervals. The continuous flight augers are satisfactory for use when a composite of the complete waste pile column is desired. Post hole augers have limited utility for sample collection as they are designed to cut through fibrous, rooted, swampy areas.

Use the following procedure for collecting waste pile samples with the auger:

- 1. Attach the auger bit to a drill rod extension, and attach the "T" handle to the drill rod.
- Clear the area to be sampled of any surface debris. It may be advisable to remove the first 3 to 6 inches of surface material for an area approximately 6 inches in radius around the drilling location.
- 3. Begin augering, periodically removing and depositing accumulated materials onto a plastic sheet spread near the hole. This prevents accidental brushing of loose material back down the borehole when removing the auger or adding drill rods. It also facilitates refilling the hole, and avoids possible contamination of the surrounding area.
- 4. After reaching the desired depth, slowly and carefully remove the auger from boring. When sampling directly from the auger, collect sample after the auger is removed from boring and proceed to Step 10.
- 5. Remove auger tip from drill rods and replace with a precleaned thin-wall tube sampler. Install proper cutting tip.
- 6. Carefully lower the tube sampler down the borehole. Gradually force the tube sampler into the pile. Care should be taken to avoid scraping the borehole sides. Avoid hammering the drill rods to facilitate coring as the vibrations may cause the boring walls to collapse.

- 7. Remove the tube sampler, and unscrew the drill rods.
- 8. Remove the cutting tip and the core from device.
- 9. Discard the top of the core (approximately 1-inch), as this represents material collected before penetration of the layer of concern. Place the remaining core into the appropriate labeled sample container. Sample homogenization is not required.
- 10. If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, plastic lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval into the homogenization container and mix thoroughly. compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.
- 11. If another sample is to be collected in the same hole, but at a greater depth, reattach the auger bit to the drill and assembly, and follow steps 3 through 11, making sure to decontaminate the auger and tube sampler between samples.

SAMPLING WITH A TRIER

This system consists of a trier and a "T" handle. The auger is driven into the waste pile and used to extract a core sample from the appropriate depth.

Use the following procedure to collect waste pile samples with a sampling trier:

1. Insert the trier (Figure 14, Appendix B) into the material to be sampled at a 0° to 45° angle from horizontal. This orientation minimizes spillage of the sample. Extraction of the samples might require tilting of the sample containers.

- Rotate the trier once or twice to cut a core of material.
- Slowly withdraw the trier, making sure that the slot is facing upward.
- If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, plastic lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container, and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are being collected, place samples from the other sampling intervals into the homogenization container and mix thoroughly. compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.

SAMPLING WITH A GRAIN SAMPLER

The grain sampler (Figure 15, Appendix B) is used for sampling powdered or granular wastes or materials in bags, fiberdrums, sacks, similar containers or piles. This sampler is most useful when the solids are no greater than 0.6 cm (1/4 inch) in diameter.

This sampler consists of two slotted telescoping brass or stainless steel tubes. The outer tube has a conical, pointed tip at one end that permits the sampler to penetrate the material being sampled. The sampler is opened and closed by rotating the inner tube. Grain samplers are generally 61 to 100 cm (24 to 40 inch) long by 1.27 to 2.54 cm (1/2 to 1 inch) in diameter and are commercially available at laboratory supply houses.

Use the following procedures to collect waste pile samples with a grain sampler:

1. With the sampler in the closed position, insert it into the granular or powdered material or waste being sampled from a point near a top edge or corner, through the center, and to a point diagonally opposite the point of entry.

- 2. Rotate the sampler inner tube into the open position.
- 3. Wiggle the sampler a few times to allow material to enter the open slots.
- 4. With the sampler in the closed position, withdraw it from the material being sampled.
- 5. Place the sampler in a horizontal position with the slots facing upward.
- Rotate the outer tube and slide it away from the inner tube.
- 7. If volatile organic analysis is to be performed, transfer the sample into an appropriate, labeled sample container with a stainless steel lab spoon, plastic lab spoon, or equivalent and secure the cap tightly. Place the remainder of the sample into a stainless steel, plastic, or other appropriate homogenization container. and mix thoroughly to obtain a homogenous sample representative of the entire sampling interval. Then, either place the sample into appropriate, labeled containers and secure the caps tightly; or, if composite samples are to be collected, place a sample from another sampling interval into the homogenization container and mix thoroughly. compositing is complete, place the sample into appropriate, labeled containers and secure the caps tightly.

5.8 CALCULATIONS

This section is not applicable to this SOP.

5.9 QUALITY ASSURANCE/ QUALITY CONTROL

There are no specific quality assurance activities which apply to the implementation of these procedures. However, the following QA procedures apply:

- All data must be documented on field data sheets or within site logbooks.
- All instrumentation must be operated in accordance with operating instructions as supplied by the manufacturer, unless otherwise specified in the work plan. Equipment checkout and calibration activities must occur prior to sampling/operation, and they must be documented.

5.10 DATA VALIDATION

This section is not applicable to this SOP.

5.11 HEALTH AND SAFETY

When working with potentially hazardous materials, follow U.S. EPA, OSHA and specific health and safety procedures.

.

APPENDIX A

Drum Data Sheet Form

Drum Data Sheet Form

SOP #2009

Drum ID#:	Date Sampled:
Estimated Liquid Quantity:	Time:
Grid Location:	•
Staging Location:	_
Sampler's Name:	-
Drum Condition:	-
Sampling Device:	-
Physical Appearance of the Drum/Bulk Contents:	<u> </u>
Odor:	
Color:	
рН:	% Liquid:
Laboratory Analytical Data:	Date of Analysis:
Compatibility:	
Hazard:	
Hazard:	
Waste ID:	
Waste ID:	
Waste ID: Treatment Disposal Recommendations:	

^{*} Area of site where drum was originally located.

Based on di Napoli, 1982. Table originally printed in the Proceedings of the National Conference on Management of Uncontrolled Hazardous Waste Sites, 1982. Available from Hazardous Materials Control Research Institute, 9300 Columbia Blvd., Silver Spring, MD 20910.

APPENDIX B

Figures

Figure 1: Universal Bung Wrench
SOP #2009

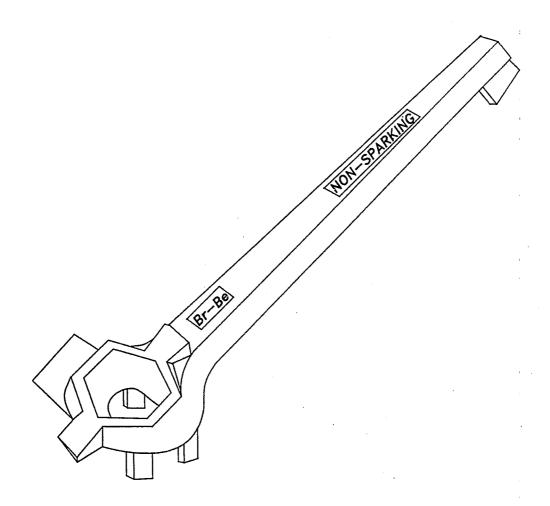


Figure 2: Drum Deheader SOP #2009

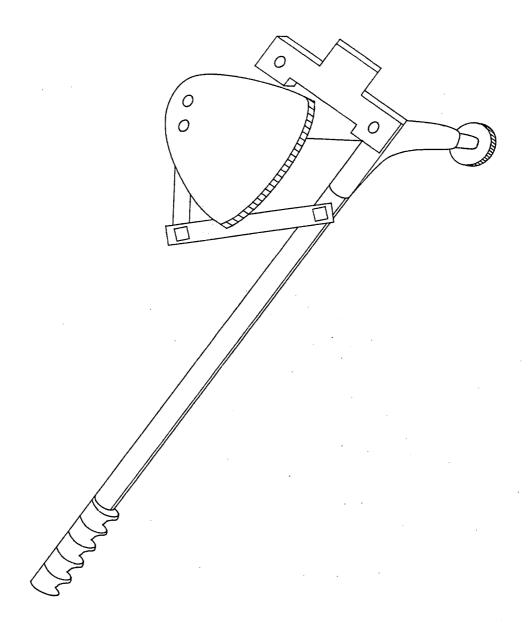


Figure 3: Hand Pick, Pickaxe, and Hand Spike SOP #2009

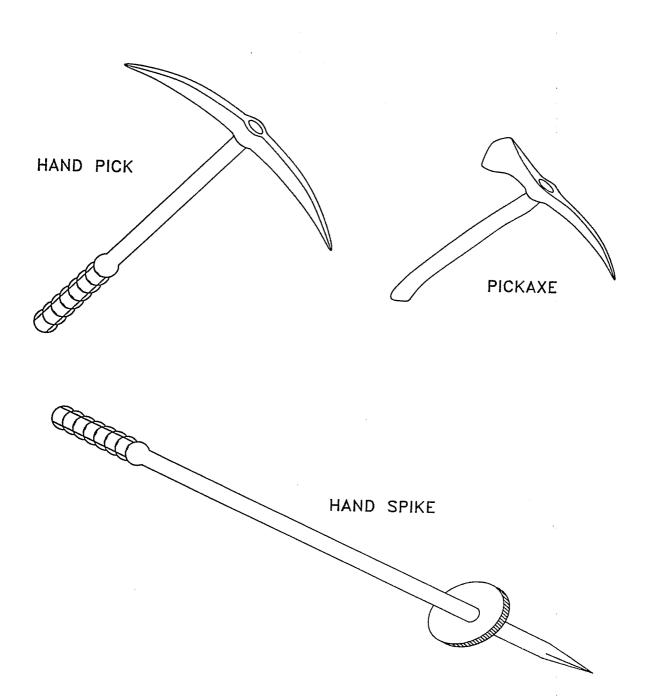


Figure 4: Backhoe Spike SOP #2009

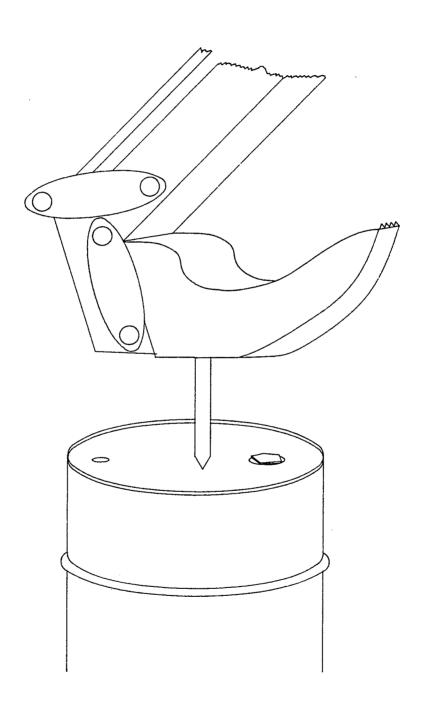


Figure 5: Hydraulic Drum Opener SOP #2009



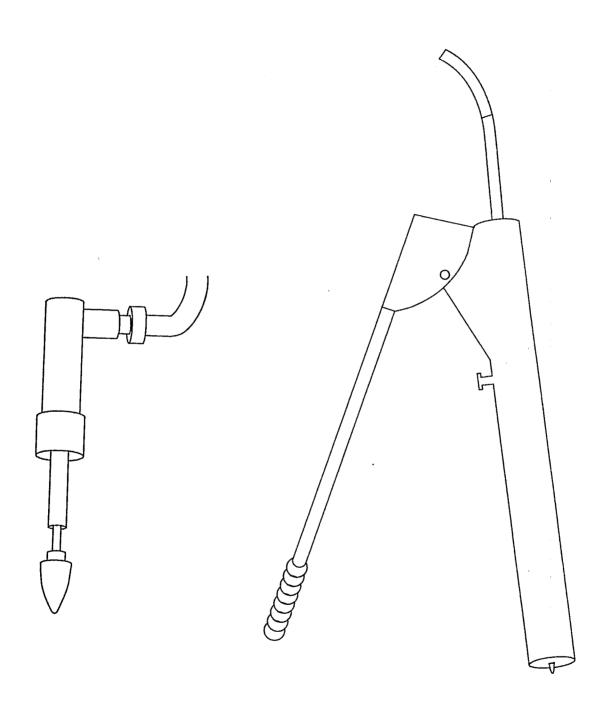



Figure 6: Pneumatic Bung Remover SOP #2009

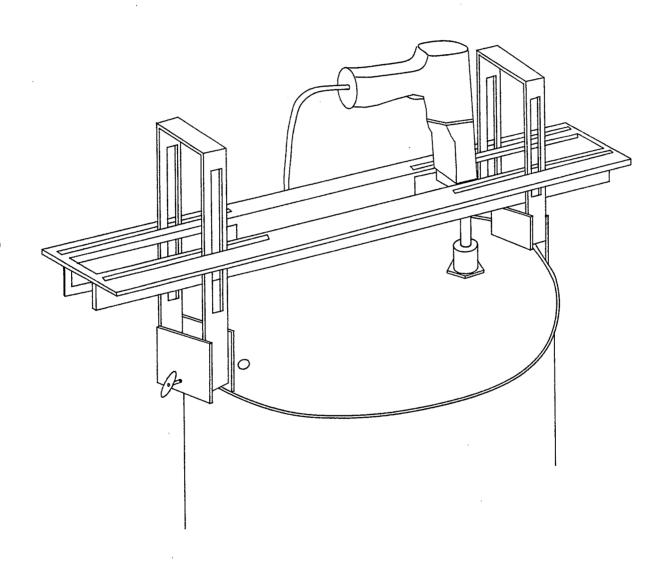


SOP# 2009

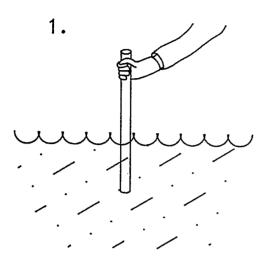


Insert open tube (thief) sampler in containerized liquid.

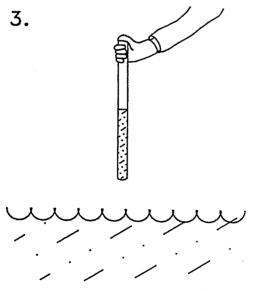

Remove open tube (thief) sampler from containerized liquid.

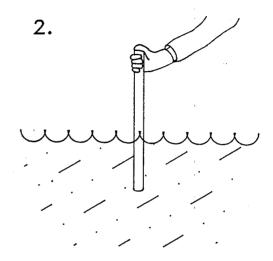


Cover top of sampler with gloved thumb.

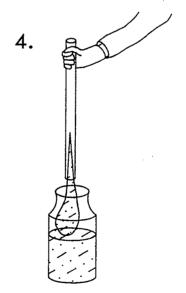

Place open tube sampler over appropriate sample bottle and remove gloved thumb.

Figure 8: COLIWASA SOP #2009

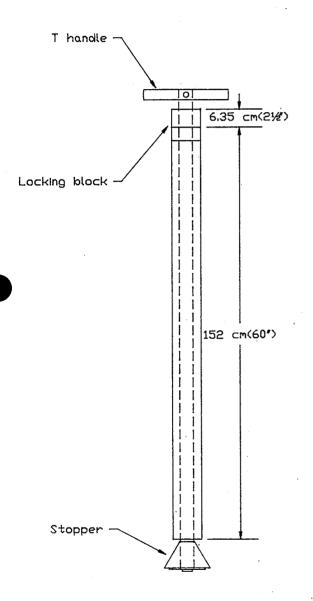

17.8 cm(7") 10.16 cm(4") Pipe, PVC, translucent 4.13 cm(1 % ") I.D., 4.26 cm(1 % ") D.D. Stopper rod, PVC, 0.95 cm(3/8°) [].D. Stopper, neoprene, #9, tapered, 0,95 cm(3/8") PVC lock nut and washer

2.86 cm(11/6")

SAMPLING POSITION

CLOSED POSITION

Figure 9: Bacon Bomb Sampler SOP #2010

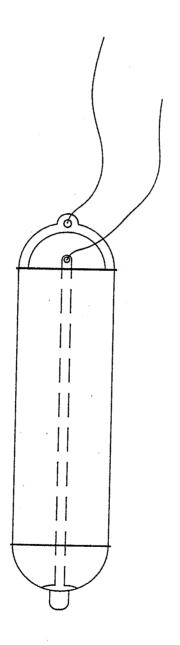


Figure 10: Sludge Judge SOP #2010

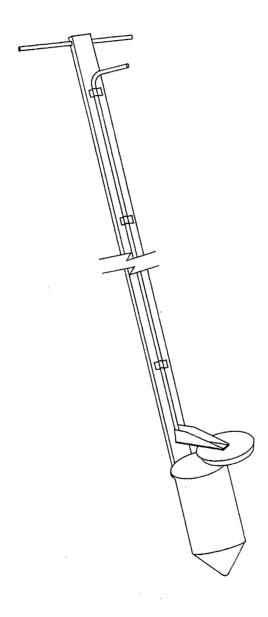


Figure 11: Subsurface Grab Sampler SOP #2010

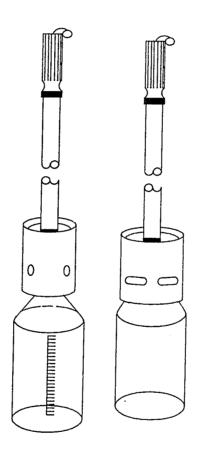


Figure 12: Bailer SOP #2010

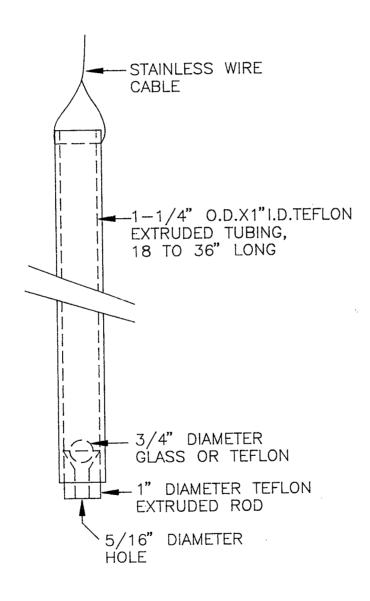


Figure 13: Sampling Augers
SOP #2017

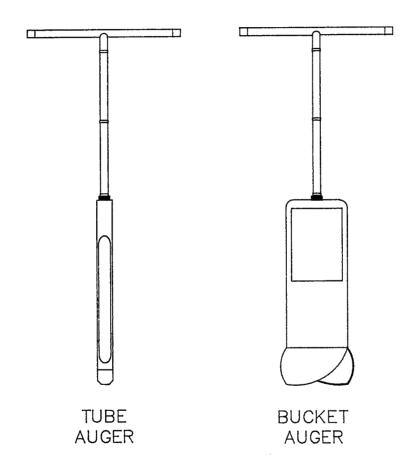


Figure 14: Sampling Trier SOP #2017


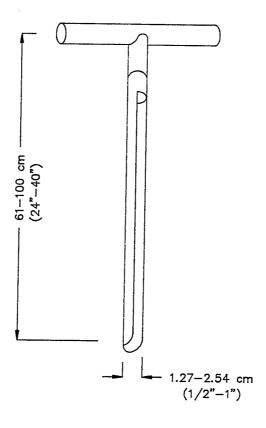


Figure 15: Grain Sampler SOP #2017

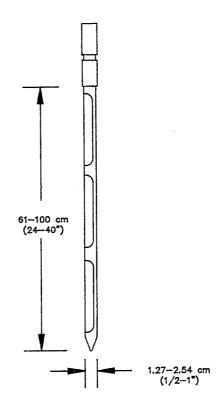

APPENDIX C

Calculations


Various Volume Calculations


SOP #2010

SPHERE


ELLIPTICAL CONTAINER

ANY RECTANGULAR CONTAINER

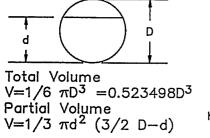

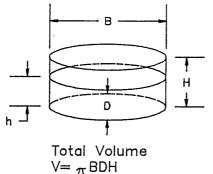



Partial Volume

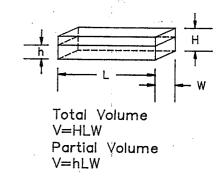


$V=\pi BDh$ TRIANGULAR CONTAINER


Total Volume V=1/2 HBL

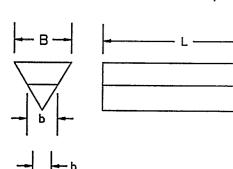






RIGHT CYLINDER

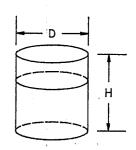

Total Volume $V=1/4 \pi D^2 H$ Partial Volume $V=1/4 \pi D^2 h$

Various Volume Calculations (Cont'd)

FRUSTUM OF A CONE

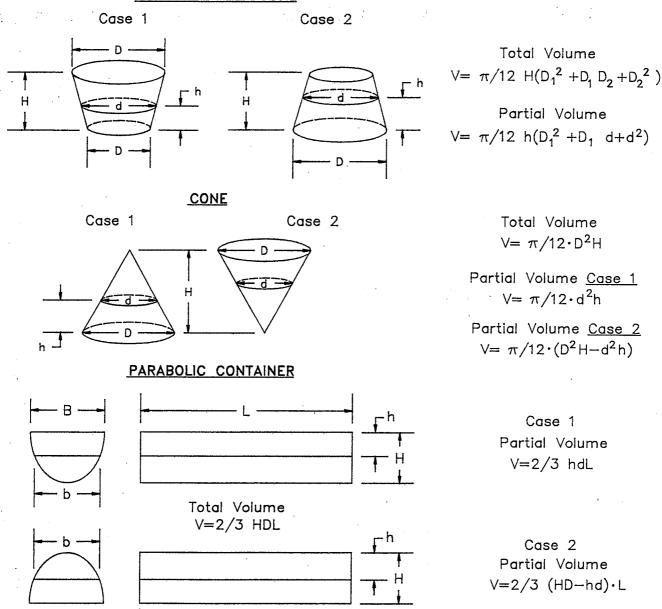

147

THE PERSON AND AND PROPERTY PROPERTY OF THE PERSON AND A PROPERTY OF THE

References

- Illuminating Engineers Society. 1984. IES Lighting Handbook. New York, NY. eds. John E. Kaufman and Jack Christensen. (2 volumes).
- National Institute for Safety and Health. October 1985. Occupational Safety and Health Guidance Manual for Hazardous Waste Site Activities.
- New Jersey Department of Environmental Protection, Division of Hazardous Site Mitigation. 1988. Field Sampling Procedures Manual.
- U.S. EPA. 1985. Guidance Document for Cleanup of Surface Tank and Drum Sites. OSWER Directive 9380.0-3. NTIS Ref: PB-87-110-72.
- U.S. EPA. 1986. Drum Handling Practices at Hazardous Waste Sites. EPA/600/2-86/013.
- U. S. EPA/Region IV, Environmental Services Division. April 1, 1986. Engineering Support Branch Standard Operating Procedures and Quality Assurance Manual. Athens, Georgia.
- U.S. EPA/OSWER. November, 1986. Test Methods for Evaluating Solid Waste, Third Edition, Vol. II, Field Manual. EPA Docket SW-846.
- U.S. EPA. 1987. A Compendium of Superfund Field Operations Methods. EPA/540/5-87/001. Office of Emergency and Remedial Response. Washington, D.C. 20460.

ı