RNP APCH.

Rwy Idg 1981 APP CRS TDŹE 583 049° Apt Elev 583

## RNAV (GPS) RWY 3

AEROFLEX/ANDOVER (12N) MISSED APPROACH:

Climbing left turn to 3000

**SPARTA** 

SAX

**TDZE** 583

direct HOPED and hold.

UNICOM **NEW YORK APP CON** 

When local altimeter setting not received, use Caldwell altimeter setting and increase all MDA


120 feet. Procedure NA at night. Rwy 3 helicopter visibility reduction below 1 SM NA.


**1**645

122.8 (CTAF) ( 127.6 379.9

• 1606 Procedure NA for arrivals at MUGZY on V226 northwest bound.

Procedure NA for arrival on SAX VORTAC airway radials 185 CW 252.

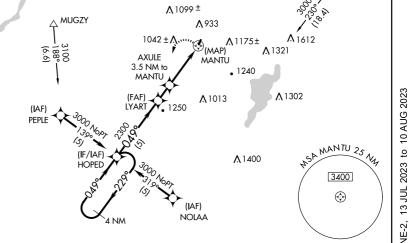

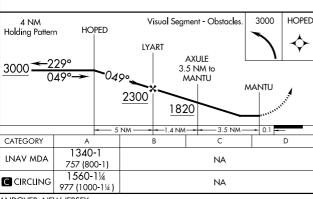

ح١  $\oplus$ MIRL Rwy 3-21 🗓

583

ANDOVER, NEW JERSEY Amdt 1C 13AUG20

1648 1

AEROFLEX/ANDOVER (12N) RNAV (GPS) RWY 3