i-STAT Emergency Procedure Manual for Non-Medical Personnel and Medical Personnel Without i-STAT Training

ATTENTION: THIS PROCEDURE IS ONLY AUTHORIZED TO BE USED IN AN EMERGENCY SITUATION WHERE NO QUALITIFIED MEDICAL PERSONNEL ARE AVAILABLE TO PERFORM LABORATORY TESTING.

MEDICAL LABORATORY TESTING BY NON-MEDICAL PERSONNEL OR MEDICAL PERSONNEL WITHOUT REQUIRED QUAL SHALL ONLY BE CONDUCTED UNDER THE DIRECT AUTHORIZATION BY THE HEAD OF THE SHIP'S MEDICAL DEPARTMENT.

IN THE EVENT WHERE INCORRECT LAB RESULTS ARE REPORTED DUE TO TESTING PERFORMED BY NON-QUALIFIED PERSONNEL, LIABILITY FALLS ON THE CLINICIAN REQUESTING THE TEST. THEREFORE, CLINICIANS ARE ADVISED TO INTERPRET SUCH RESULTS WITH DISCRETION.

Note: The ordering clinician shall ensure all required quality control measures, including running of the electronic simulator, have been successfully completed prior to instructing non-medical personnel or medical personnel without qualification to perform lab testing.

Step	Action
1	Ensure a correct blood tube was collected. • CHEM8+, CG4+ and cTnI: Use GREEN tube • PT/INR: Use BROWN tube
2	Ensure you have a correct test cartridge for the test requested.
3	Ensure the test cartridge is not cold to touch. • If you pulled the test cartridge from the fridge, wait a minimum of **5 min**.
4	Remove the cartridge from its pouch. Do NOT rip the barcode when opening. • Do NOT discard the empty pouch yet. • Grab the cartridge by the sides only. • Do NOT press on the center of the cartridge.
5	Open the blood tube by slowly removing the rubber top.
6	Pick up a clean unused disposable pipette (dropper).
7	Draw blood with the pipette. • Gently squeeze the bulb at the top of the pipette. • Insert the pipette tip into the blood tube just below the surface. • Slowly release the bulb to draw blood into the pipette.
8	Move the pipette to the test cartridge.
9	Gently and slowly squeeze the bulb to release the blood into the marked sample opening, and fill to the line on the cartridge. *Note: There are three types of cartridges.* 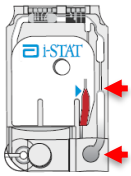 Fill up to this line Add sample here  Fill up to this line Add sample here Fill up to this line Add sample here

10	Close the cover over the sample opening until it snaps into place. • CHEM8+, CG4+ and PT/INR: Lift the cover from the left and fold it over to close the sample opening. • cTnI: Push the slide bar from the left to close the sample opening.
11	Press the power button (right lower corner) to turn on the i-STAT device.
12	Press “2” to select “i-STAT Cartridge.”
13	Enter your Operator ID. • Enter your last three and press “ENT” on the keypad.
14	Enter your Operator ID again. • Enter your last three and press “ENT” on the keypad.
15	Enter the Patient ID. • Enter the patient’s last three and press “ENT” on the keypad.
16	Enter the Patient ID again. • Enter the patient’s last three and press “ENT” on the keypad.
17	Scan the cartridge lot number. • Press hold “SCAN” on the keypad. • Position the front end of the i-STAT device so that the red light covers the entire barcode on the pouch cover.
18	While holding the cartridge by the sides, insert it into the cartridge door located on the bottom side of the i-STAT device until it clicks into place. 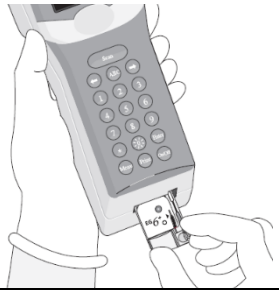 • Analysis will automatically start when the cartridge is clicked into place. • Screen will say “Identifying Cartridge … Please Wait” if the cartridge is successfully in place.
19	Press “Right Arrow” button on the keypad to change the screen to the testing status.
20	Wait until the testing is complete. • If you get an error message, remove the cartridge and restart from Step 1.
21	You will hear a long beep when the testing is complete.
22	Print the test results. 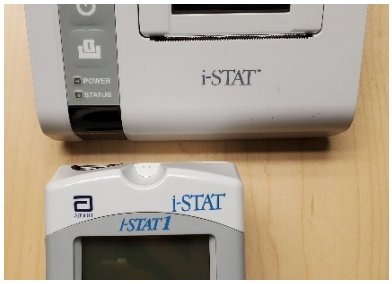 • Ensure that the printer is turned on and the power indicator is green. • Align the IR communication window (black window located on the front end of the i-STAT device) with the printer’s IR LED window. • Press PRT button on the keypad to start printing. Do NOT move the i-STAT device or printer until printing is complete.