Page 1 - counter board (ChArUco 5x7, 30 mm squares, 22 mm markers, DICT_4X4_50)

Tape flat on the counter next to the stove, fully visible in every clip. Do not move it during a session.
Also film it once from many angles (10-20 s, slow) to calibrate the phone camera.

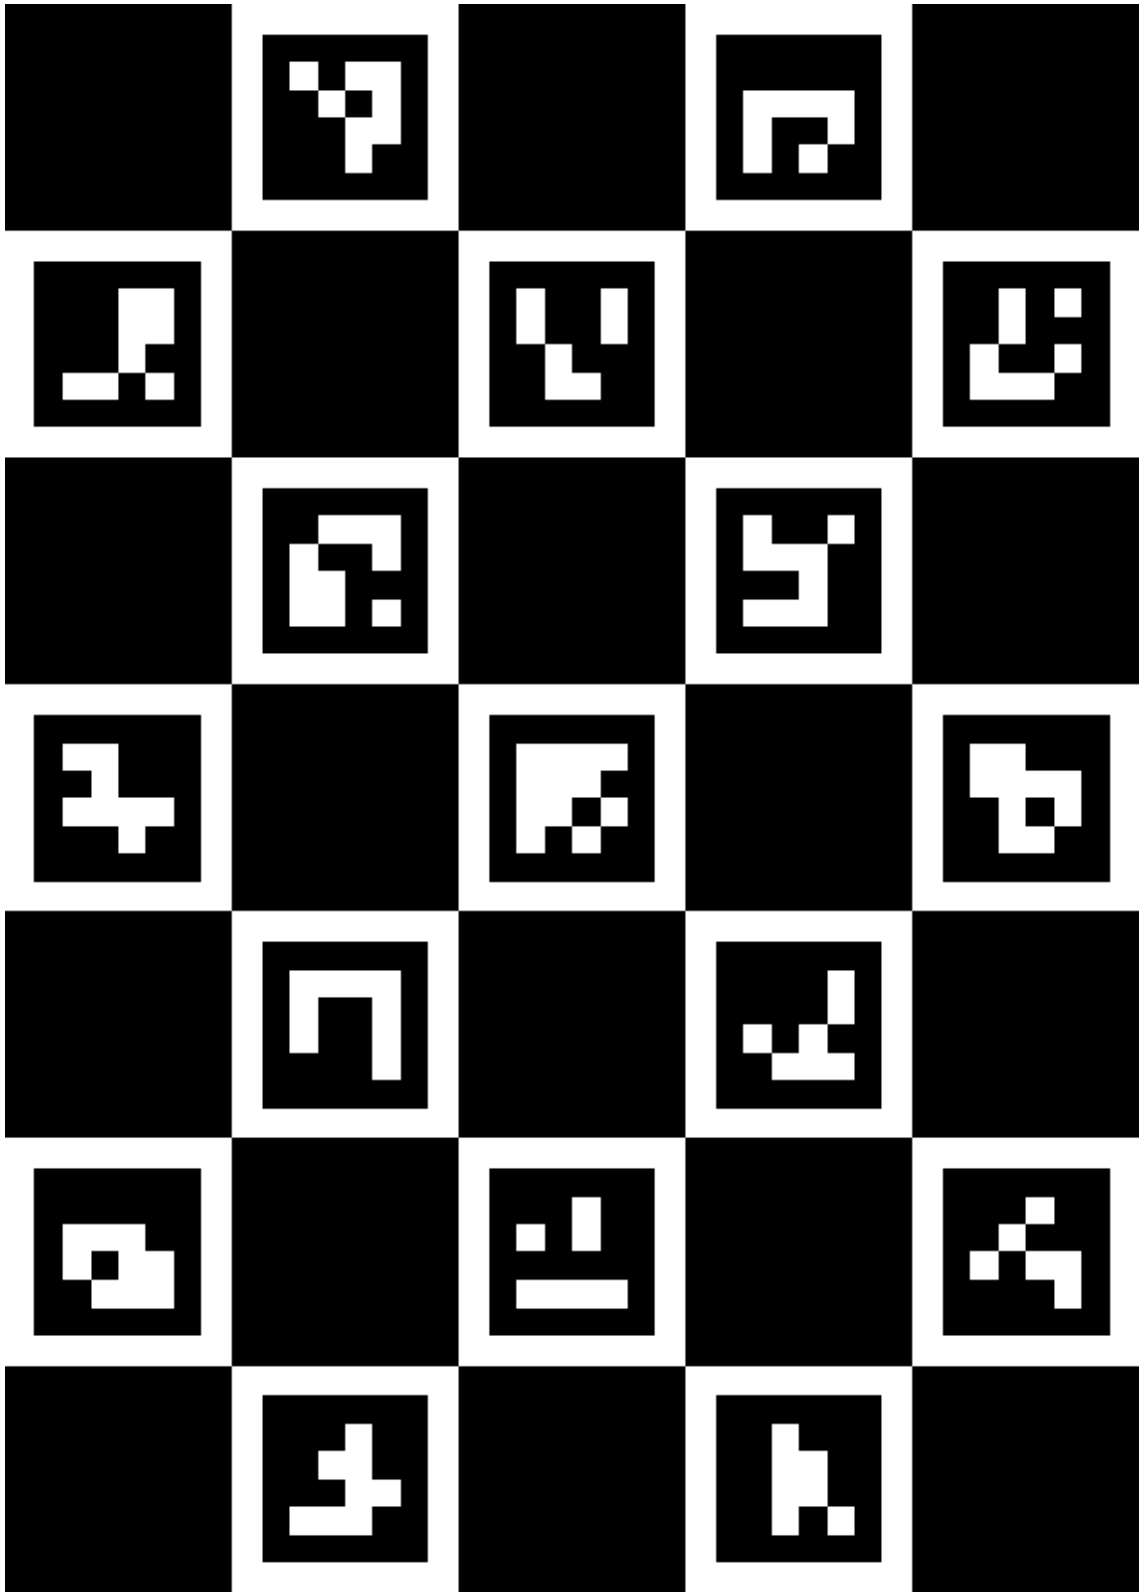

50 mm: measure this; if it is not 50 mm, reprint at 100% / actual size

Page 2 - pan markers (DICT_4X4_50)

id 40 (80 mm): tape flat on the inside bottom of the COLD pan, so the camera sees it all the way.
id 41 (40 mm): spare, or on top of the handle near the pan if id 40 gets hidden. Keep the white border.

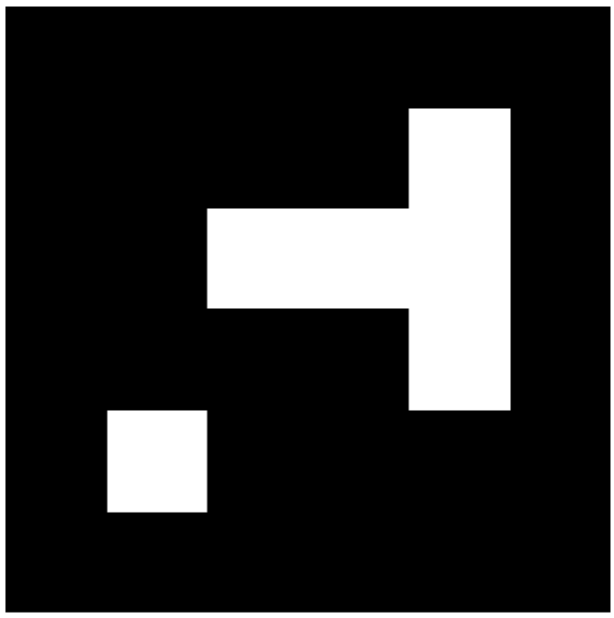

id 40 (80 mm)

id 41 (40 mm)

50 mm: measure this; if it is not 50 mm, reprint at 100% / actual size