## **03.119 TCCS Auxiliary Fan Deactivation**

(03. HSS Procedure)

#### **OBJECTIVE:**

To deactivate the auxiliary cabin fans on the Trace Contaminant Control Subassembly (TCCS) panel.

## NOTE

The TCCS auxiliary (aux) fans do not have variable speeds. They are used to increase air flow throughout the habitat during off-nominal operations.

# GMWS 1. TURN OFF AUX FANS ON HSS

- 1.1. Access the HSS interface on Surface Pro.
- 1.2. Select the CDRA display.
- 1.3. Hover over Aux Fan 1.
  - 1.3.1. Press finger to Aux fan one, the fan on the display should stop moving.
- 1.4. Hover over Aux fan 2.
  - 1.4.1. Press finger to Aux fan two, the fan on the display should stop moving.

### 2. DEACTIVATE TCCS AUX FAN 1 AND FAN 2

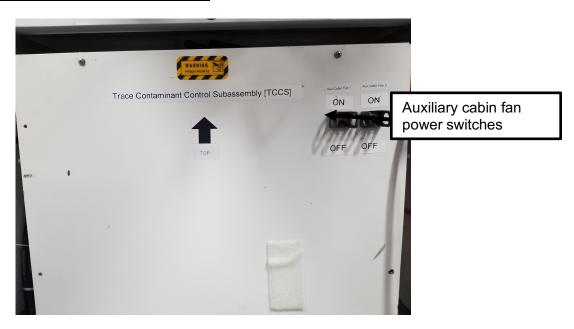


Figure 1. Trace Contaminant Control Subassembly (TCCS) Panel

- 2.1. On the TCCS Panel, flip the power switch of Aux Cabin Fan 1 to "OFF" (see Figure 1).
- 2.2. On the TCCS Panel, flip the power switch of Aux Cabin Fan 2 to "OFF" (see Figure 1).

15-Jul-2021 Page 1 of 1