
## BAT60AE6327HTSA1 BSS84 Q1 U\$1 D1 VIN <del>-</del>Df VOUT C7 D2 GND C4 LDI1117-3.3U 100n BAT60AE6327HTSA1 C22 +VBUS GND GND

## N64 Edge Connector

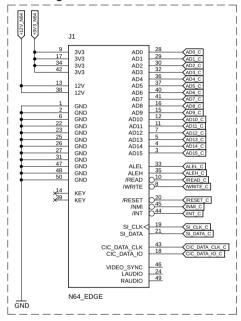

Do not solder Q1 if D2 is soldered. Use either D2 or Q1. Do not solder R1 and R6.

