




ConnectorRelay

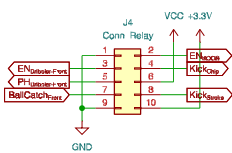


BOOST

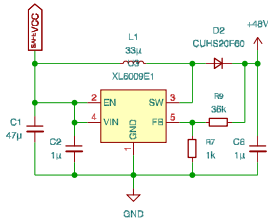


ProtectionKick

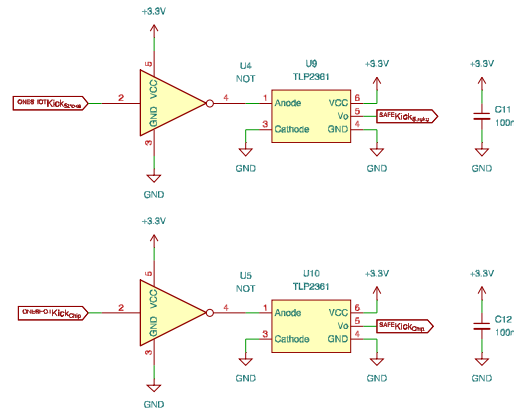


ConnectorVollmeter




LED

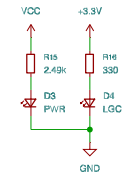


ConnectorSolenoid

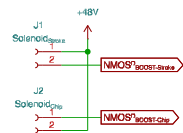


NMOS

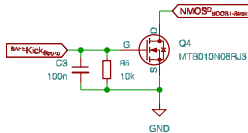


ConnectorDribbler-Front

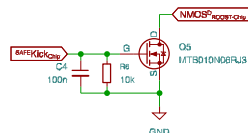


ENBOOST

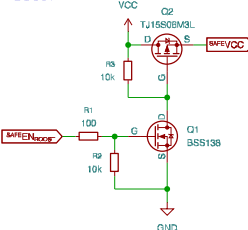


BallCatch-Front

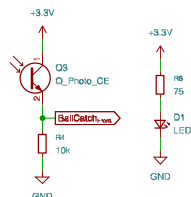


MDDribbler-Front

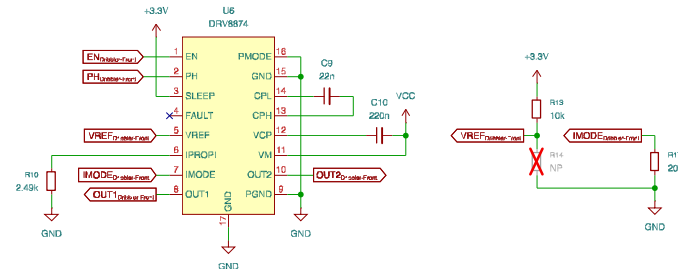

Oneshot Circuit

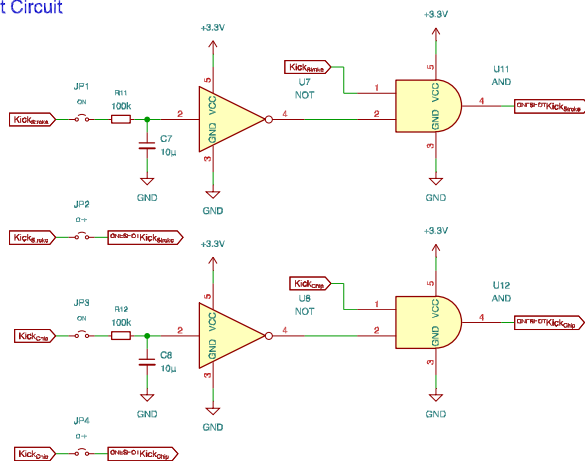

ProtectionEN_BOOST

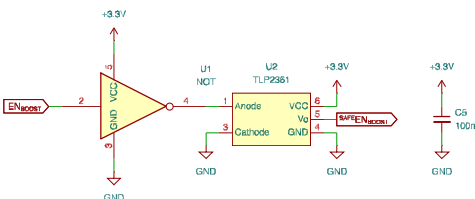

MOSFET Mechanical PinAssign Symbol PinAssign

$$t_s = -R_n C_F \times \ln(1 - (V_{TH}/V_H))$$

$$t_s = -100 \times 10^3 \times 10^{-6} \times \ln(1 - (2.1/3.3)) \approx 1.011 \text{ ms}$$